

PROBLEM SYMPTOMS TABLE

WHOLE SYSTEM:

Symptom	Suspected Area	See page
Entire combination meter does not operate.	Combination Meter Circuit	ME-19
Driver side seat belt warning light does not operate.	Driver Side Seat Belt Warning Light Circuit	ME-39
Front passenger side seat belt warning light does not operate.	Front Passenger Side Seat Belt Warning Light Circuit	ME-41

METER GAUGES:

Symptom	Suspected Area	See page
Speedometer malfunction	Speedometer Circuit	ME-21
Tachometer malfunction	Tachometer Circuit	ME-26
Fuel receiver gauge malfunction	Fuel Receiver Gauge Circuit	ME-29
Engine coolant temperature receiver gauge malfunction	Engine Coolant Receiver Gauge Circuit	ME-32

WARNING LIGHTS:

Symptom	Suspected Area	See page
Check Engine warning light does not come on.	1. MIL Circuit	ES-385
	2. Wire Harness or Connector	-
	3. Combination Meter Assembly	ME-51
Discharge warning light does not come on.	1. ECM	ES-21
	2. Wire Harness or Connector	-
	3. Combination Meter Assembly	ME-51
Brake warning light does not come on.	1. Brake Fluid Level Warning Switch	ME-17
	2. Brake Warning Light Circuit (with ABS, without VSC)	BC-60
	3. Brake Warning Light Circuit (with VSC)	BC-175
	4. Wire Harness or Connector	-
	5. Combination Meter Assembly	ME-51
Brake warning light does not go off.	1. Brake Fluid Level Warning Switch	ME-17
	2. Brake Warning Light Circuit (with ABS, without VSC)	BC-60
	3. Brake Warning Light Circuit (with VSC)	BC-175
	4. Wire Harness or Connector	-
	5. Combination Meter Assembly	ME-51
ABS warning light does not come on.	1. ABS Warning Light Circuit (with ABS, without VSC)	BC-57
	2. ABS Warning Light Circuit (with VSC)	BC-165
	3. Wire Harness or Connector	-
	4. Combination Meter Assembly	ME-51
ABS warning light does not go off.	1. ABS Warning Light Circuit (with ABS, without VSC)	BC-53
	2. ABS Warning Light Circuit (with VSC)	BC-161
	3. Wire Harness or Connector	-
	4. Combination Meter Assembly	ME-51
SRS warning light does not come on.	1. Center Airbag Sensor Assembly	RS-176
	2. Wire Harness or Connector	-
	3. Combination Meter Assembly	ME-51
SRS warning light does not go off.	1. Center Airbag Sensor Assembly	RS-172
	2. Wire Harness or Connector	-
	3. Combination Meter Assembly	ME-51

ME

Symptom	Suspected Area	See page
Open door warning light does not come on.	1. Door Courtesy Switch Circuit (Front Door Side:)	LI-41
	2. Door Courtesy Switch Circuit (Rear Door Side:)	LI-42
	3. Door Courtesy Switch Circuit (Back Door Side:)	LI-43
	4. Wire Harness or Connector	-
	5. Combination Meter Assembly	ME-51
Fuel level warning light does not come on.	1. Fuel Sender Gauge Assembly	ME-16
	2. Wire Harness or Connector	-
	3. Combination Meter Assembly	ME-51
Low oil pressure warning light does not come on.	1. Engine Oil Pressure Switch	ME-17
	2. Wire Harness or Connector	-
	3. Combination Meter Assembly	ME-51
Driver side seat belt warning light does not come on.	1. Driver Side Seat Belt Warning Light Circuit	ME-39
	2. Wire Harness or Connector	-
	3. Combination Meter Assembly	ME-51
Front passenger side seat belt warning light does not come on.	1. Front Passenger Side Seat Belt Warning Light Circuit	ME-41
	2. Wire Harness or Connector	-
	3. Combination Meter Assembly	ME-51

ME

INDICATOR LIGHTS:

Symptom	Suspected Area	See page
Turn indicator light does not come on.	1. Lighting System	LI-8
	2. Wire Harness or Connector	-
	3. Combination Meter Assembly	ME-51
High beam indicator light does not come on.	1. Lighting System	LI-8
	2. Wire Harness or Connector	-
	3. Combination Meter Assembly	ME-51
Tail indicator light does not come on (for Canada).	1. Lighting System	LI-8
	2. Wire Harness or Connector	-
	3. Combination Meter Assembly	ME-51
Head indicator light does not come on (for U.S.A.)	1. Lighting System	LI-8
	2. Wire Harness or Connector	-
	3. Combination Meter Assembly	ME-51
VSC indicator light does not come on (with VSC).	1. VSC Indicator Light Circuit	BC-172
	2. Wire Harness or Connector	-
	3. Combination Meter Assembly	ME-51
VSC indicator light does not go off (with VSC).	1. VSC Indicator Light Circuit	BC-168
	2. Wire Harness or Connector	-
	3. Combination Meter Assembly	ME-51
SLIP indicator light does not come on (with VSC).	1. SLIP Indicator Light Circuit	BC-181
	2. Wire Harness or Connector	-
	3. Combination Meter Assembly	ME-51
SLIP indicator light does not go off (with VSC).	1. SLIP Indicator Light Circuit	BC-181
	2. Wire Harness or Connector	-
	3. Combination Meter Assembly	ME-51
Washer level indicator light does not come on.	1. Washer Level Switch	ME-18
	2. Wire Harness or Connector	-
	3. Combination Meter Assembly	ME-51
Cruise indicator light does not come on.	1. Cruise Indicator Light Circuit	CC-29
	2. Wire Harness or Connector	-
	3. Combination Meter Assembly	ME-51

Symptom	Suspected Area	See page
TPWS indicator light does not come on.	1. Tire Pressure Warning System	TW-29
	2. Wire Harness or Connector	-
	3. Combination Meter Assembly	ME-51
O/D off indicator light does not come on.	1. O/D Main Switch Circuit	AX-69
	2. Wire Harness or Connector	-
	3. Combination Meter Assembly	ME-51
MAINT REQD indicator light does not come on.	1. Oil Management System (LED Reset Undone)	ME-18
	2. Combination Meter Assembly	ME-51

BUZZER:

Symptom	Suspected Area	See page
Key reminder warning buzzer does not operate.	1. Warning Buzzer Circuit	ME-35
	2. Unlock Warning Switch Assembly	-
	3. Wire Harness or Connector	-
	4. Combination Meter Assembly	ME-51
Light reminder warning buzzer does not operate.	1. Warning Buzzer Circuit	ME-35
	2. Wire Harness or Connector	-
	3. Combination Meter Assembly	ME-51
Seat belt warning buzzer does not operate.	1. Warning Buzzer Circuit	ME-35
	2. Wire Harness or Connector	-
	3. Combination Meter Assembly	ME-51
Warning buzzer does not operate.	Warning Buzzer Circuit	ME-35