


COMBINATION METER



COMPONENTS

ME

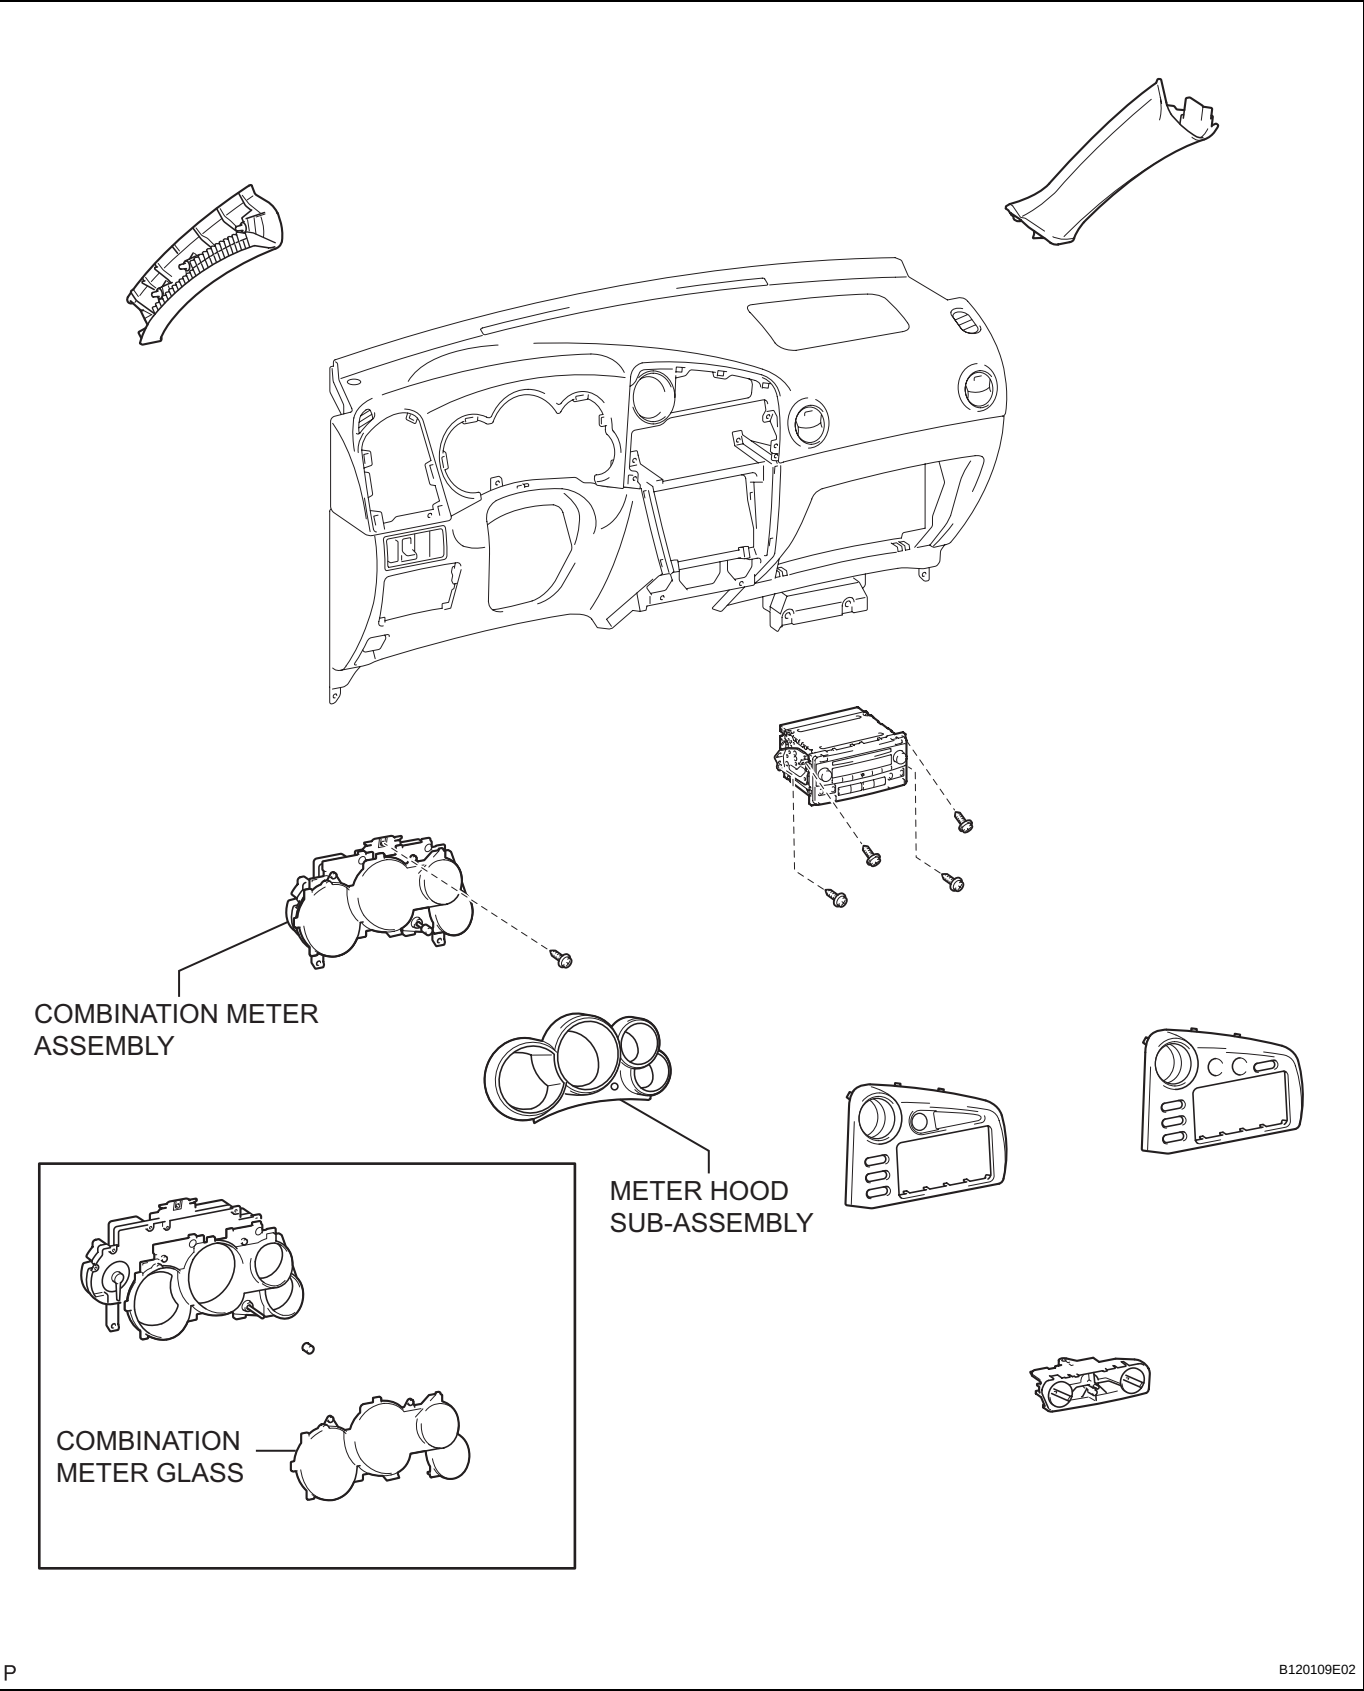

REMOVAL

1. REMOVE METER HOOD SUB-ASSEMBLY (See page [IP-8](#))
2. REMOVE COMBINATION METER ASSEMBLY
 - (a) Remove the screw.
 - (b) Disengage the 2 claws as shown in the illustration.

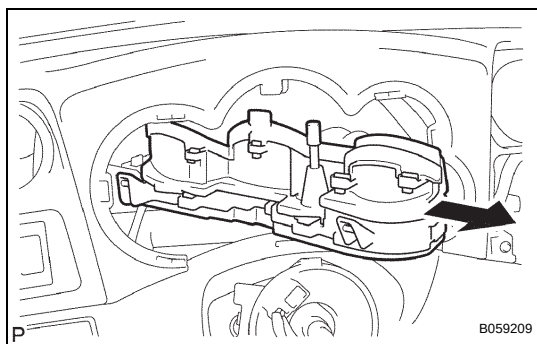
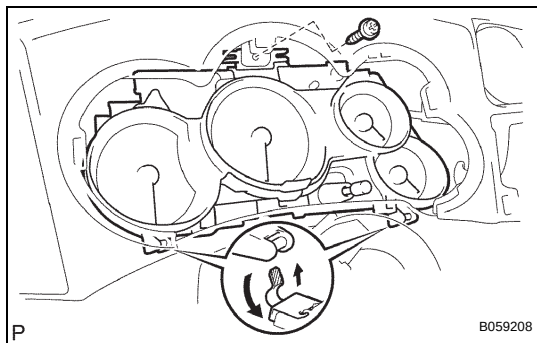


- (c) Disconnect connector, then remove the combination meter assembly, as shown in the illumination.

ME

DISASSEMBLY


1. REMOVE COMBINATION METER GLASS
 - (a) Remove the trip knob.
 - (b) Disengage the 10 claws and remove the window plate.
- (c) Disengage the 8 claws and remove the combination meter glass.

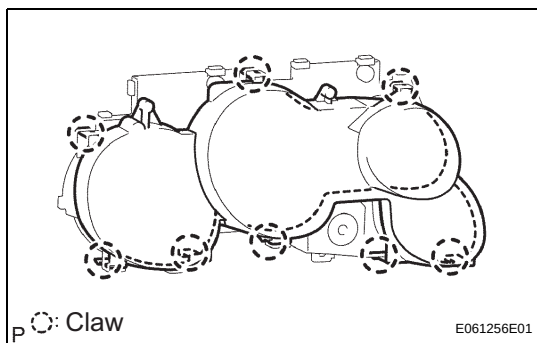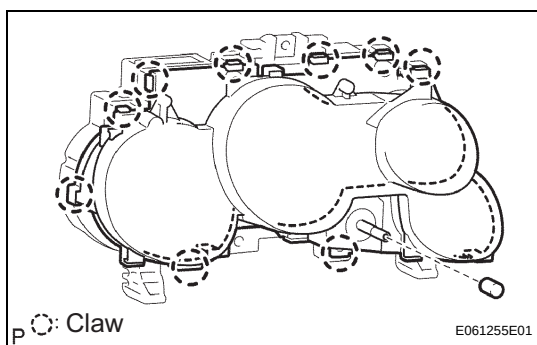


REASSEMBLY

1. INSTALL COMBINATION METER GLASS

- (a) Install the combination meter glass with the 8 claws.
- (b) Install the window plate with the 10 claws.

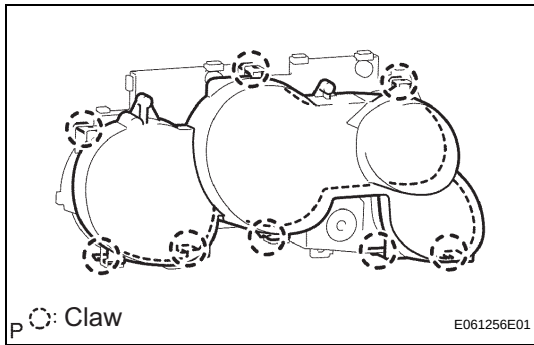


- (c) Install the trip knob.

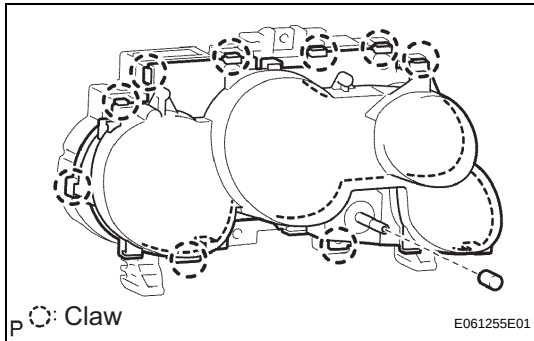

INSTALLATION

1. INSTALL COMBINATION METER ASSEMBLY

- (a) Connect the connector, then install the combination meter assembly.

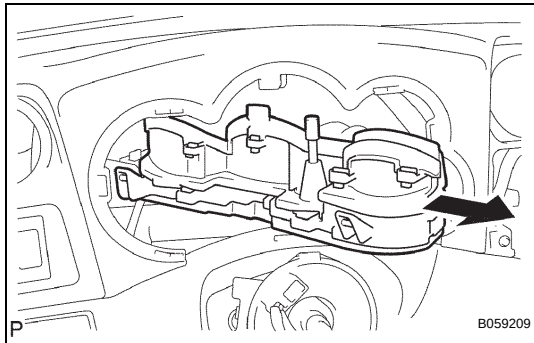

- (b) Engage the 2 claws as shown in the illustration.
- (c) Install the screw.

2. INSTALL METER HOOD SUB-ASSEMBLY

