

CD cannot be Ejected**INSPECTION PROCEDURE****1 CHECK OPERATION**

- (a) Press the CD EJECT switch of the radio receiver for 2 seconds or more and check that the CD is ejected.

OK:

CD is ejected.

NG

REPLACE RADIO RECEIVER

OK

2 REPLACE CD

- (a) Insert another CD and check if it is ejected.

OK:

CD is ejected.

NG

REPLACE RADIO RECEIVER

OK

END

AV

CD cannot be Inserted / Played or CD is Ejected Right After Insertion**INSPECTION PROCEDURE****1 CHECK IF A PROPER CD IS INSERTED**

- (a) Make sure that the CD is an audio CD, and that it is not deformed, flawed, stained, burred, or otherwise defective.

OK:

Normal CD.

HINT:

- Translucent or uniquely-shaped CDs cannot be played.
- CDs with adhesive paper labels should not be played.
- For details on playable CDs, refer to the Owner's Manual.

NG

CHANGE DISC

OK

2 CHECK THAT CD IS INSERTED PROPERLY

- (a) Check whether or not the CD is inserted upside down.

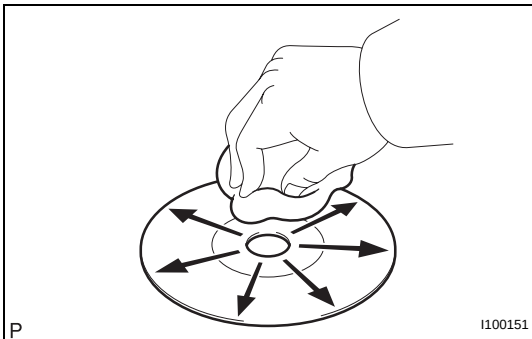
OK:

CD is properly inserted.

NG

SET CD PROPERLY

OK

3 CLEANING CD

- (a) Clean the disc by wiping it with a soft cloth from the inside to the outside in a radial direction.
(b) Check that the malfunction disappears.

OK:

Malfunction disappears.

NOTICE:

Do not use a conventional record cleaner or anti-static preservative.

NG

Go to step 4

OK

END

4**REPLACE CD**

- (a) Replace the CD with a normal one and check that the malfunction disappears.

OK:**Malfunction disappears.****NG****REPLACE RADIO RECEIVER****OK****END**