
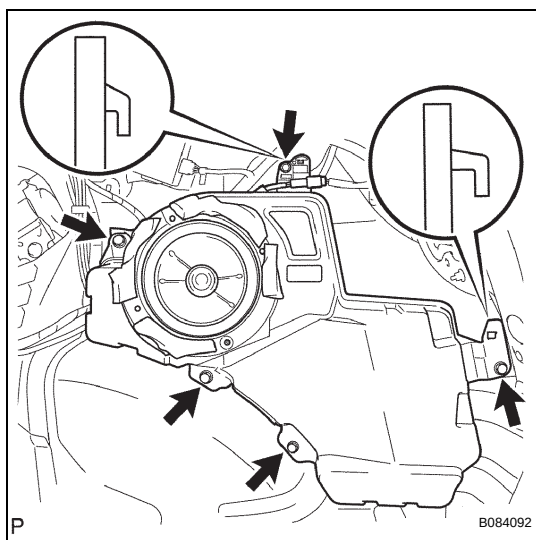


REMOVAL

1. REMOVE DECK BOARD SUB-ASSEMBLY (See page [IR-6](#))
2. REMOVE REAR DECK FLOOR BOX (See page [IR-6](#))
3. REMOVE LUGGAGE COMPARTMENT TRAY (See page [IR-6](#))
4. REMOVE BACK DOOR WEATHERSTRIP
5. REMOVE REAR DECK TRIM COVER (See page [IR-7](#))
6. REMOVE TONNEAU COVER ASSEMBLY
7. REMOVE REAR SEAT CUSHION ASSEMBLY AND REAR SEATBACK ASSEMBLY (See page [SE-18](#))
8. REMOVE REAR SEAT SIDE GARNISH RH (See page [IR-7](#))
9. REMOVE DECK TRIM SIDE PANEL ASSEMBLY RH
 - (a) Remove the 4 bolts and 4 rope hooks.
 - (b) Using a screwdriver, remove the deck trim side panel assembly RH.

HINT:
Tape the screwdriver tip before use.
10. REMOVE NO. 1 SPEAKER WITH BOX
 - (a) Disconnect the connector.
 - (b) Remove the 5 bolts and No. 1 speaker with box.

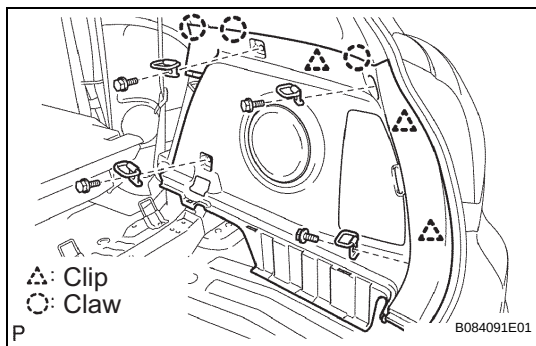

INSTALLATION

1. INSTALL NO. 1 SPEAKER WITH BOX
2. INSTALL DECK TRIM SIDE PANEL ASSEMBLY RH
3. INSTALL REAR SEAT SIDE GARNISH RH
4. INSTALL REAR SEAT CUSHION ASSEMBLY AND REAR SEATBACK ASSEMBLY
5. INSTALL TONNEAU COVER ASSEMBLY
6. INSTALL REAR DECK TRIM COVER (See page [IR-12](#))
7. INSTALL BACK DOOR WEATHERSTRIP
8. INSTALL LUGGAGE COMPARTMENT TRAY (See page [IR-12](#))
9. INSTALL REAR DECK FLOOR BOX (See page [IR-13](#))
10. INSTALL DECK BOARD SUB-ASSEMBLY (See page [IR-13](#))