


WINDSHIELD GLASS

COMPONENTS

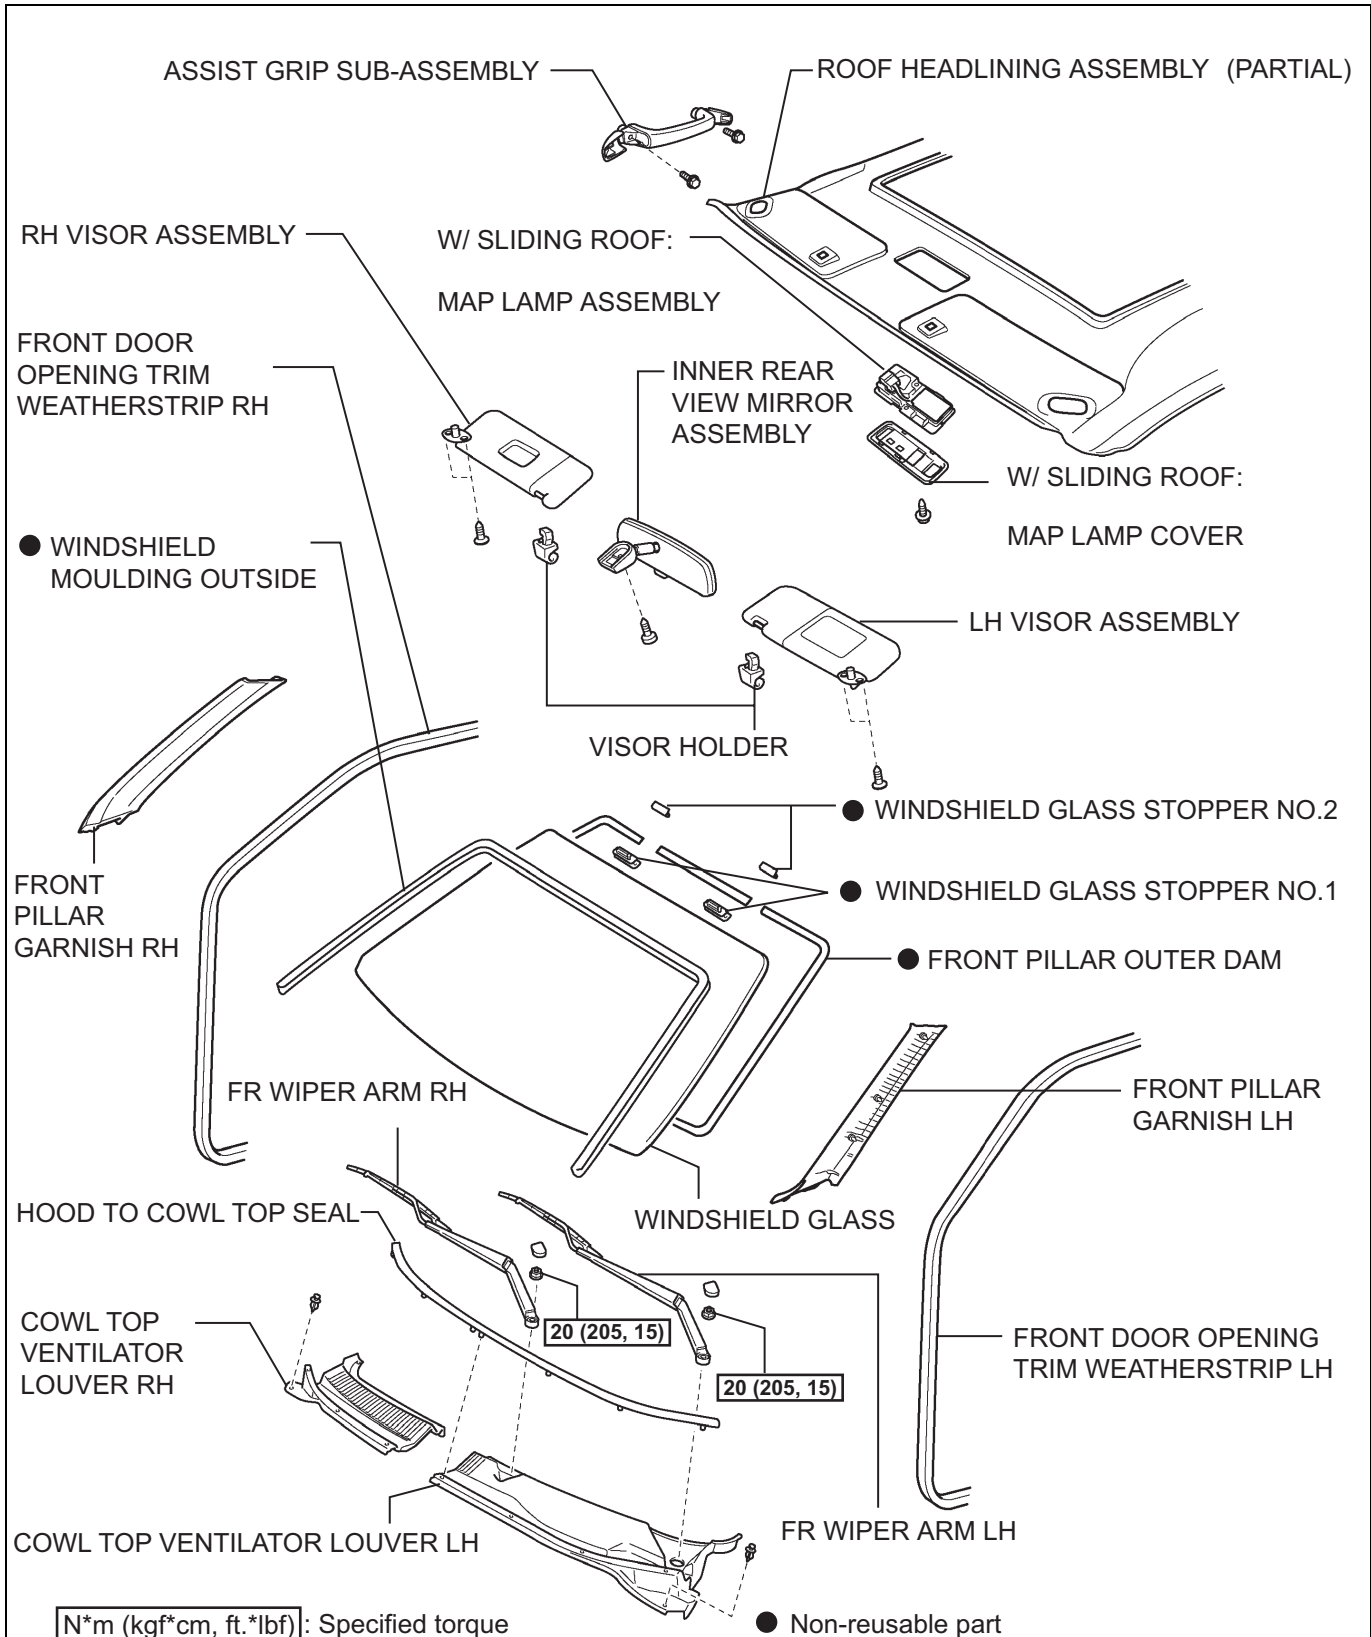

REMOVAL


HINT:


A bolt without a torque specification is shown in the standard bolt chart.

1. REMOVE FR WIPER ARM RH (See page [WW-9](#))
2. REMOVE FR WIPER ARM LH (See page [WW-9](#))
3. REMOVE HOOD TO COWL TOP SEAL (See page [WW-9](#))
4. REMOVE COWL TOP VENTILATOR LOUVER LH (See page [WW-9](#))
5. REMOVE COWL TOP VENTILATOR LOUVER RH (See page [WW-9](#))
6. REMOVE FRONT DOOR WEATHERSTRIP RH
7. REMOVE FRONT DOOR WEATHERSTRIP LH
8. REMOVE FRONT PILLAR GARNISH RH
9. REMOVE FRONT PILLAR GARNISH LH
10. REMOVE INNER REAR VIEW MIRROR ASSEMBLY (See page [MI-8](#))
11. REMOVE RH VISOR ASSEMBLY (See page [IR-8](#))
12. REMOVE LH VISOR ASSEMBLY
13. REMOVE MAP LAMP ASSEMBLY (See page [IR-8](#))
14. REMOVE ASSIST GRIP SUB-ASSEMBLY (See page [IR-9](#))
15. REMOVE VISOR HOLDER (See page [IR-9](#))
16. REMOVE ROOF HEADLINING ASSEMBLY (See page [IR-10](#))
17. REMOVE WINDSHIELD MOULDING OUTSIDE
 - (a) Using a knife, cut off the moulding as shown in the illustration.

NOTICE:
Do not damage the vehicle body with the knife.
 - (b) Remove the remaining moulding.

HINT:
Make a partial cut in the moulding.

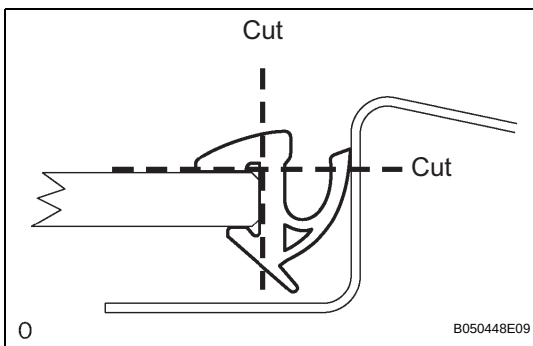

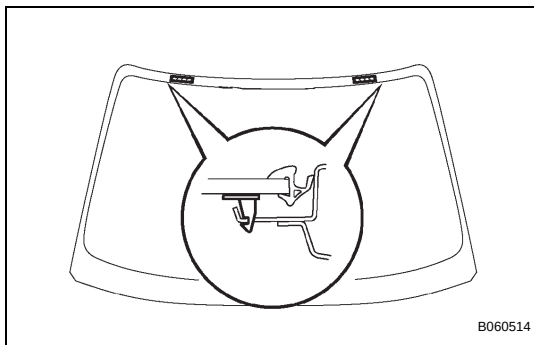


18. REMOVE WINDSHIELD GLASS

- (a) From the interior, insert a piano wire between the vehicle body and glass.

HINT:

Apply protective tape to the outer surface of the vehicle body to keep the surface from being scratched.

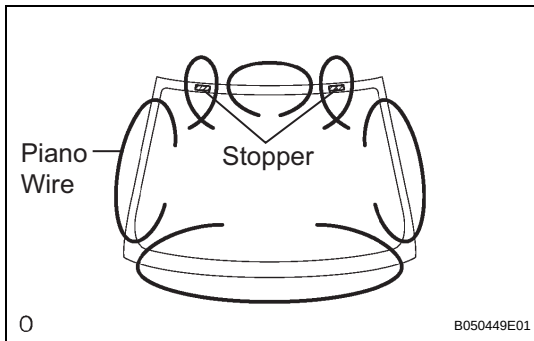

- (b) Tie both wire ends to wooden blocks or similar objects.

NOTICE:

When separating the glass, take care not to damage the paint and interior/exterior ornaments.

- (c) Cut the adhesive by pulling the piano wire around the glass.
- (d) Using a suction cup, remove the glass.

NOTICE:


Leave as much adhesive on the body as possible when removing the glass.


19. CLEAN WINDSHIELD GLASS

- (a) Using a scraper, remove the damaged stoppers, dam and adhesive sticking to the glass.
- (b) Clean the outer edge of the glass with white gasoline.

NOTICE:

Do not touch the glass after cleaning it.

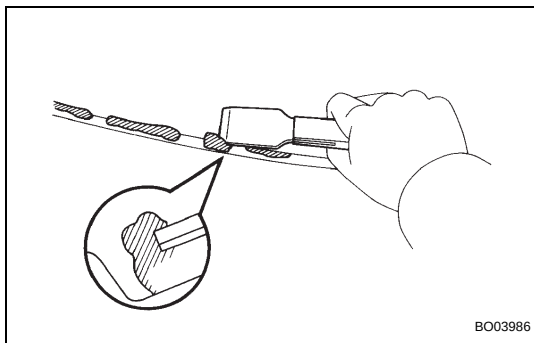


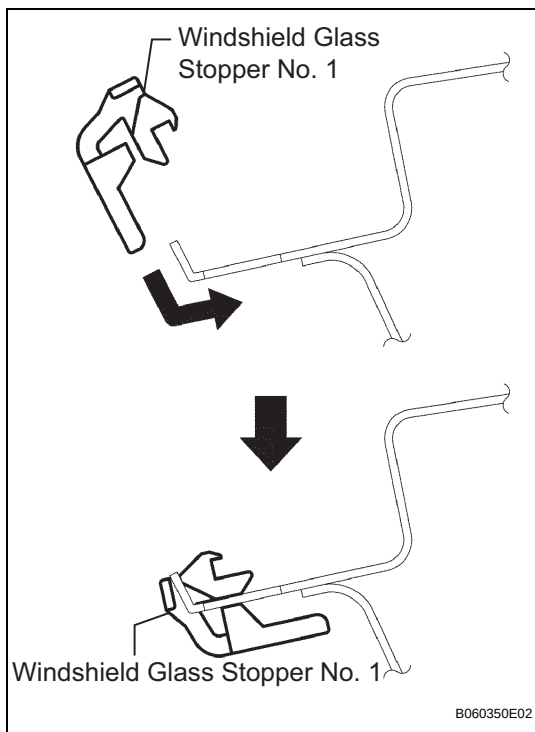

INSTALLATION

1. INSTALL WINDSHIELD GLASS STOPPER NO. 1

- (a) Install 2 new windshield glass stoppers No. 1 to the body as shown in the illustration.

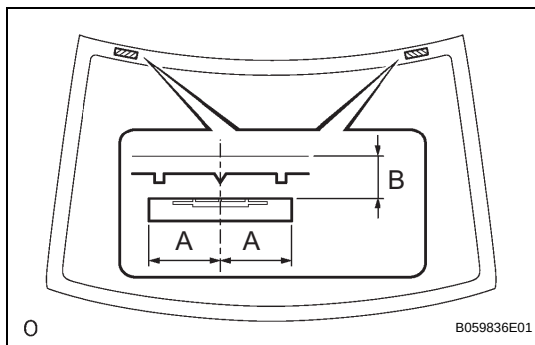

2. INSTALL WINDSHIELD GLASS STOPPER NO. 2

- (a) Coat the installation part of the stopper with Primer G.

HINT:

If an area other than that specified is coated by accident, wipe off the primer with a clean sponge.

NOTICE:

- Allow the primer coating to dry for 3 minutes or more.
- Do not apply too much primer.

- (b) Install 2 new windshield glass stoppers No. 2 onto the glass as shown in the illustration.

A:

40.0 mm (1.575 in.)

B:

7.7 mm (0.303 in.)

3. INSTALL FRONT PILLAR OUTER DAM

- (a) Apply Primer G to the window glass where the front pillar outer dam will be installed.

HINT:

If an area other than that specified is coated by accident, wipe off the primer with a clean sponge.

NOTICE:

- Allow the primer coating to dry for 3 minutes or more.
- Do not apply too much primer.



- (b) Remove the peeling paper from the adhesive part of the dam. Install the dam (adhesive side) to the window glass (Primer G area), but exclude the stopper area "d" as shown in the illustration.

NOTICE:

Do not touch the glass surface after cleaning it.

WS

- A:
7 mm (0.28 in.)
- B:
22.5 mm (0.886 in.)
- C:
45 mm (1.77 in.)
- D:
5 mm (0.20 in.)

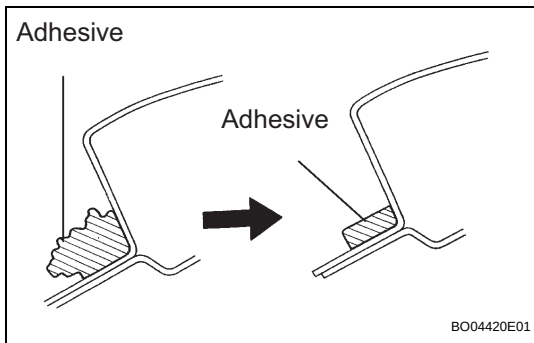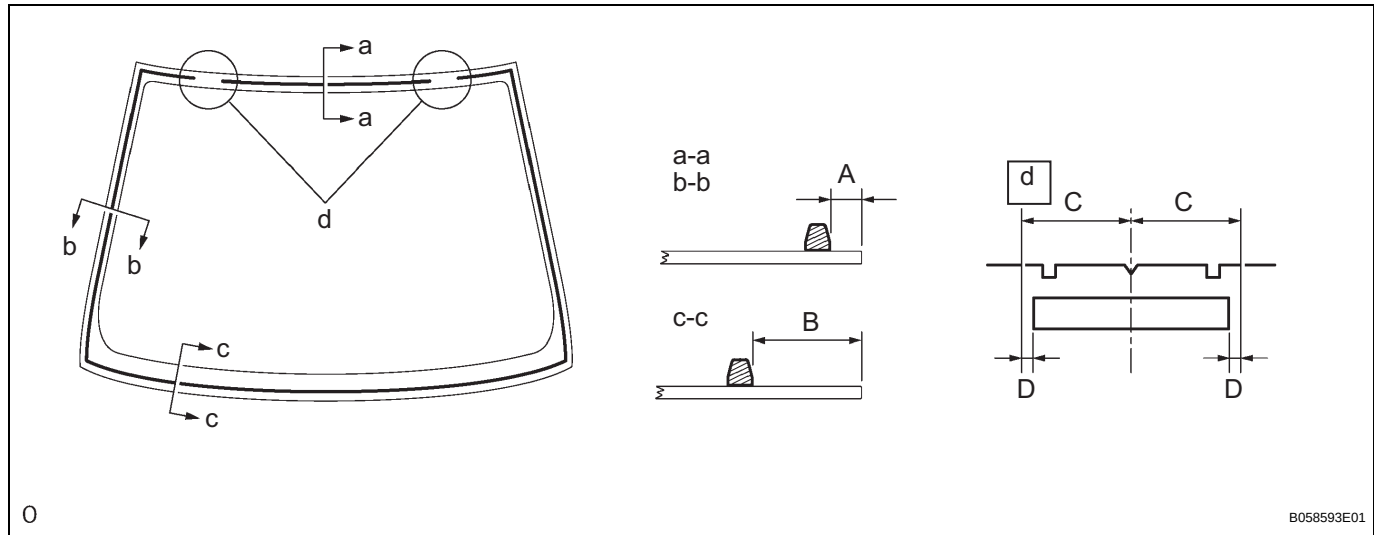

4. INSTALL WINDSHIELD GLASS

- (a) Clean and shape the contact surface of the adhesive on the vehicle's body.
- (1) Using a knife, cut away any excessive adhesive.
HINT:
Leave as much adhesive on the body as possible.
 - (2) Clean the cut surface of the adhesive with a piece of sponge saturated in cleaner.
- (b) Position the glass.
- (1) Using a suction cup, place the glass in the correct position.
 - (2) Check that all the contacting parts of the glass rim are perfectly even.
 - (3) Place reference marks between the glass and body.
- NOTICE:**
Check that the stoppers are attached to the vehicle body correctly.
- HINT:
When planning to reuse the glass, check and correct the reference mark's positions.
- (4) Remove the glass.

- (c) Coat the contact surface of the body panel with Primer M.
- (1) Using a brush, coat the exposed part of the contact surface on the vehicle side with Primer M.

NOTICE:

- Allow the primer coating to dry for 3 minutes or more.
- Do not coat the adhesive with Primer M.
- Do not apply too much Primer.

- (d) Coat the contact surface of the glass with Primer G.
- (1) Using a brush or sponge, coat the edge of the glass and the contact surface with Primer G.

HINT:

If an area other than that specified is coated by accident, wipe off the primer.

NOTICE:

- Allow the primer coating to dry for 3 minutes or more.
- Do not apply too much primer.

- (e) Apply adhesive.
- (1) Cut off the tip of the cartridge nozzle as shown in the illustration.

Adhesive:

Part No. 08850-00801 or equivalent

HINT:

After cutting off the tip, use all adhesive within the time described in the table below.

Temperature	Usage Timeframe
35°C (95°F)	15 minutes
20°C (68°F)	100 minutes
5°C (41°F)	8 hours

- (2) Load the sealer gun with the cartridge.
- (3) Coat the glass with adhesive, as shown in the illustration.

A:

8.0 mm (0.315 in.)

B:


12.5 mm (0.492 in.)

- (f) Install the glass.
- (1) Using a suction cup, position the glass so that the reference marks are aligned, and press it in gently along the rim.

NOTICE:

- Allow the primer coating to dry for 3 minutes or more.
- Check that the stoppers are attached to the vehicle body correctly.
- Check the clearance between the vehicle body and glass.

- (2) Lightly press the glass surface to ensure that the windshield glass is securely fit to the vehicle body.

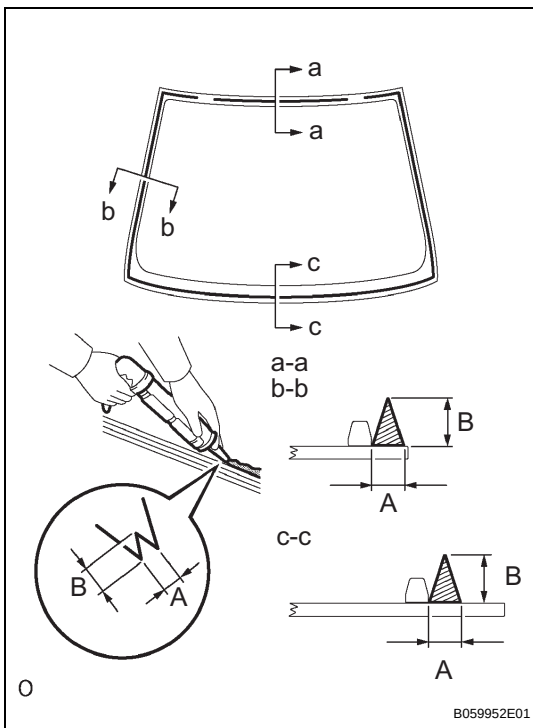

- (3) Using a scraper, remove any excess or protruding adhesive.

HINT:

Apply adhesive on the glass rim.

5. INSTALL WINDSHIELD MOULDING OUTSIDE

- (a) Install a new windshield moulding to the windshield glass before the adhesive has hardened.
- (b) Hold the windshield glass in place securely with protective tape or equivalent until the adhesive has completely hardened.
- (c) Using a scraper, remove any excess or protruding adhesive before the adhesive has hardened.

NOTICE:

Do not drive the vehicle for the amount of time written in the table below.

Temperature	Minimum time prior to driving
35°C (95°F)	1.5 hours
20°C (68°F)	5 hours
5°C (41°F)	24 hours

6. CHECK FOR LEAKAGE AND REPAIR

- (a) Conduct a leak test after the adhesive has completely hardened.
- (b) Seal any leaks with sealant.

7. INSTALL ROOF HEADLINING ASSEMBLY (See page [IR-10](#))

8. INSTALL VISOR HOLDER

9. INSTALL ASSIST GRIP SUB-ASSEMBLY

10. INSTALL MAP LAMP ASSEMBLY

11. INSTALL LH VISOR ASSEMBLY

12. INSTALL RH VISOR ASSEMBLY

13. INSTALL INNER REAR VIEW MIRROR ASSEMBLY

14. INSTALL FRONT PILLAR GARNISH LH

15. INSTALL FRONT PILLAR GARNISH RH

16. INSTALL FRONT DOOR WEATHERSTRIP LH

17. INSTALL FRONT DOOR WEATHERSTRIP RH

18. INSTALL COWL TOP VENTILATOR LOUVER RH

19. INSTALL COWL TOP VENTILATOR LOUVER LH

20. INSTALL HOOD TO COWL TOP SEAL

21. REMOVE FR WIPER ARM LH (See page [WW-12](#))

22. INSTALL FR WIPER ARM LH (See page [WW-12](#))