


QUARTER WINDOW GLASS

COMPONENTS

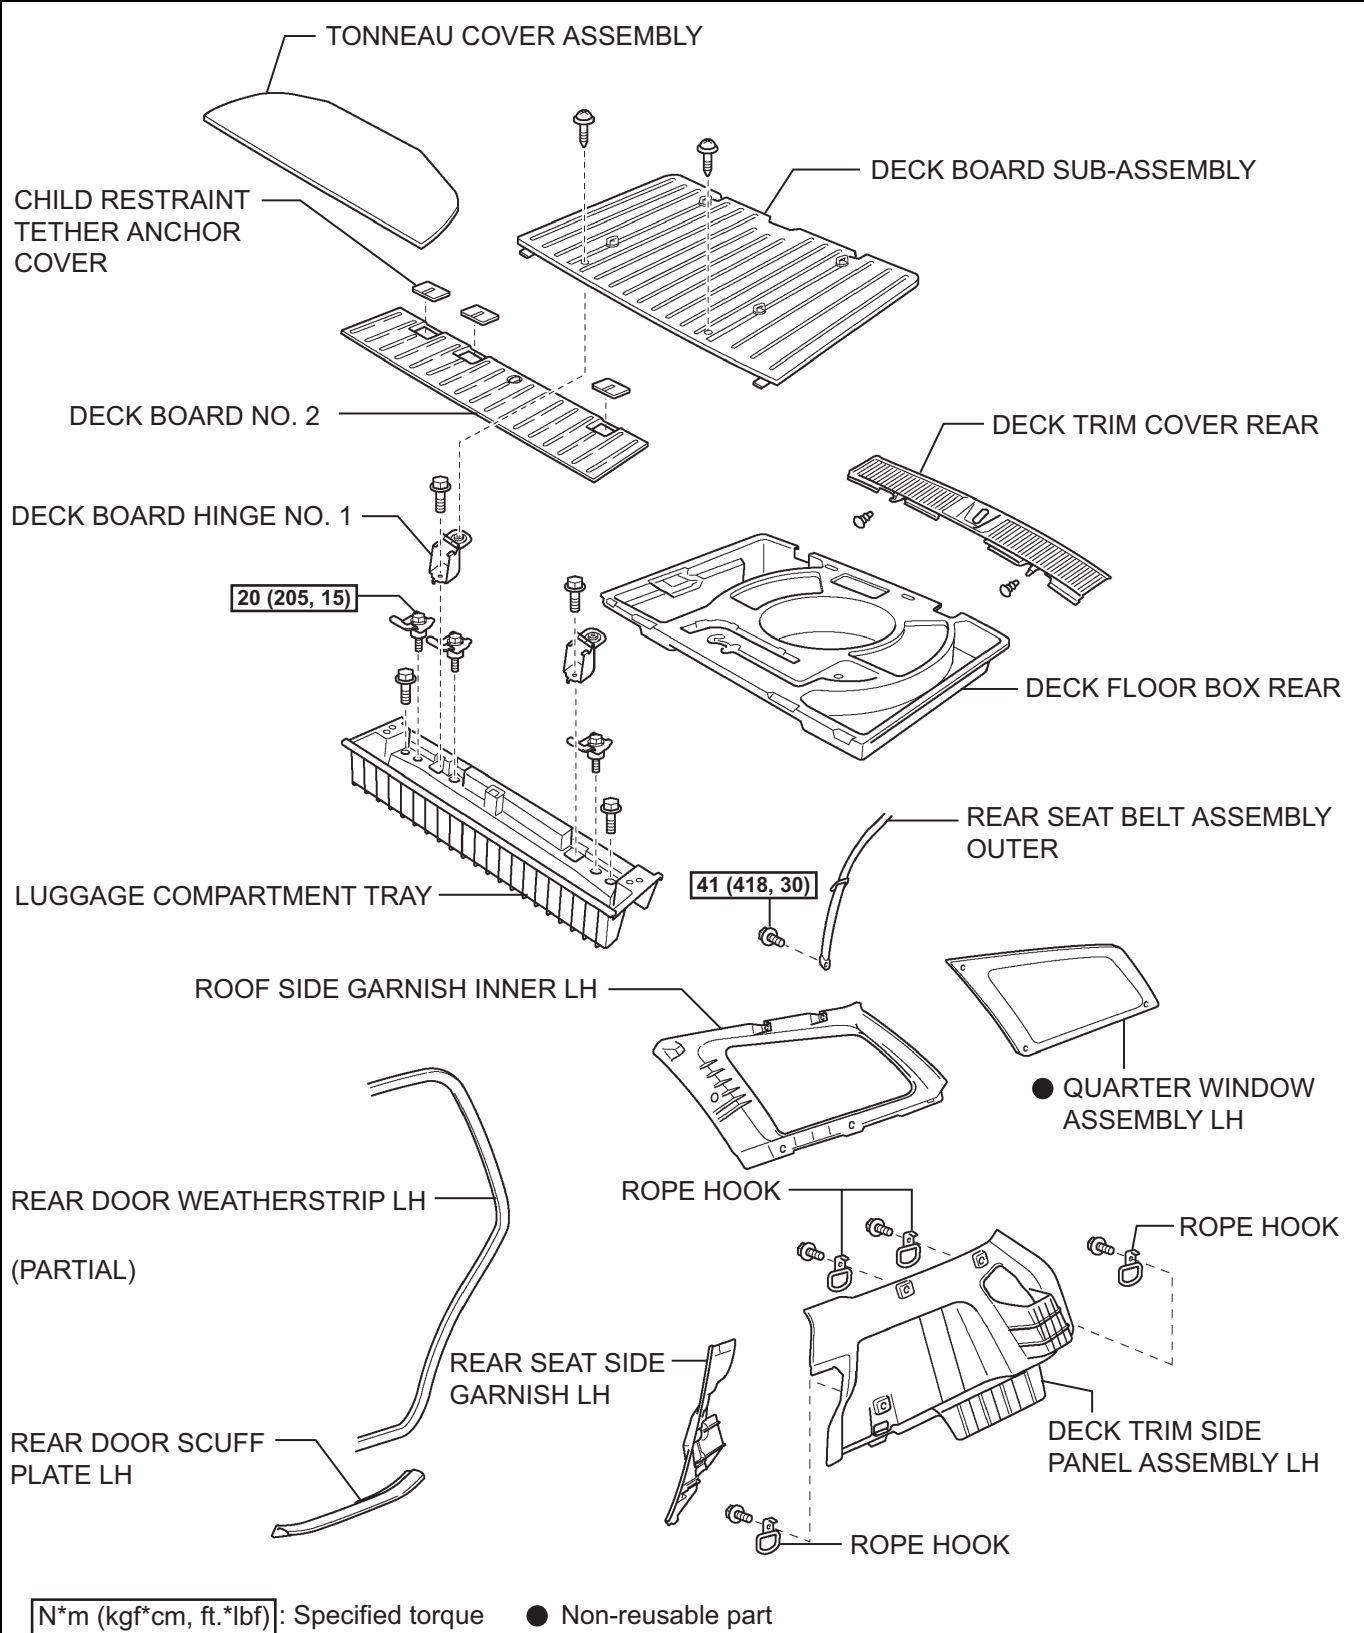

REMOVAL

HINT:

- Use the same procedures for the RH side and LH side.
- A bolt without a torque specification is shown in the standard bolt chart.

1. REMOVE REAR SEAT ASSEMBLY LH (See page [SE-18](#))
2. REMOVE DECK BOARD SUB-ASSEMBLY (See page [IR-6](#))
3. REMOVE DECK BOARD NO. 2
4. REMOVE LUGGAGE COMPARTMENT TRAY (See page [IR-6](#))
5. REMOVE DECK FLOOR BOX REAR (See page [IR-6](#))
6. REMOVE TONNEAU COVER ASSEMBLY
7. REMOVE DECK TRIM COVER REAR (See page [IR-7](#))
8. REMOVE REAR DOOR SCUFF PLATE LH (See page [IR-7](#))
9. REMOVE REAR DOOR WEATHERSTRIP LH
10. REMOVE REAR SEAT SIDE GARNISH LH (See page [IR-7](#))
11. REMOVE DECK TRIM SIDE PANEL ASSEMBLY LH (See page [IR-7](#))
12. REMOVE ROOF SIDE GARNISH INNER LH (See page [IR-7](#))
13. REMOVE QUARTER WINDOW ASSEMBLY LH

- (a) Using a knife, cut off the moulding as shown in the illustration.

NOTICE:

Do not damage the vehicle body with the knife.

