

REASSEMBLY

1. **INSTALL REAR SEATBACK LOCK ASSEMBLY LH**
 - (a) Install the rear seatback lock LH with the 2 bolts.
2. **INSTALL REAR SEATBACK LOCK ASSEMBLY RH**
 - (a) Install the rear seatback lock RH with the 2 bolts.
3. **INSTALL SEPARATE TYPE SEAT CUSHION COVER LH**
 - (a) Install the seat cushion pad LH to the seat cushion frame LH.
 - (b) Using hog ring pliers, install the seat cushion cover LH with new hog rings.
NOTICE:
 - **Be careful not to damage the cover.**
 - **When installing the hog rings, take care to minimize wrinkles as much as possible.**
4. **INSTALL SEPARATE TYPE SEAT CUSHION COVER RH**

HINT:
Use the same procedures described for the LH side.
5. **INSTALL SEPARATE TYPE SEAT BACK COVER LH**
 - (a) Install the seatback pad RH to the seatback frame RH.
 - (b) Using hog ring pliers, install the seatback cover RH with new hog rings.
NOTICE:
 - **Be careful not to damage the cover.**
 - **When installing the hog rings, take care to minimize wrinkles as much as possible.**
 - (c) Install the rear seat lap type belt center with the bolt.
Torque: 41 N*m (420 kgf*cm, 30 in.*lbf)
 - (d) Install the rear seat shoulder belt cover.
 - (e) Install the rear seatback stop button grommet.
 - (f) Install the rear seatback lock release button.
 - (g) Install the 2 headrest supports.
6. **INSTALL SEPARATE TYPE SEAT BACK COVER RH**
 - (a) Install the seatback pad LH to the seatback frame LH.
 - (b) Using hog ring pliers, install the seatback cover LH with new hog rings.
NOTICE:
 - **Be careful not to damage the cover.**
 - **When installing the hog rings, take care to minimize wrinkles as much as possible.**
 - (c) Install the rear seatback stop button grommet.
 - (d) Install the rear seatback lock release button.
 - (e) Install the 2 headrest supports.
7. **INSTALL REAR SEATBACK BOARD LH**
 - (a) Install the rear seatback LH with the 2 bolts.
Torque: 18 N*m (185 kgf*cm, 13 in.*lbf)
 - (b) Install the rear seatback board LH with the 4 screws.

8. INSTALL REAR SEATBACK BOARD RH