

REMOVAL

1. PRECAUTION

HINT:

(See page [RS-1](#))

2. SEPARATE BATTERY NEGATIVE TERMINAL

3. REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY CENTER

HINT:

(See page [IP-5](#))

4. REMOVE INSTRUMENT CLUSTER FINISH PANEL ASSEMBLY CTR

HINT:

(See page [IP-5](#))

5. REMOVE INSTRUMENT PANEL BOX

HINT:

(See page [IP-5](#))

6. REMOVE INSTRUMENT PANEL FINISH PANEL LOWER CENTER

HINT:

(See page [IP-5](#))

7. REMOVE AIRBAG SENSOR ASSEMBLY CENTER

HINT:

(See page [RS-314](#))

8. SEPARATE OXYGEN SENSOR CONNECTOR

(a) Remove the foot rest.

(b) Pull up the floor carpet.

(c) Disconnect the oxygen sensor connector.

9. REMOVE FLOOR PANEL BRACE FRONT

(a) Remove the 2 nuts and floor panel brace.

10. REMOVE EXHAUST PIPE ASSEMBLY FRONT

HINT:

(See page [EX-2](#))


11. REMOVE FRONT FLOOR HEAT INSULATOR NO.1

(a) Remove the 3 nuts and heat insulator.


12. REMOVE AIR CLEANER ASSEMBLY WITH HOSE

13. REMOVE TRANSMISSION CONTROL CABLE ASSEMBLY


(a) Remove the nut and disconnect control cable from control shaft lever.

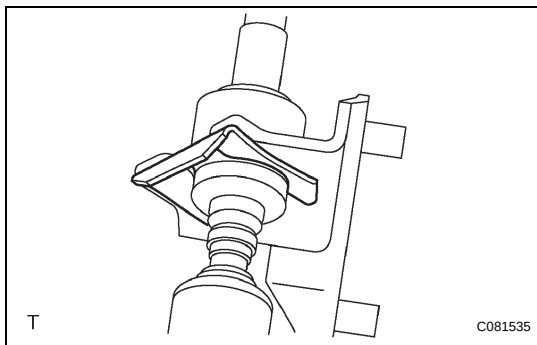


- (b) Remove the clip and disconnect the control cable from the bracket.

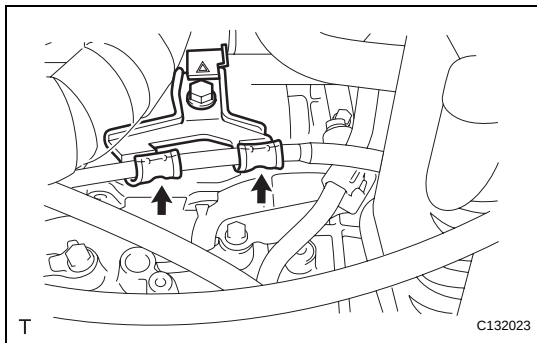


- (c) Disconnect the control cable from control cable support.

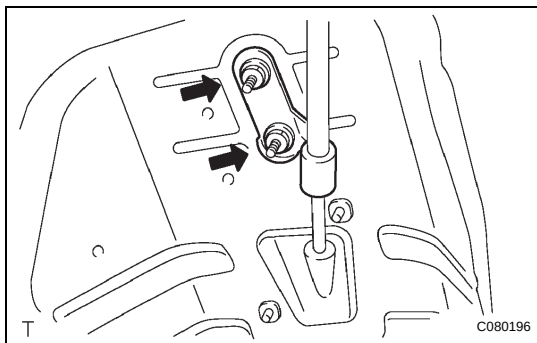

- (d) Remove the 2 nuts and separate the control cable from the body.

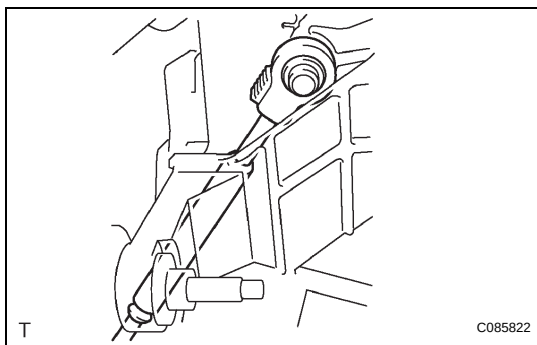


- (e) Remove the cable end from the floor shift assembly.

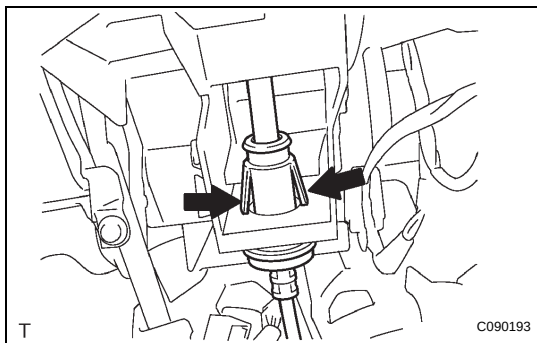

- (f) Using a screwdriver, disconnect the control cable from the shift lever plate.

HINT:

Tape up the screwdriver tip before use.

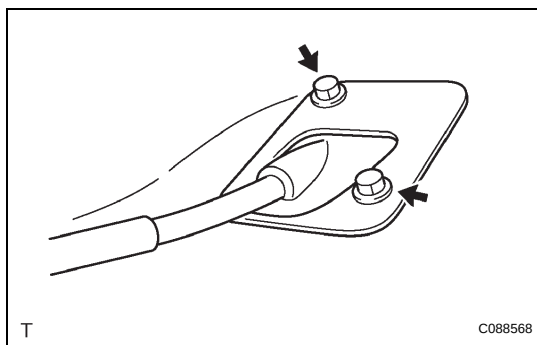

- (g) Remove the 2 bolts.
- (h) Pull out the control cable assembly from the body.
- (i) Remove the retainer from the shift cable.