

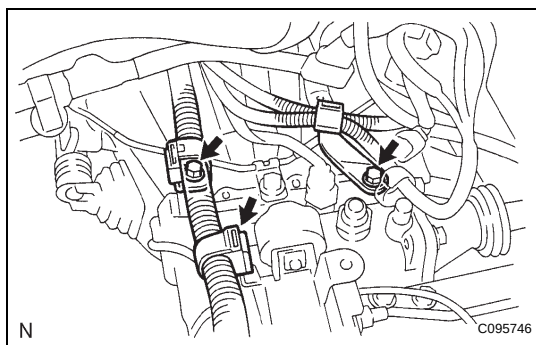


REMOVAL


1. PLACE FRONT WHEELS FACING STRAIGHT AHEAD
2. SEPARATE STEERING INTERMEDIATE SHAFT (See page [SR-7](#))
3. REMOVE FRONT WHEELS
4. REMOVE ENGINE UNDER COVER LH
5. REMOVE ENGINE UNDER COVER RH
6. REMOVE EXHAUST PIPE ASSEMBLY
HINT:
(See page [EX-2](#))
7. DRAIN TRANSAXLE OIL
8. REMOVE HOOD SUB-ASSEMBLY
9. REMOVE CYLINDER HEAD COVER NO. 2
(a) Remove the 2 nuts caps, clips and No. 2 cylinder head cover.
10. REMOVE AIR CLEANER ASSEMBLY
11. REMOVE BATTERY CLAMP SUB-ASSEMBLY
12. REMOVE BATTERY
13. REMOVE BATTERY TRAY
14. REMOVE BATTERY CARRIER
(a) Remove the 4 bolts and battery carrier.

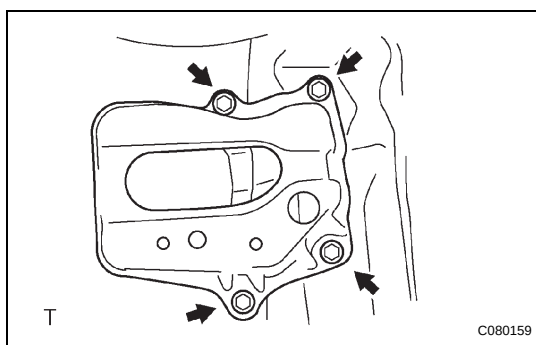

15. DISCONNECT WIRE HARNESS
(a) Disconnect the wire harness clamp
(b) Remove the 2 bolts and disconnect the 2 wire harness brackets.

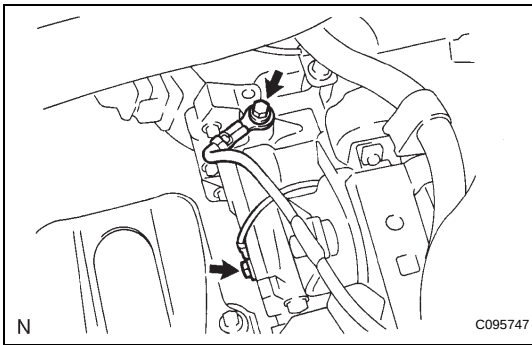


(c) Remove the 2 bolts and 2 ground cables.

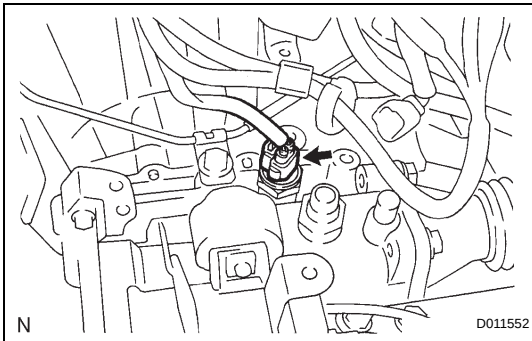


16. DISCONNECT CONNECTOR

(a) Disconnect the back-up light switch connector.

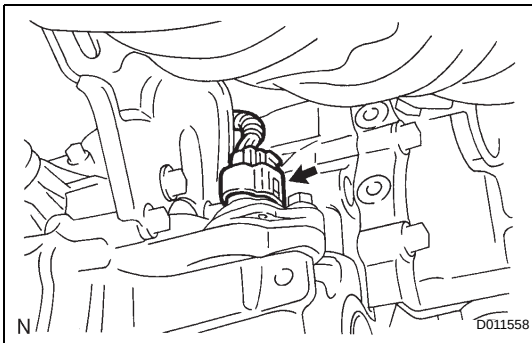


(b) w/o ABS:
Disconnect the speed sensor connector.

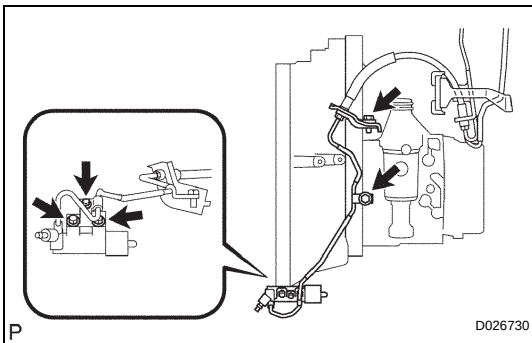


17. SEPARATE CLUTCH RELEASE CYLINDER ASSEMBLY

(a) Remove the 5 bolts, separate the release cylinder assembly with clutch piping from the transaxle.

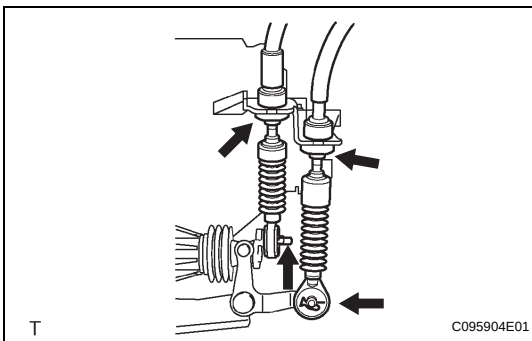

18. SEPARATE TRANSMISSION CONTROL CABLE ASSEMBLY

(a) Remove the 2 clip, 2 washer and disconnect the cable end of the control cable assembly from the transaxle.
(b) Remove the 2 clip and disconnect the control cable assembly from the bracket.

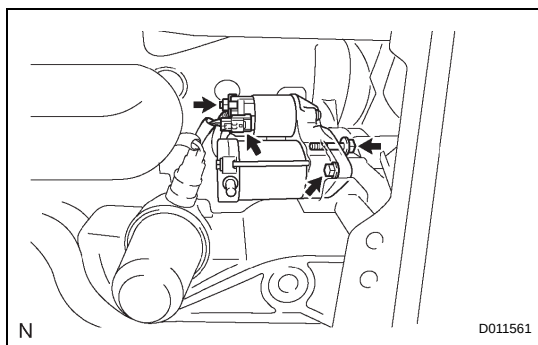

19. REMOVE STARTER ASSEMBLY

- Remove the nut and disconnect the starter wire.
- Disconnect the connector.
- Remove the 2 bolts and starter assembly.

20. DISCONNECT TIE ROD END SUB-ASSEMBLY LH (See page PS-17)

21. DISCONNECT TIE ROD END SUB-ASSEMBLY RH (See page PS-17)

22. DISCONNECT PRESSURE FEED TUBE ASSEMBLY (See page PS-17)

23. DISCONNECT RETURN TUBE SUB-ASSEMBLY (See page PS-17)

24. REMOVE FRONT DRIVE SHAFT ASSEMBLY LH (See page DS-6)

25. REMOVE FRONT DRIVE SHAFT ASSEMBLY RH (See page DS-6)

26. SUSPEND ENGINE ASSEMBLY

- Remove the 2 PCV hoses.
- Install the No. 1 and No. 2 engine hangers in the correct direction.

Parts No.:

No. 1 engine hanger:

12281-22021

No. 2 engine hanger:

12281-15040

Bolt:

91512-B1016

Torque: 38 N*m (387 kgf*cm, 28 ft.*lbf)

- Attach the engine chain hoist to the hangers.

CAUTION:

Do not attempt to hang the engine by hooking the chain to any other part.

27. REMOVE FRONT SUSPENSION CROSSMEMBER SUB-ASSEMBLY

28. SUPPORT MANUAL TRANSAXLE ASSEMBLY

- Support the transaxle with a transmission jack.

29. REMOVE TRANSVERSE ENGINE ENGINE MOUNTING INSULATOR

- Remove the 5 bolts, nut and engine mounting insulator LH from the body.

