


DIFFERENTIAL OIL SEAL


COMPONENTS

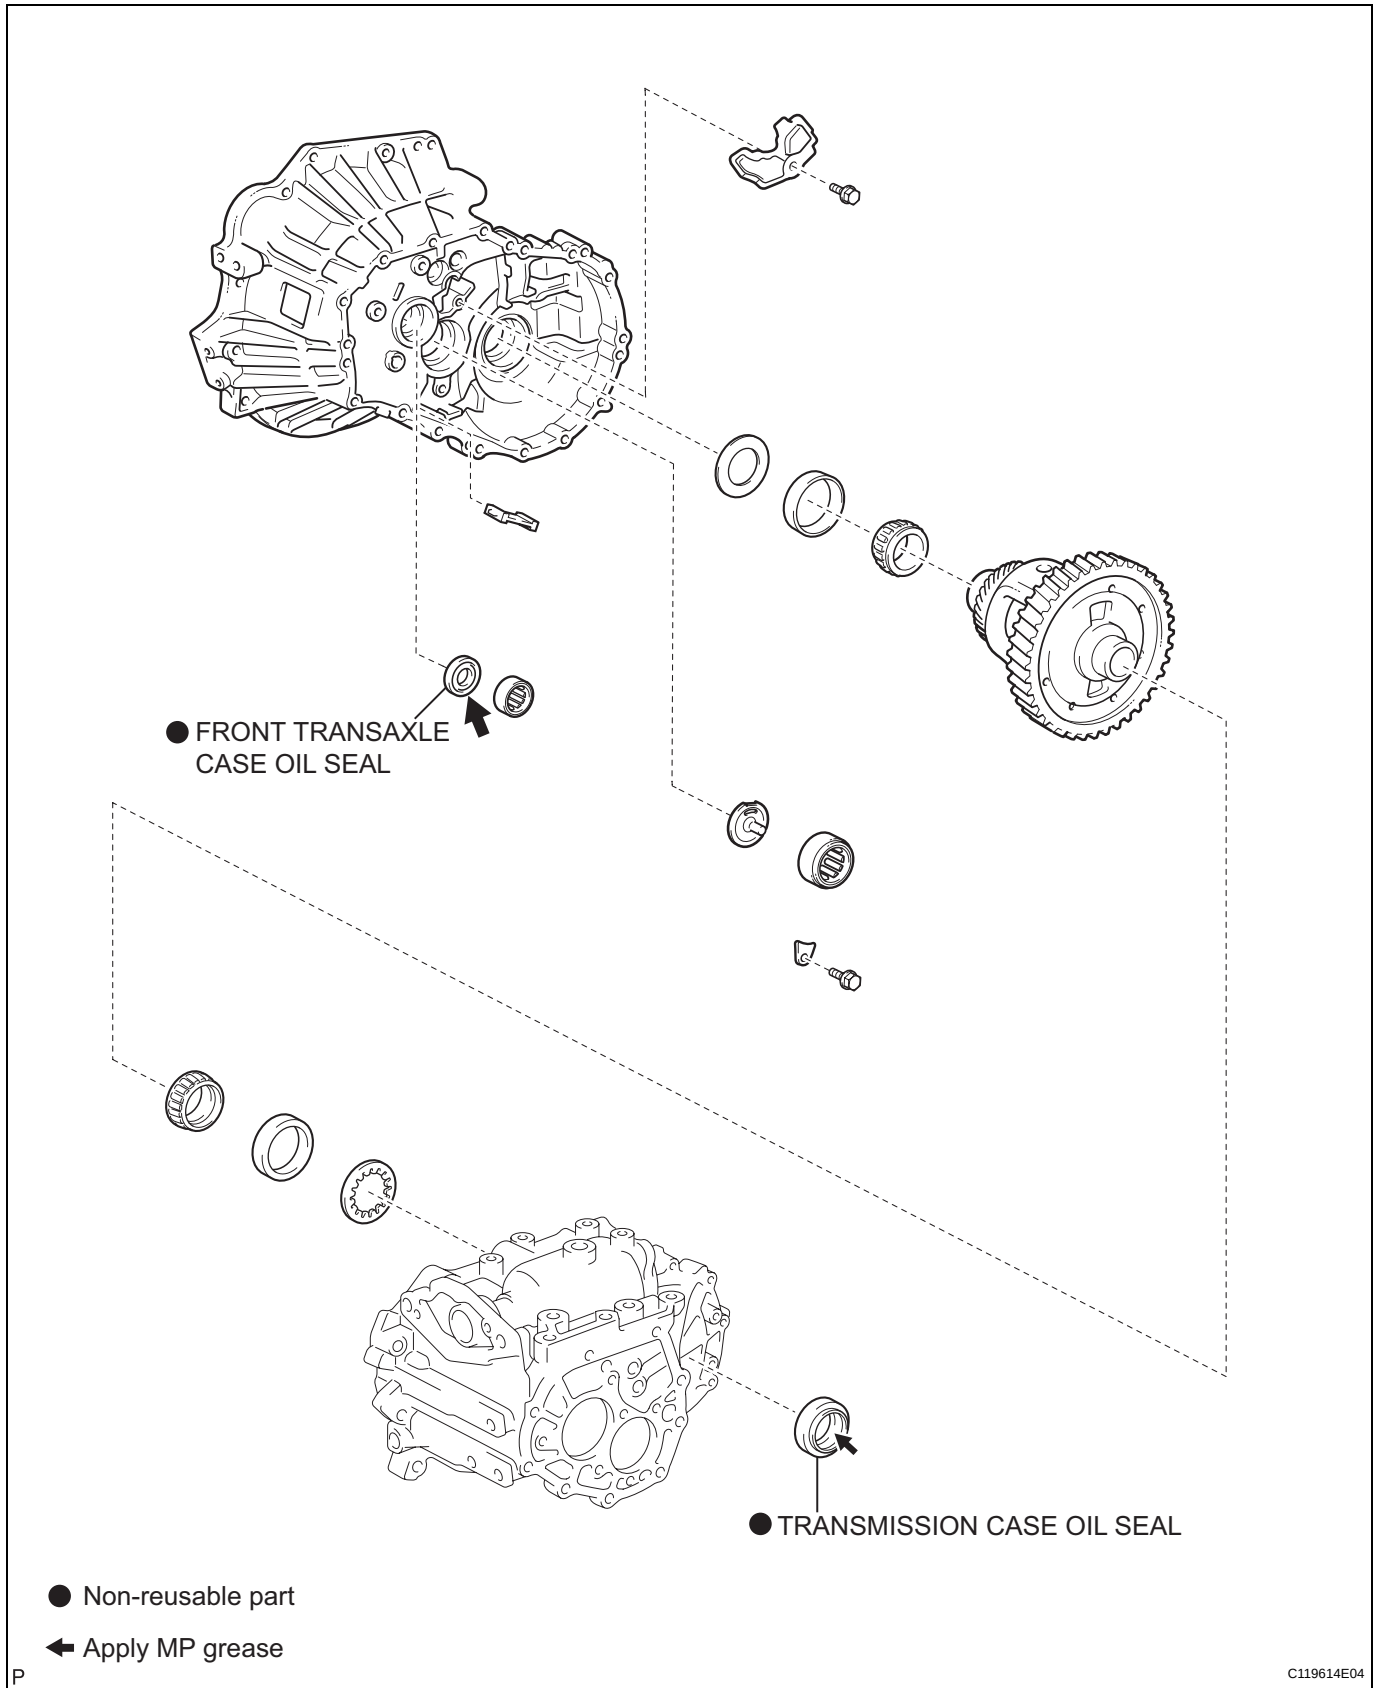


MX

REMOVAL

1. DRAIN MANUAL TRANSAXLE OIL
2. REMOVE FRONT WHEELS
3. REMOVE ENGINE UNDER COVER LH
4. REMOVE ENGINE UNDER COVER RH
5. REMOVE FRONT DRIVE SHAFT ASSEMBLY LH (See page [DS-6](#))
6. REMOVE FRONT DRIVE SHAFT ASSEMBLY RH (See page [DS-6](#))
7. REMOVE FRONT TRANSAXLE CASE OIL SEAL
 - (a) Using SST, remove the oil seal.
SST 09308-00010

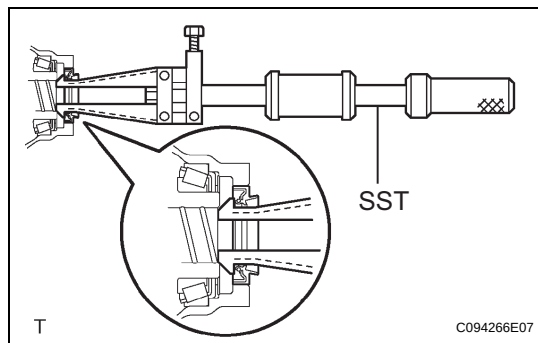



8. REMOVE TRANSMISSION CASE OIL SEAL
 - (a) Using SST, remove the oil seal.
SST 09308-00010

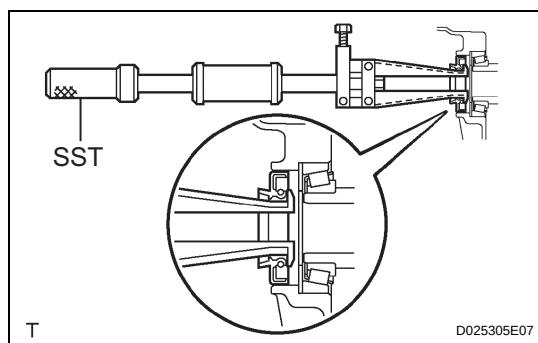

INSTALLATION

1. INSTALL FRONT TRANSAXLE CASE OIL SEAL
 - (a) Coat a new oil seal lip with MP grease.
 - (b) Using SST and a hammer, install the oil seal.
SST 09554-14010, 09950-70010 (09951-07200)
Drive in depth:
1.9 +/- 0.3 mm (0.075 +/- 0.012 in.)
NOTICE:
Be careful not to damage the oil seal lip.

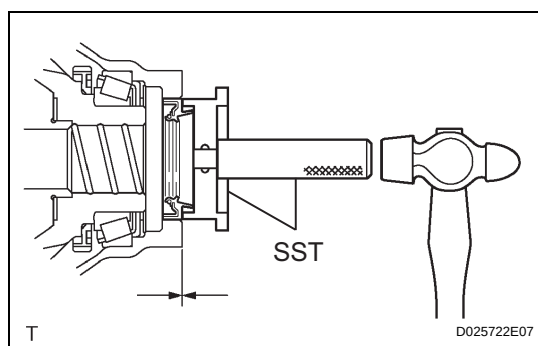

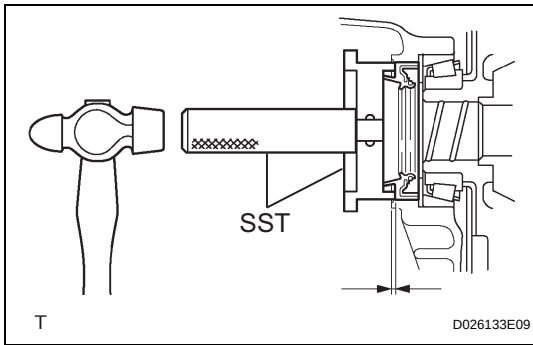**2. INSTALL TRANSMISSION CASE OIL SEAL**


- (a) Coat a new oil seal lip with MP grease.
- (b) Using SST and a hammer, install the oil seal.
SST 09554-14010, 09950-70010 (09951-07200)
Drive in depth:
9.9 +- 0.3 mm (0.390 +- 0.012 in.)
NOTICE:
Be careful not to damage the oil seal lip.

3. INSTALL FRONT DRIVE SHAFT ASSEMBLY LH (See page [DS-12](#))**4. INSTALL FRONT DRIVE SHAFT ASSEMBLY RH (See page [DS-12](#))****5. INSTALL FRONT WHEELS**

Torque: 103 N*m (1,050 kgf*cm, 76 ft.*lbf)

6. ADD MANUAL TRANSAXLE OIL

- (a) Add the manual transaxle oil.
Oil grade:
API GL-4 or GL-5
Viscosity:
SAE 75 W-90
Capacity:
1.9 liters (2.0 US qts, 1.7 Imp. qts)
Torque: 39.2 N*m (400 kgf*cm, 29 ft.*lbf)

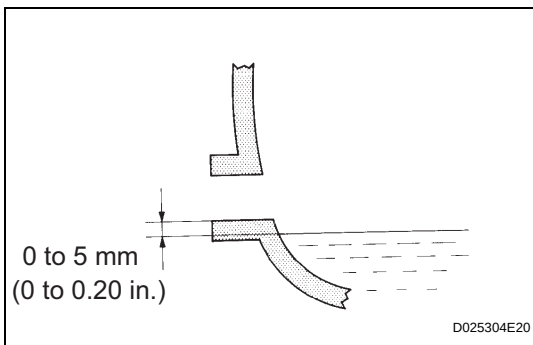**7. INSPECT AND ADJUST MANUAL TRANSAXLE OIL****8. CHECK ABS SPEED SENSOR SIGNAL**

- (a) Anti-lock Brake System (See page [BC-7](#))
- (b) Vehicle Stability Control System (See page [BC-83](#))