

PROBLEM SYMPTOMS TABLE

Symptom	Suspected area	See page
Power window does not operate (ALL) (Power door lock does not operate)	1. P/W relay	WS-24
	2. P/W fuse	-
	3. GAUGE fuse	-
	4. Wire harness	-
Power window does not operate (ALL) (Power door lock is normal)	1. Ignition switch	-
	2. Power window regulator master switch	WS-4
	3. Wire harness	-
	4. Power window motor	WS-8
"One-Touch Power Window System" does not operate	1. Power window regulator master switch	WS-4
	2. Power window motor	WS-8
Only one window glass does not move	1. Power window regulator master switch	WS-4
	2. Power window regulator switch	WS-6
	3. Power window regulator switch	WS-7
	4. Power window motor	WS-8
	5. Wire harness	-
"Window Lock System" does not operate	Power window regulator master switch	WS-4

ON-VEHICLE INSPECTION

1. CHECK BASIC FUNCTION (MANUAL OPERATION FUNCTION)

- (a) Turn the ignition switch ON.
 - (1) Check that a door glass moves up when its respective window switch of the regulator master switch assembly is pulled up, and moves down when its respective window switch is pushed down.
 - (2) Check that a door glass moves up when the window switch of each regulator switch assembly is pulled, and moves down when each window switch is pushed down.
 - (3) Check that only the driver's door glass can operate when the window lock switch is pressed.

2. CHECK AUTOMATIC OPERATION FUNCTION

- (a) Turn the ignition switch ON.
 - (1) Check that a door glass is fully opened when each window switch of the regulator master switch assembly is fully pressed DOWN.
 - (2) Check that a door glass is fully opened when the window switch of each regulator switch assembly is fully pressed DOWN.
 - (3) Check that the door glass stops when the applicable switch is turned UP during the AUTODOWN operation. (However, if the switch is kept on the UP side, the window will change to the manual operation.)