


BACK DOOR GLASS

COMPONENTS

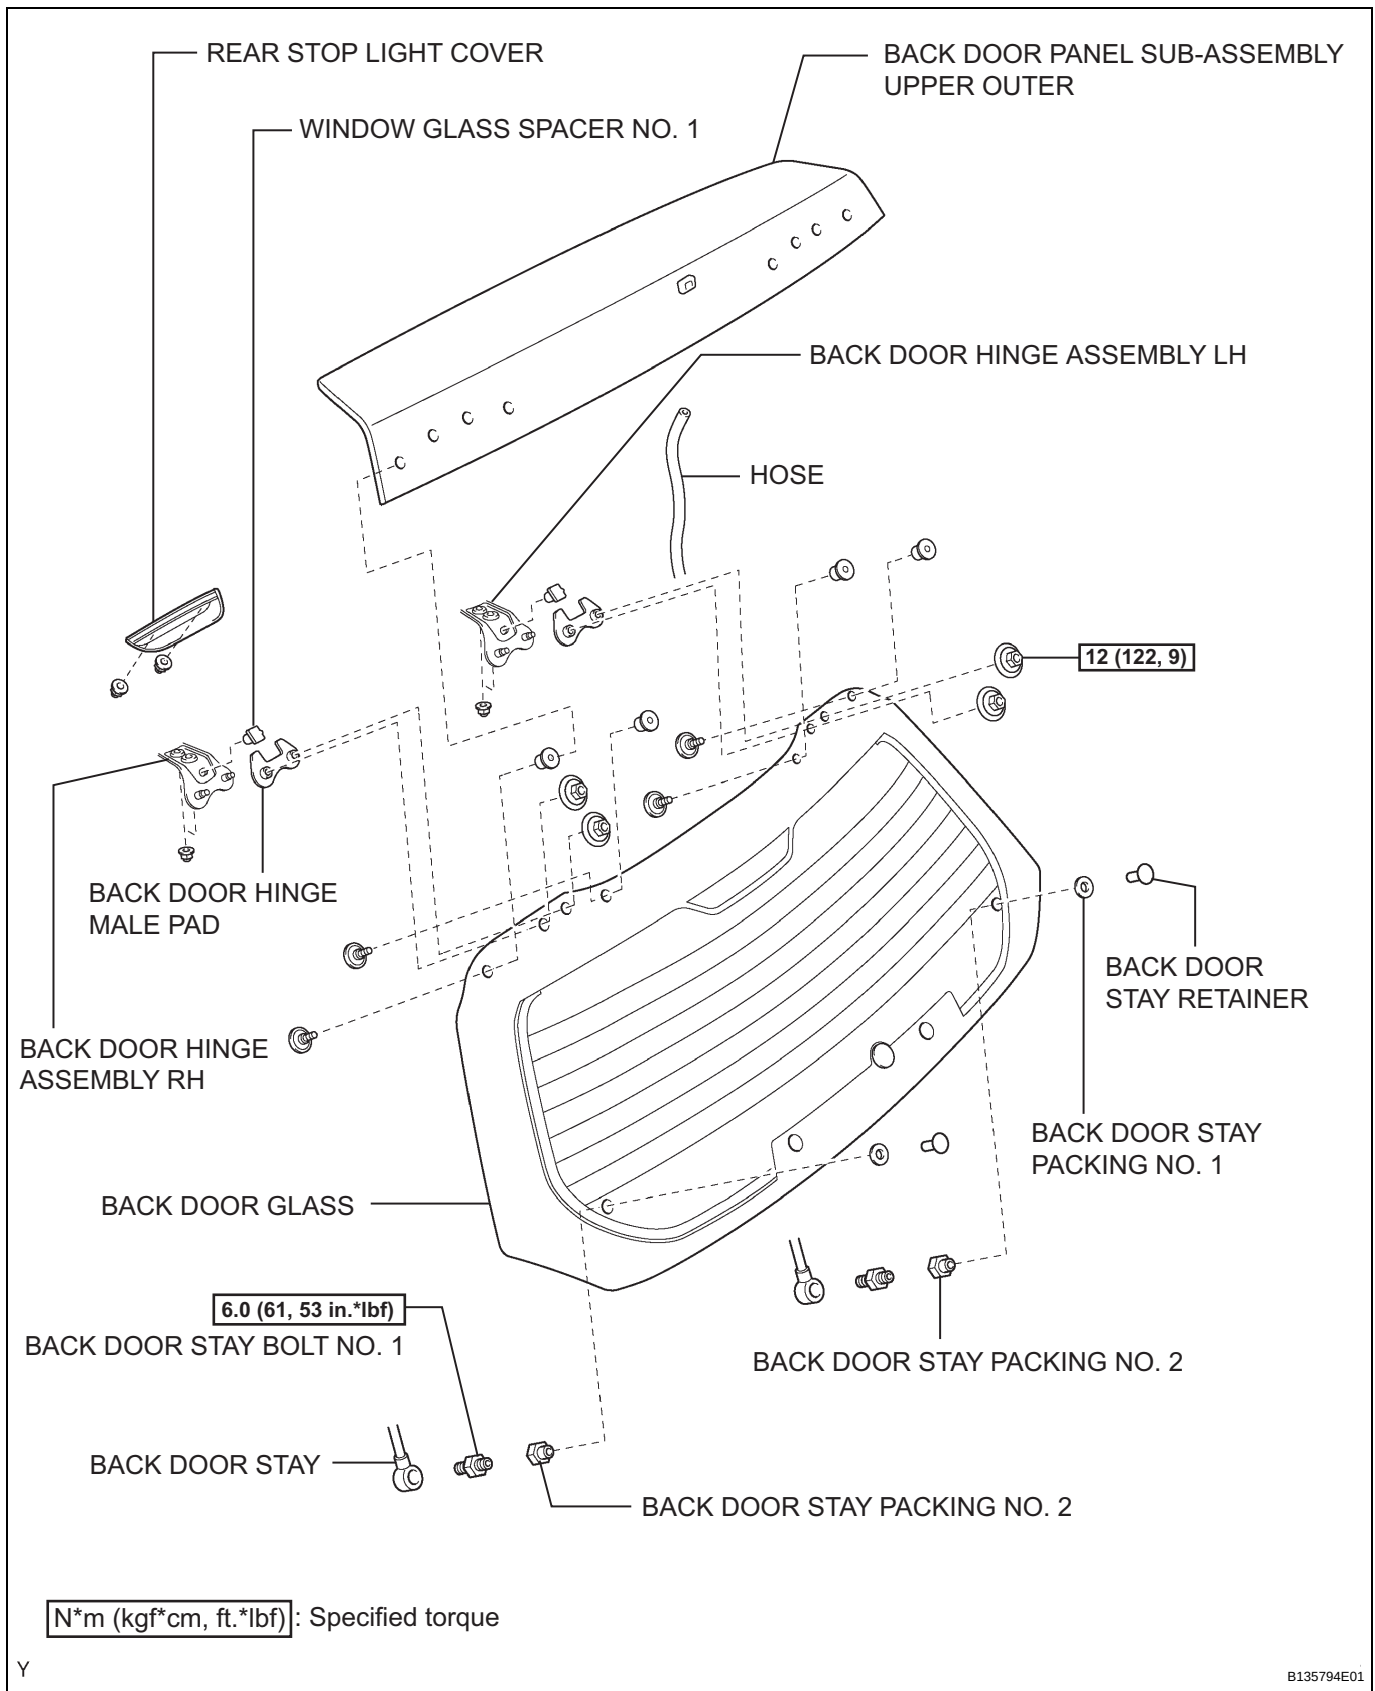


WS


REMOVAL

1. REMOVE BACK DOOR PANEL SUB-ASSEMBLY UPPER OUTER

- Remove the center stop light.
- Using a torx wrench (T30), remove the 4 screws.
- Remove the 4 nuts.

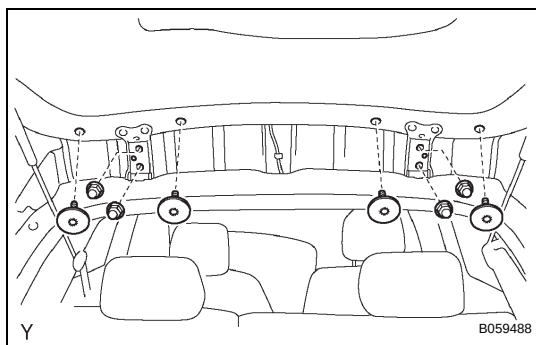

- Remove the hose.

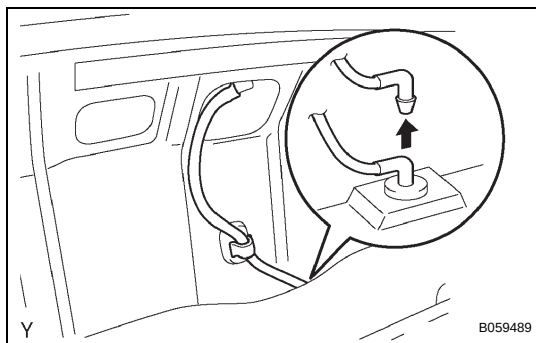


- Using a knife, cut off the adhesive tape as shown in the illustration.

NOTICE:

Do not damage the back door glass with the knife.

- Remove the back door panel upper outer, and then disconnect the clamp.

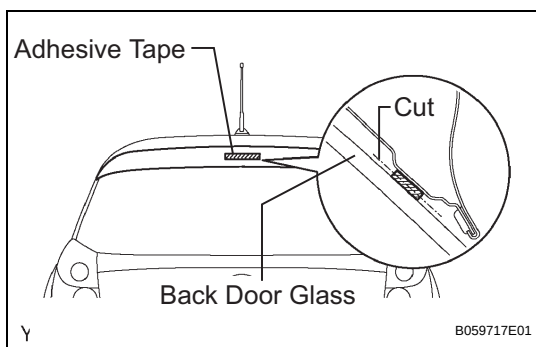

2. REMOVE REAR WIPER ARM ASSEMBLY (See page [WW-9](#))

3. REMOVE REAR WIPER LINK CAP

4. REMOVE W/WASHER PACKING NUT REAR WIPER LINK PIVOT

5. REMOVE RR WIPER MOTOR COVER


6. REMOVE WINDSHIELD WIPER MOTOR ASSEMBLY (See page [WW-10](#))


7. REMOVE BACK DOOR GLASS

- Using a screwdriver, remove the back door stay from the back door panel.

HINT:

While supporting the back door by hand, remove the back door stay.

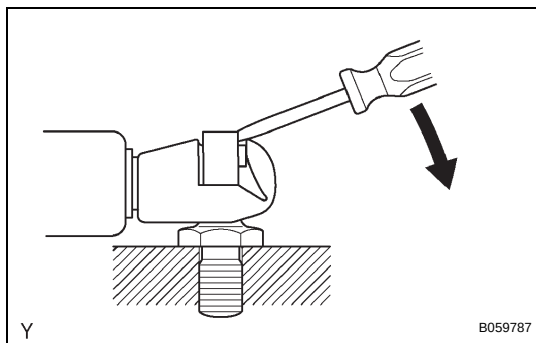


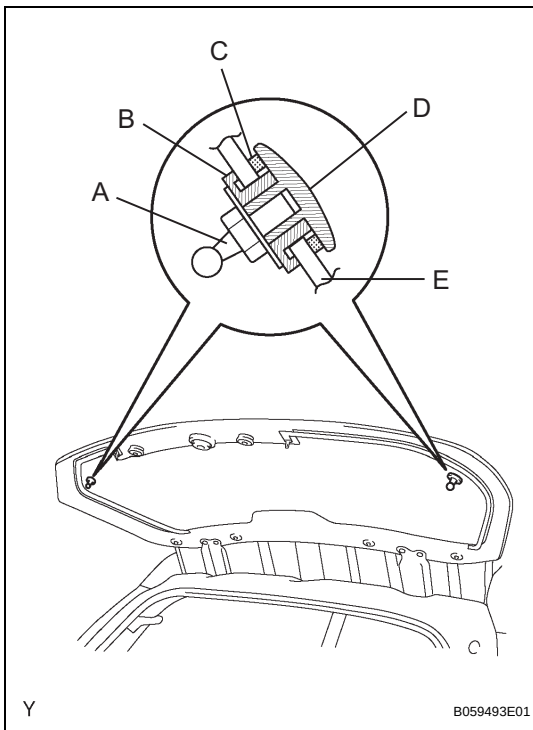

- (b) Remove the back door stay bolt No. 1, back door stay retainer and back door stay packing No. 2 from the back door glass.

HINT:

- A: Back door stay bolt No. 1
B: Back door stay packing No. 2
C: Back door stay packing No. 1
D: Back door stay retainer
E: Back door glass

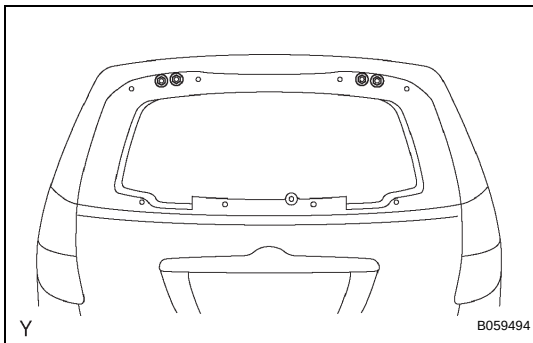

- (c) Remove the 4 nuts and back door glass.

8. REMOVE BACK DOOR HINGE ASSEMBLY RH

- (a) Remove the 2 nuts, window glass spacer No. 1, back door hinge male pad and back door glass from the back door hinge assembly RH.

9. REMOVE BACK DOOR HINGE ASSEMBLY LH

WS