


DISASSEMBLY

HINT:

- The installation procedures are the removal procedures in reverse order. However, only installation procedures requiring additional information are included.
- A bolt without a torque specification is shown in the standard bolt chart (See page [IP-5](#)).

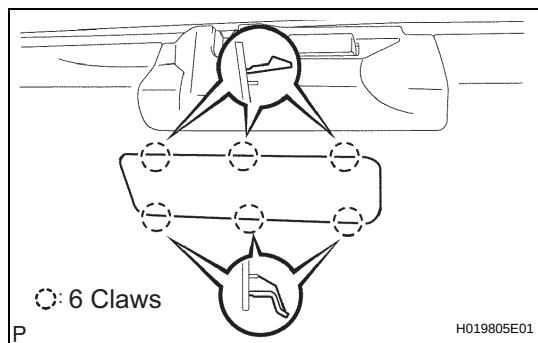


1. REMOVE LICENSE PLATE LIGHT SERVICE COVER

- (a) Using a screwdriver, remove the cover.

HINT:

Tape the screwdriver tip before use.

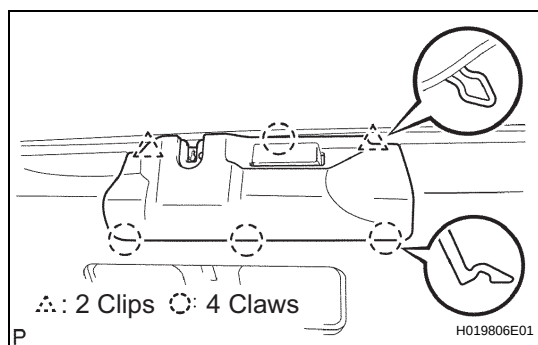


2. REMOVE BACK DOOR LOCK COVER

- (a) Using a screwdriver, remove the cover.

HINT:

Tape the screwdriver tip before use.

3. REMOVE DOOR PULL HANDLE

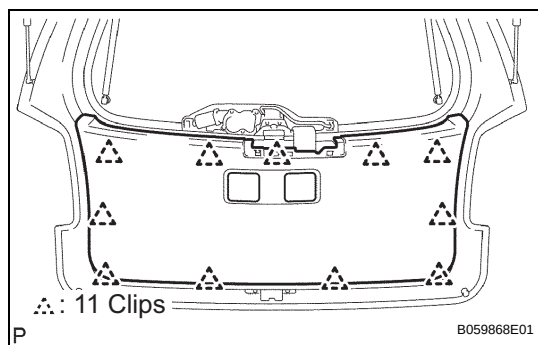

4. REMOVE BACK DOOR TRIM BOARD ASSEMBLY

- (a) Using a screwdriver, remove the back door trim board.

HINT:


Tape the screwdriver tip before use.


5. REMOVE REAR WIPER ARM ASSEMBLY (See page [WW-17](#))

6. REMOVE REAR WIPER MOTOR ASSEMBLY (See page [WW-17](#))

7. REMOVE BACK DOOR LOCK CYLINDER & KEY SET

- (a) Disconnect the 2 links from the door lock cylinder.
(b) Remove the 2 nuts and door lock cylinder.

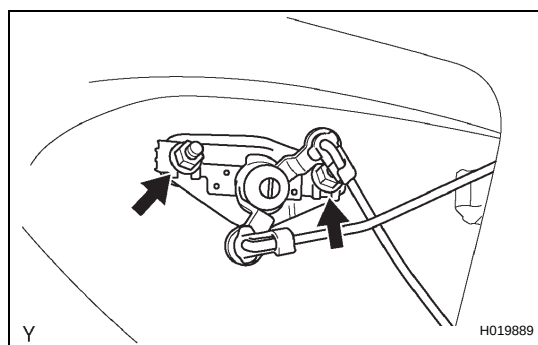

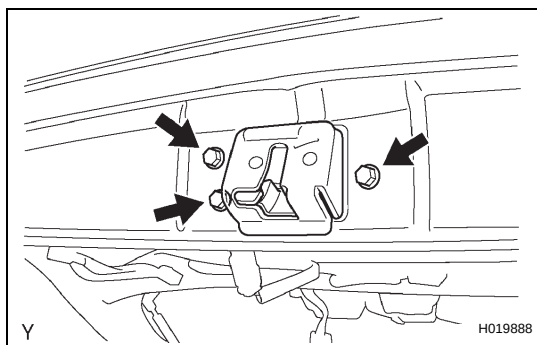**8. REMOVE BACK DOOR LOCK ASSEMBLY**

- (a) Remove the 3 bolts and the door lock, and then disconnect the connector and link.
- (b) Remove the 3 screws and door lock actuator from the door lock.

9. REMOVE LICENSE PLATE LIGHT ASSEMBLY (See page [LI-30](#))**10. REMOVE BACK DOOR OUTSIDE HANDLE**

- (a) Remove the 2 nuts and outside handle, and then disconnect the connector.

11. REMOVE BACK DOOR GARNISH SUB-ASSEMBLY OUTSIDE

- (a) Remove the 2 nuts and back door outside garnish.
- (b) Using a screwdriver, remove the back door outside garnish.

12. REMOVE CENTER STOP LIGHT ASSEMBLY (See page [LI-32](#))