




Taillight and Illumination

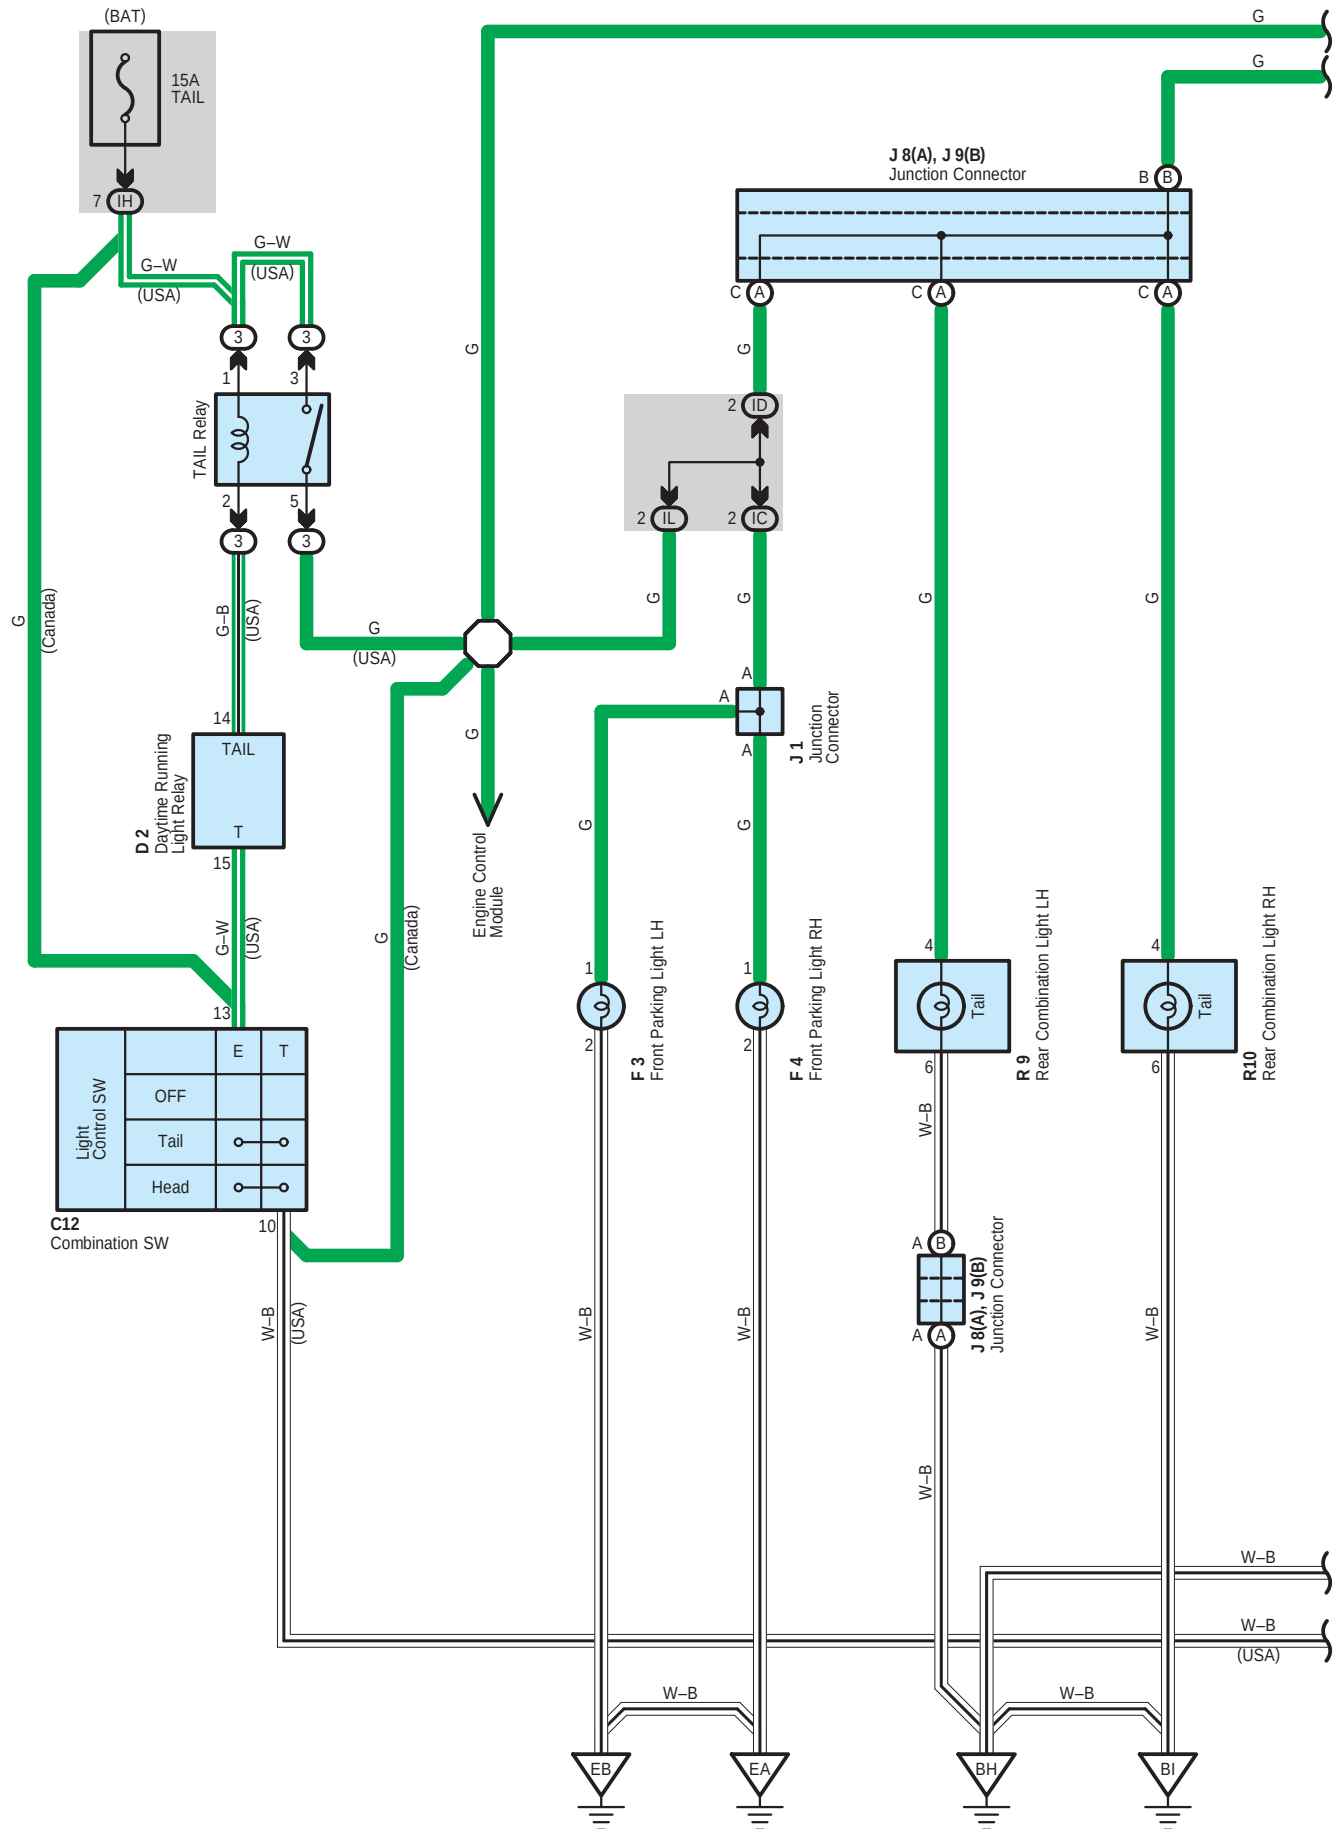


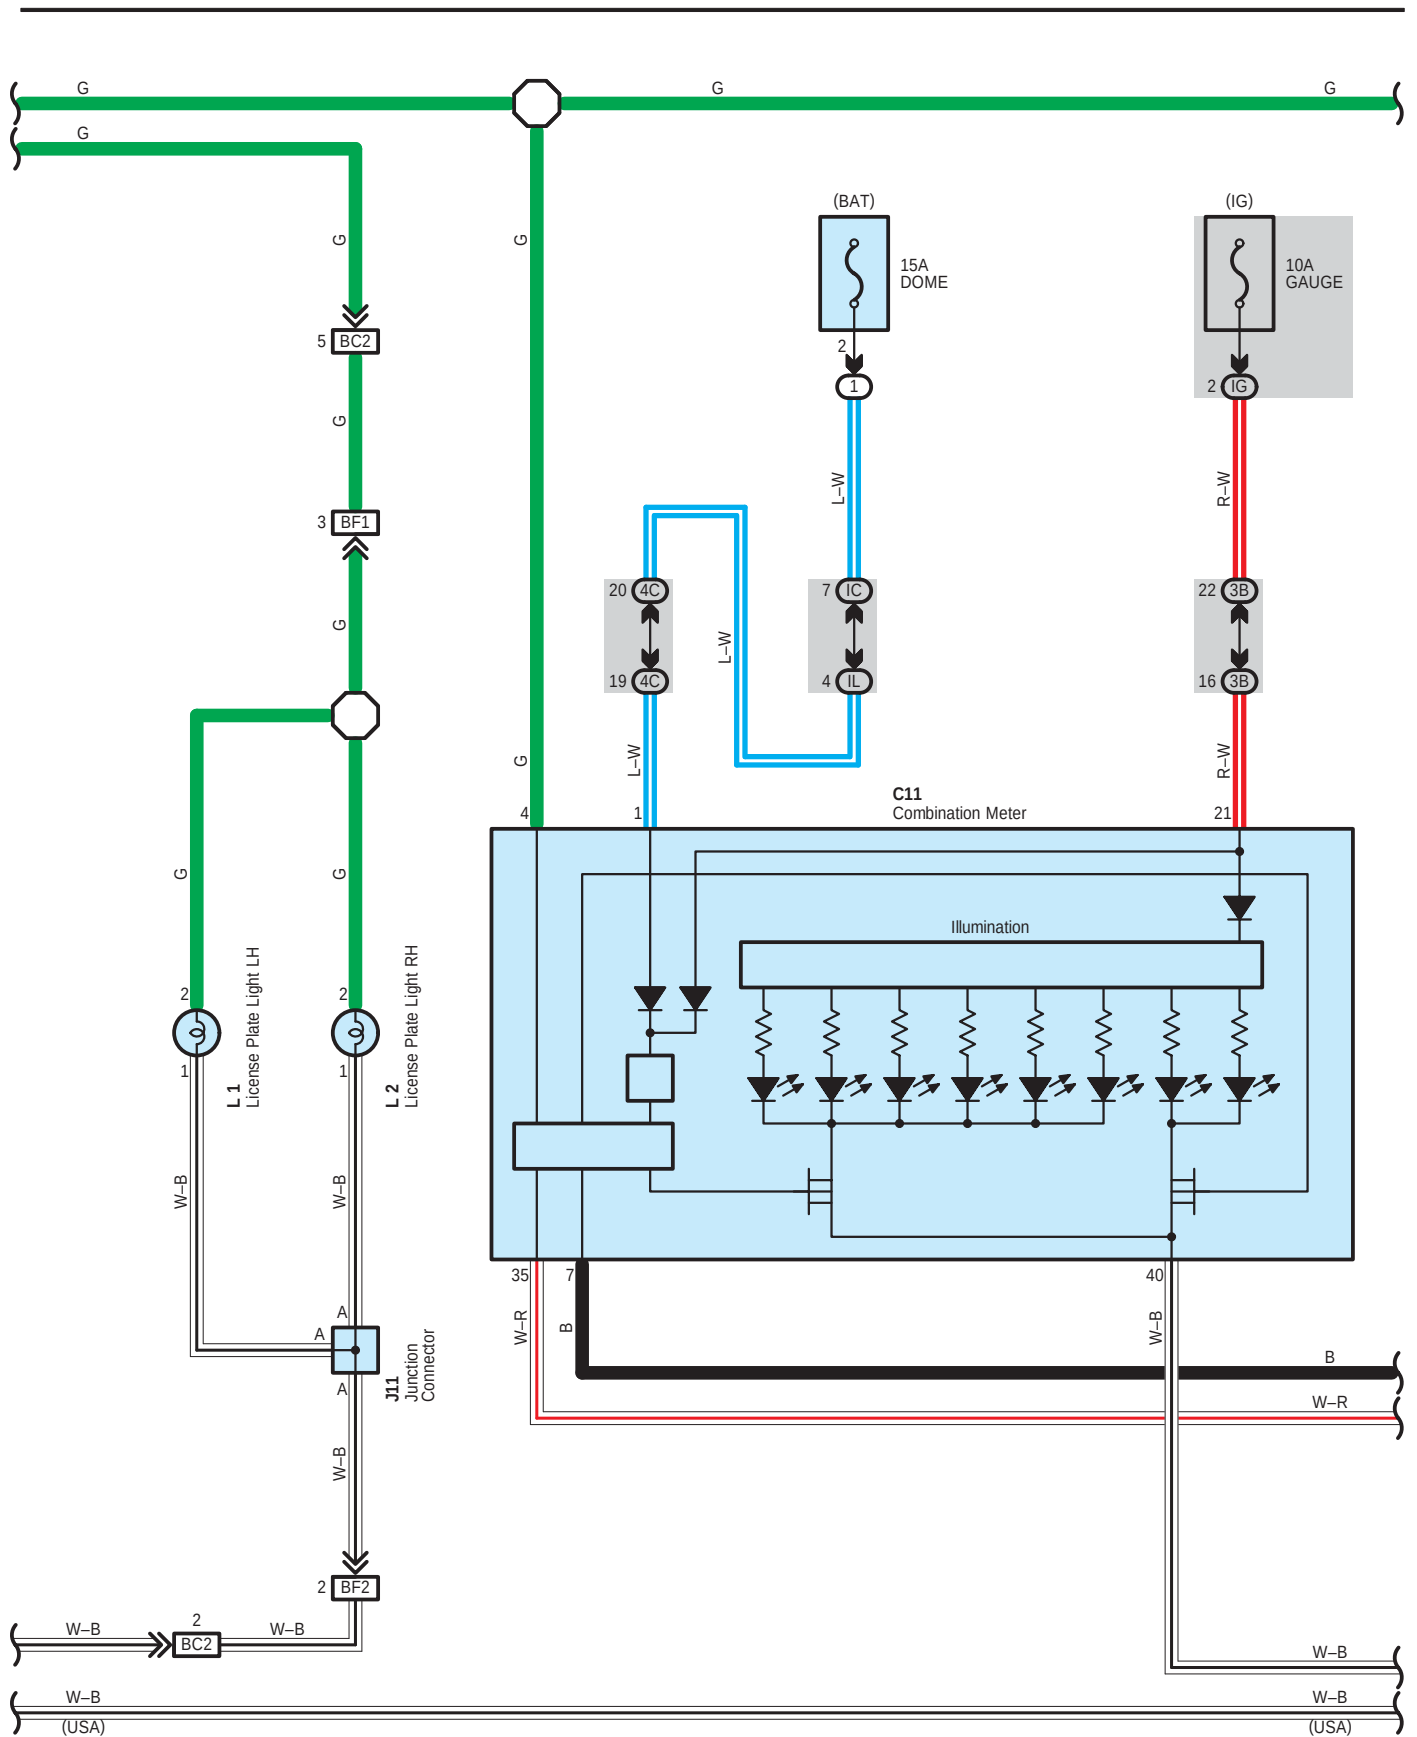

Taillight and Illumination

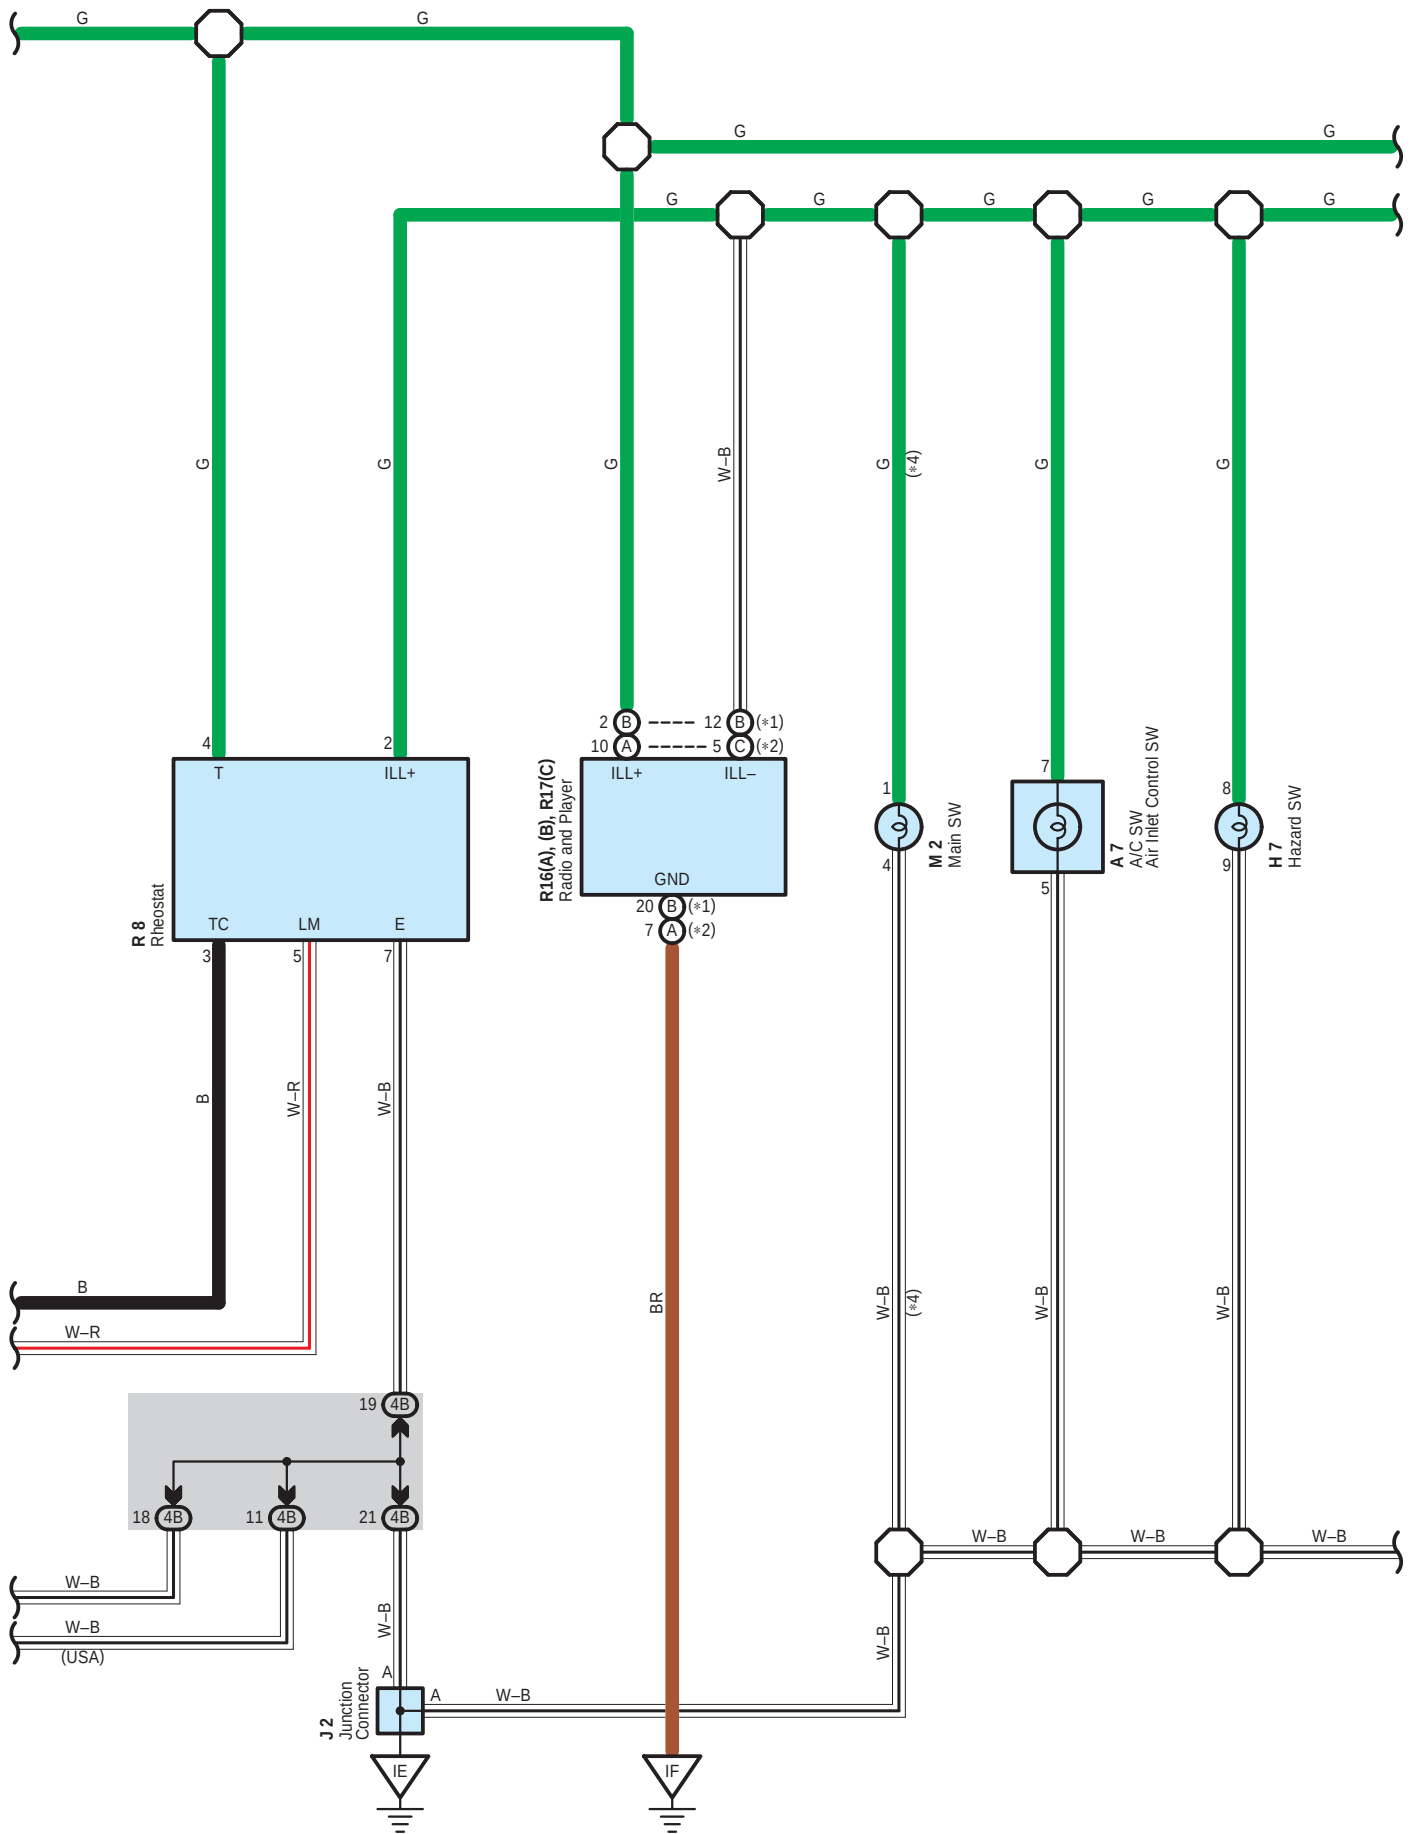

- * 1 : Separate Type Amplifier
- * 2 : Built-In Type Amplifier
- * 3 : w/ Cigarette Lighter Illumination
- * 4 : w/ AC 115 Volts Power Outlet

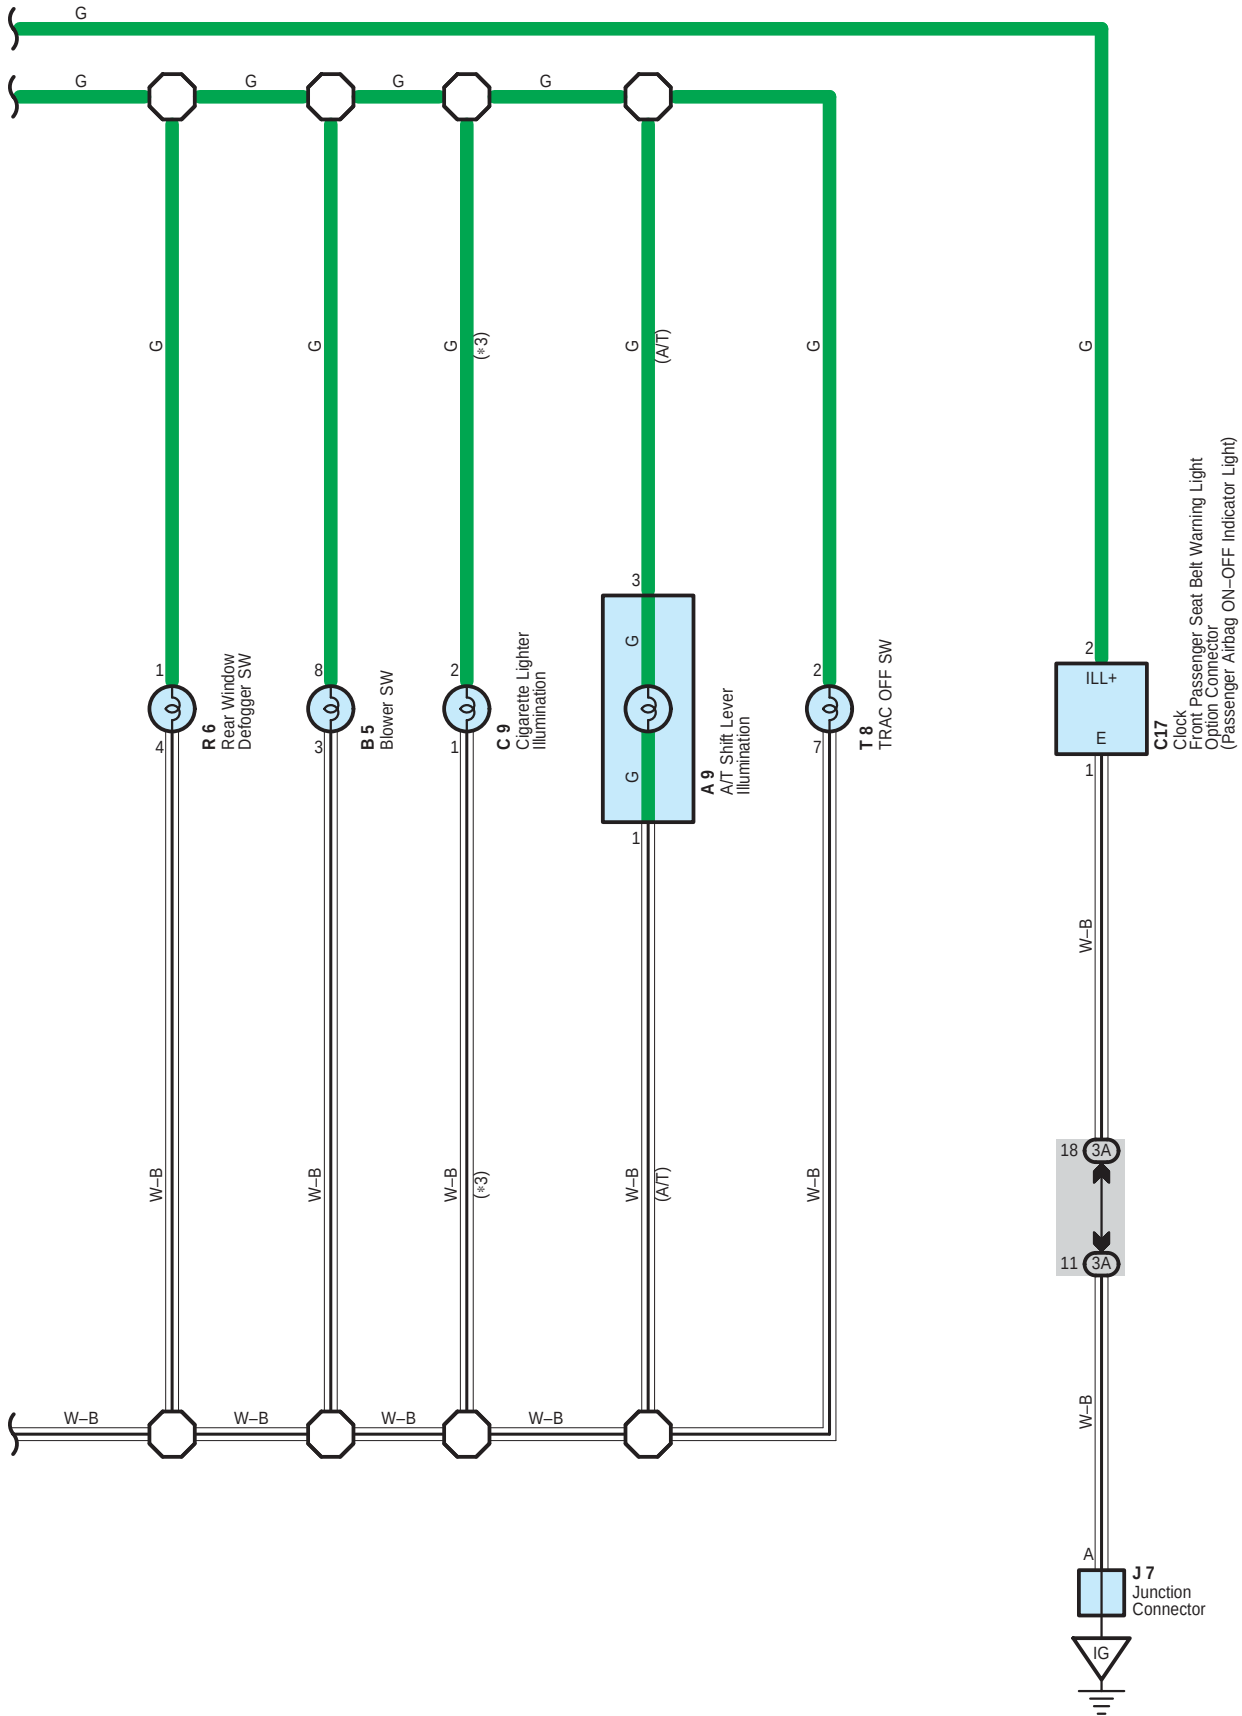

Taillight and Illumination

: Parts Location

Code	See Page	Code		See Page	Code		See Page
A7	38	F4		36 (1ZZ–FE)	M2		39
A9	38	H7		39	R6		39
B5	38	J1		35 (2ZZ–GE)	R8		39
C9	38			37 (1ZZ–FE)	R9		41
C11	38	J2		39	R10		41
C12	38	J7		39	R16	A	39
C17	38	J8	A	40		B	39
D2	38	J9	B	40	R17	C	39
F3	34 (2ZZ–GE)	J11		40	T8		39
	36 (1ZZ–FE)	L1		41			
F4	34 (2ZZ–GE)	L2		41			

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	23	Engine Room R/B (Engine Compartment Left)
3	28	RH R/B (Right Side of the Instrument Panel Reinforcement)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	25	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
ID	25	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
IG	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IH		
IL	24	
3A	29	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)
3B		
4B	32	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
4C		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BC2	46	Back Door No.1 Wire and Floor Wire (Left Quarter Panel)
BF1	46	Back Door No.1 Wire and Back Door No.2 Wire (Back Panel LH)
BF2		

: Ground Points

Code	See Page	Ground Points Location
EA	42 (2ZZ-GE)	Front Right Fender
	43 (1ZZ-FE)	
EB	42 (2ZZ-GE)	Front Left Suspension Tower
	43 (1ZZ-FE)	
IE	44	Behind Combination Meter
IF		
IG	44	Right Kick Panel
BH	46	Left Quarter Panel
BI	46	Right Quarter Panel

