



Interior Light

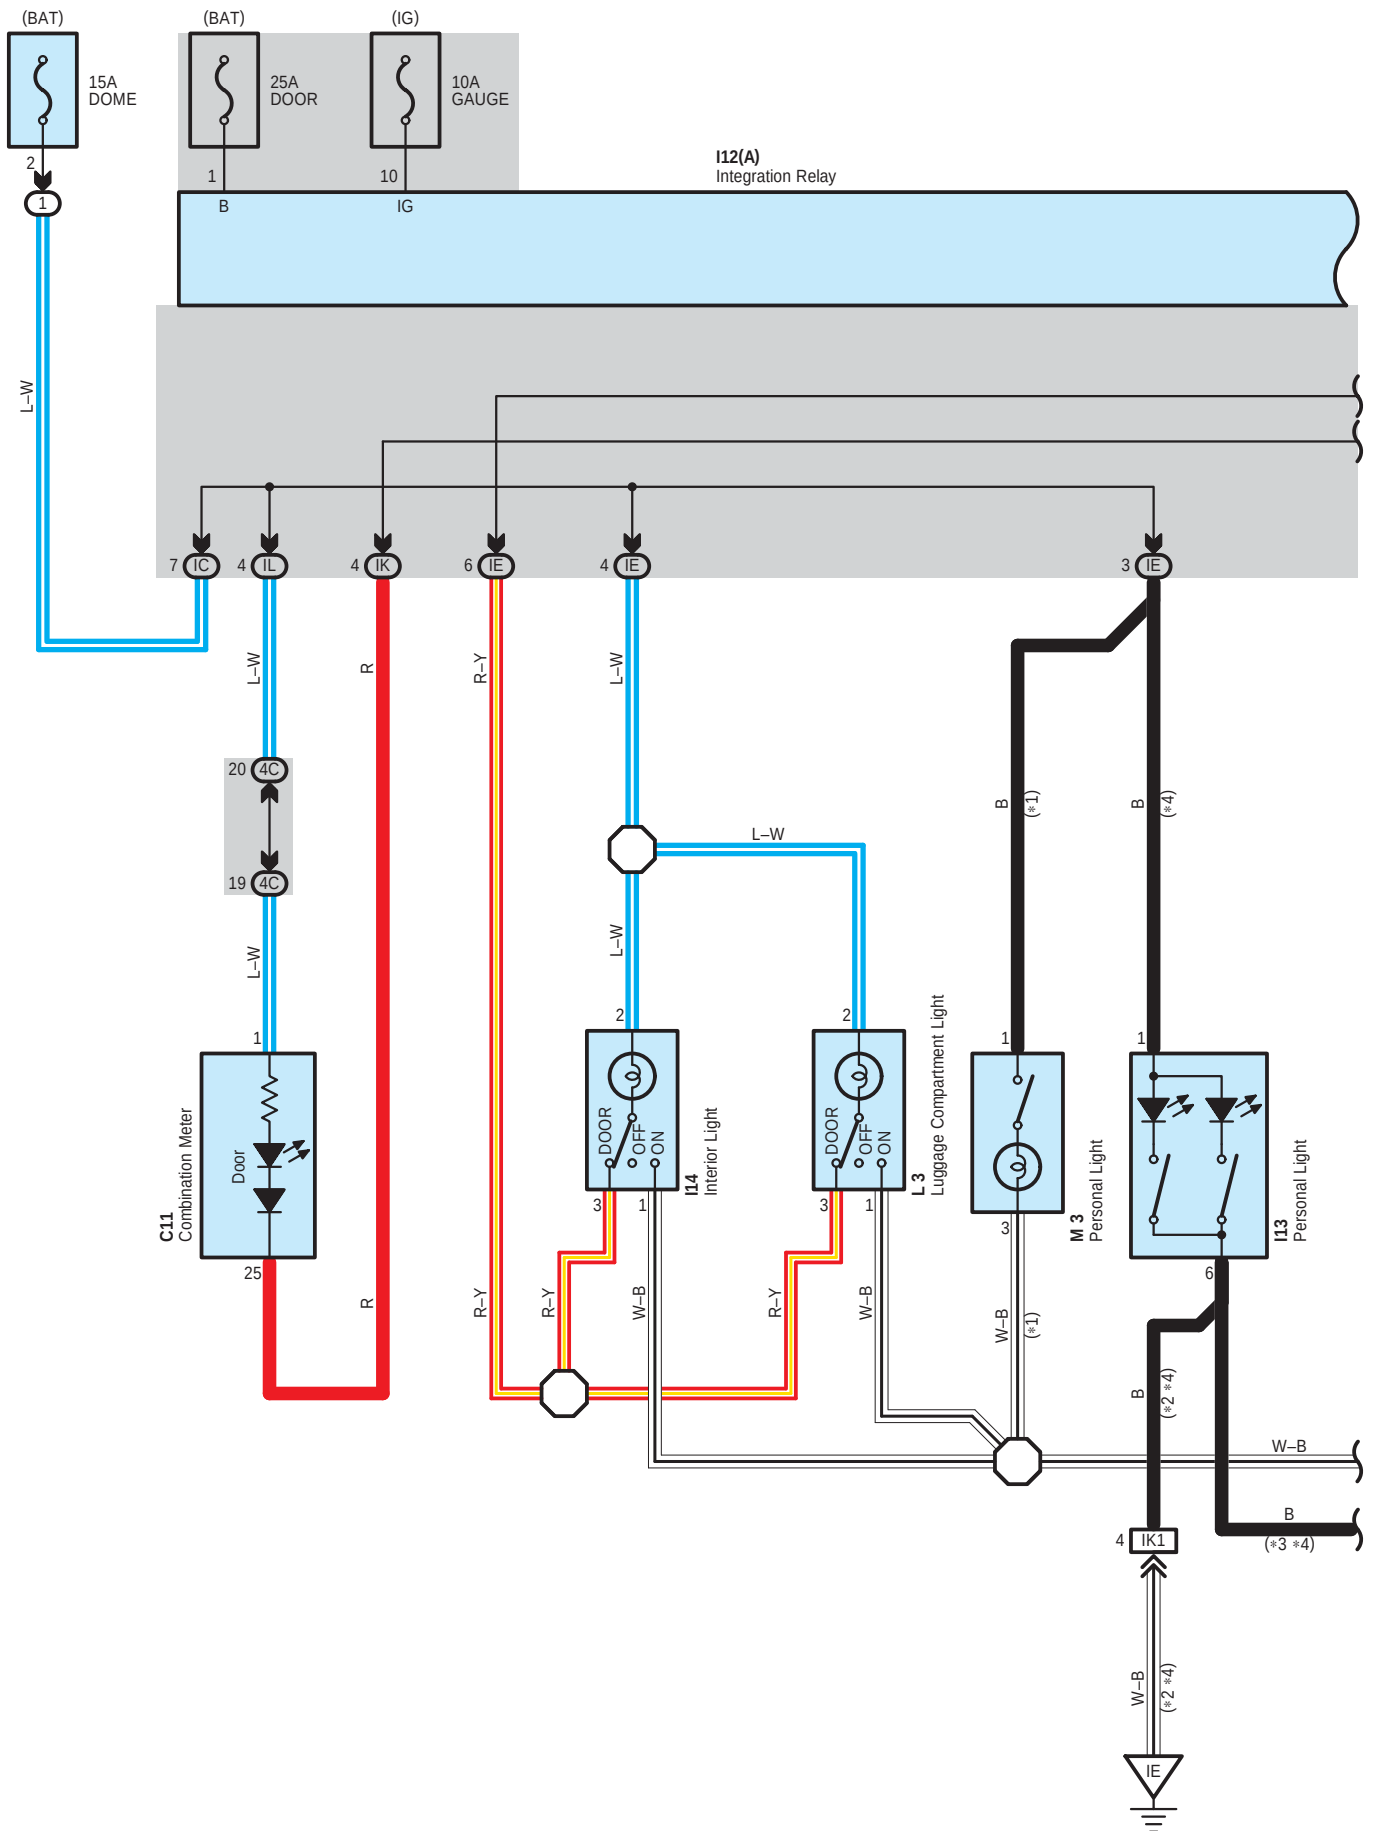


- * 1 : w/ Moon Roof
- * 2 : w/ Automatic Glare-Resistant EC Mirror
- * 3 : w/o Automatic Glare-Resistant EC Mirror
- * 4 : w/o Moon Roof

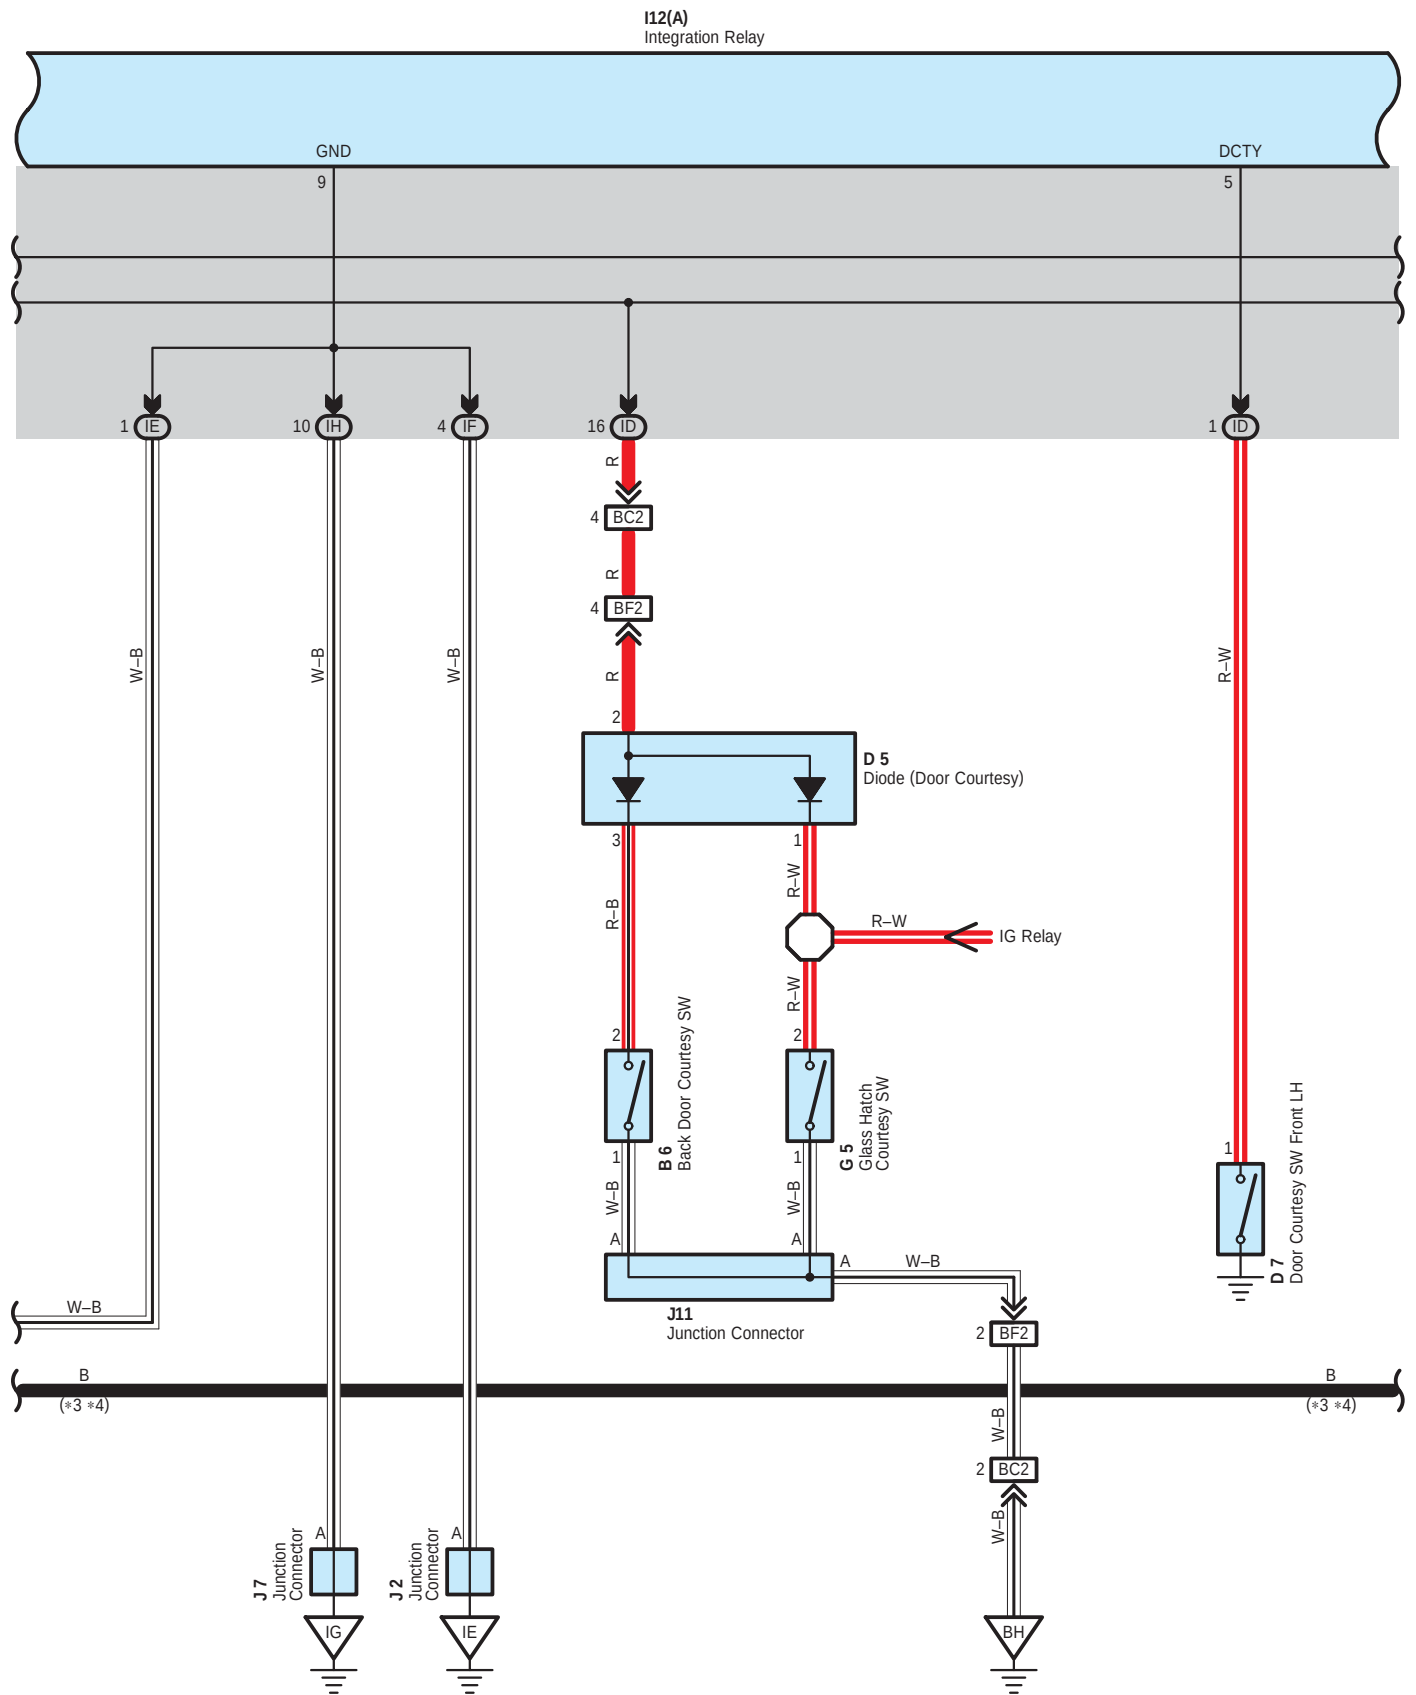

Interior Light

- * 3 : w/o Automatic Glare-Resistant EC Mirror
- * 4 : w/o Moon Roof
- * 5 : w/o Door Lock Control
- * 6 : w/ Door Lock Control
- * 7 : Separate Type Amplifier
- * 8 : Built-in Type Amplifier

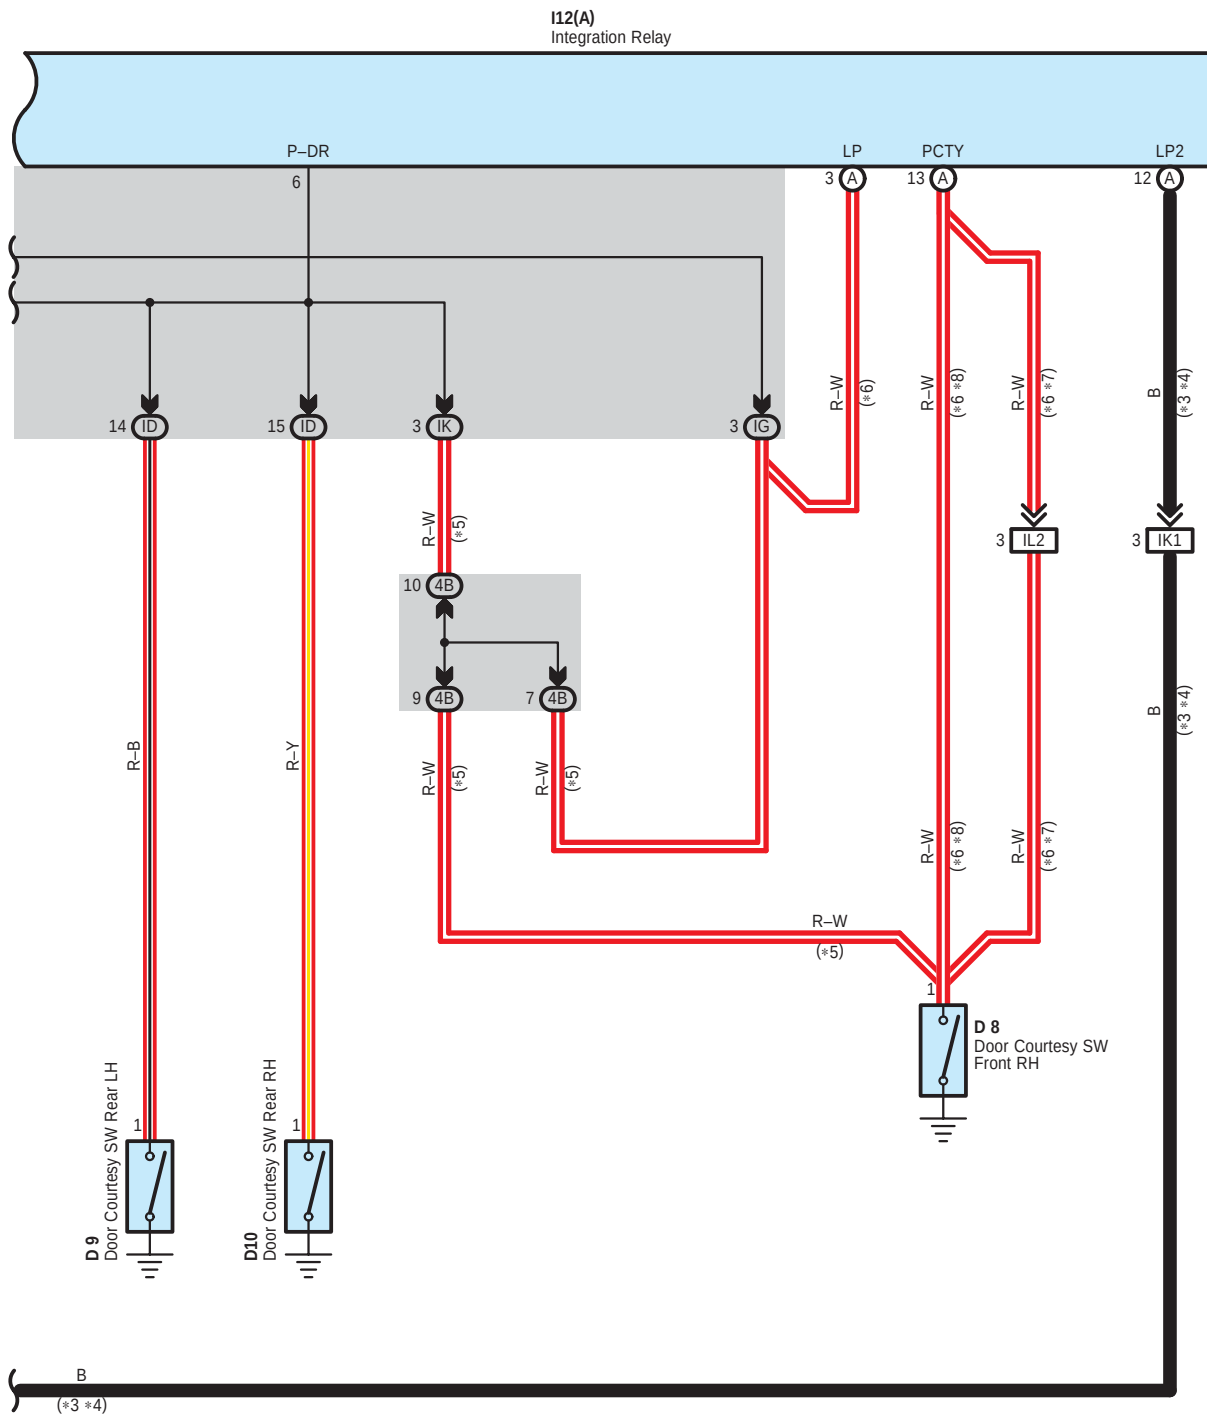

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
B6	40	D10	40	J7	39
C11	38	G5	40	J11	40
D5	40	I12	A 39	L3	41
D7	40	I13	40	M3	41
D8	40	I14	40		
D9	40	J2	39		

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	23	Engine Room R/B (Engine Compartment Left)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	25	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
ID	25	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
IE	25	Roof Wire and Instrument Panel J/B (Lower Finish Panel)
IF	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IG		
IH		
IK		
IL	24	
4B	32	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
4C		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IK1	45	Roof Wire and Instrument Panel Wire (Instrument Panel Reinforcement LH)
IL2	45	Floor Wire and Instrument Panel Wire (Right Kick Panel)
BC2	46	Back Door No.1 Wire and Floor Wire (Left Quarter Panel)
BF2	46	Back Door No.1 Wire and Back Door No.2 Wire (Back Panel LH)

 : Ground Points

Code	See Page	Ground Points Location
IE	44	Behind Combination Meter
IG	44	Right Kick Panel
BH	46	Left Quarter Panel