


Back-Up Light

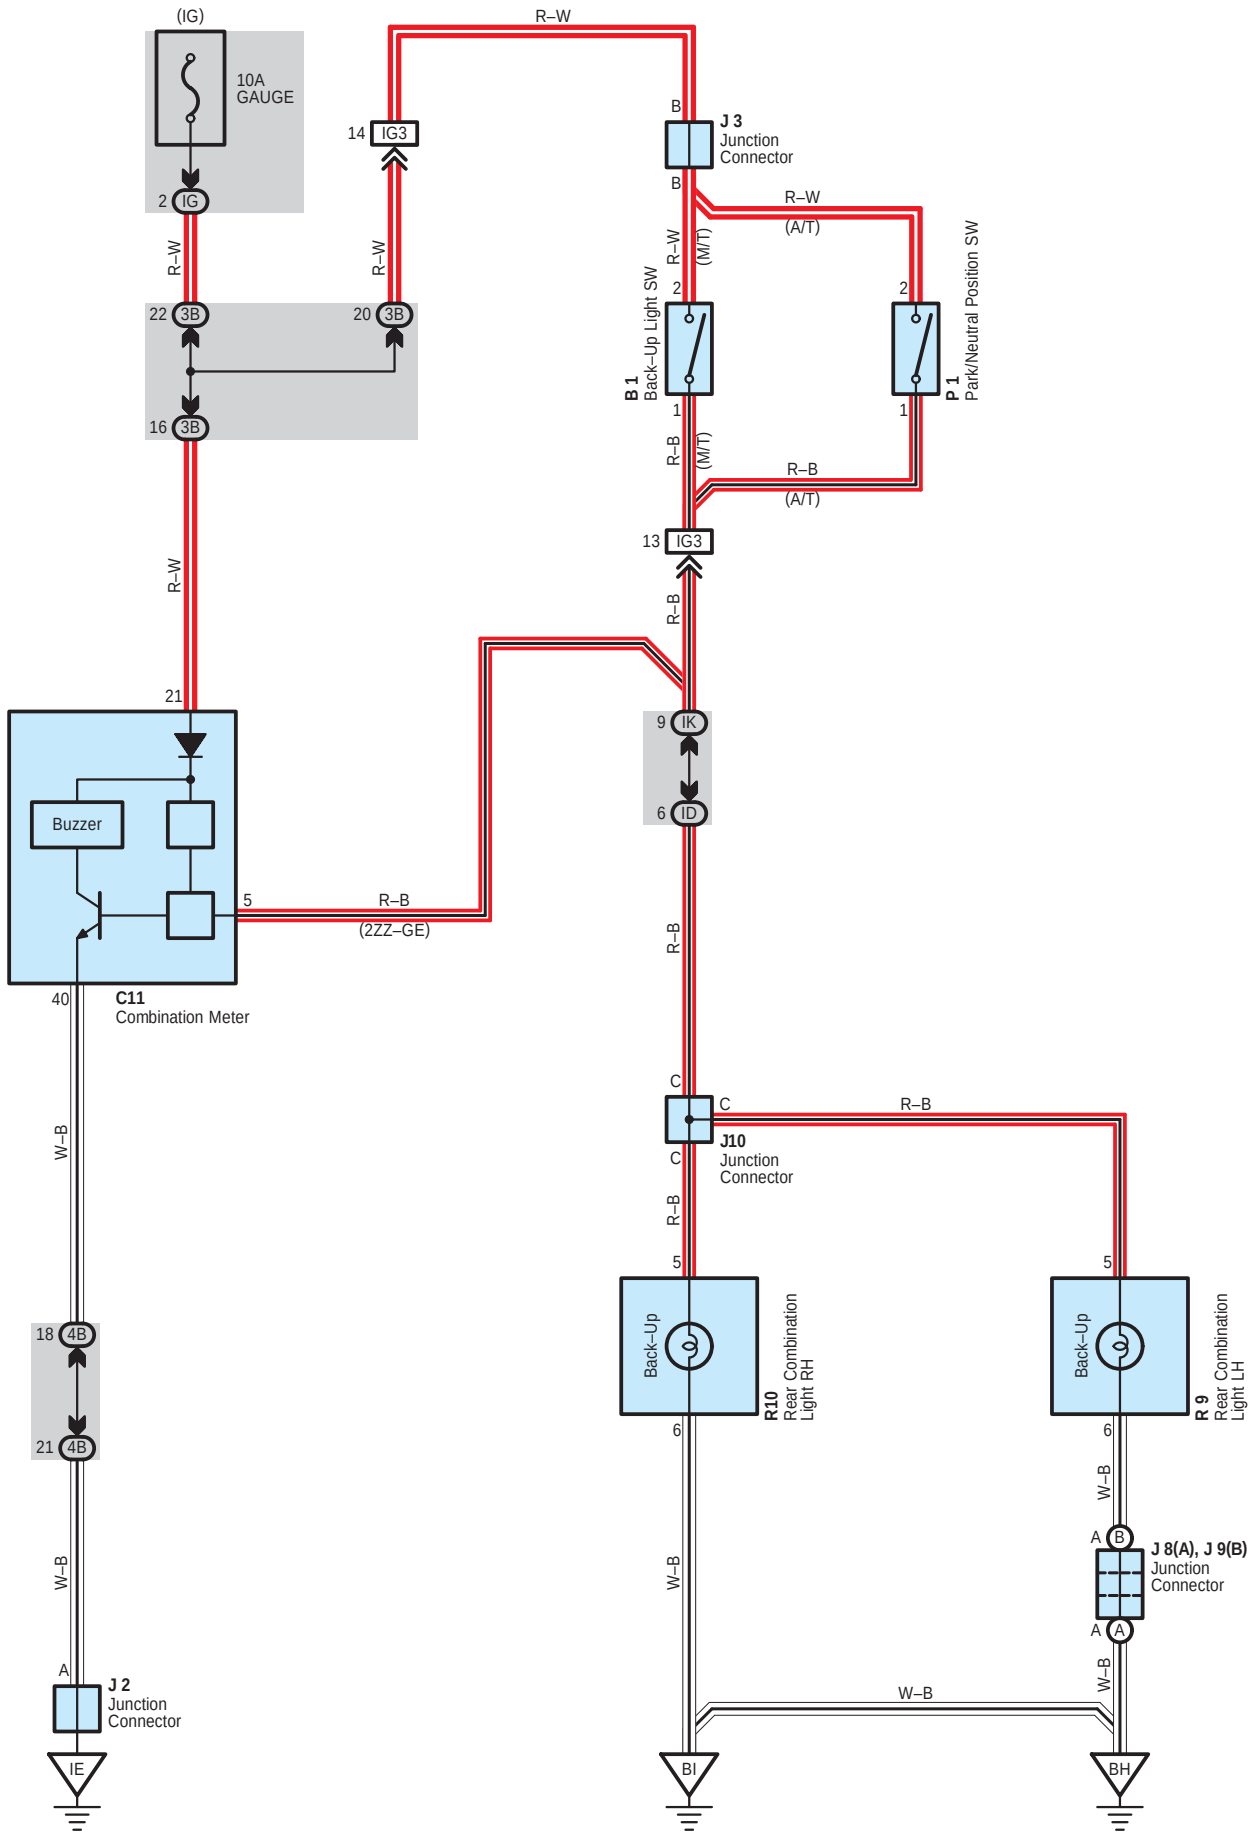

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
B1	34 (2ZZ-GE)	J3	39	P1	37 (1ZZ-FE)
	36 (1ZZ-FE)	J8 A	40	R9	41
C11	38	J9 B	40	R10	41
J2	39	J10	40		

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
ID	25	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
IG	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IK	24	
3B	29	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)
4B	32	Instrument Panel Wire and Center J/B (Behind the Combination Meter)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG3	45	Engine Wire and Instrument Panel Wire (Blower Unit RH)

 : Ground Points

Code	See Page	Ground Points Location
IE	44	Behind Combination Meter
BH	46	Left Quarter Panel
BI	46	Right Quarter Panel