




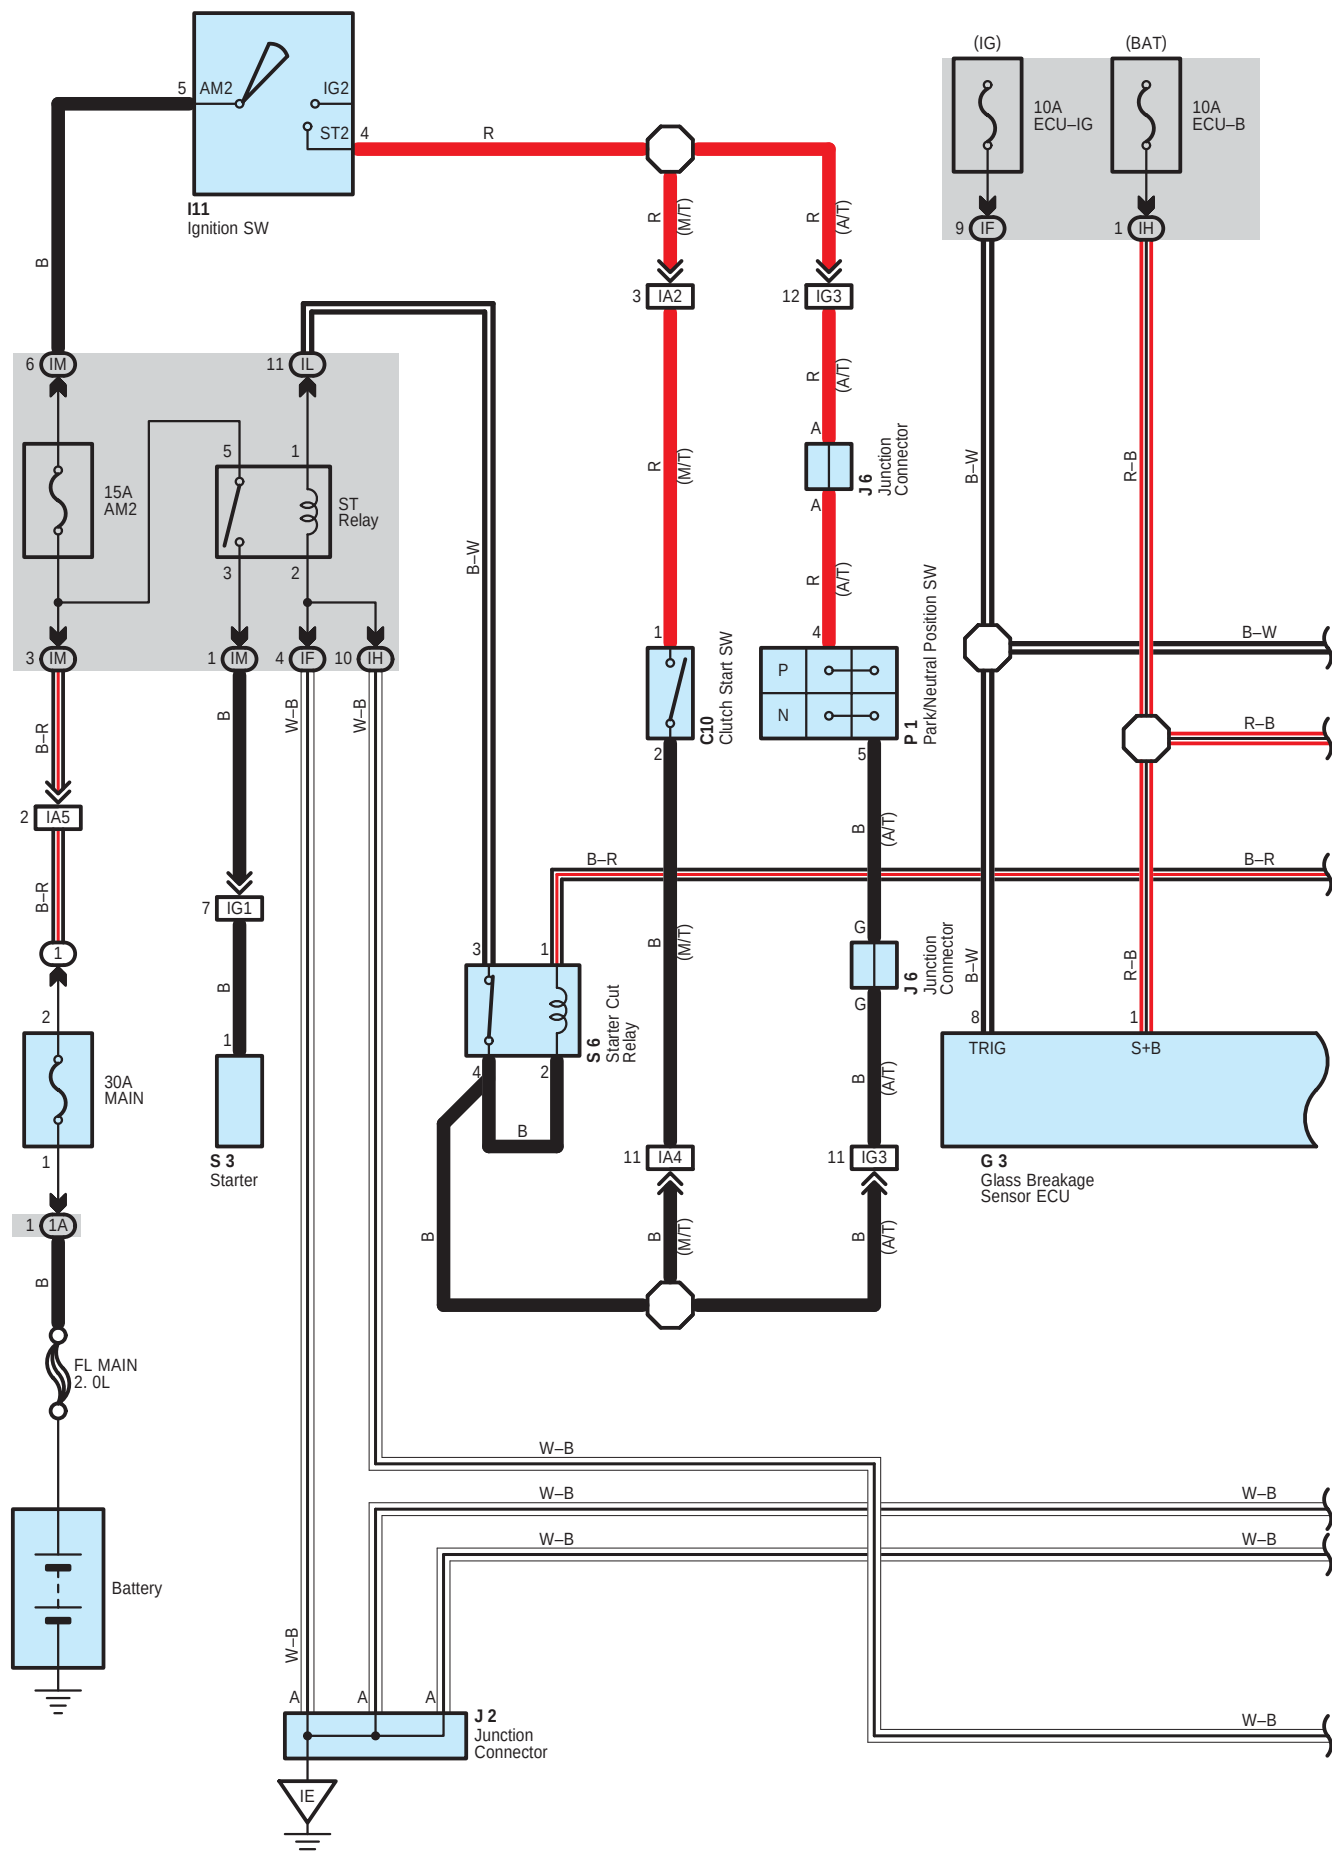


T 3
TVIP ECU

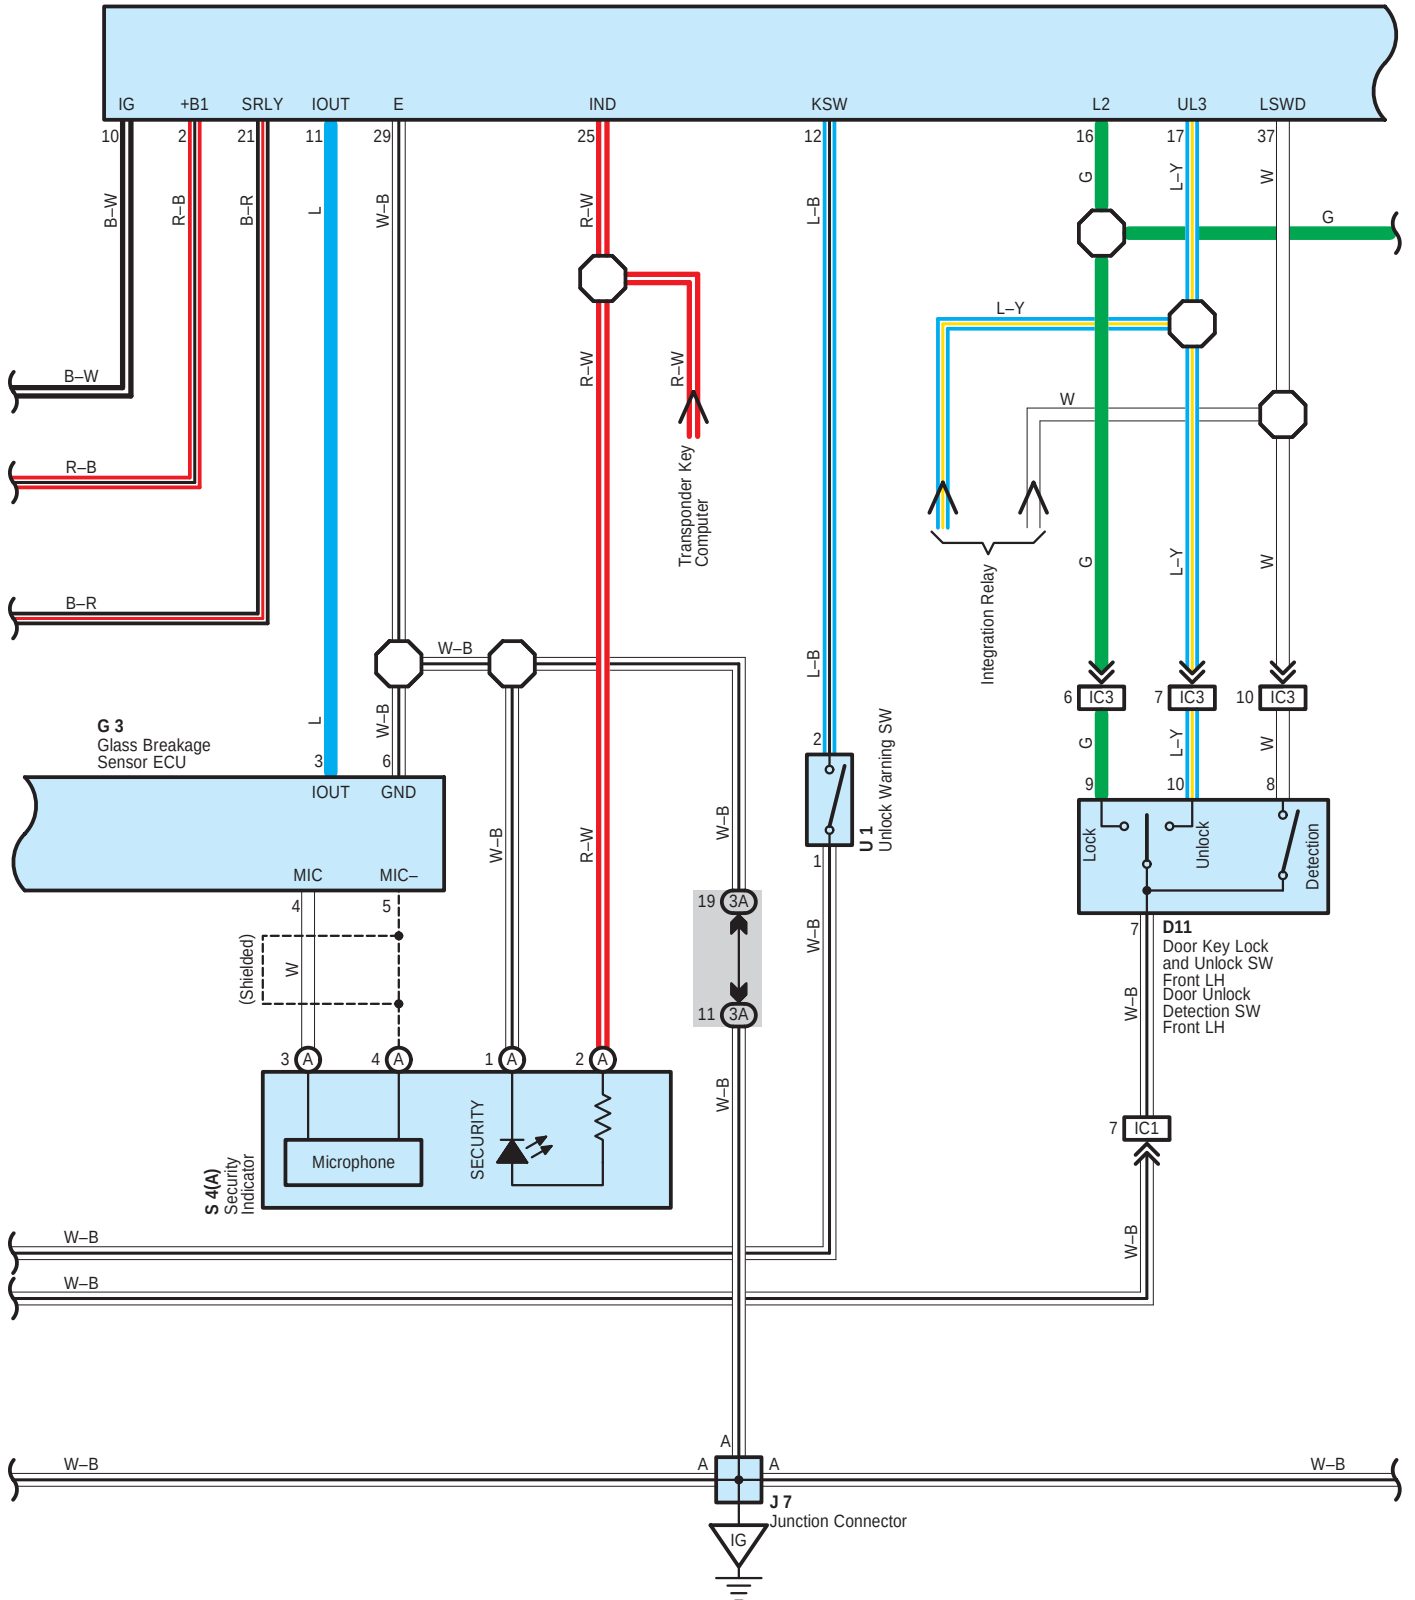


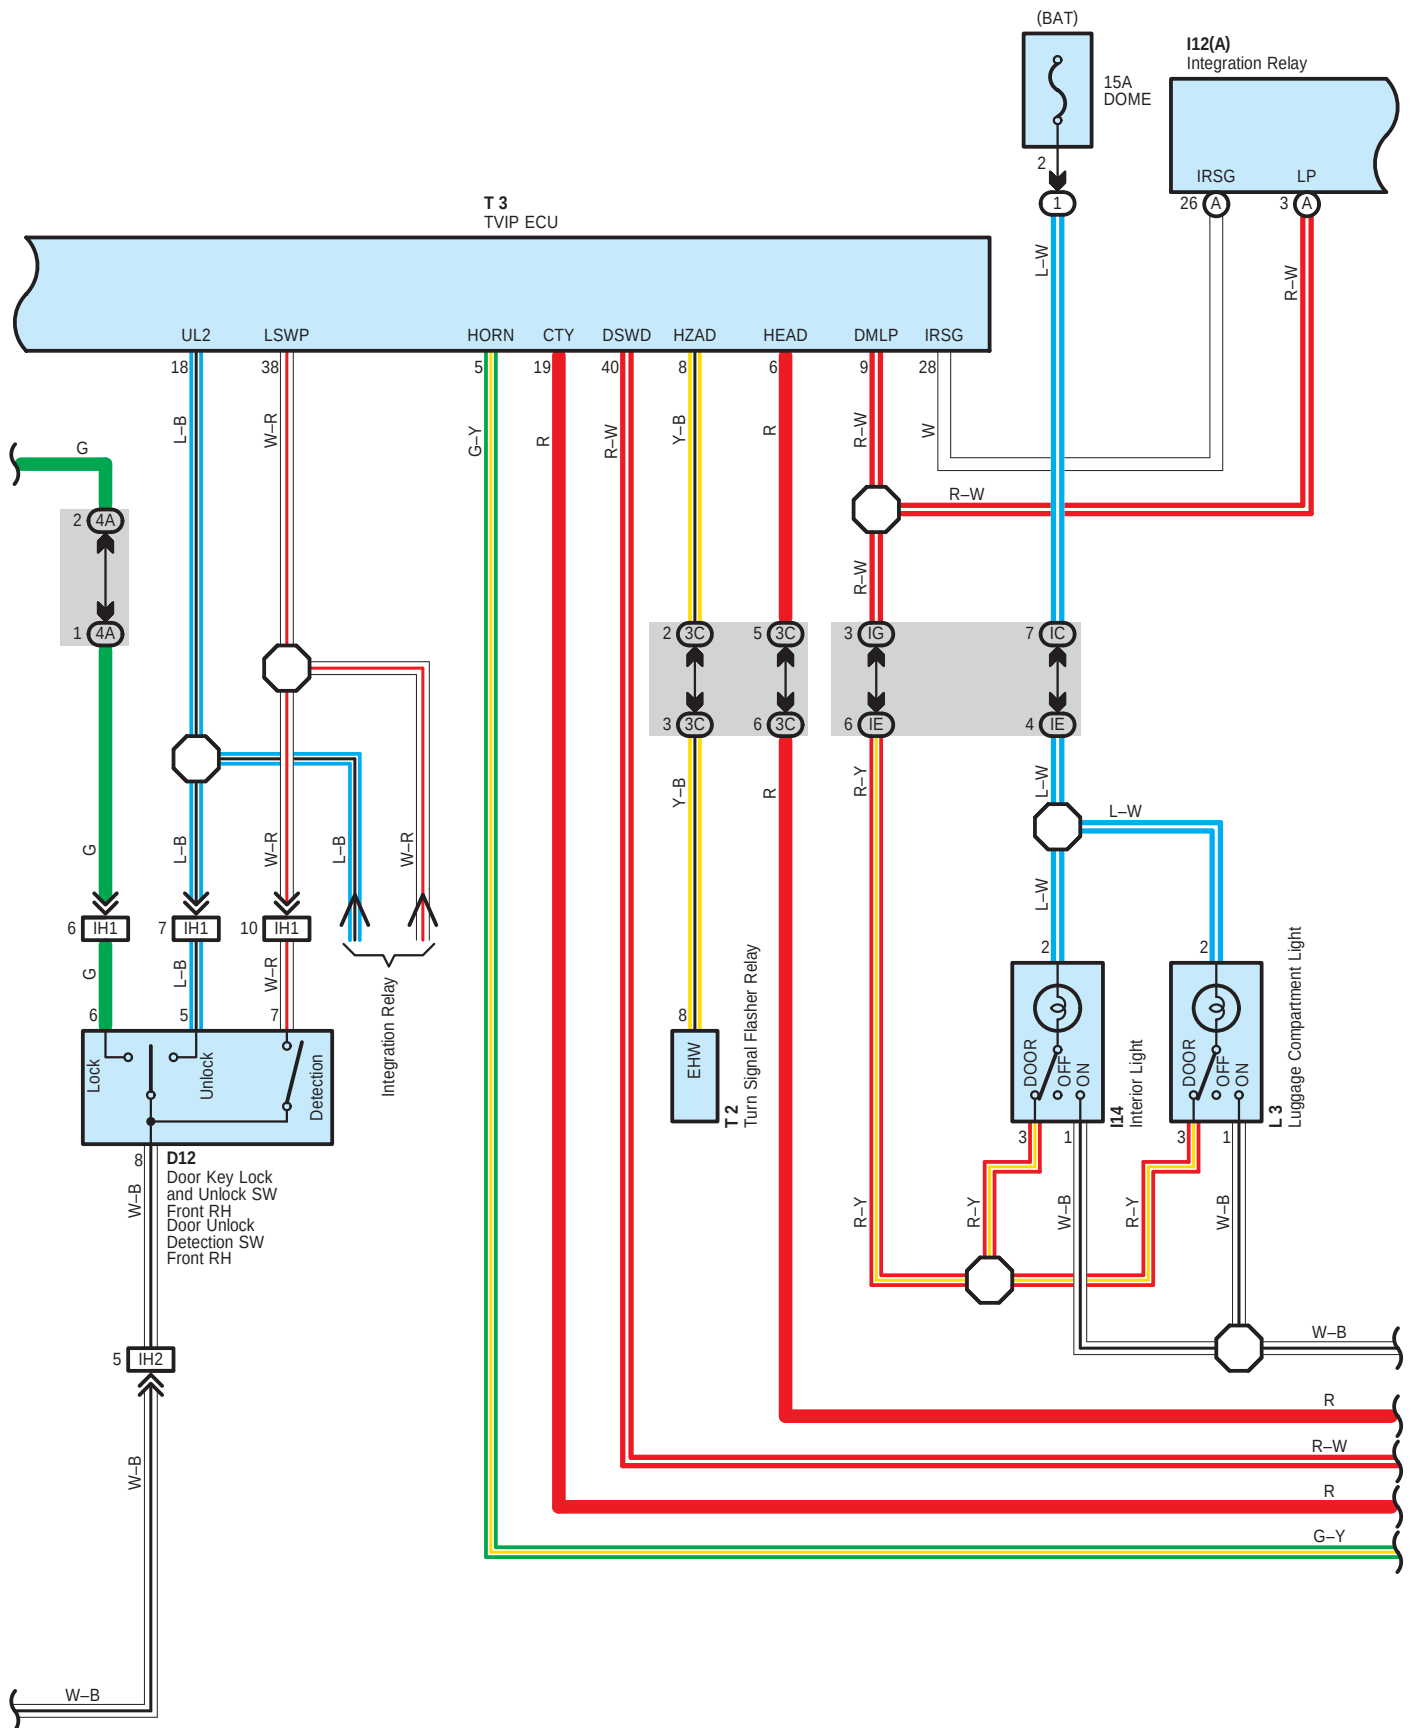

- * 1 : Separate Type Amplifier
- * 2 : Built-In Type Amplifier

I12(A)
Integration Relay

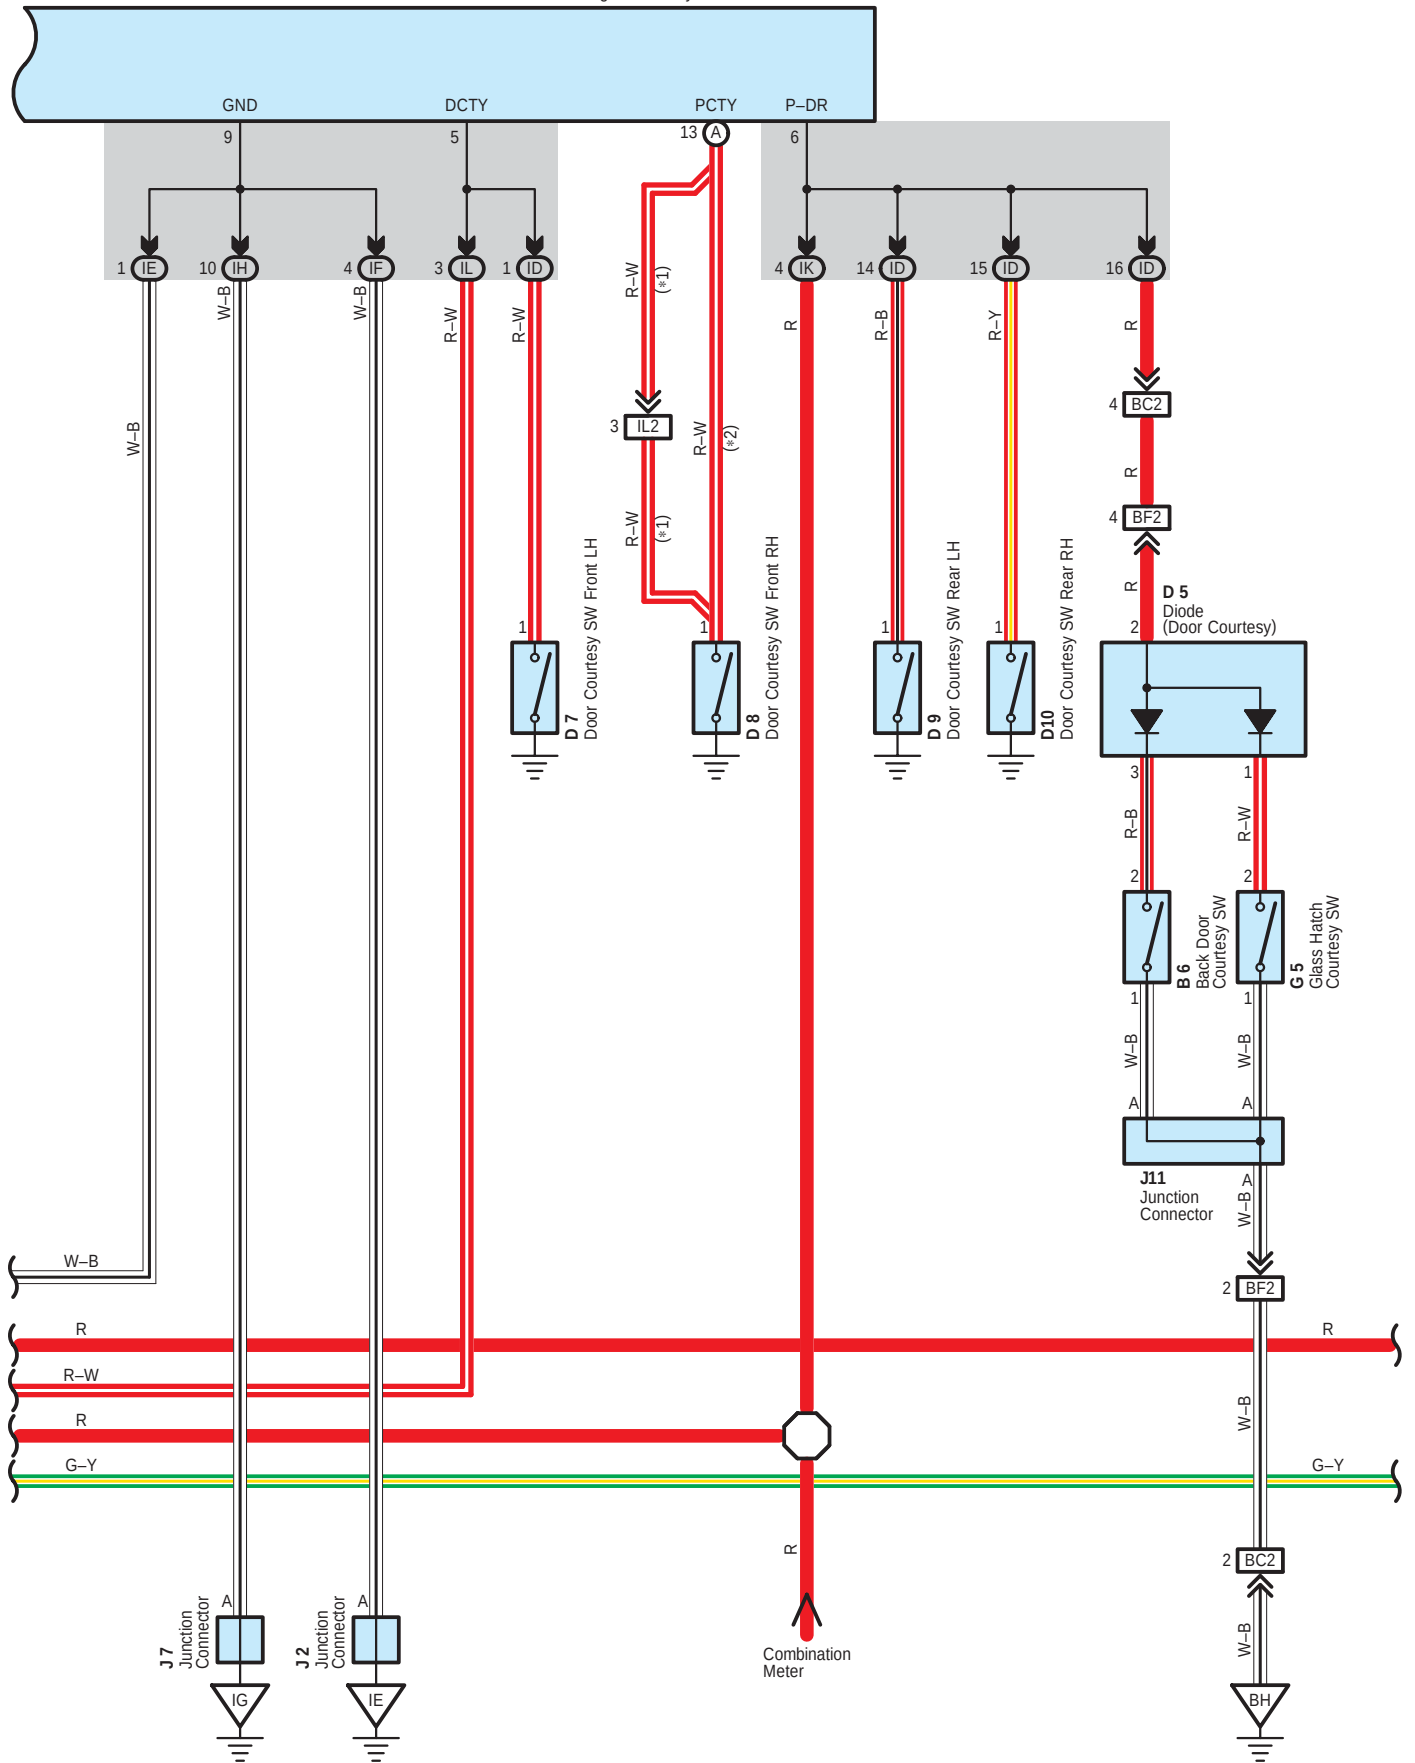

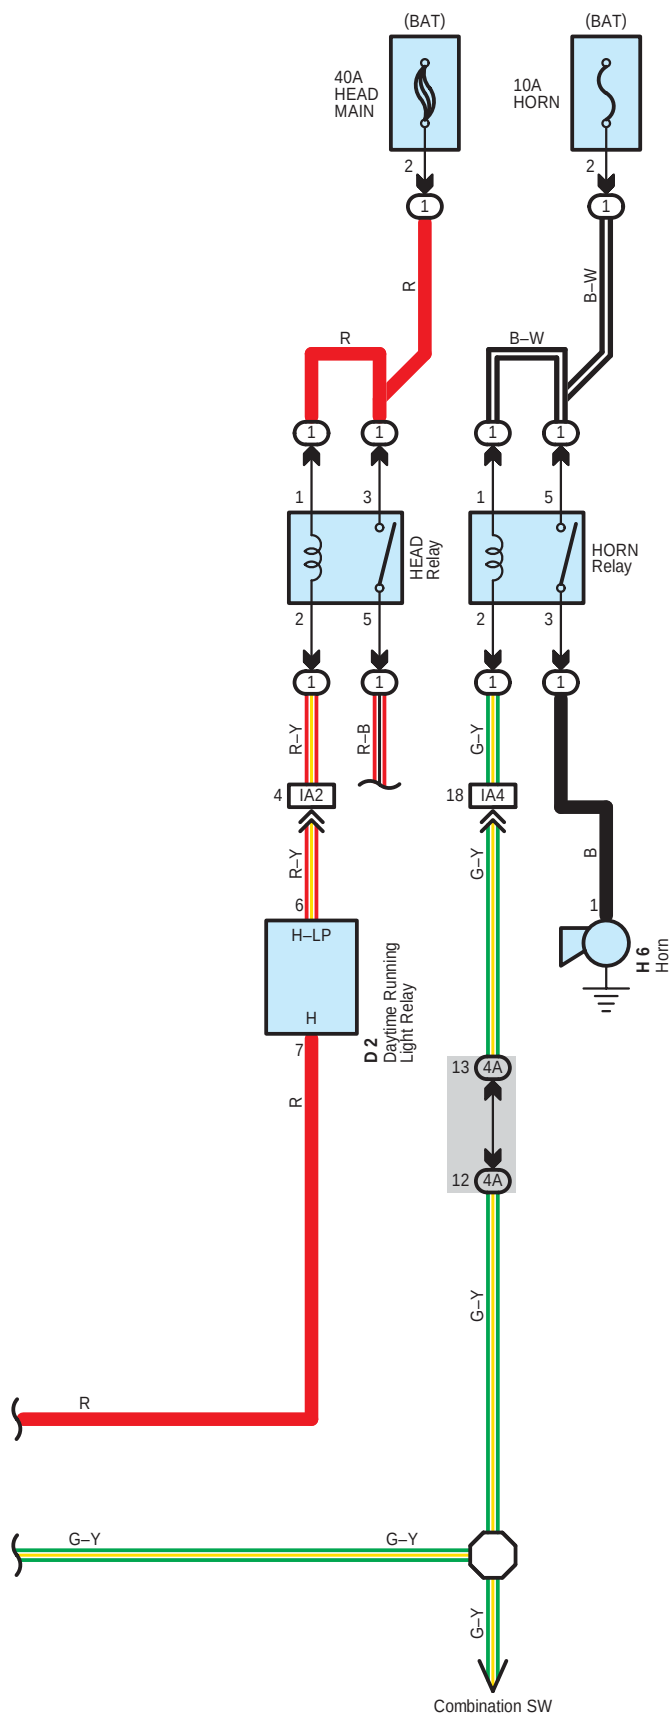

 : Parts Location

Code	See Page	Code	See Page	Code	See Page	
B6	40	G3	39	J11	40	
C10	38	G5	40	L3	41	
D2	38	H6	34 (2ZZ-GE)	P1	37 (1ZZ-FE)	
D5	40		36 (1ZZ-FE)	S3	35 (2ZZ-GE)	
D7	40	I11	39		37 (1ZZ-FE)	
D8	40	I12	A	S4	A	39
D9	40	I14	40	S6	39	
D10	40	J2	39	T2	39	
D11	40	J6	39	T3	39	
D12	40	J7	39	U1	39	

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	23	Engine Room R/B (Engine Compartment Left)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	25	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
ID	25	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
IE	25	Roof Wire and Instrument Panel J/B (Lower Finish Panel)
IF	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IG		
IH		
IK		
IL	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IM		
1A	23	Engine Wire and Engine Room J/B (Engine Compartment Left)
3A	29	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)
3C		
4A	32	Instrument Panel Wire and Center J/B (Behind the Combination Meter)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA2	44	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement LH)
IA4		
IA5		
IC1	44	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IC3		
IG1	45	Engine Wire and Instrument Panel Wire (Blower Unit RH)
IG3		
IH1	45	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IH2		
IL2	45	Floor Wire and Instrument Panel Wire (Right Kick Panel)
BC2	46	Back Door No.1 Wire and Floor Wire (Left Quarter Panel)
BF2	46	Back Door No.1 Wire and Back Door No.2 Wire (Back Panel LH)

 : Ground Points

Code	See Page	Ground Points Location
IE	44	Behind Combination Meter
IG	44	Right Kick Panel
BH	46	Left Quarter Panel