


Rear Window Defogger

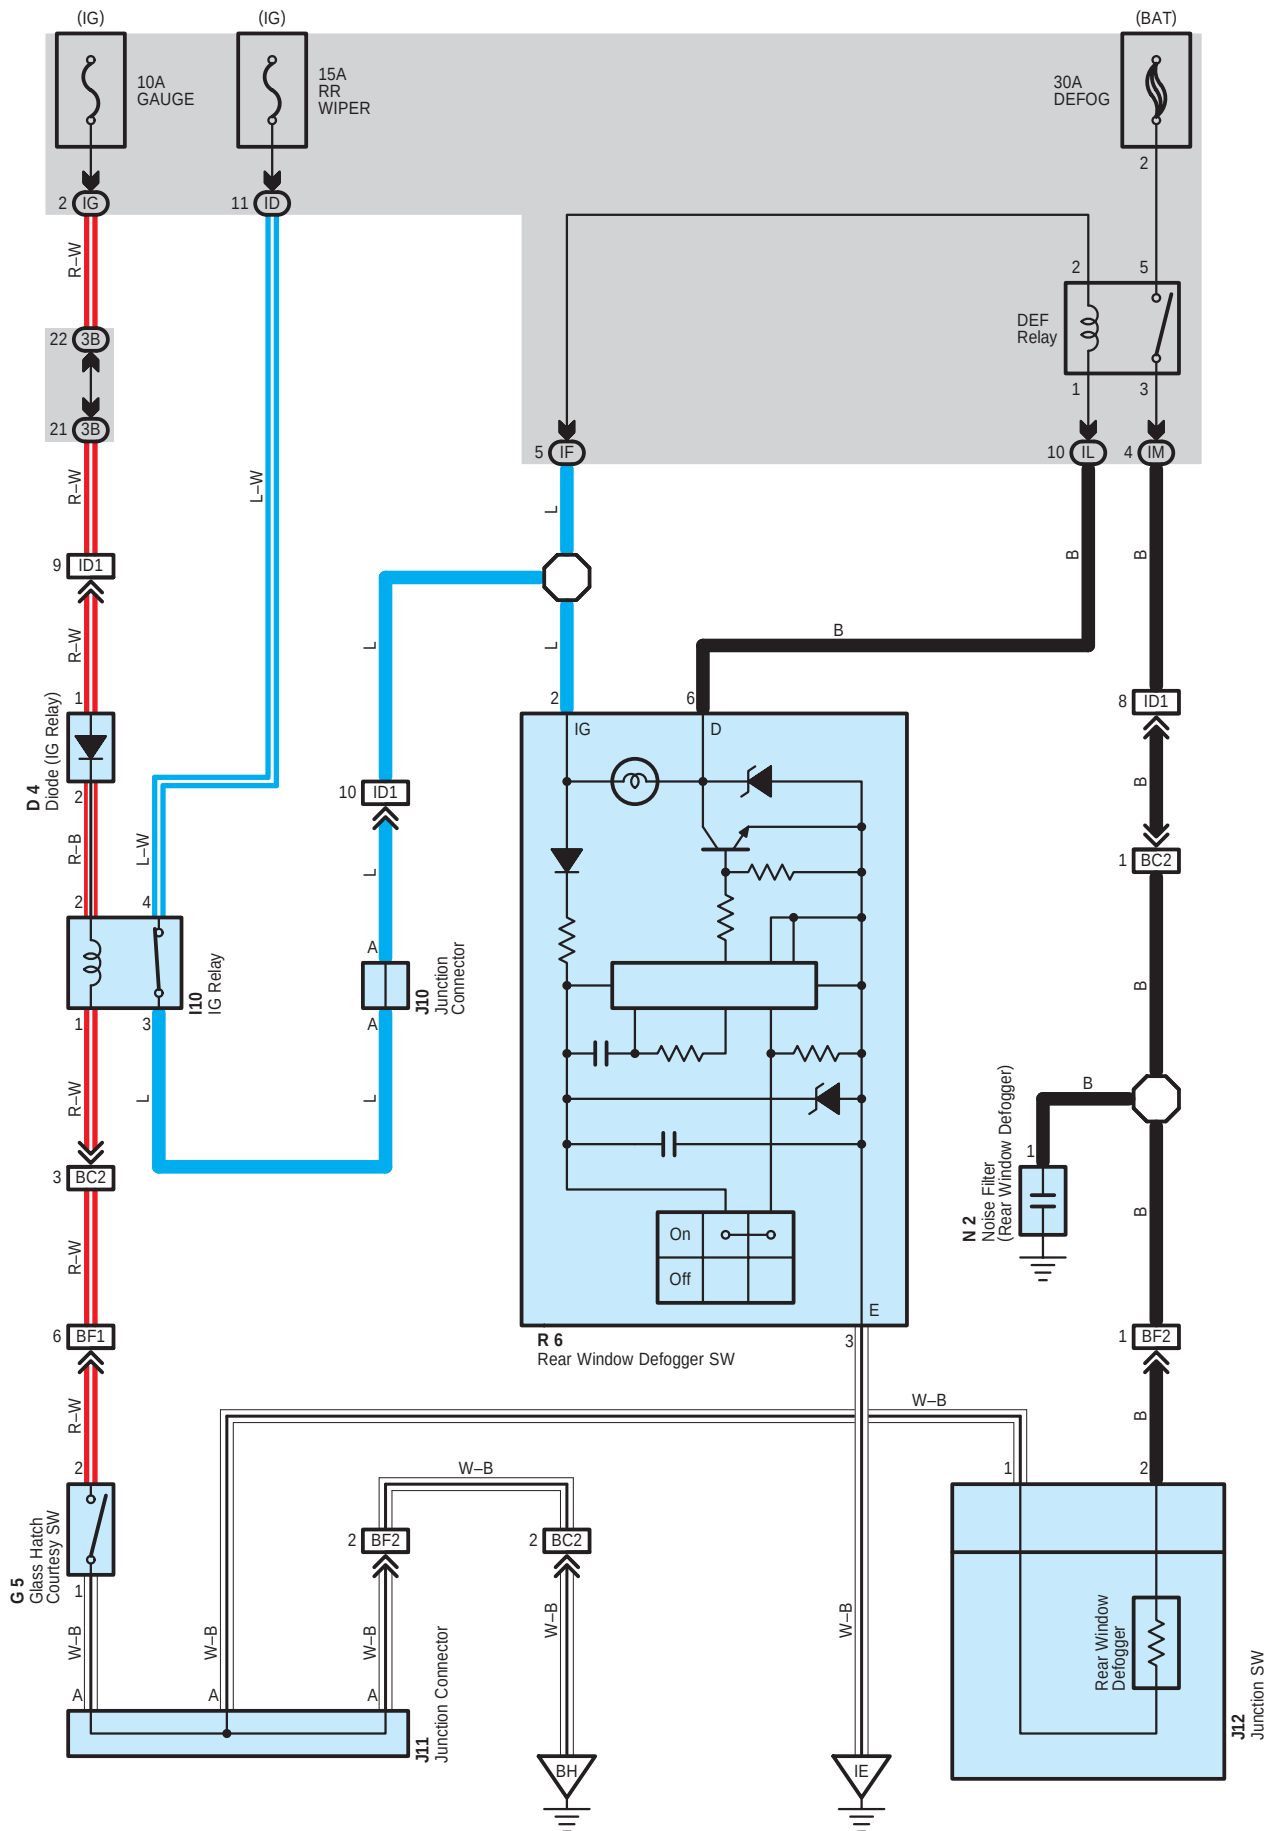

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
D4	38	J10	40	N2	41
G5	40	J11	40	R6	39
I10	39	J12	40		

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
ID	25	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
IF	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IG		
IL	24	
IM		
3B	29	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID1	44	Instrument Panel Wire and Floor Wire (Left Kick Panel)
BC2	46	Back Door No.1 Wire and Floor Wire (Left Quarter Panel)
BF1	46	Back Door No.1 Wire and Back Door No.2 Wire (Back Panel LH)
BF2		

 : Ground Points

Code	See Page	Ground Points Location
IE	44	Behind Combination Meter
BH	46	Left Quarter Panel