


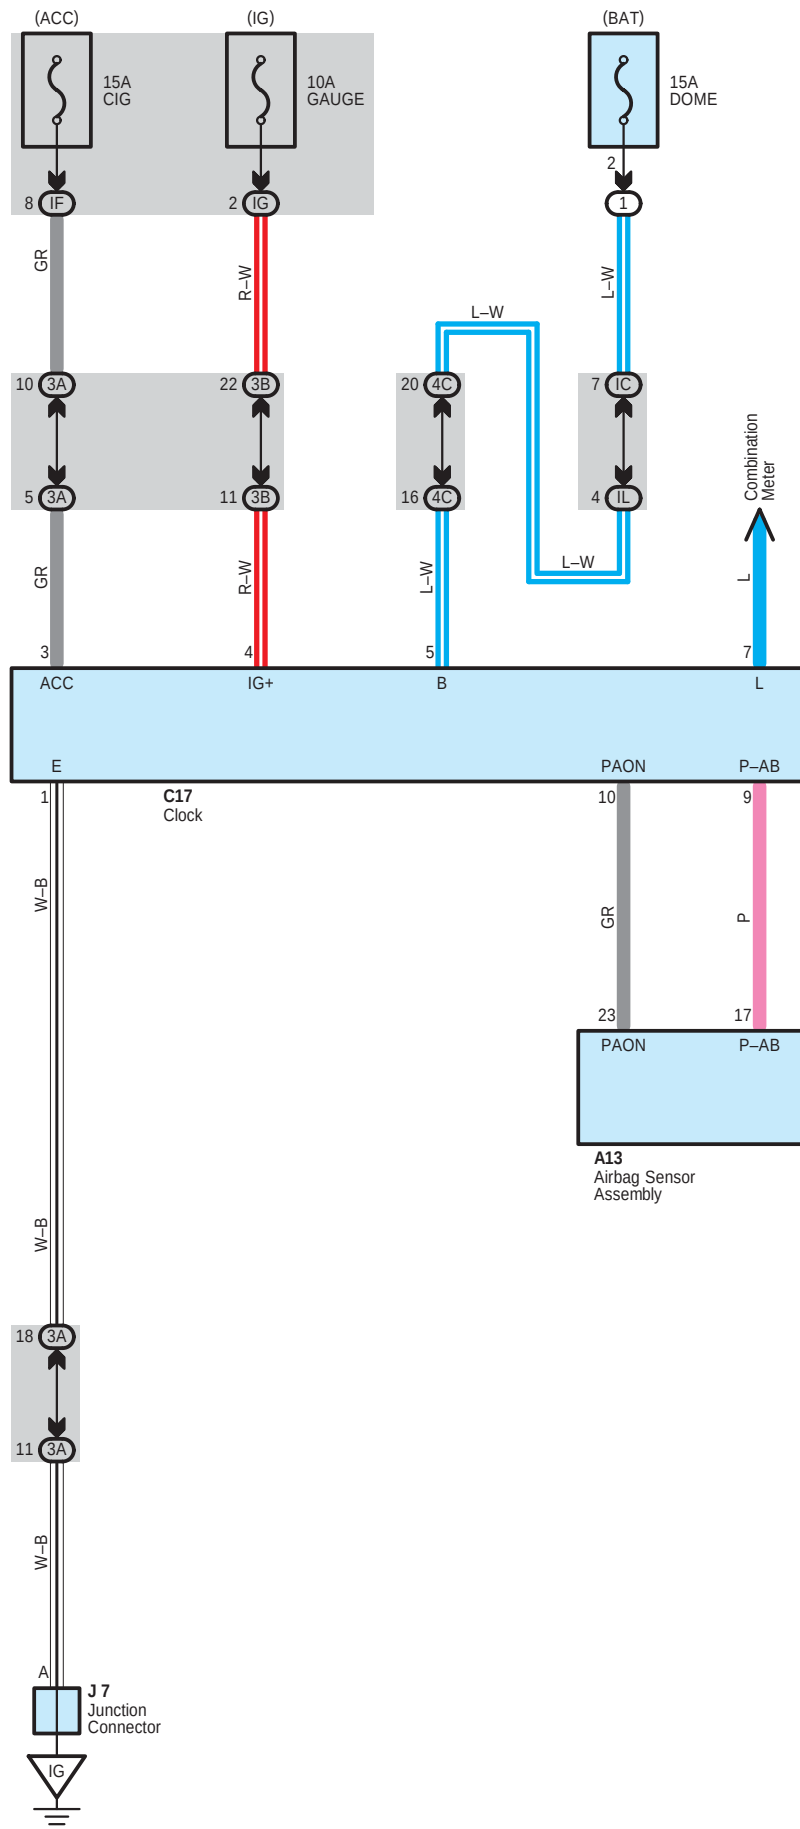

 : Parts Location

| Code | See Page | Code | See Page | Code | See Page |
|------|----------|------|----------|------|----------|
| A13  | 38       | C17  | 38       | J7   | 39       |

 : Relay Blocks

| Code | See Page | Relay Blocks (Relay Block Location)       |
|------|----------|-------------------------------------------|
| 1    | 23       | Engine Room R/B (Engine Compartment Left) |

 : Junction Block and Wire Harness Connector

| Code | See Page | Junction Block and Wire Harness (Connector Location)                                |
|------|----------|-------------------------------------------------------------------------------------|
| IC   | 25       | Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)                 |
| IF   | 25       | Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)                 |
| IG   |          |                                                                                     |
| IL   | 24       |                                                                                     |
| 3A   | 29       | Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement) |
| 3B   |          |                                                                                     |
| 4C   | 32       | Instrument Panel Wire and Center J/B (Behind the Combination Meter)                 |

 : Ground Points

| Code | See Page | Ground Points Location |
|------|----------|------------------------|
| IG   | 44       | Right Kick Panel       |