



Audio System for Separate Amplifier

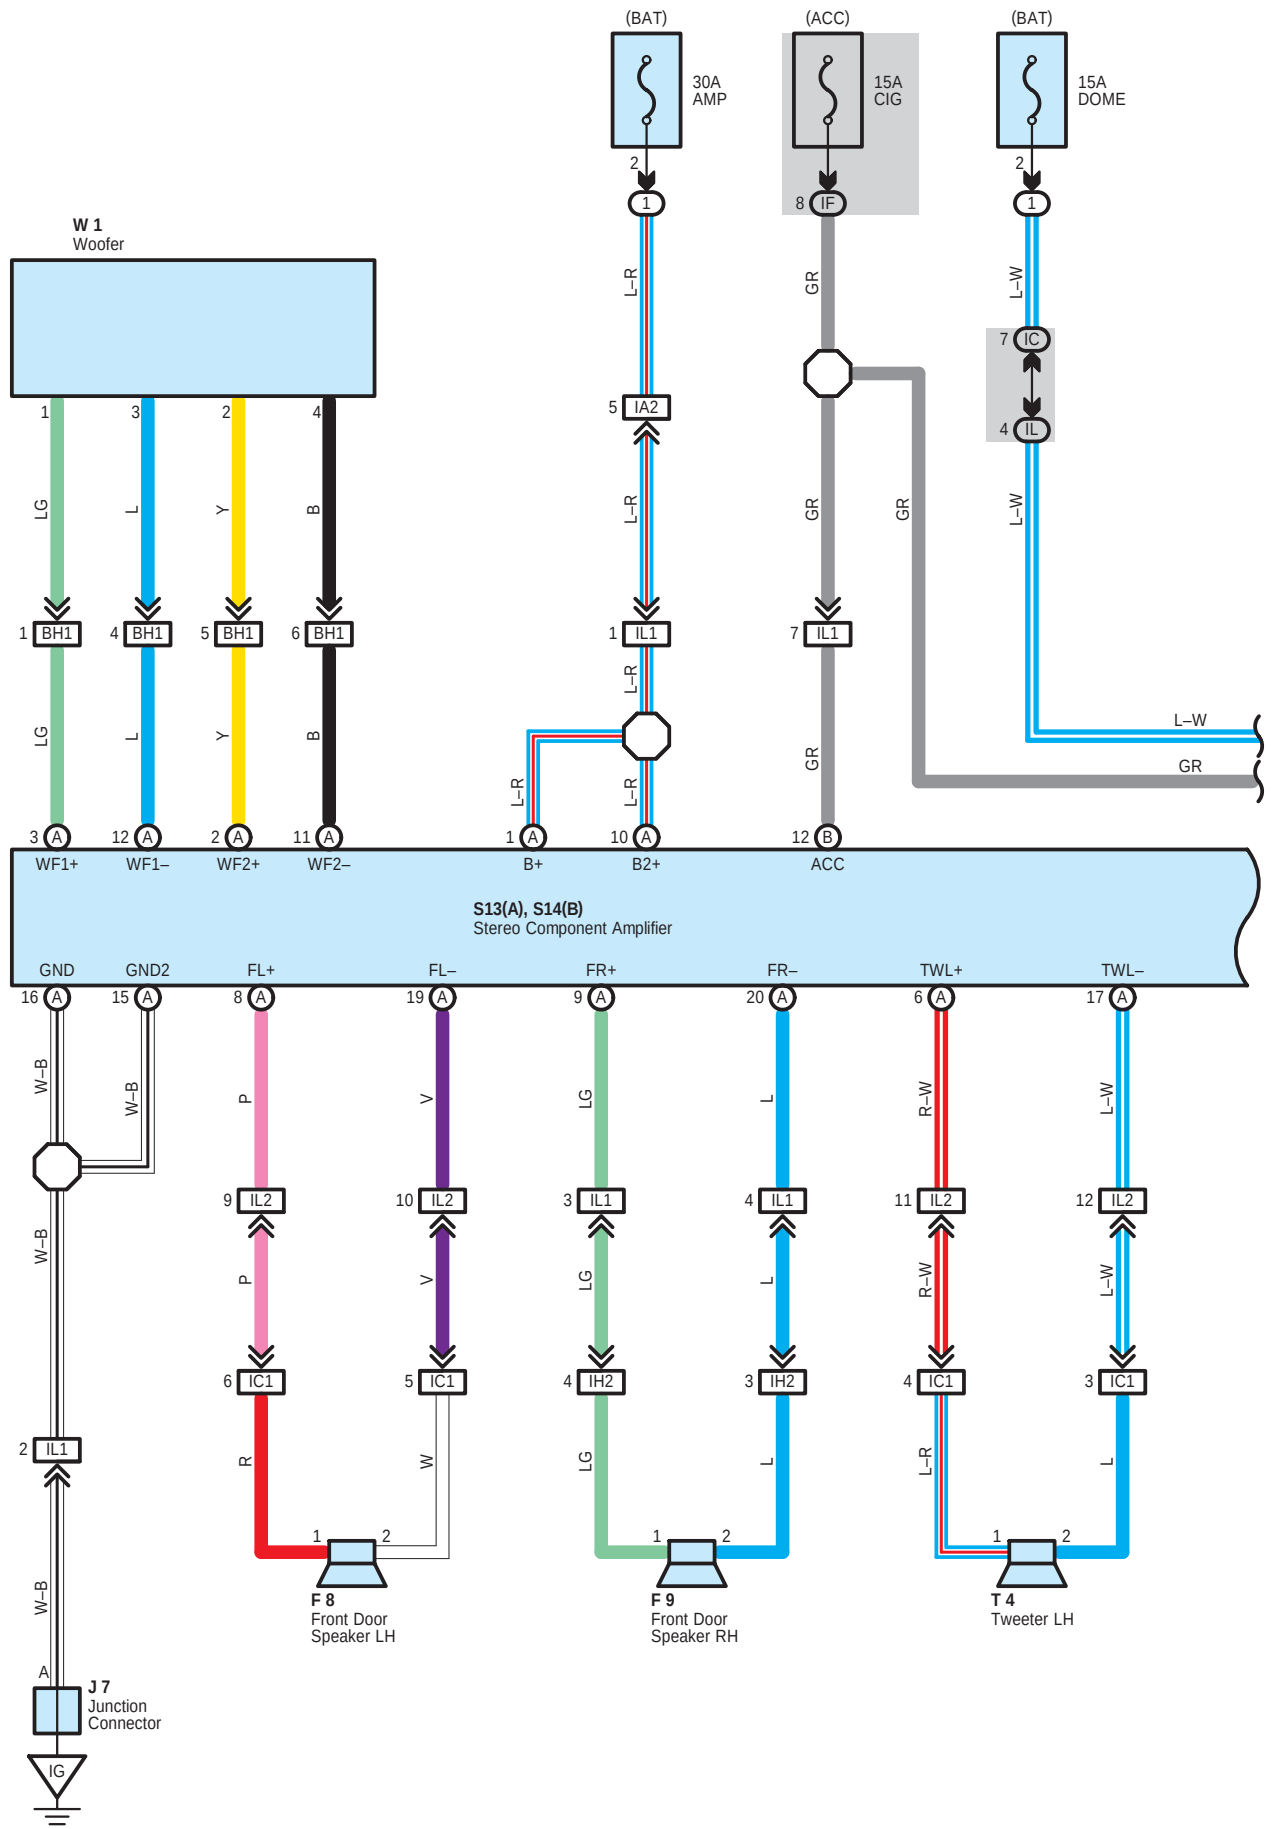

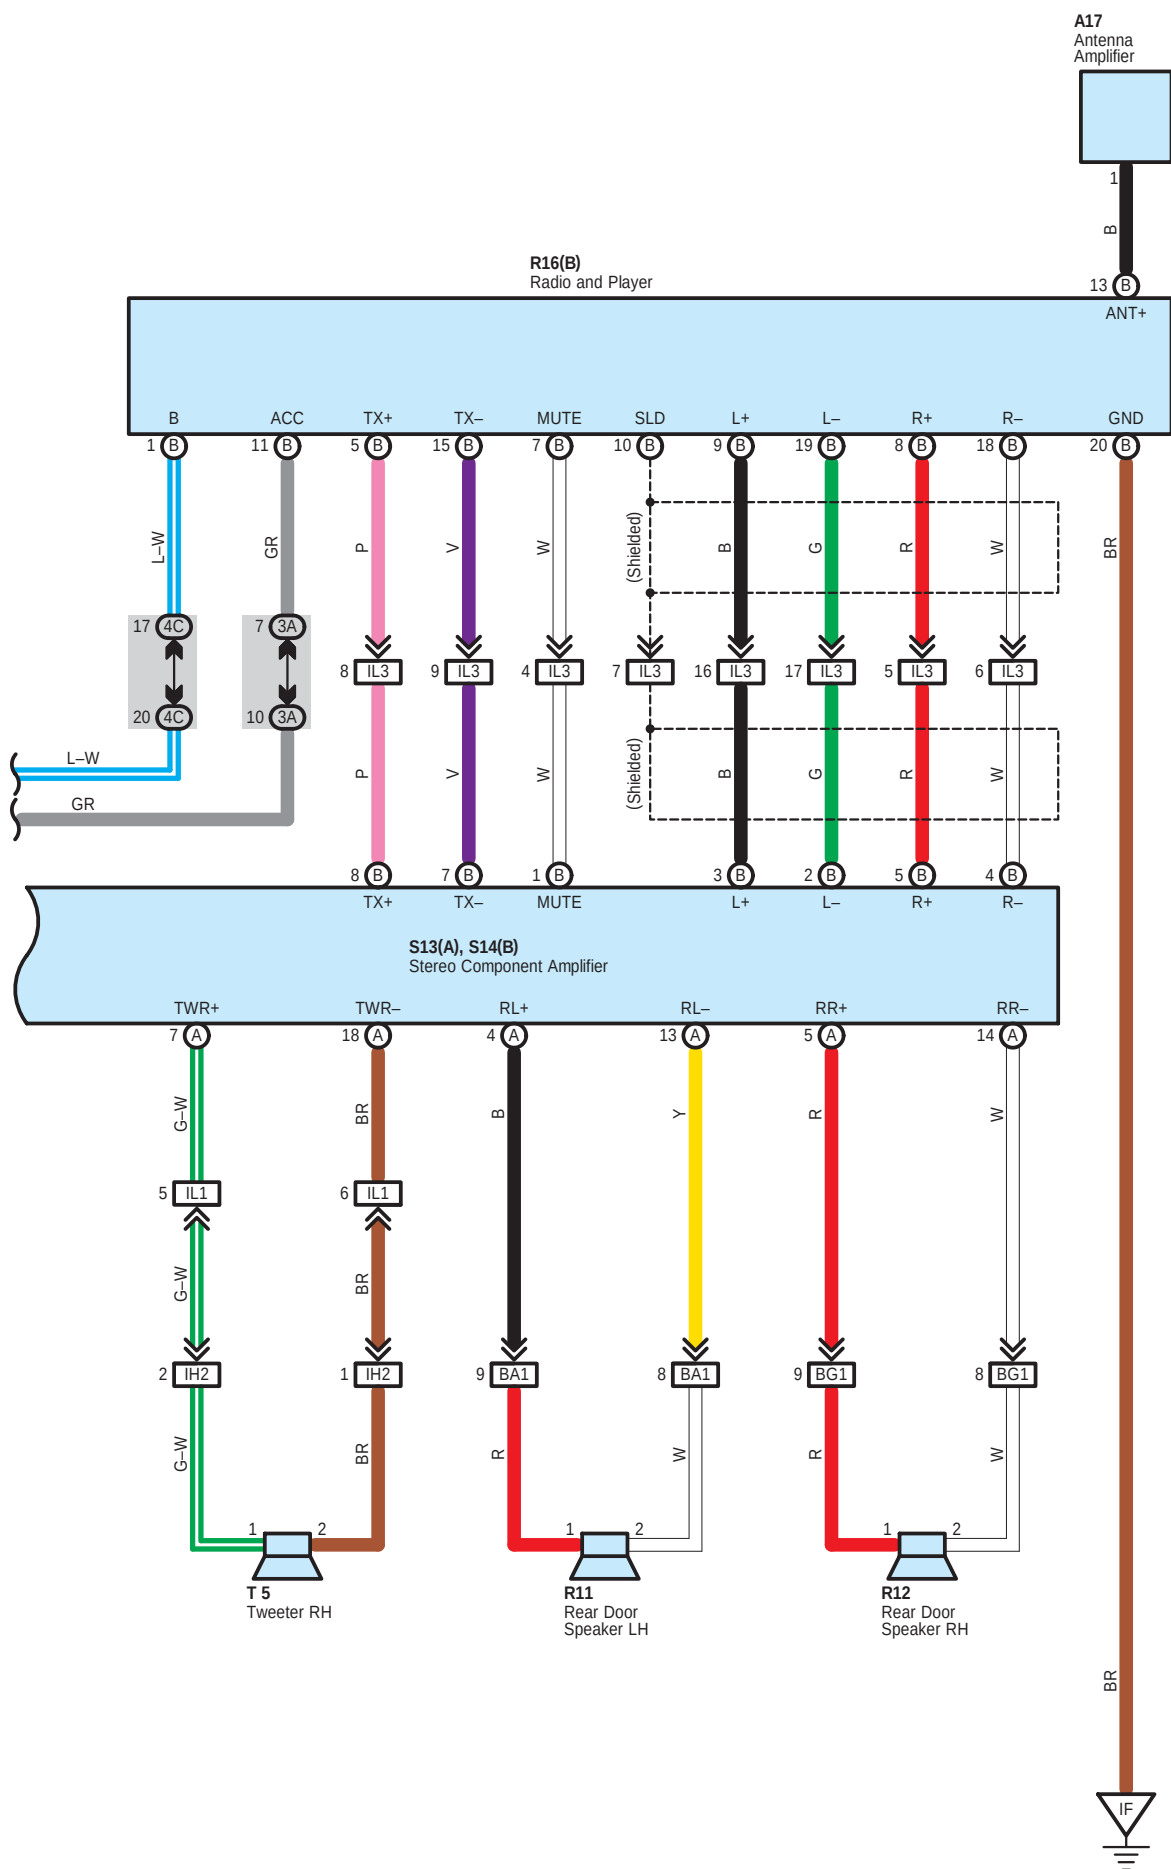

Audio System for Separate Amplifier

: Parts Location

Code	See Page	Code	See Page	Code	See Page
A17	38	R11	41	S14	B 39
F8	40	R12	41	T4	41
F9	40	R16	B 39	T5	41
J7	39	S13	A 39	W1	41

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	23	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	25	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
IF	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IL	24	
3A	29	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)
4C	32	Instrument Panel Wire and Center J/B (Behind the Combination Meter)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA2	44	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement LH)
IC1	44	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IH2	45	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IL1	45	Floor Wire and Instrument Panel Wire (Right Kick Panel)
IL2		
IL3		
BA1	46	Rear Door LH Wire and Floor Wire (Left Center Pillar)
BG1	46	Rear Door RH Wire and Floor Wire (Right Center Pillar)
BH1	46	Floor Wire and Floor Wire (Under the Right Center Pillar)

: Ground Points

Code	See Page	Ground Points Location
IF	44	Behind Combination Meter
IG	44	Right Kick Panel

