


- * 1 : w/ TVIP System
- * 2 : w/o TVIP System
- * 3 : 1ZZ-FE 4WD
- * 4 : 1ZZ-FE 2WD

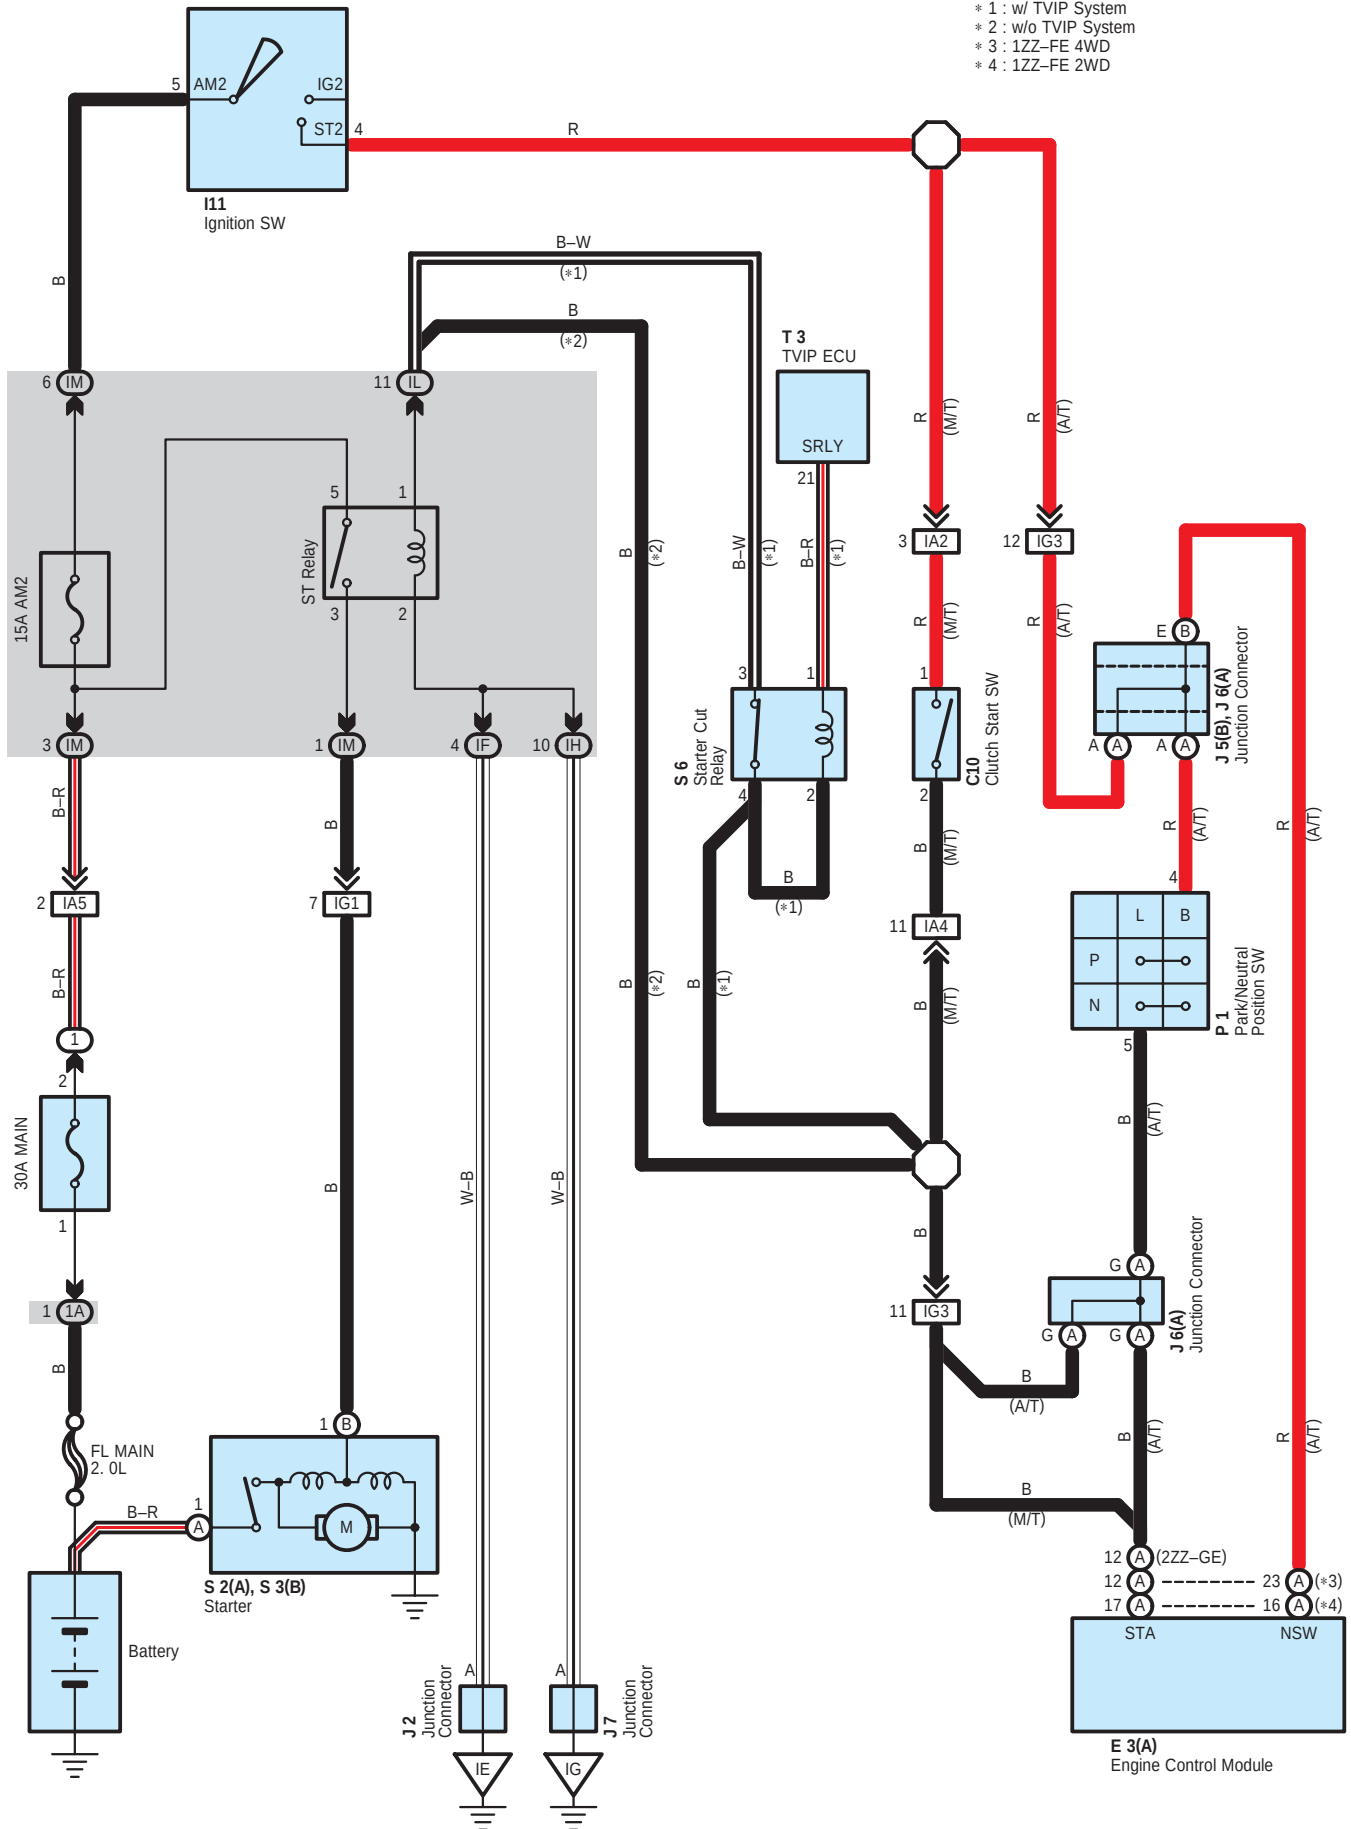

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
C10	38	J6	A	39	
E3	A	38	J7	39	S3
I11	39	P1	37 (1ZZ-FE)	S6	B
J2	39		35 (2ZZ-GE)	T3	39
J5	B	39	37 (1ZZ-FE)		

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	23	Engine Room R/B (Engine Compartment Left)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IF	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IH		
IL	24	
IM		
1A	23	Engine Wire and Engine Room J/B (Engine Compartment Left)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA2	44	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement LH)
IA4		
IA5		
IG1	45	Engine Wire and Instrument Panel Wire (Blower Unit RH)
IG3		

 : Ground Points

Code	See Page	Ground Points Location
IE	44	Behind Combination Meter
IG	44	Right Kick Panel