


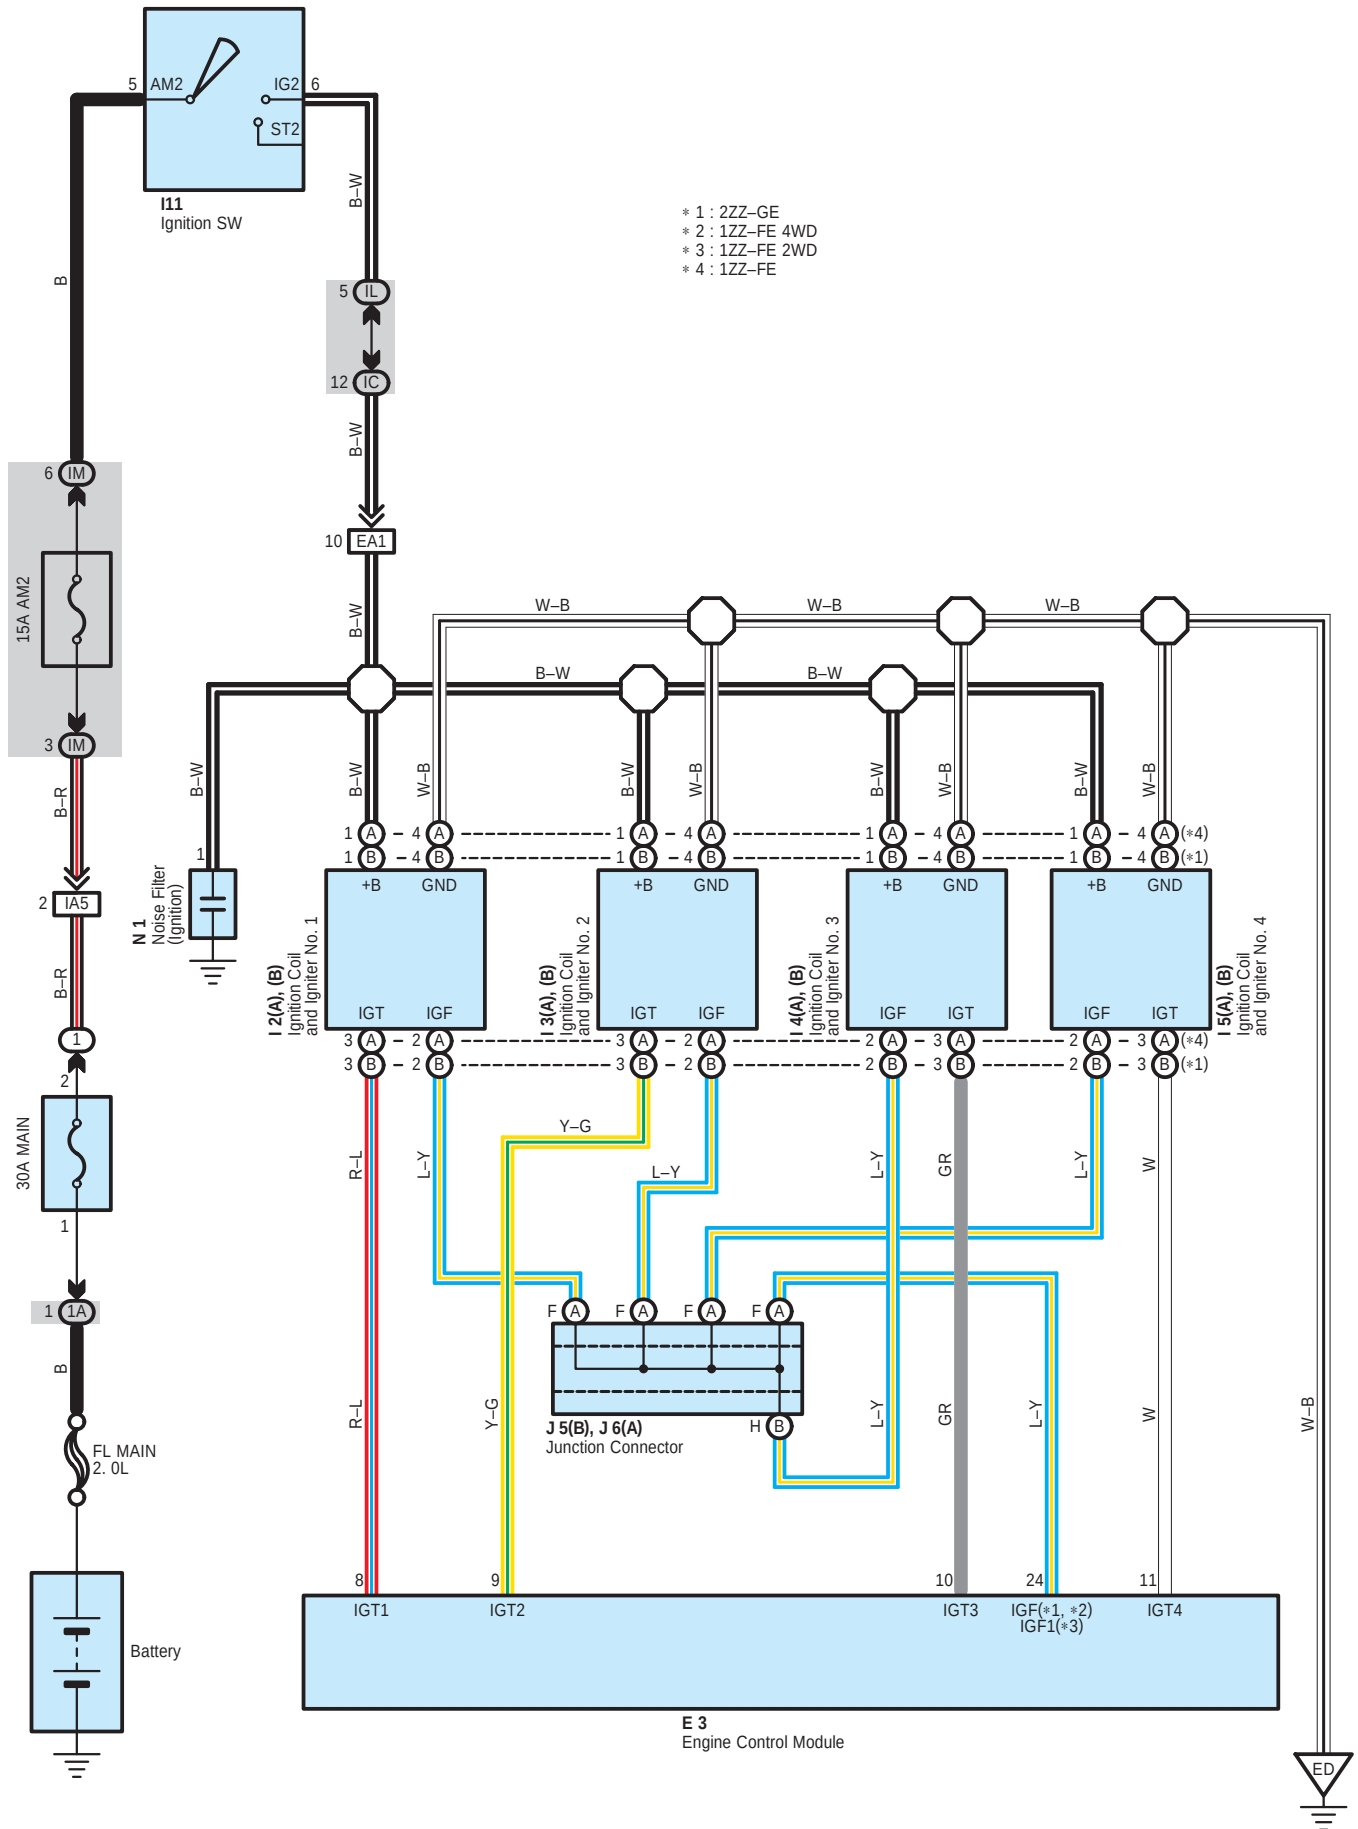

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
E3	38	I4	A 37 (1ZZ-FE)	J5	B 39
I2	A 37 (1ZZ-FE)		B 35 (2ZZ-GE)	J6	A 39
I3	B 35 (2ZZ-GE)	I5	A 37 (1ZZ-FE)	N1	35 (2ZZ-GE)
	A 37 (1ZZ-FE)		B 35 (2ZZ-GE)		37 (1ZZ-FE)
I3	B 35 (2ZZ-GE)	I11	39		

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	23	Engine Room R/B (Engine Compartment Left)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	25	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
IL	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IM		
1A	23	Engine Wire and Engine Room J/B (Engine Compartment Left)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	42 (2ZZ-GE)	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B)
	43 (1ZZ-FE)	
IA5	44	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement LH)

 : Ground Points

Code	See Page	Ground Points Location
ED	42 (2ZZ-GE)	Left Side of the Cylinder Head
	43 (1ZZ-FE)	