



Engine Immobiliser System

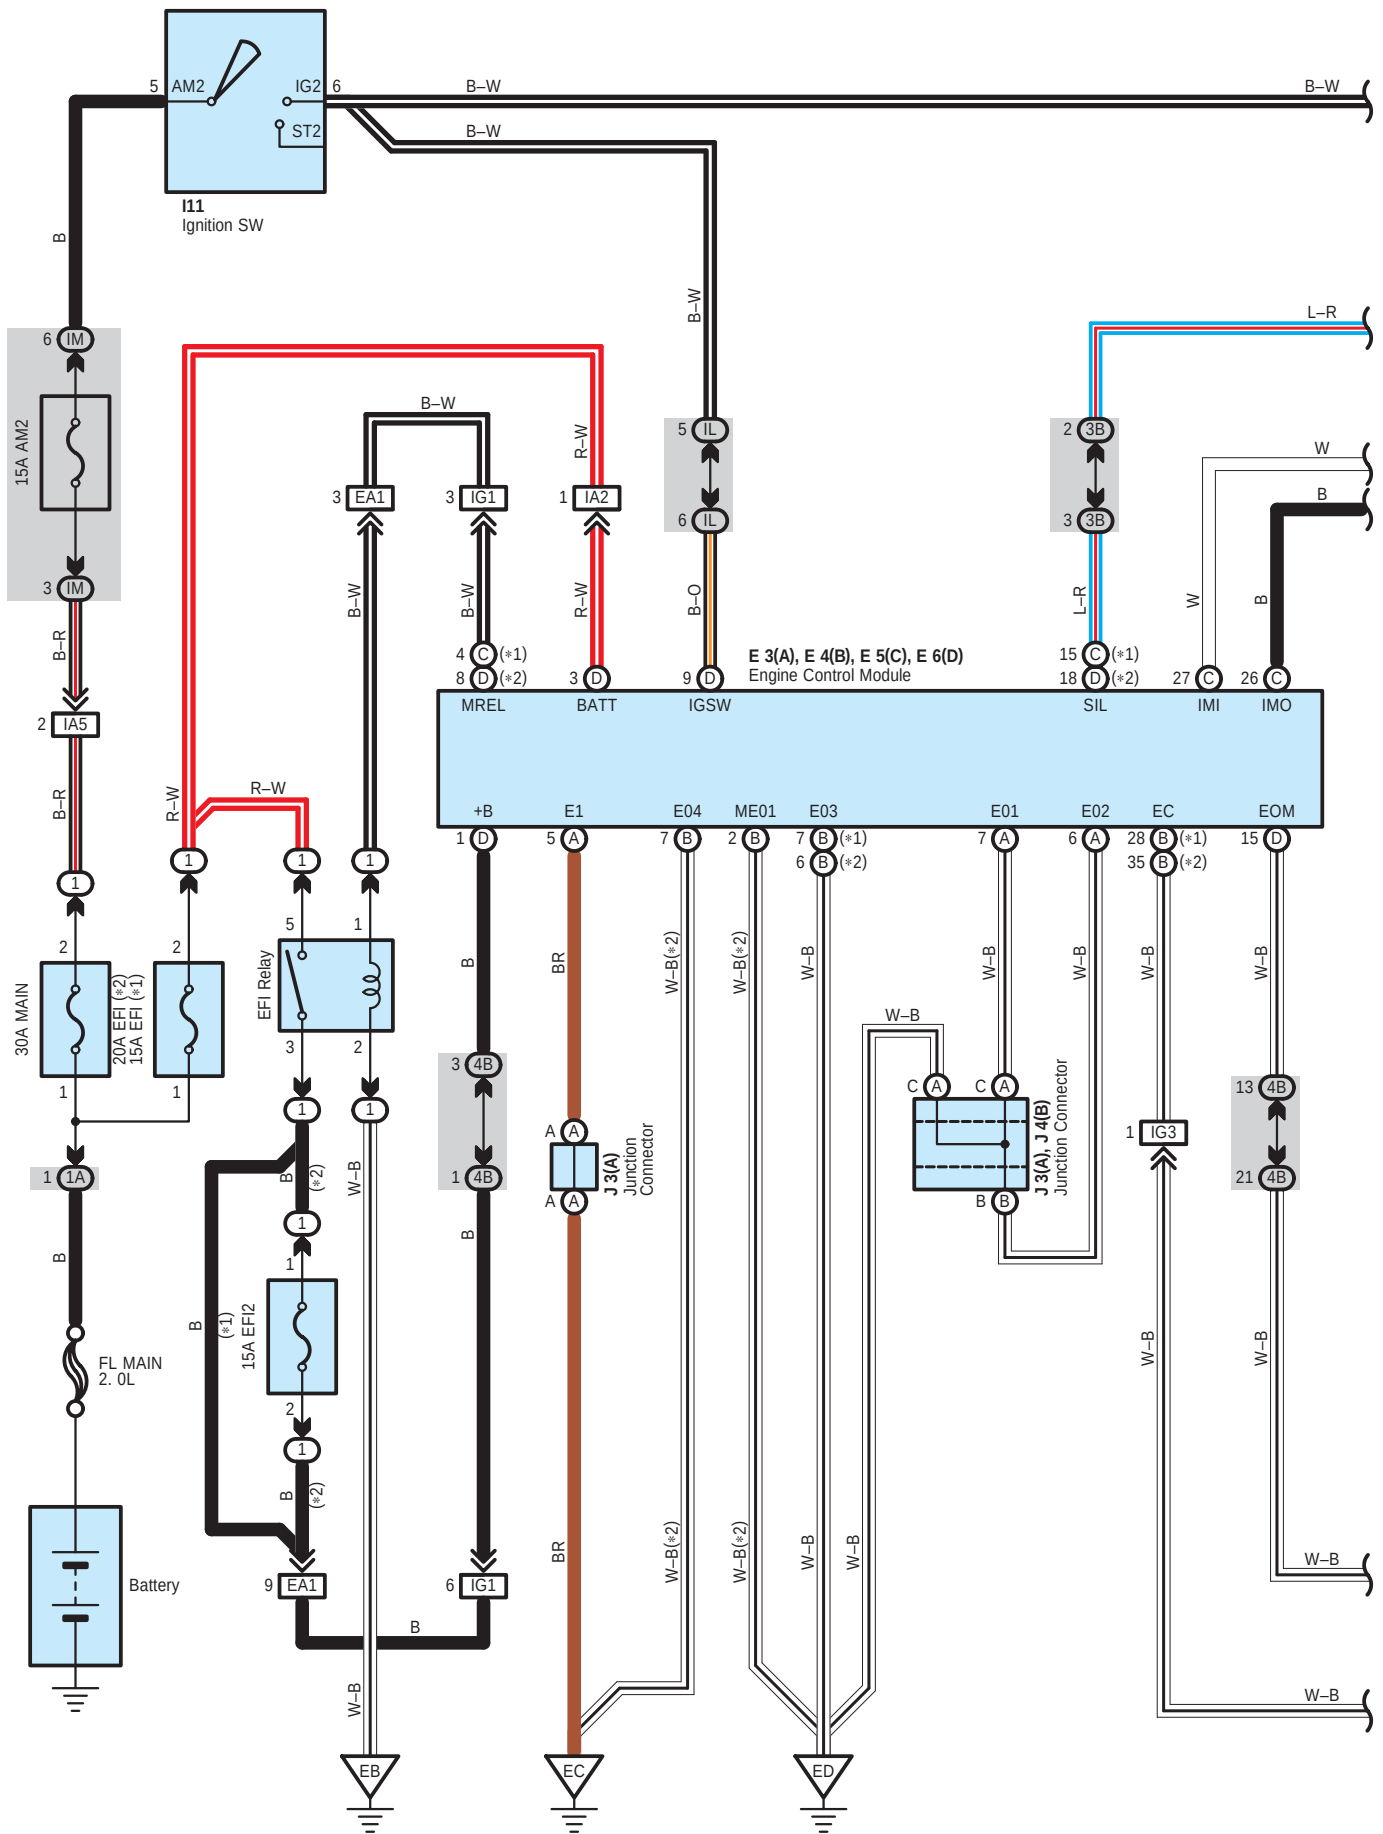

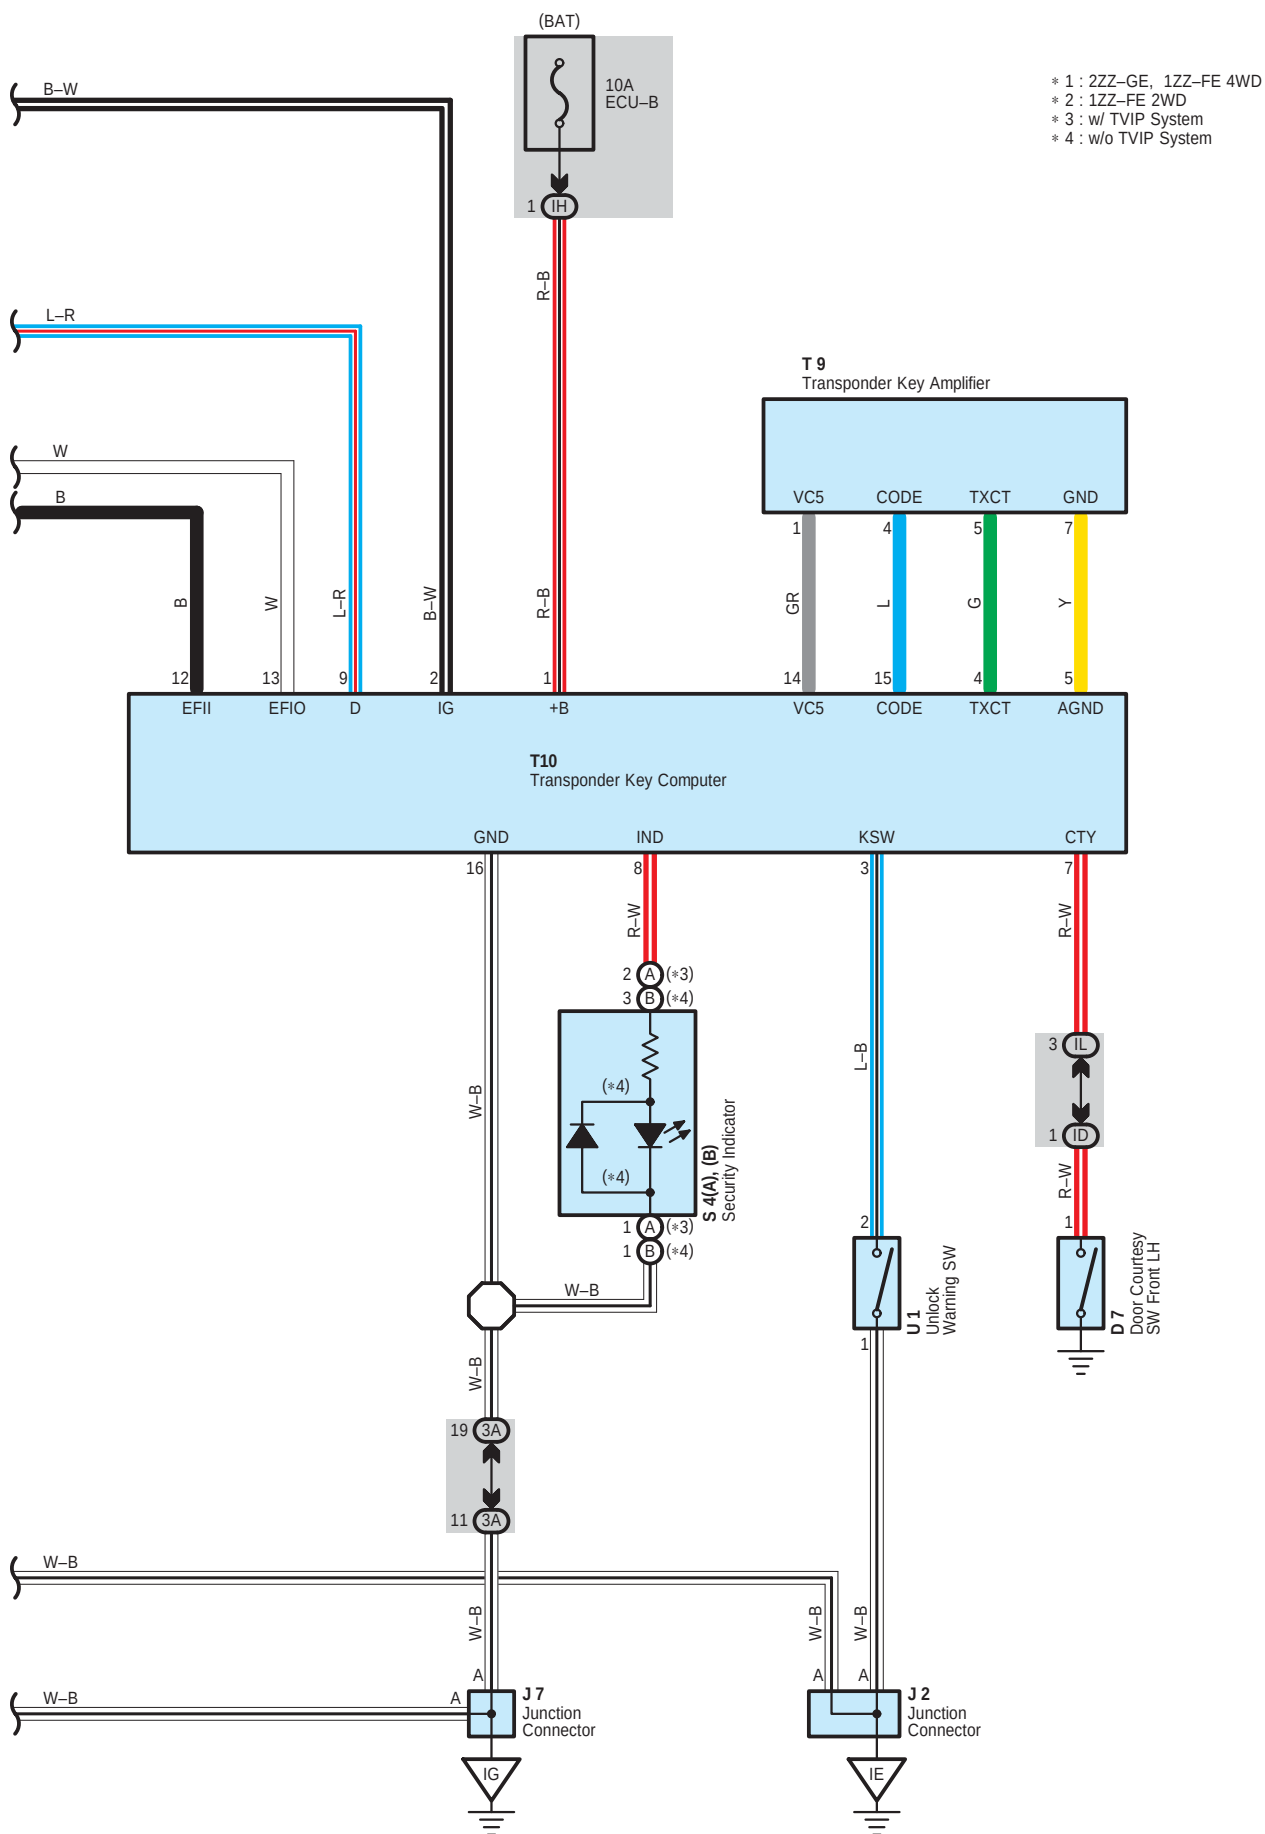

Engine Immobiliser System

: Parts Location

Code	See Page	Code	See Page	Code	See Page
D7	40	I11	39	S4	A 39
E3	A 38	J2	39		B 39
E4	B 38	J3	A 39	T9	39
E5	C 38	J4	B 39	T10	39
E6	D 38	J7	39	U1	39

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	23	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
ID	25	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
IH	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IL	24	
IM		
1A	23	
3A	29	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)
3B		
4B	32	Instrument Panel Wire and Center J/B (Behind the Combination Meter)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	42 (2ZZ-GE)	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B)
	43 (1ZZ-FE)	
IA2	44	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement LH)
IA5		
IG1	45	Engine Wire and Instrument Panel Wire (Blower Unit RH)
IG3		

: Ground Points

Code	See Page	Ground Points Location
EB	42 (2ZZ-GE)	Front Left Suspension Tower
	43 (1ZZ-FE)	
EC	42 (2ZZ-GE)	Left Side of the Cylinder Head
	43 (1ZZ-FE)	
ED	42 (2ZZ-GE)	
	43 (1ZZ-FE)	
IE	44	Behind Combination Meter
IG	44	Right Kick Panel

