


Oldsmobile Cutlass Supreme 1993 fuse box diagram

Glove Box Fuse Block

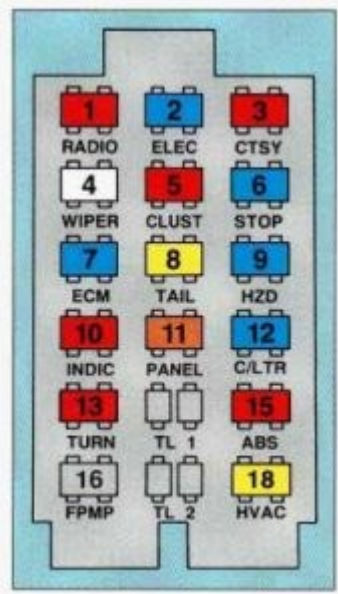


Oldsmobile Cutlass Supreme – fuse box –

glove box fuse block

Fuse	Ampere rating [A]	Usage
1	10	Radio & Clock
2	15	Radio & Clock; Passive Restraint Lockout, Passive Restraint Timer; DID, Cluster
3	10	Door Lock; Courtesy, Glove Box, Underhood, Trunk, Header Lights; Lighted Inside Rearview Mirror, Outside Power Mirrors
4	25	Windshield Wiper & Washer
5	10	Temp Door Motor; DRL Module (Canada) ; Instrument Cluster, HUD Dimmer, HUD Module
6	15	Brake Lights; ABS Control Module; Chime Module
7	15	ECM
8	20	Taillights; HVAC; Chime Module; DRL Module(Canada)
9	15	Hazard Warning Flasher
10	10	Rear Defogger Timer Relay;n strument Cluster; Chime Module; Cruise Control; DRL Module (Canada); Lamp Driver Module; ABS Lamp Driver
11	5	Instrument Panel, Console, Switch Lights
12	15	Cigarette Lighter

13	10	Turn Signals/Flasher; Computer Center
14	—	Not Used
15	10	ABS Control Module
16	—	Not Used
17	—	Not Used
18	20	Blower Motor, SOL Box

Component Center

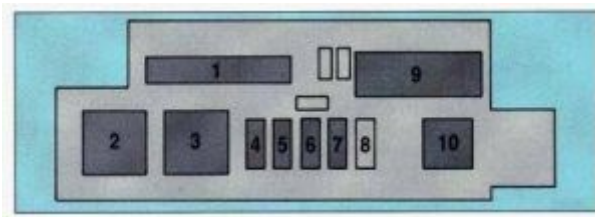


Oldsmobile Cutlass Supreme – fuse box –

component center

Fuse	Ampere rating [A]	Usage
1		Defogger Timer Relay
2		Air Conditioner Blower Relay (HI)
3		onditioner Blower Relay (LO)
4	30	Rear Defogger Circuit Breaker
5	30	Power Accessories Circuit Breaker
6	30	Power Windows and Sunroof Circuit Breaker
7	20	Headlight Circuit Breaker
8		Not Used
9		Chime Module
10		Hazard Flasher

Passenger Side Underhood Electrical Center

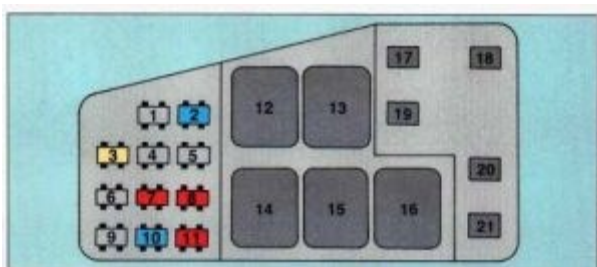

Oldsmobile Cutlass Supreme – fuse box –

passengers side underhood electrical center


Fuse	Ampere rating [A]	Usage
1		Not Used
2	15	Trugk Release (Auto)
3	20	ECM; Fuel Pump
4		Not Used
5		Not Used
6		Not Used
7	10	Direct Ignition System
8	10	Fuel Injectors
9		Not Used
10	15	NC Coil, Secondary Cooling Fan, Generator, Digital EGR, Purge Canister
11	10	TCC, Primary Cooling Fan (3.1L)

Relay	Ampere rating [A]	Usage
12		Fuel Pump
13		AIR Pump (3.4L)
14		Secondary Cooling Fan
15		Primary Cooling Fan
16		A/C Clutch Coil

Fusible element	Ampere rating [A]	Usage
17	60	Starter Solenoid

18	30	Cooling Fan (3.1L)
	60	Cooling Fan (3.4L)
19	60	Blower Motor
20	60	Cooling Fan
21	30	Fuse Block

Driver Side Underhood Electrical Center

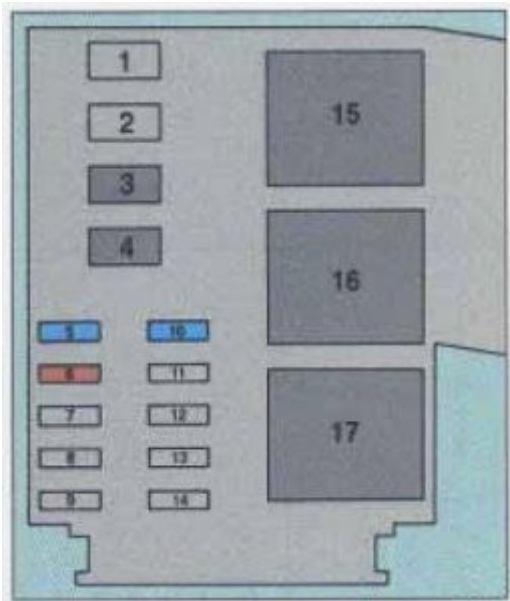

Oldsmobile Cutlass Supreme – fuse box –

driver side underhood electrical center

Fuse	Ampere rating [A]	Usage
1	—	Not Used
2	—	Not Used
3	60	ABS Controller
4	50	Exterior Lights
5	15	Horn
6	5	ABS Control Module
7	—	Not Used
8	—	Not Used
9	—	Not Used
10	15	Fog Lights
11	—	Not Used

12	—	Not Used
13	—	Not Used
14	—	Not Used

Relay	Ampere rating [A]	Usage
15		Horn
16		Fog Lights
17		ABS