


GMC Acadia 2016 – 2017 fuse box diagram

Engine Compartment Fuse Block

The underhood fuse block is in the engine compartment, on the driver side of the vehicle.

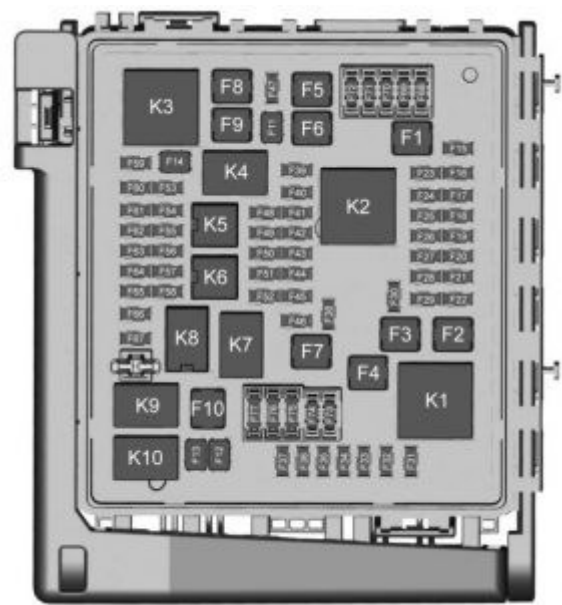

GMC Acadia mk2 – fuse box – engine compartment


Fuses	Usage
F1	ABS pump
F2	Starter 1
F3	DC DC transformer 1
F4	—
F5	—
F6	—
F7	DC DC transformer 2
F8	Starter 3
F9	—
F10	—
F11	—
F12	Front wiper
F13	Starter 2
F14	LED/Automatic headlamp leveling (if equipped)
F15	Rear wiper 1
F16	—
F17	—
F18	Automatic headlamp leveling (if equipped)
F19	—
F20	—

F21	—
F22	Electronic brake control module
F23	Parking/Trailer lamp
F24	Right trailer stoplamp/Turnlamps
F25	Steering column lock
F26	—
F27	Left trailer stoplamp/Turnlamps
F28	—
F29	—
F30	Washer pump
F31	Right low-beam headlamp
F32	Left low-beam headlamp
F33	Front fog lamps
F34	Horn
F35	—
F36	Left high-beam headlamp
F37	Right high-beam headlamp
F38	Automatic headlamp leveling (if equipped)
F39	Transmission control module 1
F40	Left rear bus electrical center/Ignition
F41	Instrument cluster
F42	HVAC
F43	Head-up display
F44	—
F45	—
F46	—
F47	—
F48	Rear wiper 2
F49	Interior rearview mirror/Trailer
F50	Fuel system control module
F51	Heated steering wheel
F52	A/C clutch
F53	Transmission range control module
F54	Coolant pump
F55	—
F56	—
F57	Engine control module/Ignition
F58	Transmission control module/Ignition
F59	Engine control module battery

F60	Transmission control module 2
F61	O2 sensor 1/Aeroshutter
F62	Engine control module – odd
F63	O2 sensor 2
F64	Engine control module – even
F65	Engine control module powertrain 1
F66	Engine control module powertrain 2
F67	Powertrain TRCM
F68	—
F69	—
F70	—
F71	—
F72	—
F73	—
F74	—
F75	—
F76	—
F77	—
K1	Starter 1
K2	Run/Crank
K3	Starter 3
K4	LED/Automatic headlamp (if equipped)
K5	—
K6	Coolant pump
K7	Engine control module
K8	A/C
K9	—
K10	Starter 2

Instrument Panel Fuse Block

The instrument panel fuse block is inside the center console on the passenger side of the vehicle.

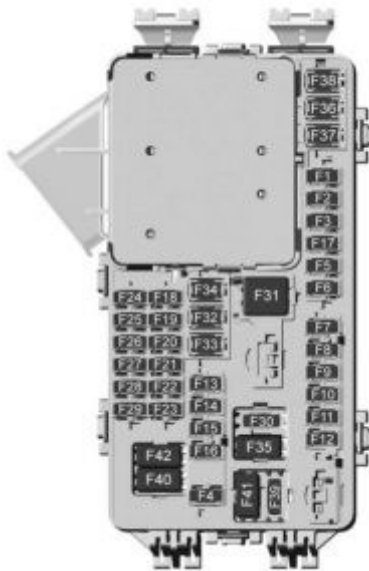


GMC Acadia mk2 – fuse box – instrument panel

Fuses	Usage
F1	Body control module 6
F2	Diagnostic link
F3	Electric steering column lock
F4	—
F5	Logistics
F6	HVAC
F7	Body control module 3
F8	Head-up display
F9	Right front heated seat
F10	Airbag
F11	Electronic transmission range system
F12	Amplifier
F13	Body control module 7
F14	Left front heated seat
F15	Instrument panel switch bank
F16	Sunroof
F17	Body control module 1
F18	Instrument cluster
F19	—
F20	Rear seat entertainment
F21	Body control module 4

F22	Infotainment
F23	Body control module 2
F24	USB charge/Wireless charging module
F25	Parking assist
F26	CIM
F27	—
F28	HVAC display
F29	Radio
F30	Steering wheel controls
F31	Blower front
F32	AC DC inverter
F33	Driver power seat
F34	Passenger power seat
F35	Battery IEC 1 feed
F36	Electric power steering
F37	Rear seat entertainment/USB charge/Wireless charging module
F38	Body control module 8
F39	—
F40	—
F41	—
F42	Auxiliary power outlet/Lighter

Rear Compartment Fuse Block

The rear compartment fuse block is behind a trim panel on the driver side of the rear storage compartment.

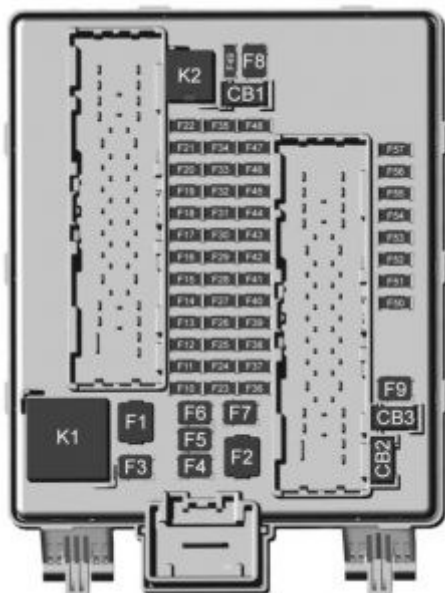

GMC Acadia mk2 – fuse box – rear compartment

Fuses	Usage
F1	—
F2	Trailer battery 1
F3	Driver safety belt
F4	Rear blower
F5	Rear drive control
F6	Passenger safety belt
F7	Right window
F8	Rear defogger
F9	Left window
F10	—
F11	Trailer reverse
F12	—
F13	—
F14	—
F15	—
F16	—
F17	Rear vision camera
F18	Trailer module
F19	Ventilated seats
F20	—
F21	Trailer connector
F22	—
F23	—
F24	Passenger window switch
F25	—
F26	Trailer brake lamps

F27	Driver seat ventilation/Lumbar
F28	Passive entry/Passive start
F29	—
F30	Canister vent
F31	—
F32	Heated mirrors
F33	—
F34	Logic mode
F35	Fuel system control module
F36	Passenger seat ventilation/Lumbar
F37	—
F38	Window module
F39	Rear closure
F40	Memory seat module
F41	Automatic occupancy sensor
F42	Trailer battery 2
F43	—
F44	—
F45	Liftgate
F46	Rear heated seats
F47	—
F48	Glass break sensor
F49	—
F50	—
F51	—
F52	Semi-active dampening system module
F53	Rear parking aid module
F54	External object calculating remote system
F55	—
F56	Universal garage door-opener/Rain sensor
F57	Theft deterrent system
CB1	—
CB2	—
CB3	Rear accessory power outlet
K1	—
K2	—