



Traction Control System (TCS) ('96-'99)

NOTE: The Gauge Relay is energized with the Ignition Switch in ON (II) or START (III), see Gauge Assembly, page 80 or 80-5.

