



Vehicle Stability Assist (VSA) System

- '00-'04

NOTE: The Gauge Relay is energized with the Ignition Switch in ON (II) or START (III). See Gauge Assembly, page 80-5.

