 


Connector Views

36. C306

- Gray
- On bottom of under-hood fuse/relay box
- Connects left engine compartment wire harness to under-hood fuse/relay box



- 1 '96-'97: WHT/BLK ([Fuse 41](#))
 '98-'04: GRN/WHT ([Fuse 41](#))
- 2 WHT ([Fuse 44](#))
- 3 '96-'98: RED/BLK ([Headlight switch](#))
 '99-'04: RED/YEL
 '99-'04 USA: ([Headlight switch](#))
 '99 Canada: ([Headlight switch](#))
 '00-'04 Canada: ([Headlight switch](#))
- 4 YEL ([Fuse 47](#))
- 5 BLU/RED ([Fuse 42](#))
- 6 RED/GRN
 '96-'98 USA: ([Headlights](#))
 '99-'04 USA: ([Headlights](#))
 '96-'98 Canada: ([Headlights](#))
 '99 Canada: ([Headlights](#))
 '00-'04 Canada: ([Headlights](#))

- 7 BLU/RED
 '99-'04: PNK, PNK
 '96-'98 USA: ([Headlights](#))
 '99-'04 USA: ([Headlights](#))
 '96-'98 Canada: ([Headlights](#))
- 8 RED/YEL
 '96-'98 USA: ([Headlights](#))
 '99-'04 USA: ([Headlights](#))
 '96-'98 Canada: ([Headlights](#))
 '99 Canada: ([Headlights](#))
 '00-'04 Canada: ([Headlights](#))
- 9 RED/YEL
 '99-'04: RED/BLK
 '96-'98: ([Headlight switch](#))
 '99-'04 USA: ([Headlight switch](#))
 '99 Canada: ([Headlight switch](#))
 '00-'04 Canada: ([Headlight switch](#))

