

 
Connector Views

112. Passenger's Multiplex Control Unit

– Behind right kick panel

Connector A


– Gray
– On main wire harness



- 1 WHT/YEL (Fuse 56)
- 2 BLK (G402)
- 3 BLK (G402)
- 4 BLK/RED (Frt. pass. power window control)
- 5 YEL (Trunk opener main switch input)
- 6 Except '99-'04 Navigation: YEL/BLU (Rear defogger ON input)
- 7 GRN/ORN (Hood switch input)
- 8 BLU (Audio unit input)
- 9 RED/YEL (A-D line)
- 10 PNK/BLU (Wake up)
- 11 —
- 12 WHT (Fuse 44)
- 13 WHT/RED (Driver's/left rear door lock control)
- 14 YEL (Ignition input)
- 15 RED (Dim control)
- 16 BLK (G404)
- 17 BLU/BLK (Frt. pass. power window control)
- 18 YEL/RED (Engine oil pressure input)
- 19 Except '99-'04 Navigation: YEL/GRN (Rear defogger ON output)
- 20 WHT/BLU (Engine running input)
- 21 BLU/RED (Frt. pass. knob switch input)
- 22 BRN/WHT (D-A line)
- 23 GRN/RED (Frt. pass. door switch input)
- 24 —
- 25 LT GRN/BLK (Driver's door lock control)
- 26 YEL/RED (Left rear door lock control)

Connector B

 – Gray
– On right side wire wire harness



- 1 WHT/RED (Frt. pass./right rear door lock control)
- 2 —
- 3 PNK/BLU (Trunk)
- 4 RED/WHT (Lock)
- 5 BLU/GRN (Trunk latch switch input)
- 6 YEL/GRN (Right rear power window control)
- 7 RED/BLU (Right rear door knob switch input)
- 8 GRN/WHT (Frt. pass. door lock switch input – unlock)
- 9 GRN/RED (Frt. pass. door lock cylinder switch input – unlock)
- 10 BLU/RED (Interior light control)
- 11 WHT/BLK (Trunk opener solenoid control)
- 12 YEL/RED (Frt. pass./right rear door lock control)
- 13 —
- 14 YEL/BLK (Panic)
- 15 GRN (Unlock)
- 16 —
- 17 YEL (Right rear power window control)
- 18 GRN/ORN (Right rear door switch input)
- 19 GRN/RED (Frt. pass door lock switch input – lock)
- 20 GRN/WHT (Frt. pass. door lock cylinder switch input – lock)
- 21 LT GRN/BLK (Courtesy light control)
- 22 PNK/BLK (Multiplex check connector input)

