

Connector Views


113. Gauge Assembly

- Left side of dash
- On dashboard wire harness

'96-'97:

Connector A

– Green

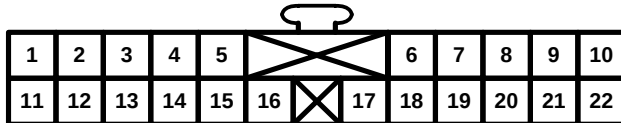

- 1 BLU (RPM input)
- 2 —
- 3 YEL/RED (Engine oil pressure indicator control)
- 4 LT GRN/RED (MIL control)
- 5 WHT/BLU (Charging system light control)
- 6 WHT/YEL (Fuse 56)
- 7 BLU/GRY (TCS indicator control)
- 8 BLU/RED (Low fuel indicator control)
- 9 BLK (G401)
- 10 BLK (G401)
- 11 BLK/YEL (Fuse 20)
- 12 GRN/YEL (Right turn signal indicator control)
- 13 PNK/BLU (Left turn signal indicator control)
- 14 —
- 15 GRN/WHT (Select switch input)
- 16 BLK/WHT (Reset switch input)
- 17 —
- 18 BLU/WHT (VSS input)
- 19 BRN/WHT (Outside air temperature input)
- 20 GRY (5V reference)
- 21 GRN (Switched ignition input)
- 22 —

 
Connector B

– Green



- 1 BLK/WHT (Cancel mode input)
- 2 LT GRN (Dim adjustment input)
- 3 BLU/YEL (Cruise control light control)
- 4 WHT/GRN (Brake light input)
- 5 GRN/RED (Brake system light control)
- 6 —
- 7 GRY (Not used)
- 8 YEL/GRN (ECT sending unit input)
- 9 BLU/GRN (Fuel gauge sending unit input)
- 10 GRN/BLK (Trunk open input)
- 11 GRN/ORN (Right rear door open input)
- 12 GRN/YEL (Left rear door open input)
- 13 GRN/RED (Frt. pass. door open input)
- 14 GRN/BLU (Driver's door open input)
- 15 BLU/WHT (SRS indicator control)
- 16 RED/BLU (High beam indicator –)
- 17 USA: —
Canada: YEL (DRL indicator control)
- 18 RED/BLK (Lights-on indicator control)
- 19 PNK (Immobilizer indicator control)
- 20 RED/GRN (High beam indicator +)
- 21 RED/BLU (Seat belt reminder light control)
- 22 BLU/WHT (ABS indicator control)
- 23 LT GRN (Park/neutral output)
- 24 BLK/BLU (Park position input)
- 25 WHT (Reverse position input)
- 26 RED (Neutral position input)
- 27 BRN/YEL (D4 indicator control)
- 28 GRN (D3 position input)
- 29 BLU (2 position input)
- 30 BRN (1 position input)





Connector Views


113. Gauge Assembly

- Left side of dash
- On dashboard wire harness

'98-'03:

Connector A

– Green

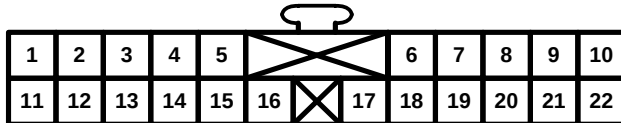

- 1 BLU (RPM input)
- 2 '00-'03: YEL/BLU (VSA)
- 3 YEL/RED (Engine oil pressure indicator control)
- 4 LT GRN/RED (MIL control)
- 5 WHT/BLU (Charging system light control)
- 6 WHT/YEL (Fuse 56)
- 7 '98-'99: BLU/GRY (TCS indicator control)
- 8 BLU/RED (Low fuel indicator control)
- 9 BLK
- '98: (G401)
- '99-'03: (G251)
- 10 BLK (G401)
- 11 BLK/YEL (Fuse 20)
- 12 GRN/YEL (Right turn signal indicator control)
- 13 PNK/BLU (Left turn signal indicator control)
- 14 —
- 15 GRN/WHT (Select switch input)
- 16 BLK/WHT (Reset switch input)
- 17 '00-'03: GRN/RED (Brake system light control)
- 18 BLU/WHT (VSS input)
- 19 BRN/WHT (Outside air temperature input)
- 20 GRY (5V reference)
- 21 '99-'03: GRN (SRS)
- 22 WHT/RED (Switched ignition input)

 
Connector B

– Green



- 1 BLK/WHT (Cancel mode input)
- 2 LT GRN (Dim adjustment input)
- 3 BLU/YEL (Cruise control light control)
- 4 WHT/GRN (Brake light input)
- 5 GRN/RED (Brake system light control)
- 6 '00-'02 BLU/WHT (VSA)
- 7 '98-'99: GRY (Not used)
- '00-'03: GRY (Brake system indicator light control)
- 8 YEL/GRN (ECT sending unit input)
- 9 BLU/GRN (Fuel gauge sending unit input)
- 10 GRN/BLK (Trunk open input)
- 11 GRN/ORN (Right rear door open input)
- 12 GRN/YEL (Left rear door open input)
- 13 GRN/RED (Frt. pass. door open input)
- 14 GRN/BLU (Driver's door open input)
- 15 BLU/WHT (SRS indicator control)
- 16 RED/BLU (High beam indicator –)
- 17 USA: —
- Canada: YEL (DRL indicator control)
- 18 RED/BLK (Lights-on indicator control)
- 19 PNK (Immobilizer indicator control)
- 20 RED/GRN (High beam indicator +)
- 21 RED/BLU (Seat belt reminder light control)
- 22 '98-'99: BLU/WHT (ABS indicator control)
- '00-'03: LT GRN/RED (VSA)
- 23 LT GRN (Park/neutral output)
- 24 BLK/BLU (Park position input)
- 25 WHT (Reverse position input)
- 26 RED (Neutral position input)
- 27 BRN/YEL (D4 indicator control)
- 28 GRN (D3 position input)
- 29 BLU (2 position input)
- 30 BRN (1 position input)





Connector Views


113. Gauge Assembly

- Left side of dash
- On dashboard wire harness

'04:

Connector A

– Green

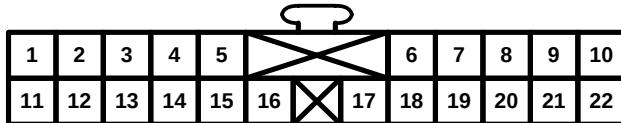

- 1 BLU (RPM input)
- 2 YEL/BLU (VSA)
- 3 YEL/RED (Engine oil pressure indicator control)
- 4 LT GRN/RED (MIL control)
- 5 WHT/BLU (Charging system light control)
- 6 WHT/YEL (Fuse 56)
- 7 —
- 8 BLK (Fuel gauge sending unit input)
- 9 BLK (G251)
- 10 BLK (G401)
- 11 BLK/YEL (Fuse 20)
- 12 GRN/YEL (Right turn signal indicator control)
- 13 PNK/BLU (Left turn signal indicator control)
- 14 —
- 15 GRN/WHT (Select switch input)
- 16 BLK/WHT (Reset switch input)
- 17 GRN/RED (Brake system light control)
- 18 BLU/WHT (VSS input)
- 19 BRN/WHT (Outside air temperature input)
- 20 GRY (5V reference)
- 21 '99-'03: GRN (SRS)
- 22 WHT/RED (Switched ignition input)

 
Connector B

– Green



- 1 BLK/WHT (Cancel mode input)
- 2 LT GRN (Dim adjustment input)
- 3 BLU/YEL (Cruise control light control)
- 4 WHT/GRN (Brake light input)
- 5 GRN/ORN (Brake system light control)
- 6 BLU/WHT (VSA)
- 7 GRY (VSA)
- 8 YEL/GRN (ECT sending unit input)
- 9 BLU/GRN (Fuel gauge sending unit input)
- 10 GRN/BLK (Trunk open input)
- 11 GRN/ORN (Right rear door open input)
- 12 GRN/YEL (Left rear door open input)
- 13 GRN/RED (Frt. pass. door open input)
- 14 GRN/BLU (Driver's door open input)
- 15 BLU/WHT (SRS indicator control)
- 16 RED/BLU (High beam indicator –)
- 17 —
- 18 RED/BLK (Lights-on indicator control)
- 19 PNK (Immobilizer indicator control)
- 20 RED/GRN (High beam indicator +)
- 21 RED/BLU (Seat belt reminder light control)
- 22 LT GRN/RED (VSA)
- 23 LT GRN (Park/neutral output)
- 24 BLK/BLU (Park position input)
- 25 WHT (Reverse position input)
- 26 RED (Neutral position input)
- 27 BRN/YEL (D4 indicator control)
- 28 GRN (D3 position input)
- 29 BLU (2 position input)
- 30 BRN (1 position input)





Connector Views

113. Gauge Assembly

- Left side of dash
- On dashboard wire harness

'04:

Connector C

- Green



- 1 —
- 2 —
- 3 GRN/WHT ([Select/reset switch input](#))
- 4 BLK/WHT ([Select/reset switch input](#))
- 5 —
- 6 Canada: YEL ([Headlights system](#))
- 7 —
- 8 BLU/WHT ([Ignition key switch](#))
- 9 BLU/WHT ([Driver's lock knob switch](#))
- 10 —

