



Connector Views

116. Combination Light Switch

- Natural
- Left side of steering column
- On combination switch sub-harness

1	2	3	4	5	6	7
8	9	10	11	12	13	14

'96-'98 USA:

- 1 —
- 2 BRN/WHT (Not used)
- 3 BLU/RED (Headlight relay control)
- 4 —
- 5 BLK, BLK (G401)
- 6 GRN/YEL (Headlight switch position output)
- 7 RED/GRN (Taillight relay control)
- 8 RED/BLU (Dimmer relay control)
- 9 BLK (G401)
- 10 —
- 11 —
- 12 BLK/RED (Left turn)
- 13 RED (Ignition input)
- 14 GRN/WHT (Right turn)

'99-'04 USA:

- 1 —
- 2 BRN/WHT (Not used)
- 3 BLU/RED (Headlight relay control)
- 4 —
- 5 BLK, BLK (G401)
- 6 GRN/YEL (Headlight switch position output)
- 7 RED/GRN (Taillight relay control)
- 8 RED/BLU (Dimmer relay control)
- 9 BLK (G401)
- 10 —
- 11 —
- 12 BLK/RED (Left turn)
- 13 RED (Ignition input)
- 14 GRN/WHT (Right turn)

'96-'98 Canada:

- 1 —
- 2 BLU/RED (Headlight relay control)
- 3 RED/BLU (Flash-to-pass switch ON)
- 4 RED/GRN (Park/head position)
- 5 RED/YEL (Head position)
- 6 —
- 7 PNK/BLK (Head position)
- 8 RED/BLU (Dimmer switch – HI)
- 9 BLK (G401)
- 10 '96-'97: BRN/WHT
'98: BRN/YEL (Dimmer switch – LO)
- 11 BLK (G401)
- 12 BLK/RED (Left turn)
- 13 RED (Ignition input)
- 14 GRN/WHT (Right turn)

'99 Canada:

- 1 —
- 2 BLU/RED (Headlight relay control)
- 3 RED/BLU (Flash-to-pass switch ON)
- 4 RED/GRN (Park/head position)
- 5 RED/YEL (Head position)
- 6 —
- 7 PNK/BLK (Head position)
- 8 RED/BLU (Dimmer switch – HI)
- 9 BLK (G401)
- 10 BRN/WHT (Dimmer switch – LO)
- 11 BLK (G401)
- 12 BLK/RED (Left turn)
- 13 RED (Ignition input)
- 14 GRN/WHT (Right turn)

'00-'04 Canada:

- 1 —
- 2 BLU/RED (Headlight relay control)
- 3 RED/BLU (Flash-to-pass switch ON)
- 4 RED/GRN (Park/head position)
- 5 RED/YEL (Head position)
- 6 —
- 7 PNK/BLK (Head position)
- 8 RED/BLU (Dimmer switch – HI)
- 9 BLK (G401)
- 10 BRN/WHT (Dimmer switch – LO)
- 11 BLK (G401)
- 12 BLK/RED (Left turn)
- 13 RED (Ignition input)
- 14 GRN/WHT (Right turn)

