



Connector to Harness Index

 
Engine Wire Harness

Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
C101	14-GRY	Right side of engine compartment	Main wire harness	Premium/ Canada Base
C102	14-GRY	Right side of engine compartment	Main wire harness	
C103	14-BLU	Right side of engine compartment	Main wire harness	
C104	14-BLU	Right side of engine compartment	Main wire harness	
C105	8-GRY	Right side of engine compartment	Main wire harness	
C105	2-GRY	Right side of engine compartment	Main wire harness	
C106	8-GRY	Center rear of engine compartment	Junction connector	
C107	3-GRY	Right rear of engine compartment	EGR valve and position sensor	
C108	6-GRY	Center rear of engine compartment	IAB high and low control solenoid valves and engine mount control solenoid valve	
C109	2-GRY	Center rear of engine compartment	Intake air temperature (IAT) sensor	
C110	3-GRY	Center rear of engine compartment	Knock sensor (KS) sub-harness	
C111	3-GRY	Top right side of engine compartment	MAP sensor	
C112	1-BLK	Right side of engine compartment	Engine coolant temperature (ECT) sending unit	*1 *2
C113	3-GRY	Middle of engine	Throttle position (TP) sensor	
C114	14-GRY	Right front of engine	Junction connector	
C115	8-GRY	Right front of engine	Ignition control module (ICM)	
C116	6-GRY	Right front of engine	Ignition control module (ICM)	
C117	3-BLU	Center front of engine	TCS control valve angle sensor	
C117	3-BLU	Center front of engine	VSA control valve angle sensor	
C118	1-GRY	Right side of engine	Noise reduction condenser	
C119	4-GRY	Engine	Right primary heated oxygen sensor (Bank 1, Sensor 1)	
C120	2-GRY	Right side of engine	Power steering pressure (PSP) switch	
C121	6-GRY	Right side of engine	Spark plug voltage detection module	
C122	2-GRY	Center front of engine	TCS control valve actuator	*1 *2
C122	2-GRY	Center front of engine	VSA control valve actuator	
C123	6-GRY	Center front of engine	Vehicle speed sensor (VSS) sub-harness	*1 *2
C124	2-GRY	Left side of engine compartment	Left engine compartment wire harness	
C126	4-GRY	Left rear of engine	Left primary heated oxygen sensor (Bank 2, Sensor 1)	
C127	2-BLK	Top left of engine	EVAP purge control solenoid valve	
C128	2-GRY	Top left of engine	Engine coolant temperature (ECT) sensor	
C129	2-GRY	Top left of engine	Idle air control (IAC) valve	
C130	8-GRY	Top left of engine	CKP/CYP sensor	
C131	4-GRN	Left front corner of engine compartment	Alternator	
C132	1-GRY	Left front corner of engine compartment	A/C compressor clutch	
C133	1-BLK	Engine compartment	Starter solenoid	


*1: '96-'99

*2: '00-'04





Connector to Harness Index

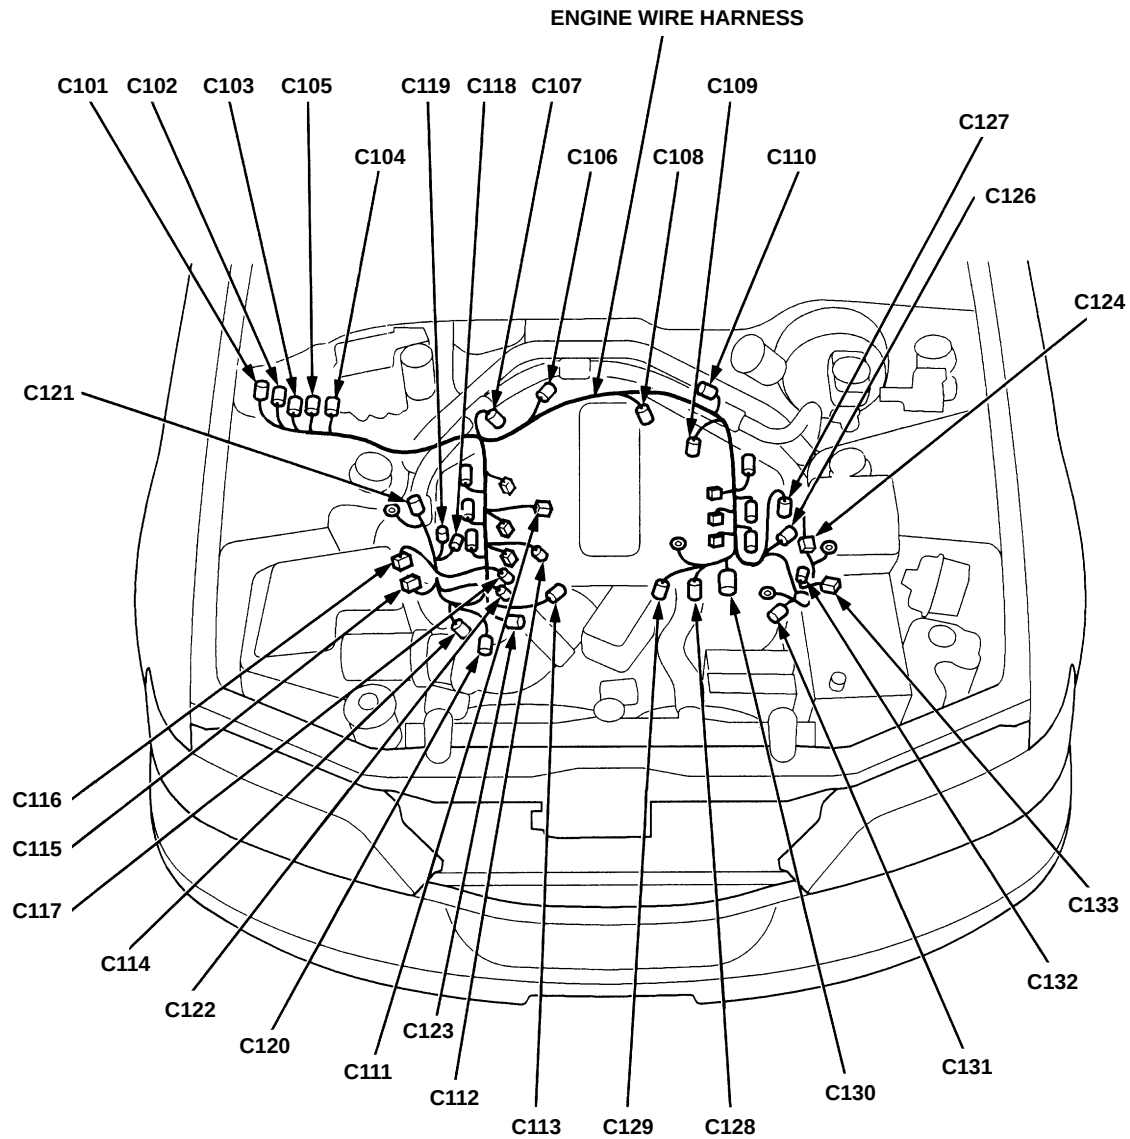




Connector to Harness Index

Engine Wire Harness

Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
C134	2-BLK	Top right of engine	No. 1 fuel injector	
C135	2-BLK	Top right of engine	No. 2 fuel injector	
C136	2-BLK	Top right of engine	No. 3 fuel injector	
C137	2-BLK	Top left of engine	No. 4 fuel injector	
C138	2-BLK	Top left of engine	No. 5 fuel injector	
C139	2-BLK	Top left of engine	No. 6 fuel injector	
C140	3-BLK	Top right of engine	No. 1 ignition coil	
C141	3-BLK	Top right of engine	No. 2 ignition coil	
C142	3-BLK	Top right of engine	No. 3 ignition coil	
C143	3-BLK	Top left of engine	No. 4 ignition coil	
C144	3-BLK	Top left of engine	No. 5 ignition coil	
C145	3-BLK	Top left of engine	No. 6 ignition coil	
C146	8-GRY	Left side of engine compartment	Junction connector	
T101		Left side of engine compartment	Under-hood fuse/relay box	
T102		Left front corner of engine compartment	Alternator	
G101		Middle of engine compartment	Body ground via, engine wire harness	
G102		Right side of engine compartment	Body ground via, engine wire harness	



 

Connector to Harness Index

