



Connector to Harness Index

Driver's Power Seat Wire Harness

Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
C659	10-GRY	Under middle of driver's seat	Left side wire harness	
C682	12-GRY or BLK	Under front of driver's seat	Power seat control unit connector C	
C683	12-BLK	Under front of driver's seat	Power seat control unit connector A	
C684	16-BLK	Under front of driver's seat	Power seat control unit connector B	
C685	2-BRN	Under right front of driver's seat	Slide position sensor	
C686	2-BLU	Under middle of driver's seat	Rear up-down motor	
C687	3-GRY	Under middle of driver's seat	Rear up-down position sensor	
C688	4-GRY	Under middle of driver's seat	Recline motor and position sensor	
C689	2-GRN	Under middle of driver's seat	Front up-down motor	
C690	3-GRY	Under middle of driver's seat	Front up-down position sensor	
C691	2-GRY	Under left front of driver's seat	Slide motor	
C692	10-GRY	Behind power seat adjustment switch cover	Driver's power seat adjustment switch	*1
C693	5-WHT	Behind lumbar switch cover	Driver's lumbar switch	*1
C694	2-GRY	Behind driver's seat back	Lumbar motor	
G681		Under right side of driver's seat	Body ground, via driver's power seat wire harness	

*1: '04

