

Connector to Harness Index

Driver's Door Wire Harness

Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
C412	42-GRY	Driver's door	Main wire harness	
C742	2-GRY	Driver's door	Driver's door speaker	*6
C743	4-GRY	Driver's door	Driver's power window motor	
C743	6-GRY	Driver's door	Driver's power window motor	*7
C744	8-GRY	Driver's door	Driver's door latch	
C745	3-GRY	Driver's door	Driver's door key cylinder switch	
C746	2-GRY	Driver's door	Left tweeter	*1
C747	3-GRY	Driver's door	Driver's door lock switch	
C748	10-GRY	Driver's door	Left power mirror actuator	*4
C748	8-GRY	Driver's door	Left power mirror actuator	*5
C749	2-BRN	Driver's door	Trunk opener switch	
C750	2-GRY	Driver's door	Driver's door courtesy light	
C751	10-BLU	Driver's door	Power mirror switch	*6
C751	10-GRN	Driver's door	Power mirror switch	*7
C752	2-BRN	Driver's door	Power mirror switch	*3
C753	10-GRY	Driver's door	Driving position memory switch	
C754	2-GRY	Driver's door	Security indicator	
C755	12-BLK	Driver's door	Power mirror control unit	*6
C756	16-BLK	Driver's door	Power mirror control unit	*6
C757	20-BLU	Driver's door	Multiplex control unit (door)	
C758	2-GRY	Driver's door	Left tweeter	*2
C758	2-GRY	Driver's door	Left twiddler	*8
C759	18-GRY	Driver's door	Power window control unit	*7

*1: Except BOSE sound system

*2: BOSE sound system

*3: Defogger

*4: Position memory

*5: Except position memory

*6: '96-'01

*7: '02-'04

*8: '04

