



Connector Views

– Component Connector View Index

Connector	View
ABS Control Unit	111
ABS Inspection Connector	7
ABS Modulator Unit ('98-'99 models)	121
Audio Unit	108
Automatic Dimming Mirror/OnStar Switches and Microphone ('02-'03 USA)	133
Automatic Lighting Control Unit	63
Brake Light Failure Sensor	8
Climate Control Unit	103
Combination Light Switch	116
Cruise Control Unit	64
Dash Lights Brightness Controller	9
Data Link Connector (DLC)	70
Daytime Running Lights Control Unit	65
Door Multiplex Control Unit	87
Driver's Multiplex Control Unit	114
Driver's Power Seat Adjustment Switch ...	44
Driver's Seat Heater Switch	10
Fan Control Unit	52
Fog Light Switch	125
Front Passenger's Power Seat Switch	102
Front Passenger's Window Switch	11
Front Passenger's Seat Heater Switch	12
Gauge Assembly	113
Hazard Warning Switch	124
Ignition Control Module (ICM)	100
Immobilizer Control Unit	98
Keyless Receiver Unit ('96-'01)	35
Keyless Receiver Unit ('02-'04)	132
Left Rear Window Switch	13
Moonroof Close Relay	14
Moonroof Control Unit	45
Moonroof Open Relay	15
Navigation Display Unit	88

Connector	View
Navigation Unit	104
Occupant Position Detection System (OPDS) Unit	126
OnStar Buttons and Microphone/ Homelink Unit ('04)	143
OnStar System Control Unit ('02-'04 USA)	137
OnStar System Interface Unit ('02-'04 USA)	138
OnStar System Radio Frequency Modulator Unit ('02-'04 USA)	136
Passenger's Multiplex Control Unit	112
PGM-FI Main Relay	99
Power Mirror Control Unit	105
Power Mirror Switch	46
Power Seat Control Unit	110
Power Window Control Unit ('02-'04)	134
Powertrain Control Module (PCM)	115
Rear Window Defogger Switch	16
Right Rear Window Switch	17
Spark Plug Voltage Detection Module	101
SRS Unit	75
Steering Column Control Unit	109
Steering Column Switch	120
Stereo Amplifier	106
TCS Control Unit	107
TCS Switch	18
Trailer Lighting Connector	19
Windshield Wiper/Washer Switch	119
VSA Converter	128
VSA Modulator Control Unit	127
VSA Switch	18
Yaw Rate/Lateral Acceleration Sensor	130
XM Satellite Radio Unit ('04)	141

