

Land Rover Discovery 2017 fuse box diagram

Engine compartment fuse box

Fuse number	Ampere rating [A]	Circuit protected
1	—	—
2	—	—
3	—	—
4	—	—
5	—	—
6	—	—
7	—	—
8	—	—
9	25	Rear window washer
10	15	Front fog lights
11	15	Horn
12	30	Headlight washer pump

13	30	Headlight washer pump
14	25	Windshield washer
15	15	Supercharger cooling
16	10	Engine emissions (diesel only). Engine cooling fan (gasoline only)
17	5	Engine management system
18	20	Engine management system (gasoline only)
19	15	Engine management system
20	25	Engine management system
21	20	Engine management system
22	10	Engine management system (diesel only). Engine cooling fan (gasoline only)
23	10	Engine management system
24	15	Engine management system
25	10	Engine management system (diesel only)
26	—	—
27	—	—

28	—	—
29	5	Engine management system. Starter motor. Electrical power management
30	—	—
31	10	Steering wheel module
32	5	Left-side Adaptive Front lighting System (AFS)
33	5	Transfer box control module
34	5	Right-side AFS
35	5	Headlight levelling
36	—	—
37	—	—
38	—	—
39	—	—
40	15	Transmission. Terrain response switch. Gear selector
41	—	—
42	—	—

43	—	—
44	—	—
45	—	—
46	—	—
47	—	—
48	—	—
49	—	—
50	—	—
51	10	Engine cooling
52	—	—
53	—	—
54	—	—
55	—	—
56	—	—
57	—	—

58	—	—
59	—	—
60	—	—

Passenger compartment fuse box

Fuse number	Ampere rating [A]	Circuit protected
1	20	Front cigar lighter
2	20	Upper glovebox
3	20	Rear accessory socket
4	10	Heated wiper park position
5	—	—
6	—	—
7	—	—
8	—	—
9	—	—
10	20	Panoramic roof

11	25	Left-side rear door switches
12	20	Panoramic roof
13	5	Terrain response
14	—	—
15	—	—
16	—	—
17	—	—
18	30	Passenger seat switches
19	—	—
20	—	—
21	10	Cool box
22	—	—
23	20	Passenger seat
24	25	Driver's door switches. Driver's door soft-close
25	15	Dynamic Stability Control (DSC)

26	10	Passenger seat switches
27	5	Tire Pressure Monitoring System (TPMS). Front overhead console
28	20	Driver's seat
29	25	Right-side rear door switches
30	20	Panoramic roof
31	—	—
32	—	—
33	30	Driver's seat
34	25	Passenger door switches. Passenger door soft-close
35	5	Brake pedal switch
36	—	—
37	—	—
38	—	—
39	5	Battery back-up sounder
40	—	—

41	5	Telematics
42	—	—
43	10	Heated steering wheel
44	10	Steering wheel module
45	5	Touch screen buttons. Rear climate control
46	15	Heating and ventilation
47	—	—
48	—	—
49	5	Vehicle immobilizer
50	—	—
51	—	—
52	—	—
53	—	—
54	5	Diagnostic socket
55	10	Not used

56	10	Heating and ventilation
----	----	-------------------------

Loadspace fuse box

Fuse number	Ampere rating [A]	Circuit protected
1	15	Third row seat switches
2	—	—
3	25	Third row heated seats
4	—	—
5	15	Rear console
6	—	—
7	—	—
8	—	—
9	15	Driver and passenger seat switches
10	25	Driver's and front passenger heated seats
11	5	Third row seats
12	25	Heated rear seats

13	15	Rear seats. Rear seat switches. Flashlight
14	20	Rear wiper
15	15	Trailer socket
16	—	—
17	20	Middle accessory power socket
18	20	Loadspace accessory power socket
19	20	Rear accessory socket
20	30	Heated rear window
21	—	—
22	15	Integrated control panel. Touch screen
23	10	Instrument panel
24	20	Loadspace accessory power socket
25	—	—
26	—	—
27	10	Parking aid. Rear-view mirror. Cameras. Blind spot assist

28	10	Head-Up Display (HUD)
29	5	Adaptive cruise control
30	10	Diesel Exhaust Fluid (DEF)
31	—	—
32	—	—
33	—	—
34	—	—
35	15	Rear console
36	5	Rear differential
37	20	Driver's seat
38	—	—
39	30	Deployable side steps
40	—	—
41	5	Rear console
42	—	—

43	—	—
44	15	Not used
45	15	Engine management system. Fuel system
46	30	Fuel system
47	15	Fuel system
48	20	Passive locking
49	10	Gesture tailgate
50	15	Entertainment and information systems
51	15	Entertainment and information systems
52	10	Portable media
53	10	Portable media
54	15	Trailer socket
55	15	Suspension system
56	10	Suspension system
57	5	Passive locking

58	20	Front passenger seat
59	5	Electronic air suspension system
60	30	DEF