

2005 Toyota RAV4
2005 ACCESSORIES & EQUIPMENT Power Mirror Control System - RAV4


2005 ACCESSORIES & EQUIPMENT

Power Mirror Control System - RAV4

LOCATION

2005 Toyota RAV4

2005 ACCESSORIES & EQUIPMENT Power Mirror Control System - RAV4

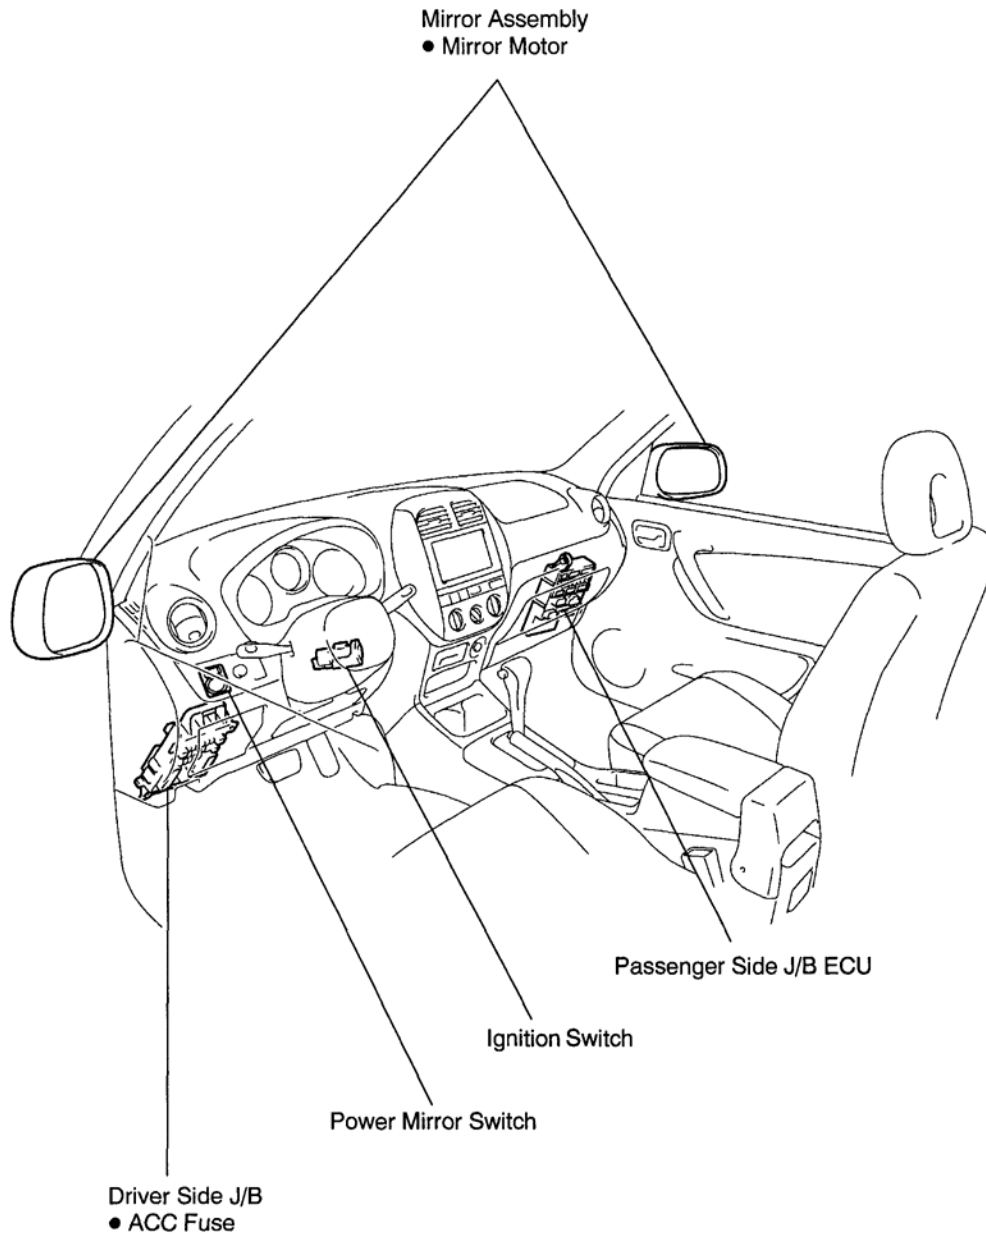

P

G02640986

Fig. 1: Identifying Location Of Power Mirror Control System Components
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

INSPECTION

2005 Toyota RAV4


2005 ACCESSORIES & EQUIPMENT Power Mirror Control System - RAV4

a. INSPECT LEFT SIDE MIRROR SWITCH CONTINUITY

SWITCH POSITION SPECIFIED CONDITION

Switch Position	Tester Connection	Specified Condition
OFF		No continuity
UP	4 - 8 6 - 7	Continuity
DOWN	4 - 7 6 - 8	Continuity
LEFT	5 - 8 6 - 7	Continuity
RIGHT	5 - 7 6 - 8	Continuity

If the continuity is not as specified, replace the switch.

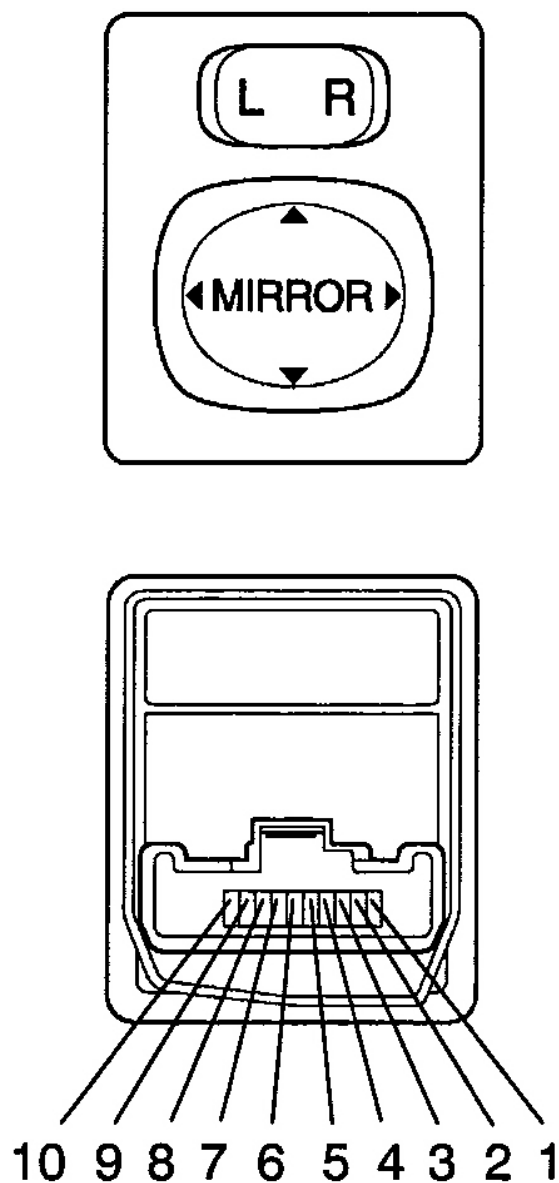

Y

G02640987

Fig. 2: Inspecting Left Side Mirror Switch Continuity
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

b. INSPECT RIGHT SIDE MIRROR SWITCH CONTINUITY

2005 Toyota RAV4

2005 ACCESSORIES & EQUIPMENT Power Mirror Control System - RAV4


SWITCH POSITION SPECIFIED CONDITION

Switch Position	Tester Connection	Specified Condition
OFF		No Continuity
UP	3 - 8 6 - 7	Continuity
DOWN	3 - 7 6 - 8	Continuity
LEFT	2 - 8 6 - 7	Continuity
RIGHT	2 - 7 6 - 8	Continuity

If the continuity is not as specified, replace the switch.

c. INSPECT MIRROR MOTOR OPERATION

- Connect the positive (+) lead from the battery to terminal 3 and the negative (-) lead to terminal 1. Check that the mirror angles outward, as shown.

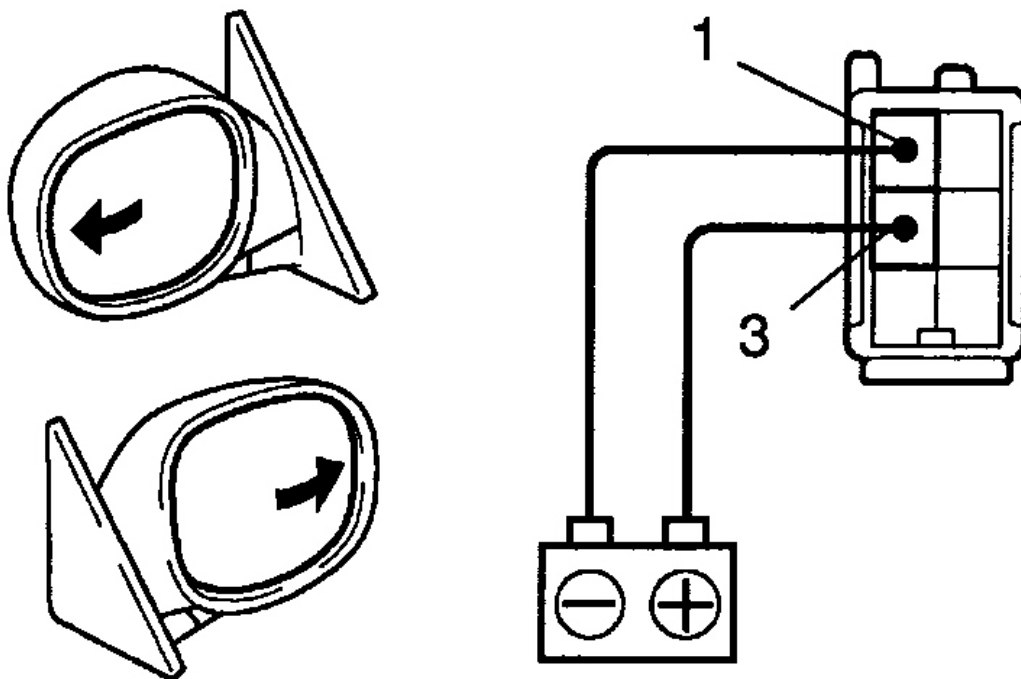


G02640988

Fig. 3: Connecting Positive (+) Lead From Battery To Terminal 3 And Negative (-) Lead To

Terminal 1

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Reverse the polarity. Check if the mirror angles inward, as shown.

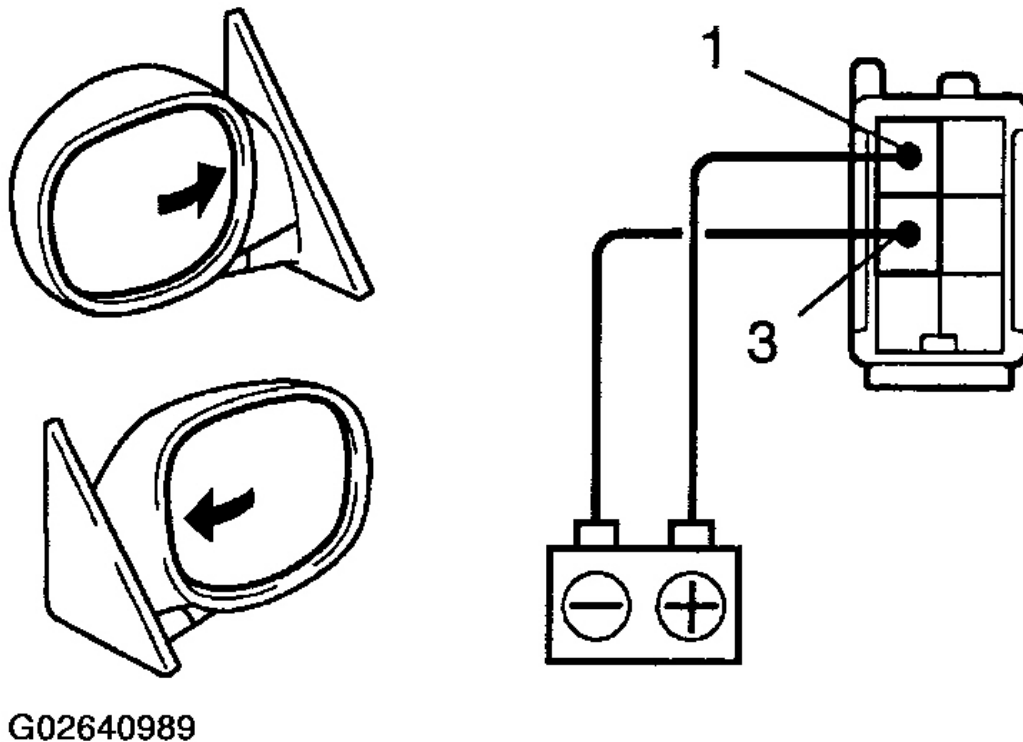

G02640989

Fig. 4: Connecting Terminal 1 And 3

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Connect the positive (+) lead from the battery to terminal 3 and the negative (-) lead to terminal 5. Check if the mirror angles downward, as shown.

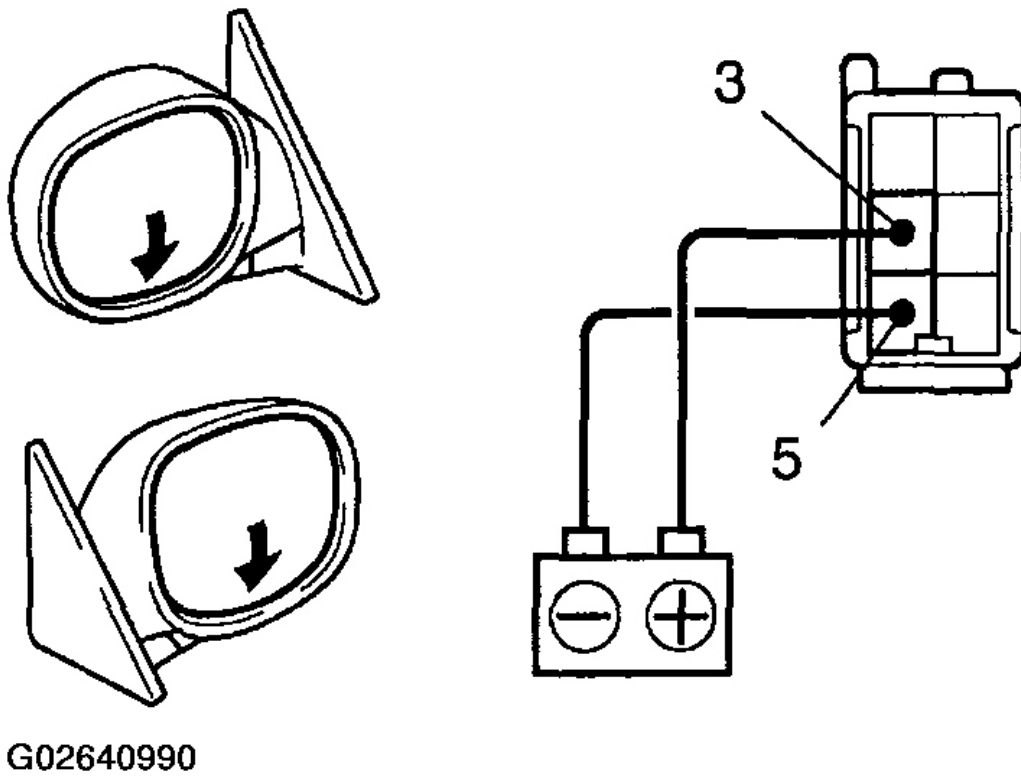


Fig. 5: Connecting Positive (+) Lead From Battery To Terminal 3 And Negative (-) Lead To Terminal 5

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Reverse the polarity, and check that the mirror angles upward, as shown.

If operation is not as specified, replace the mirror assembly.

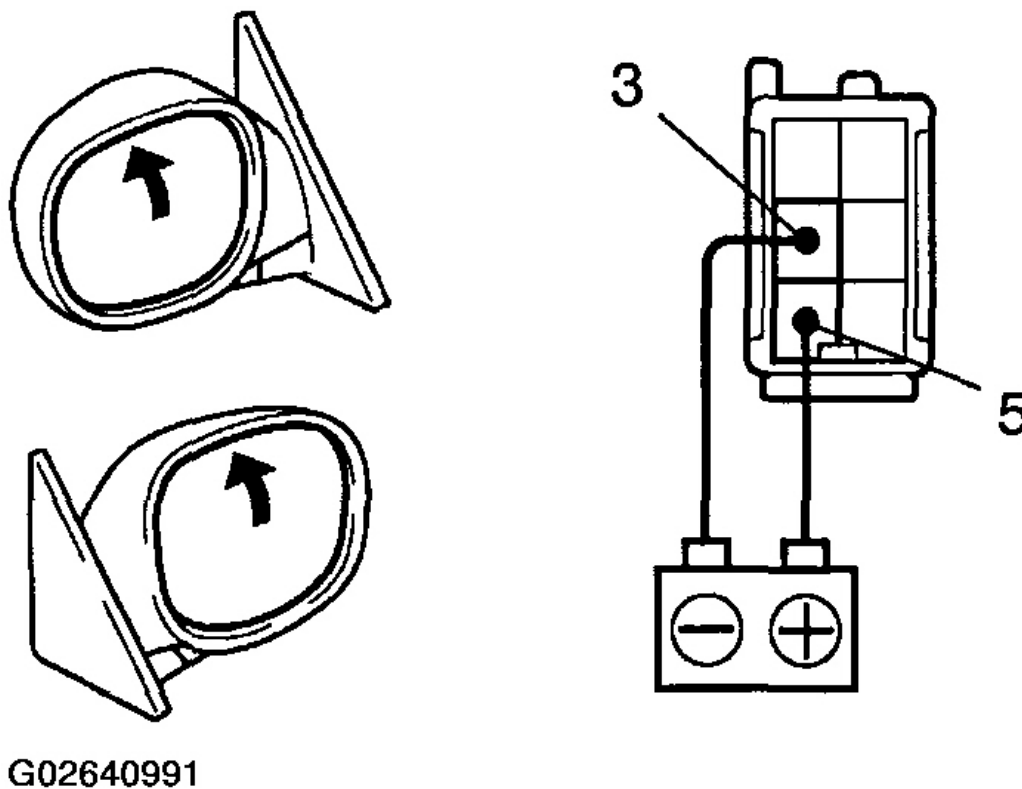


Fig. 6: Connecting Terminal 3 And 5

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.