


Chrysler Crossfire 2007 fuse box diagram

Engine Compartment Fuses

The engine compartment fuses are located under the hood on the driver's side, between the brake master cylinder and the left front fender.

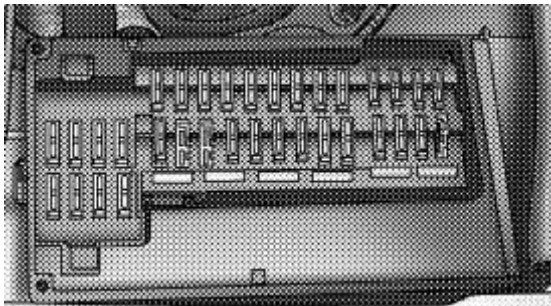

Chrysler Crossfire – fuse box – engine

compartment

Cavity	Fuse	Circuits
1	5	Garage Door Opening Signal, Tire Pressure Control and Seat Heater
2	5	Control Unit Airbag
3	5	Indicator, Safety Restraint System and Indicator, Passenger Airbag Off
4	7,5	Heated Mirror
5	15	Radio (Coupe)
	20	Roof Control Module (Roadster)
6	40	Roof Hydraulic Unit (Roadster)
	5	Exterior Mirror Adjustment, Left And Right (Coupe)


7	5	Occupation Classification Module (Right Seat)
8	15	Radio
9	10	Control Unit Airbag
10	5	Speed Control
11	15	Ignition Coil 6 Cyl.
12	10	Washer Liquid Heater, Washer Nozzle Heater
13		Roof Light, Horn, Anti-Theft Alarm, Trunk Light and Tire Pressure Control
14	10	Diagnostic Socket
15	5	Climate Control, Auxiliary Water Pump
16	30	Spoiler Motor
17	40	Electronic Stability Program
18	40	Electronic Stability Program
19	40	Power Window, Front
20	30	Wiper Motor
21	30	Seat Adjustment Right Side

22	30	Seat Adjustment Left Side
23	15	Sound Booster (Amplifier)
24	30	Seat Heater
25	20	Pneumatic Control Unit, Rear Window Defroster
26	20	Central Locking
30		Spare (Coupe)
	15	Radio (Roadster
31	15	Cigar Lighter, Glove Compartment Light
32	15	Wiper, Washer Pump, Headlight Flasher
33	5	Control Unit
34		Spare (Coupe)
	30	Climate Control (Roadster)
35	15	Radio Frequency Remote Control, Hazard Warning Flasher, Instrument Cluster, Climate Control
36	30	Climate Control (Coupe)
	5	Exterior Mirror Adjustment (Roadster)

37	7,5	Circulating Air, Instrument Cluster, Radio Frequency Remote Control, Climate Control, Central Control Unit
----	-----	--

Relay Control Module Fuses

The relay control module fuses are located in the Control Module Box next to the battery in the engine compartment.

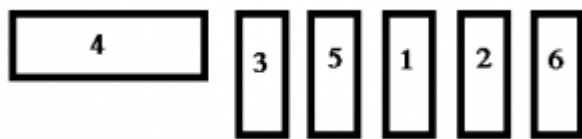


Chrysler Corssfire – fuse box – relay

control module fuse

Cavity	Fuse	Circuits
1	15	Traction System
2	15	Engine Control 2
3	15	Engine Control 1
4	40	Air Pump
5	15	Fuel Pump
6	15	Horn

Interior Fuses

The fuse access door is located on the end of the instrument panel on the driver's side behind the trim panel cover.

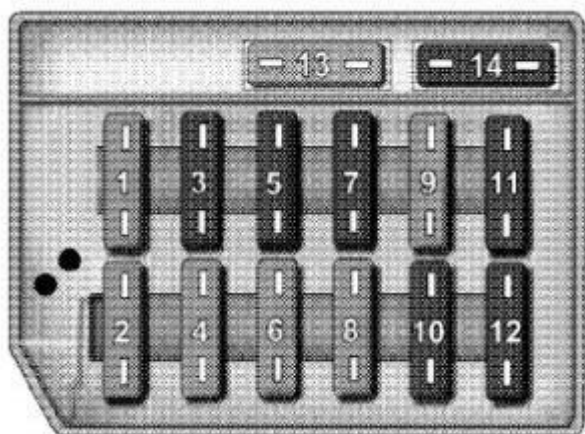

Chrysler Crossfire – fuse box – interior

fuses

Cavity	Fuse	Circuits
1	—	Not Assigned
2	15	Brake Lamp/Speed Control
3	7.5	Right High Beam, High Beam Indicator Light
4	15	Reverse/Turn signal Light
5	7.5	Left High Beam
6	15	Right Low Beam
7	7.5	Right Parking/Tail Light Side Marker
8	15	Left Low Beam
9	15	Fog Light
10	7.5	Left Parking/Tail Light Side Marker

11	7.5	License Plate/Instrument Cluster Lighting/Symbol Lighting
12	—	Not Used – Spare Fuse
13	—	Not Used – Spare Fuse
14	—	Not Used – Spare Fuse