
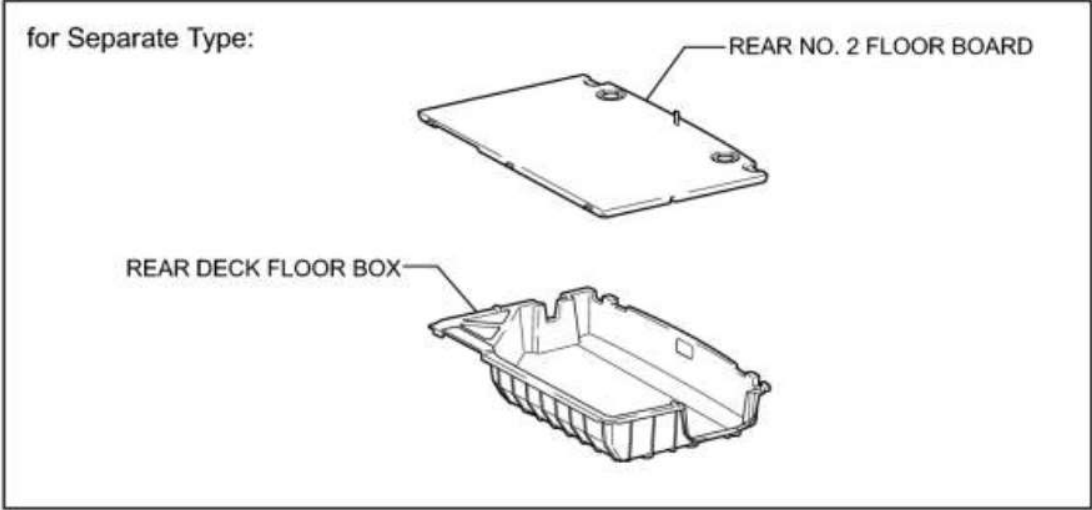



COMPONENTS

ILLUSTRATION

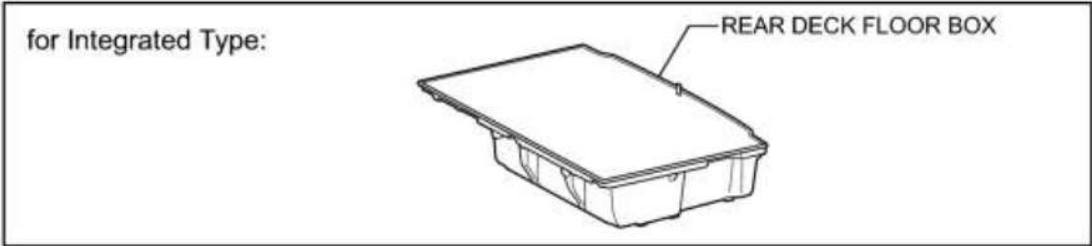

P

ILLUSTRATION

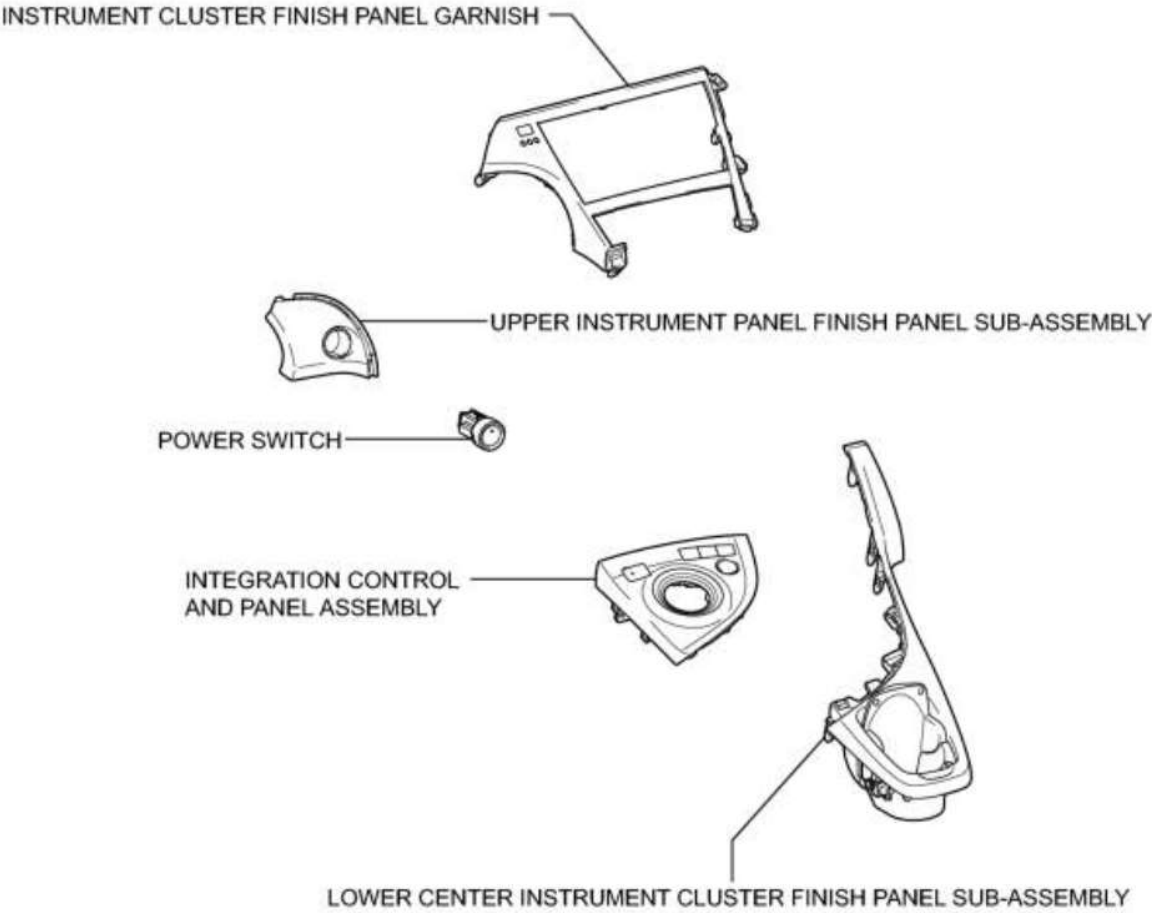


REMOVAL

1. REMOVE REAR NO. 2 FLOOR BOARD (for Separate Type) INFO
2. REMOVE REAR DECK FLOOR BOX INFO
3. REMOVE REAR NO. 3 FLOOR BOARD INFO
4. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected INFO.

5. REMOVE INTEGRATION CONTROL AND PANEL ASSEMBLY INFO
6. REMOVE LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY INFO
7. REMOVE INSTRUMENT CLUSTER FINISH PANEL GARNISH INFO
8. REMOVE UPPER INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY INFO
9. REMOVE POWER SWITCH

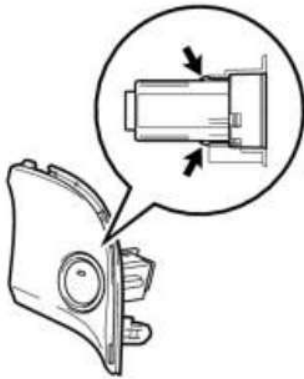


(a) Detach the 2 claws and remove the power switch.

INSPECTION

1. INSPECT POWER SWITCH

(a) Measure the resistance according to the value(s) in the table below.

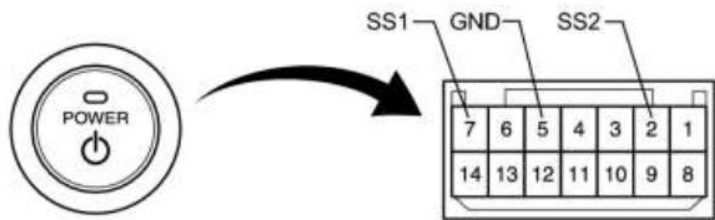


N

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
7 (SS1) - 5 (GND)	Pushed	Below 1 Ω
2 (SS2) - 5 (GND)	Pushed	Below 1 Ω
7 (SS1) - 5 (GND)	Not pushed	10 kΩ or higher
2 (SS2) - 5 (GND)	Not pushed	10 kΩ or higher

If the result is not as specified, replace the power switch.

(b) Apply battery voltage between the terminals of the switch, and check the illumination condition of the power switch.

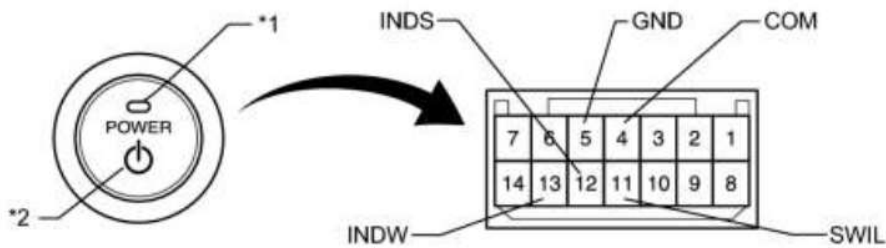

N

Text in Illustration

*1	Indicator Light	*2	Power Switch Illumination
----	-----------------	----	---------------------------


Standard Resistance:

Measurement Condition	Specified Condition
Battery positive (+) →Terminal 11 (SWIL)	Illuminates
Battery negative (-) →Terminal 4 (COM) or 5 (GND)	(Power Switch Illumination)
Battery positive (+) →Terminal 12 (INDS)	Illuminates
Battery negative (-) →Terminal 4 (COM) or 5 (GND)	(Indicator Light)
Battery positive (+) →Terminal 13 (INDW)	Illuminates
Battery negative (-) →Terminal 4 (COM) or 5 (GND)	(Indicator Light)

If the result is not as specified, replace the power switch.

INSTALLATION

1. INSTALL POWER SWITCH

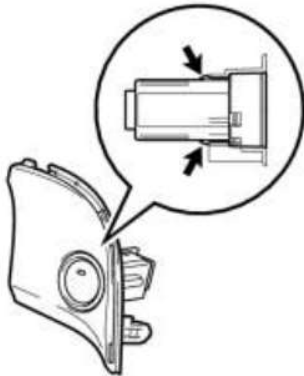

(a) Attach the 2 claws to install the power switch.

2. INSTALL UPPER INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY_ [INFO](#)

3. INSTALL INSTRUMENT CLUSTER FINISH PANEL GARNISH_ [INFO](#)

4. INSTALL LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY_ [INFO](#)

5. INSTALL INTEGRATION CONTROL AND PANEL ASSEMBLY_ [INFO](#)

6. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected [INFO](#).

7. INSTALL REAR NO. 3 FLOOR BOARD_ [INFO](#)

8. INSTALL REAR DECK FLOOR BOX_ [INFO](#)

9. INSTALL REAR NO. 2 FLOOR BOARD (for Separate Type)_ [INFO](#)