

HANDBOOK



PEUGEOT **ION**





On-line handbook

Select one of the following means of access to view your handbook on-line...

Find your handbook on the PEUGEOT website, under "MyPEUGEOT".

This personal space offers advice and other useful information for the care and maintenance of your vehicle.

Scan this code for direct access to your handbook.



If the "MyPEUGEOT" function is not available on the PEUGEOT public website for your country, you can find your handbook at the following address:

<http://public.servicebox.peugeot.com/ddb/>

Select:

- > the language,
- > the vehicle, its body style,
- > the print edition of your handbook appropriate for the date of registration of your vehicle.

Referring to the handbook on-line also gives you access to the latest information available, easily identified by the bookmark, associated with this symbol:



WELCOME

Your vehicle is fitted with only some of the equipment described in this document, depending on its trim level, version and the specification for the country in which it was sold.



We draw your attention to the following point:

The fitting of electrical equipment or accessories which are not recommended by PEUGEOT may result in a failure of your vehicle's electronic system. Contact a PEUGEOT dealer to be shown the recommended equipment and accessories.

Thank you for choosing an ION, a symbol of confidence, passion and inspiration.

ION is the first 100% electric vehicle for PEUGEOT, 0% pollutant emissions when driving and particularly quiet.

This handbook has been designed to enable you to make the most of your ION in all circumstances.

Key



Warning:

this symbol marks warnings which it is essential to observe for your own safety, for the safety of others or to avoid any risk of damaging your vehicle.



Protection of the environment:

this symbol accompanies advice relating to protection of the environment.



Information:

this symbol draws your attention to additional information for better use of your vehicle.



Page reference:

this symbol invites you to refer to the pages which provide details of the function.

Overview	Access	2	Driving	4
	Remote control key	24	Driving recommendations	46
	Doors	27	Starting - stopping the vehicle	47
	Boot	28	Parking brake	48
	Electric windows	29	Drive selector	49
	Charging flaps	30		
Eco-driving				
Monitoring	Comfort	3	Visibility	5
Instrument panel	Front seats	31	Lighting controls	51
Indicator and warning lamps	Rear seats	33	Automatic illumination of headlamps	53
Operation indicator lamps	Mirrors	35	Headlamp adjustment	53
Main battery state of charge indicator	Interior fittings	37	Wiper control	54
Energy consumption / generation indicator	Ventilation	40	Courtesy lamp	55
Distance recorder	Heating	42		
Trip distance recorder	Air conditioning	42		
Lighting dimmer	Front demist - defrost	45		
Service indicator	Rear screen demist - defrost	45		
Range indicator				

Safety

6

Direction indicators	56
Automatic operation of brake lamps	56
Hazard warning lamps	56
Horn	57
Emergency or assistance call	57
Under-inflation detection	58
Braking assistance systems	62
Trajectory control systems	64
Front seat belts	65
Airbags	68

Practical information

8

Charging the main battery	85
Ancillaries battery	93
Temporary puncture repair kit	97
Changing a wheel	101
Snow chains	105
Changing a bulb	106
Changing a fuse	114
Changing a wiper blade	119
Towing the vehicle	119
Precautions for washing	120
Accessories	120

Technical data

10

Motor and main battery	129
Weights	130
Dimensions	131
Identification markings	132

Child safety

7

Child seats	72
Deactivating the passenger's front airbag	75
ISOFIX child seats	81
Child lock	84

Checks

9

Bonnet	123
Front compartment	124
Rear compartment	125
Checking levels	126
Checks	128

Audio equipment and telematics

Emergency or assistance	133
Audio system / Bluetooth	135

Visual search



Alphabetical index




Exterior

Fast charging flap

Available according to equipment, this flap should be used to recharge your vehicle from a special fast charging station.

▶ 91

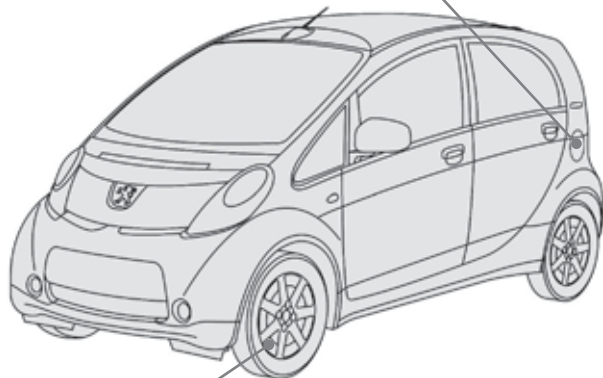

ASR and ESP systems


These are associated systems that assure the directional stability of the vehicle, within the limits of the laws of physics.

▶ 64

Normal charging flap

This flap should be used to recharge your vehicle from a domestic power point.

▶ 85

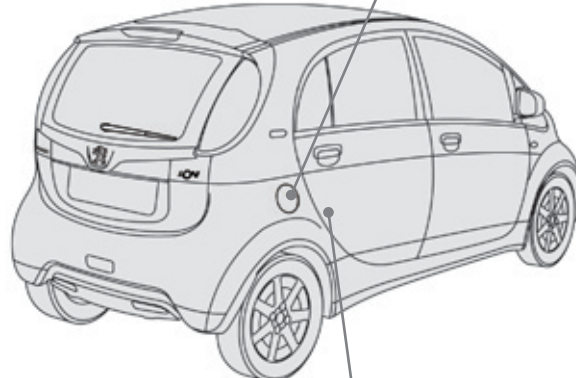

Temporary puncture repair kit

This kit is a complete system consisting of a compressor and a sealant cartridge, to allow the temporary repair of a tyre.

▶ 97

Interior

Charging flap interior opening controls

Normal charging flap.

Fast charging flap (according to equipment).

▶ 30

Drive selector

Four-position drive selector: **P**, **R**, **N** and **D**.

▶ 49

Audio system


This system benefits from the latest technology: MP3 compatible audio system, USB player, Bluetooth hands-free system, ...

▶ 135

Air conditioning


After setting the desired level of comfort, the system controls this level according to the exterior climatic conditions.

▶ 42

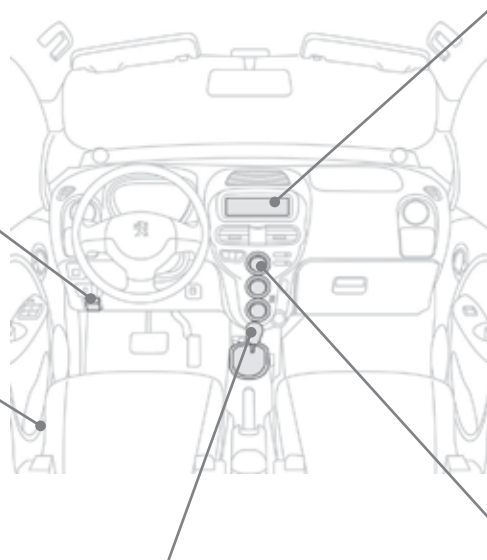


Instruments and controls

1. Lighting and direction indicator stalk
2. Instrument panel.
3. Driver's airbag.
Horn.
4. USB port.
5. Opening control for the fast charging flap (vehicle left hand side).
6. Electric window switches and switch for deactivating the the front and rear passenger electric window controls.
7. Fusebox.
8. Opening control for the normal charging flap (vehicle right hand side).
9. Headlamp height adjustment.
ASR/ESP deactivation switch.
10. Door mirror controls.
11. Cup holder.
12. Side vents.
13. Window demisting vent.

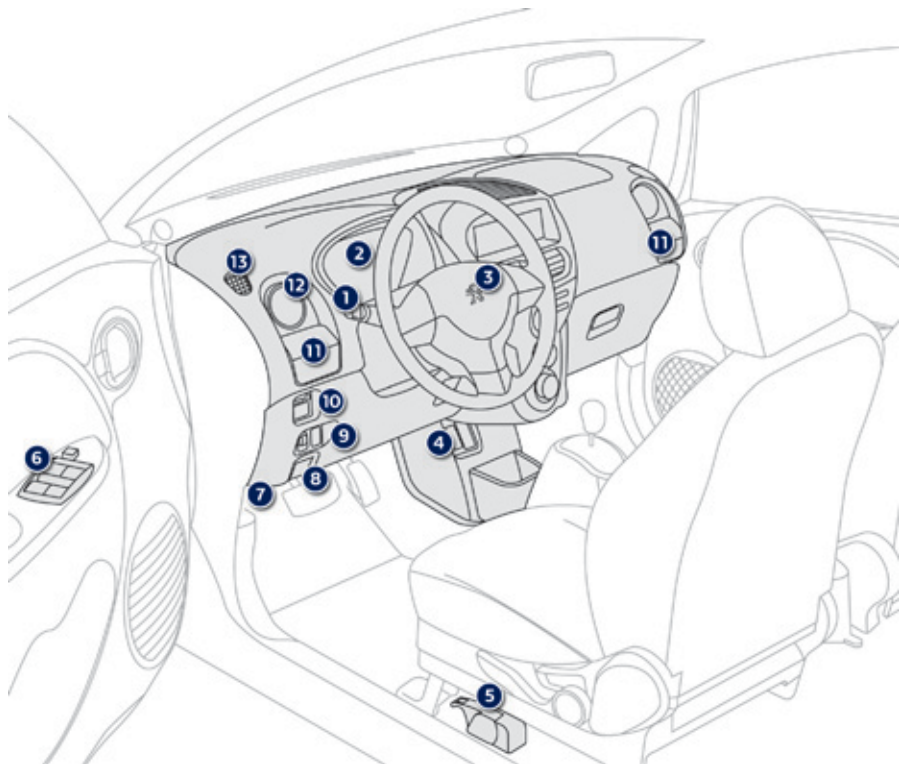

Instruments and controls

1. Steering lock and ignition switch.
2. Wiper stalk.
3. Windscreen demisting vents.
4. Glove box.
Passenger's airbag deactivation.
5. Bonnet release lever.
6. Parking brake.
7. Drive selector.
8. 12 V accessory socket.
9. Heating / air conditioning controls.
10. Emergency or assistance call.
11. Hazard warning switch.
12. Centre vents.
13. Audio system.

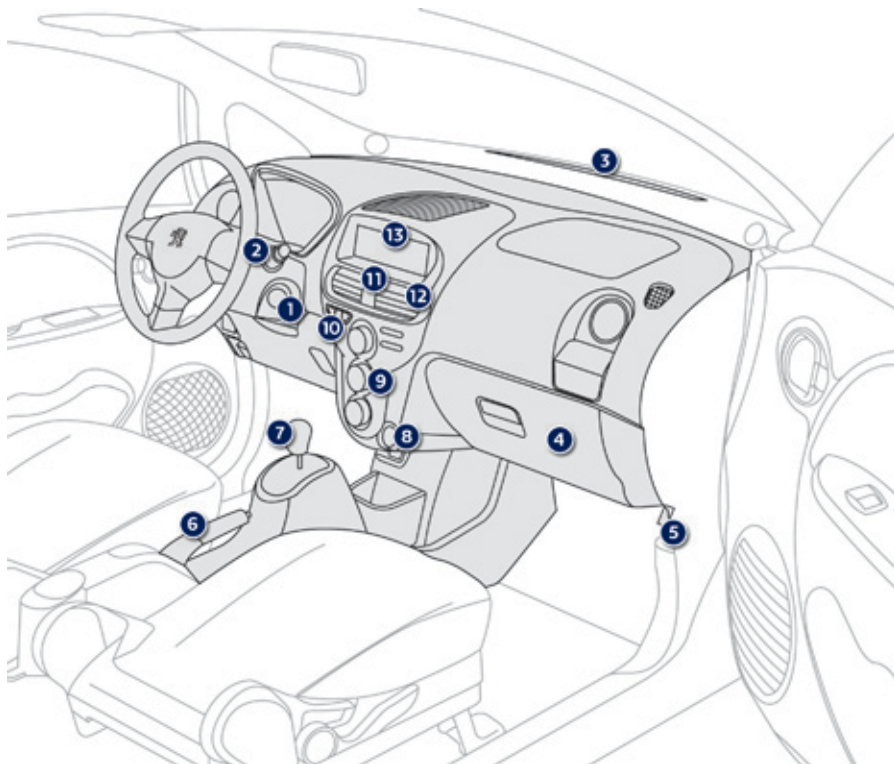

For more economical driving, and increased range

Practical advice for everyday use to optimise the range of your vehicle by conserving battery power.

Adopt a smooth driving style

The electrical consumption of your vehicle depends greatly on your journey, your driving style and your speed.

In all cases, adopt a smooth driving style.



Stay in the "Eco" zone indicated in the energy consumption / generation meter: depress the accelerator pedal progressively, without sudden movement, and if the conditions permit, drive at steady and moderate speed.

Recover energy

Anticipating the driving conditions allows you to recover energy and increase the range of your vehicle.



Use the "Charge" zone of the energy consumption / generation meter whenever possible: anticipate the traffic slowing down and if the conditions permit, use deceleration rather than the brakes.

Control the use of your electrical equipment

The heating and air conditioning systems operate on energy from the main battery. Excessive use of these systems greatly reduces the range of your vehicle. Remember to switch them off once the desired level of comfort is reached and check their settings every time you set off.

Control also the use of demisting / defrosting and the heated seat.

Limit the causes of excess consumption


As with any vehicle, limit the loads carried in the vehicle and reduce wind resistance (windows open above 30 mph (50 km/h), roof bars, roof box, ...).

Observe the recommendations on maintenance

Check the tyre pressures regularly and follow the schedule for routine servicing recommended by PEUGEOT.


Instrument panel

Panel bringing together the various gauges and indicators for the operation of the vehicle.

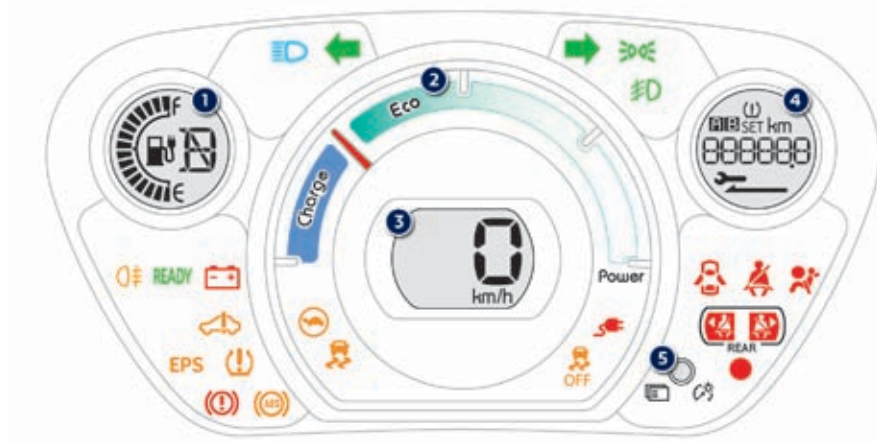

Gauges and indicators

1. **State of charge indicator for the main battery.**
Drive selector position indicator.
2. **Energy consumption / generation indicator.**
3. **Speedometer**
4. **Screen.**
5. **Screen control button.**
Display the various functions in turn.
Reset the function selected (trip recorder or service indicator).
Adjust the level of instrument lighting.
For more information, refer to the corresponding section.

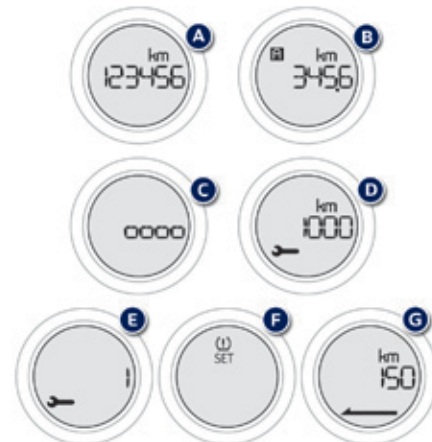

Screen

- A. **Total distance recorder.**
- B. **Trip distance recorder (Trip A or B).**
- C. **Instrument panel lighting dimmer.**
- D. **Distance remaining to the next service.**
- E. **Time remaining to the next service.**
- F. **Under-inflation detection.**
- G. **Remaining range.**

Indicator and warning lamps

Visual indicators informing the driver that a system is in operation, is deactivated or has a fault.

When the ignition is switched on

Certain warning lamps come on for a few seconds when the vehicle's ignition is switched on.

These same warning lamps go off after a few seconds.

If you notice one of these warning lamps remaining on, refer to the information on the warning lamp in question.

Associated warnings

The illumination of certain warning lamps may be accompanied by an audible signal.

The warning lamps may come on continuously (fixed) or flash.



Certain warning lamps may come on in one of two modes. Only by relating the type of lighting to the operating status of the vehicle can it be ascertained whether the situation is normal or whether a fault has occurred.

Operation indicator lamps

If one of the following indicator lamps comes on in the instrument panel, this confirms that the corresponding system has come into operation.

Warning / indicator lamp	State	Cause	Action / Observations
 Left-hand direction indicator	Flashing with audible signal.	The lighting stalk is pushed down.	
 Right-hand direction indicator	Flashing with audible signal.	The lighting stalk is pushed up.	
 Hazard warning lamps	Flashing with audible signal.	The hazard warning lamps switch, located on the dashboard, has been operated.	The left-hand and right-hand direction indicators and their associated indicator lamps flash simultaneously.
 Sidelamps and/or dipped beam headlamps	On fixed.	The sidelamps and/or dipped beam headlamps are on.	
 Main beam headlamps	On fixed.	The lighting stalk is pulled towards you.	Pull the stalk to return to dipped beam headlamps.
 Front foglamps	On fixed.	The front foglamps are switched on.	Turn the ring on the stalk rearwards twice to switch off the front foglamps.
 Rear foglamp	On fixed.	The rear foglamp is switched on.	Turn the ring on the stalk rearwards to switch off the rear foglamp.

Warning / indicator lamp		State	Cause	Action / Observations
	Ready (ready to move off)	On fixed, accompanied by an audible signal when it comes on.	The vehicle is ready to move off and you can press the accelerator.	The illumination period corresponds to the powering-up of the vehicle.
	Parking brake	On fixed.	The parking brake is applied or not properly released.	Release the parking brake to switch off the warning lamp, keeping your foot on the brake pedal. Observe the safety recommendations. For further information on the parking brake, refer to the "Driving" section.
	Main battery charge (normal or fast)	On fixed.	The main battery is on charge.	On completion of the charge, the lamp goes off.
		Flashing.	The charging cable is connected to the vehicle but the main battery is not yet charging.	Check the connection of the charging cable.

Deactivation indicator lamps

If one of the following indicator lamps comes on, this confirms that the corresponding system has been switched off intentionally. This may be accompanied by an audible signal.

Warning / indicator lamp		State	Cause	Action / Observations
	Passenger's airbag system	On fixed, on the centre console.	The control switch, located in the glove box, is set to the OFF position. The passenger's front airbag is deactivated.	Set the control switch to the ON position to activate the passenger's front airbag. In this case, do not fit a child seat in the rear-facing position. Remember to check the state of the control switch before starting your vehicle.
	ESP/ASR	On fixed.	The ESP/ASR off switch, located at the bottom of the dashboard (driver's side) is activated. The ESP/ASR is deactivated. ESP: electronic stability programme ASR: anti-slip regulation.	Press the button to activate the ESP/ASR. The ESP/ASR system is automatically activated on starting the vehicle.

Warning lamps

When the engine is running or the vehicle is being driven, illumination of one of the following warning lamps indicates a fault which requires action on the part of the driver.

Any fault resulting in the illumination of a warning lamp must be investigated further.

If you encounter any problems, do not hesitate to contact a PEUGEOT dealer or a qualified workshop.

Warning / indicator lamp		State	Cause	Action / Observations
	Braking	On fixed.	The braking system fluid level has dropped significantly. or Braking assistance system fault.	You must stop as soon as it is safe to do so. Top up with brake fluid listed by PEUGEOT. If the problem persists, have the system checked by a PEUGEOT dealer or qualified workshop.
+ 		On fixed, associated with the ABS warning lamp.	The electronic brake force distribution (EBFD) system has a fault.	You must stop as soon as it is safe to do so. Have it checked by a PEUGEOT dealer or a qualified workshop.
	Anti-lock Braking System (ABS)	On fixed.	The anti-lock braking system has a fault.	The vehicle retains conventional braking. Drive carefully at reduced speed and contact a PEUGEOT dealer or a qualified workshop without delay.

Warning / indicator lamp		State	Cause	Action / Observations
 Electronic stability programme and anti-slip regulation (ESP/ASR)		Flashing.	Activation of the ESP/ASR systems.	The systems optimise traction and improve the directional stability of the vehicle. Adapt your driving and moderate your speed.
		On fixed.	Fault in the ESP/ASR systems.	Have it checked by a PEUGEOT dealer or a qualified workshop.
	 OFF			
 EPS	Electric power steering	On fixed.	The electric power steering has a fault.	Drive carefully at reduced speed. Have it checked by a PEUGEOT dealer or a qualified workshop.
	Ancillaries battery charge	On fixed.	The ancillaries battery charging circuit has a fault (dirty or loose terminals, slack, transformer fault, ...).	The warning lamp should go off when the motor is started. If it does not go off, contact a PEUGEOT dealer or qualified workshop.
	Door(s) open	On fixed, accompanied by an audible signal.	A door or the boot is still open.	Close the door or boot.

Warning / indicator lamp	State	Cause	Action / Observations
	Under-inflation	fixed.	The tyre pressure for one or more wheels is too low. Check the tyre pressures as soon as possible. This check should preferably be done with the tyres cold. You must reinitialise the system after every adjustment of one or more tyre pressures and after replacing one or more wheels. For more information refer to the "Under-inflation detection" section.
		flashing then fixed.	The system has a fault and/or one or more wheels does not have a detected sensor. The tyre pressures are no longer monitored. Have the system checked by a PEUGEOT dealer or a qualified workshop.
	Front seat belt not fastened / unfastened	On fixed, then flashing, accompanied by an audible signal.	The driver and/or the front passenger has not fastened or has unfastened their seat belt. Pull the strap, then insert the tongue in the buckle.
	Right hand rear seat belt unfastened	On fixed.	The right hand rear passenger has unfastened their seat belt.
	Left hand rear seat belt unfastened	On fixed.	The left hand rear passenger has unfastened their seat belt. Pull the strap then insert the tongue in the buckle.

Warning / indicator lamp	State	Cause	Action / Observations
	Airbags	On temporarily.	When you switch on the ignition, this warning lamp comes on for a few seconds, then goes off. If it does not go off, contact a PEUGEOT dealer or a qualified workshop.
		On fixed.	Fault with one of the airbag or seat belt pretensioner systems. Have it checked by a PEUGEOT dealer or a qualified workshop.
	Protection system for the main battery	On fixed.	The state of charge of the main battery is too low or the temperature of the main battery is too low... The power from the motor is limited. Charge the main battery as soon as possible. If the warning lamp does not go off, contact a PEUGEOT dealer or qualified workshop.
	Self-diagnosis system of the main electrical circuit	On fixed.	Fault in the main electrical circuit. You must stop as soon as it is safe to do so. Have it checked by a PEUGEOT dealer or a qualified workshop.

Main battery state of charge indicator

Display



The state of charge of the main battery is displayed continuously in the instrument panel.

Low energy alerts


Four successive alerts indicate that the energy available in the main battery is dropping to a low level:

- 2 bars of the state of charge gauge in the instrument panel, on and flashing: starting to use the reserve.
- The last bar in the state of charge gauge flashing.
- The last bar disappears: display of the range disappears; the heating and air conditioning are switched off.
-  Display of this warning lamp in the instrument panel: progressive reduction in the power available from the motor.

Energy consumption / generation indicator


A system that informs the driver of the level of energy consumption or generation of the main battery.

"Neutral" position

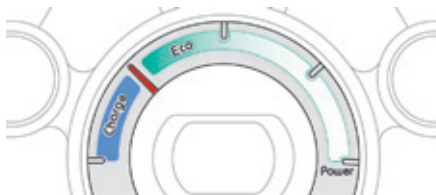


On switching on the ignition, your vehicle neither consumes nor generates energy in its electric traction system: the needle is in the "neutral" position (provided that the heating and air conditioning are off).

Energy consumption

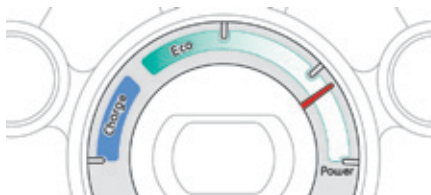


The needle moves to the right in proportion to the energy consumption by the vehicle.

"Eco" zone

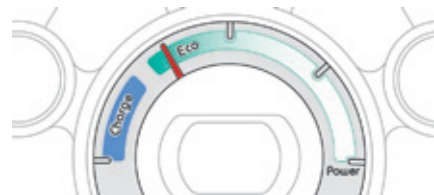

The needle is in this zone when the vehicle is used so as to moderate electric consumption and optimise its range.

"Charge" zone

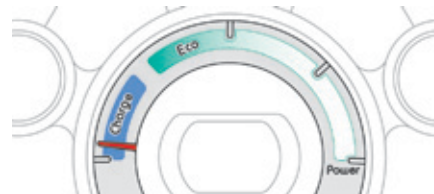

The needle moves to the left in proportion to the level of charge sent to the main battery, during period of deceleration and braking.

Instrument panel screen

When the ignition switch is in the "ON" position, press button **A** repeatedly to display the following information in turn.

Distance recorder




System for measuring the total distance travelled by the vehicle during its life.
Press button **A**.
The total distance appears in the screen.

Trip distance recorder (Trip A or B)




Each of these trip recorders indicates the distance travelled since the last reset.
Press button **A** to display the desired trip.

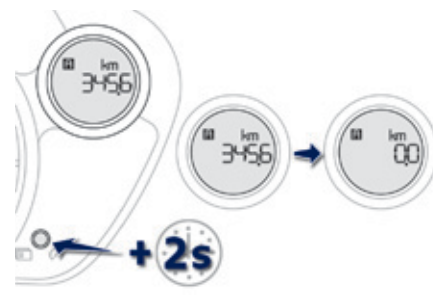

Reset to zero

With the ignition on and either trip **A** or **B** displayed, press the button for more than 2 seconds.

Lighting dimmer

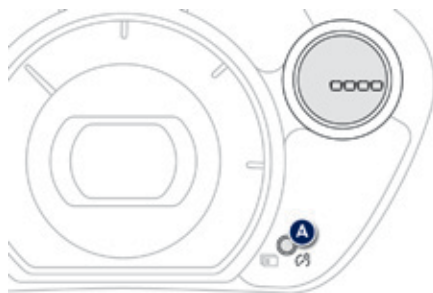

System for manual adjustment of the brightness of the instruments and controls in relation to the exterior brightness.

With the lighting on or off, press button **A** to select the function, then hold down to change the intensity of the lighting of the instruments and controls in "day" or "night" mode.

The intensity of the lighting increases each time button **A** is pressed.

When the lighting reaches the maximum setting, press again to change to the minimum setting.

When the lighting reaches the required intensity, release button **A**.

The setting is saved when you release button **A** and retained when the ignition switch is turned to OFF.

Service indicator

System which informs the driver when the next service is due in accordance with the manufacturer's servicing schedule.


The point at which the next service is due is calculated from the last service indicator zero reset.

This point can be indicated in one of two ways:

- the miles (km) remaining,
- the time remaining to the next service.



When the ignition is switched on, press button **A** several times in succession until the service indicator is displayed in the desired units.

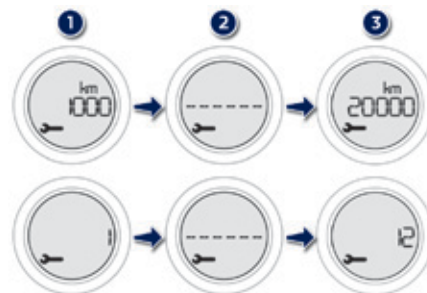

Operation

1. The screen indicates that 620 miles (1000 km) or 1 month remain before the next service.
2. The screen indicates that the date for the service has been exceeded. Every time the ignition is switched on, the service spanner is displayed for a few seconds to remind you that a service should be carried out as soon as possible.
3. Once the service has been carried out, the distance or the number of months to the next service is displayed again.

Resetting the service indicator to zero



After each service, the service indicator should be reset to zero.

The procedure is as follows:

- ☞ Switch off the ignition (switch in the LOCK or ACC position).
- ☞ Press the reset button **A** several times in succession until the service indicator is displayed.
- ☞ Press and hold the reset button for a few seconds until the **spanner flashes**.
- ☞ Press the reset button while the spanner is flashing to change the display from "---" to "CLEAR".

The distance (or time) remaining before the next service is due is displayed.

i The display of "---", indicating that the service date has arrived, comes on automatically after a certain time and distance travelled. The screen then indicates the time remaining before the next service is due.

Under-inflation detection




You have to reinitialise the under-inflation detection system after adjusting one or more tyre pressures or after changing one or more wheels.

Carry out the following procedure to do this.

- ☞ Press button **A** to select the system.
- ☞ Press and hold button **A** for **at least 3 seconds**.

There is an audible signal and the under-inflation warning lamp flashes slowly until the initialisation is complete.

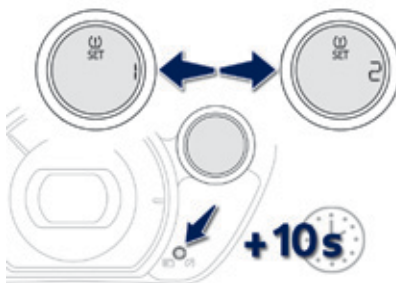


Selecting the set of wheels and tyres fitted

If you have previously registered a second set of wheels and tyres with sensor, you have to select the corresponding set in the instrument panel screen after fitting them.

Carry out the following procedure to do this.

- ☞ Press button **A** to select the system.
- ☞ Press and hold button **A** for **more than 10 seconds**, to change from set of tyres and wheels 1 to set 2 or the other way round.

Range indicator

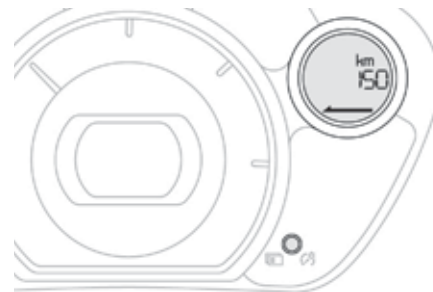

This function gives an estimate of the number of miles (km) that your vehicle can still cover, based on the recent conditions of use (driving style, use of heating, air conditioning...).

i When the remaining range falls to a low level, "---" is displayed in the instrument panel.

Remote control key

System used for centralised locking or unlocking of the vehicle using the door lock barrel or from a distance. It is also used to start the vehicle, as well as providing protection against theft.

Unfolding / Folding the key



- First press button **A** to unfold or fold the key.

Unlocking the vehicle

Unlocking using the remote control



- Press the open padlock to unlock the vehicle.

Unlocking is confirmed by the interior lighting which comes on for approximately 15 seconds and the direction indicators which flash **twice**. Depending on version, the door mirrors unfold at the same time.

Unlocking using the key

- Turn the key to the right in the **driver's door** lock to unlock the vehicle.

Locking is confirmed by the interior lighting, which comes on for about 15 seconds and the direction indicators, which flash **twice**. On the other hand, the door mirrors are not unfolded (see the "door mirrors" section).



The passenger's door lock barrel does not lock or unlock the other doors or the boot.

Locking the vehicle

Normal locking using the remote control



- Press the closed padlock to lock the vehicle.

Locking is confirmed by the direction indicators which come on **once**.

Depending on version, the door mirrors fold at the same time.

Normal locking using the key

- Turn the key to the left in the **driver's door** lock to lock the vehicle.

Locking is confirmed by the direction indicators, which flash **once**.

On the other hand, the door mirrors are not folded (see the "door mirrors" section).



The vehicle will lock itself again automatically after thirty seconds unless a door or the boot is opened. This function avoids inadvertent unlocking.

Anti-theft protection

Electronic immobiliser

The key contains an electronic chip which has a special code. When the ignition is switched on, this code must be recognised to permit starting.

This electronic immobiliser locks the control system a few moments after the ignition is switched off and prevents starting by anyone who does not have the key.

In the event of a malfunction and if your vehicle does not start, contact a PEUGEOT dealer as soon as possible.

Remote control problem

In the event of a remote control malfunction, you can neither unlock nor lock your vehicle.

- ☞ First of all, use the key in the driver's door lock to unlock or lock your vehicle.
- ☞ Then, contact a PEUGEOT dealer to check the operation of the remote control and replace the battery if necessary.

! Lost keys

Visit a PEUGEOT dealer with the vehicle's V5 registration document and your personal identification documents.

The PEUGEOT dealer will be able to retrieve the key code and the transponder code required to order a replacement key.

Remote control

The high frequency remote control is a sensitive system; do not operate it while it is in your pocket as there is a possibility that it may unlock the vehicle, without you being aware of it. Do not repeatedly press the buttons of your remote control out of range and out of sight of your vehicle. You run the risk of stopping it from working.

The remote control does not operate when the key is in the ignition, even when the ignition is switched off.

Locking the vehicle

Driving with the doors locked may make access to the passenger compartment by the emergency services more difficult in an emergency.

As a safety precaution (with children on board), remove the key from the ignition when you leave the vehicle, even for a short time.

Anti-theft protection


Do not make any modifications to the electronic immobiliser system; this could cause malfunctions.

When purchasing a second-hand vehicle

Have the key codes memorised by a PEUGEOT dealer, to ensure that the keys in your possession are the only ones which can start the vehicle.


Doors

Opening

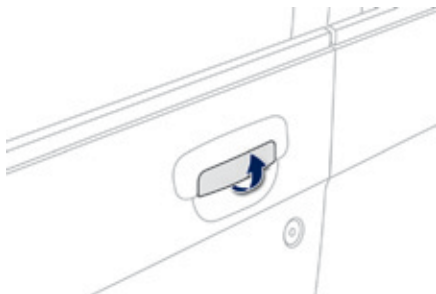

From outside

- After unlocking the vehicle using the remote control or the key, pull the door handle.

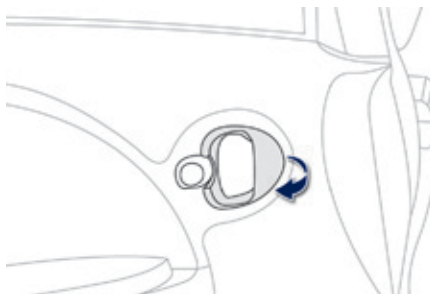


From inside

- Pull the front or rear door control to open the door.
- If the doors are locked:
- opening the driver's door unlocks the other doors,
 - the front passenger or rear doors must then be unlocked manually using the front locking control before they can be opened.

Locking/ unlocking from the inside

2

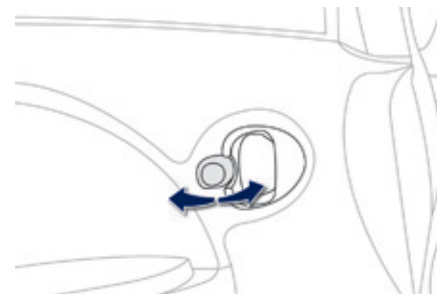

- Press the button on the driver's door towards the front to lock and towards the rear to unlock the vehicle completely.



The buttons on the front and rear passenger doors only lock / unlock the door in question.

Closing



If a door or the boot is not closed correctly, this warning lamp comes on in the instrument panel until the door in question or the boot is closed.

Boot Opening



- ☞ After unlocking the vehicle using the remote control or the key, press the handle **A** and open the tailgate.


Closing



- ☞ Pull the handle **B** downwards to guide the tailgate down,
- ☞ release the handle and press the exterior surface of the tailgate gently to close it.

Electric windows

System which opens or closes a window manually or automatically. It is fitted with a deactivation system to prevent misuse of the rear controls.

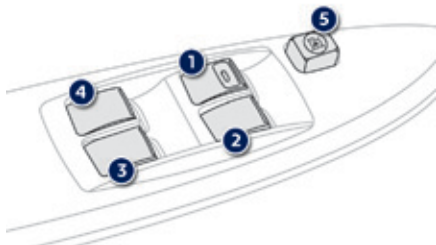

1. Driver's electric window.
2. Passenger's electric window.
3. Rear right electric window.
4. Rear left electric window.
5. Deactivating the passenger and rear electric window switches.

Operation

With the ignition on:

- ☞ Press the switch gently to open or pull it gently to close. The window stops as soon as the switch is released.

Automatic one-touch mode (driver's side)

- ☞ Press the switch fully to open. The driver's window opens completely when the switch is released.
- ☞ Pressing the switch again stops the movement of the window.

i The electric window switches remain operational for approximately 30 seconds after the ignition is switched off. The windows can no longer be opened or closed after the driver's door is closed.

Deactivating the passenger and rear electric window switches


- ☞ For the safety of your children, press switch **5** to prevent operation of the passenger and rear electric windows irrespective of their position.

When the button is pressed down, the switches are deactivated.
When the button is raised, the switches are activated.

! Always remove the key from the ignition when leaving the vehicle, even for a short time.
In the event of contact during operation of the windows, you must reverse the movement of the window. To do this, press the switch concerned.
When the driver operates the passenger electric window switches, they must ensure that no one is preventing correct closing of the windows.
The driver must ensure that passengers use the electric windows correctly. Be aware of children when operating the windows.


Charging flaps

Normal charging

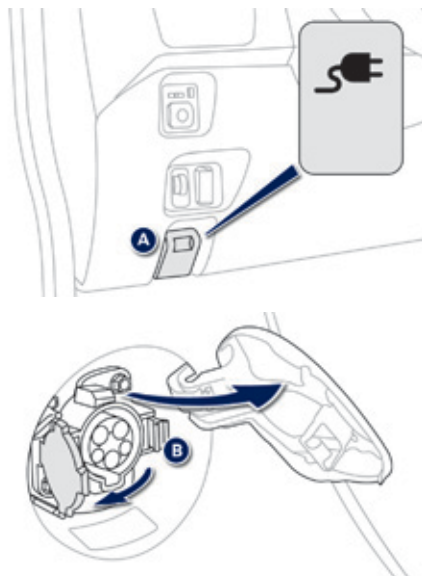

- ☞ Pull control **A** located at the bottom of the dashboard, driver's side, to release the charging flap.
- ☞ Open the flap on the right of the vehicle.
- ☞ Press latch **B** to open the socket cover.

Fast charging*

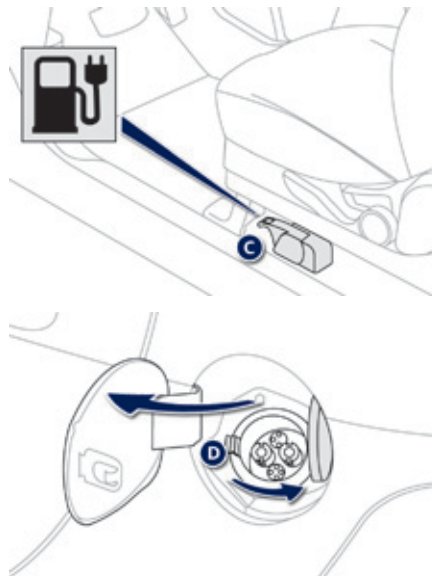

- ☞ Pull control **C** located alongside the driver's seat, outer side, to release the flap.
- ☞ Open the flap on the left of the vehicle.
- ☞ Press latch **D** to open the socket cover.

i For more information on charging procedures, refer to the "Practical information" section.


* Depending on equipment.

Front seats

Manual adjustments

1. **Adjustable head restraint**
2. **Adjustment of the backrest angle**
Operate the control lever and adjust the position of the backrest to the front or to the rear.
3. **Adjustment of the driver's seat height**
Raise or lower the control lever the number of times required to obtain the desired position.
4. **Forwards-backwards adjustment of the seat position**
Lift the control bar and slide the seat forwards or backwards.



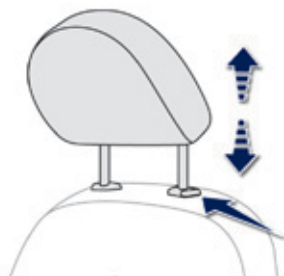

Head restraint height adjustment

- ☞ To raise it, pull upwards.
- ☞ To lower it, push it downwards, pressing the height adjustment button at the same time.
- ☞ To remove it, raise it to the high position, then remove it pressing the height adjustment button at the same time.
- ☞ To refit it, engage the rods of the head restraint in the apertures, pressing the height adjustment button at the same time.

! Never drive with the removed head restraints in the vehicle as they could be thrown around the vehicle on sharp braking. They must always be in place and adjusted correctly.

After installing the head restraint, check that the height adjustment button has engaged correctly.

The adjustment is correct when the top of the head restraint is aligned with the top of the head of the seated person.

Heated seat control



Press the control switch, located on the dashboard, to switch on the driver's seat heating.

The warning lamp in the switch comes on. The temperature is controlled automatically. Pressing a second time stops operation.

Rear seats

Rear seat comprising two adjustable, foldable backrests and a fixed cushion.

Rear head restraints



These have a high position (comfort and best safety) and a low position (best rear vision for the driver).

They can also be removed.

To remove a head restraint:

- ☞ pull the head restraint fully upwards,
- ☞ then, press the lug.



When carrying rear passengers, never drive with their head restraints removed; ensure that they are in place and in the high position.

Adjusting the backrest angle



To adjust the backrest:


- ☞ pull the control forwards to release the backrest,
- ☞ adjust the backrest then release the control.

The backrest can be adjusted to one of seven positions.



Always ensure that the backrest has engaged correctly.

Folding the backrest

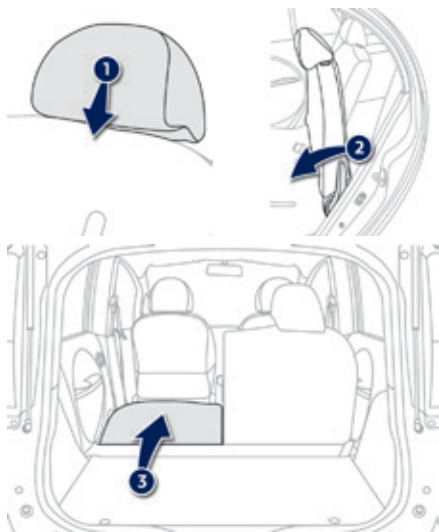

1. Place the head restraints in the low position or remove them if necessary,
2. pull the control forwards to release backrest,
3. fold the backrest forward.

Returning the seat backrest to its original position




- ☞ Push the seat backrest in position and secure it,
- ☞ refit the head restraints or put them back in place.

! When returning the backrest to its original position, take care not to trap the seat belts.

Mirrors

Door mirrors

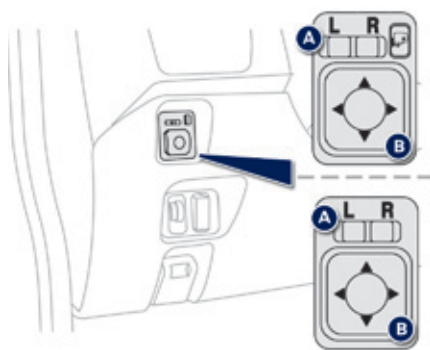


Adjustment

The mirrors can be adjusted when the ignition switch is in the "ON" or "ACC" position.

- ☞ Move control **A** to the right or to the left to select the corresponding mirror.
- ☞ Direct control **B** in all four directions to adjust the mirror.

When adjustment is complete, return control **A** to the central position.

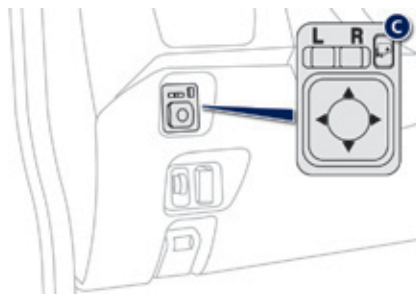

Electric folding / unfolding*


- ☞ With the ignition switch in the "ON" or "ACC" position: press control **C** to unfold them.
- ☞ With the ignition switch in the "LOCK" position: press control **C** **within 30 seconds** to fold them.

! The mirrors can also be folded manually. However, you must **never unfold them manually**, otherwise the mirrors may not remain in place correctly when driving. Always use control **C** to unfold them.

3

* Depending on version.

Rear view mirror

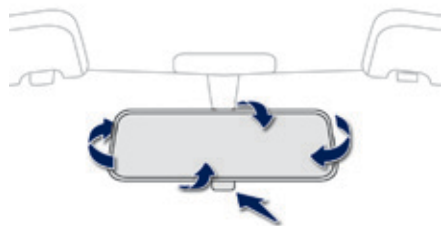

Adjust the mirror by moving it up or down and/or to the left or right.


The rear view mirror has two positions:

- day (normal),
- night (anti-dazzle).


To change from one to the other, push or pull the lever on the lower edge of the mirror.

Interior fittings

1. **Glove box**
2. **Retractable cup holder**
Press the cover to open the cup holder
3. **12 V accessory socket (120 W)**
Observe the maximum power rating to avoid damaging your accessory
4. **Open storage**
5. **PEUGEOT Connect USB**
6. **Door pocket**

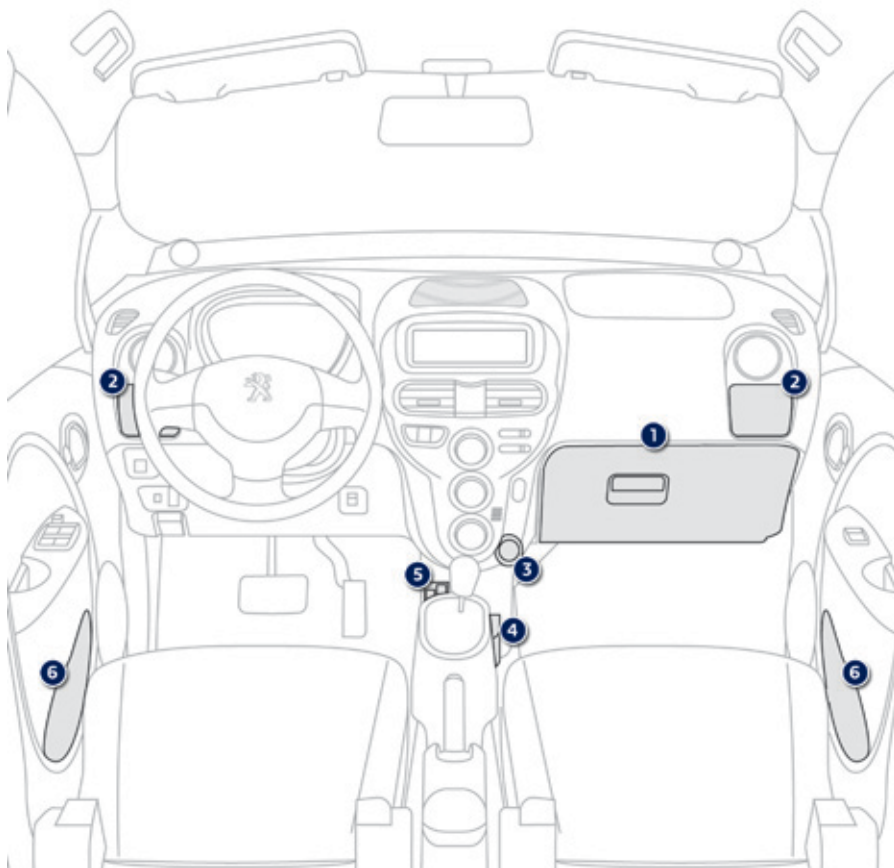


Sun visor

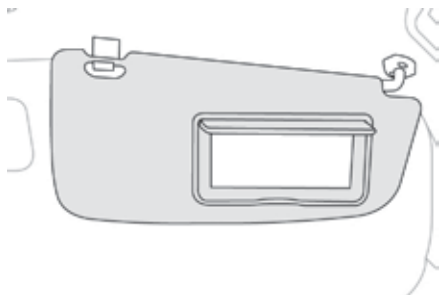


The sun visors fold forwards, and to the side when they are unhooked. They are fitted with a vanity mirror and a ticket holder.

12 V accessory socket

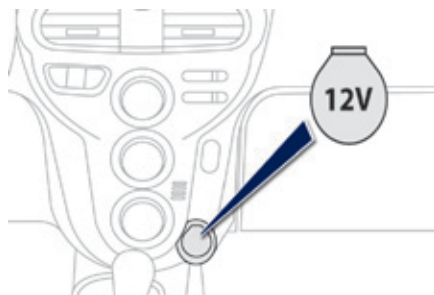

- ☞ To connect a 12 V accessory (max power: 120 W), lift the cover and connect a suitable adaptor.

Mats

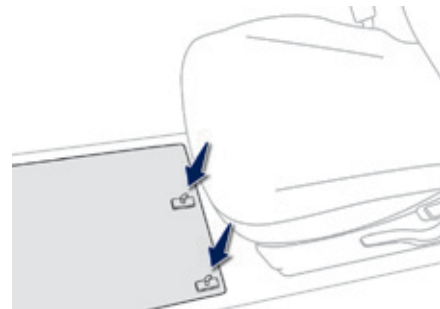


When removing the mat on the driver's side, move back the seat as far as possible and remove the fixings.

When refitting, position the mat correctly on the pins and clip the fixings. Check that the mat is secured firmly.

- ! To prevent any risk of jamming under the pedals:
- only use mats suited to the fixings already present in the vehicle; it is imperative that these fixings are used.
 - never fit one mat on top of another.

PEUGEOT Connect USB

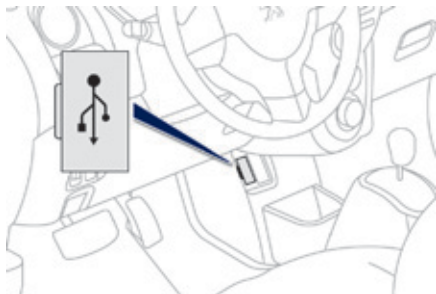

This USB port is located at the bottom of the centre console

It allows the connection of portable devices, such as a digital audio player of the iPod® type or a USB memory stick.

It reads the audio files which are transmitted to your audio equipment and played via the vehicle's speakers.

You can manage these files using the audio system controls.

When connected to the USB port, the portable device charges automatically.

i For more information on the use of this system, refer to the "Audio and Telematics" section.

Ventilation

System which creates and maintains good conditions of comfort and visibility in the vehicle's passenger compartment.

Air intake

The air circulating in the passenger compartment is filtered and originates either from the outside via the grille located at the base of the windscreen or from the inside in air recirculation mode.

Controls


The incoming air follows various routes depending on the controls selected.

The temperature control enables you to obtain the level of comfort required by mixing the air of the various circuits.

The air distribution control enables you to select the air vents used in the passenger compartment.

The air flow control enables you to increase or reduce the speed of the ventilation fan.

These controls are grouped together on control panel **A** on the centre console.

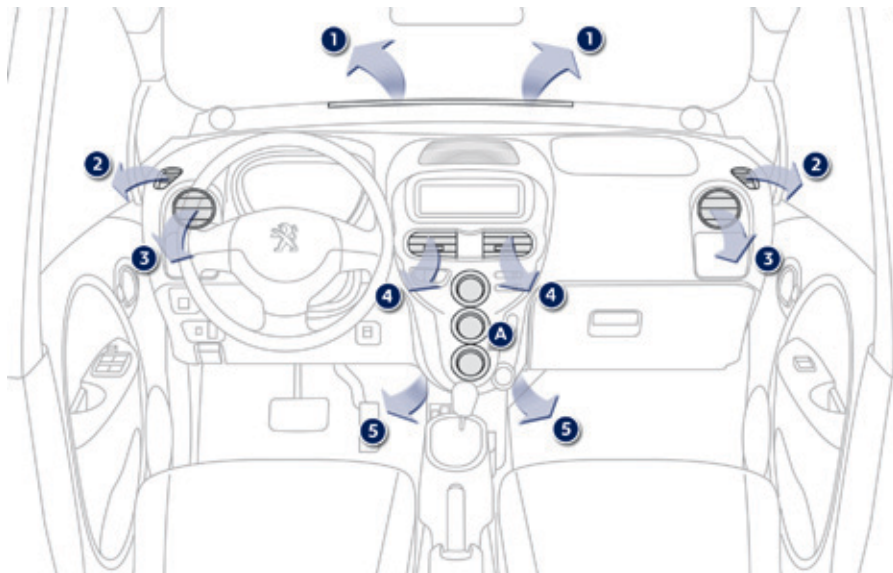

Air distribution

1. Windscreen demisting/defrosting vents.
2. Front side window demisting/defrosting vents.
3. Side adjustable air vents.
4. Central adjustable air vents.
5. Air outlets to the front footwells.

Recommendations for ventilation and air conditioning


- i** In order for these systems to be fully effective, follow the operation and maintenance guidelines below:
- ☞ If the interior temperature remains very high after the vehicle has been parked in the sun for a considerable time, first ventilate the passenger compartment for a few minutes by opening the windows.
Place the air flow control at a sufficient level to provide an adequate renewal of air in the passenger compartment.
 - ☞ Condensation created by the air conditioning results in a discharge of water under the vehicle when stationary, which is perfectly normal.
 - ☞ To obtain an even air distribution, take care not to obstruct the exterior air intake grilles located at the base of the windscreen, the nozzles, the vents and the air outlets, as well as the air extractor located in the boot.
 - ☞ Use in preference the intake of exterior air as prolonged use of the air recirculation may cause misting of the windows and side windows.
 - ☞ Operate the air conditioning system for 5 to 10 minutes, once or twice a month to keep it in good working order.
 - ☞ Ensure that the passenger compartment filter is in good condition and have the filter elements replaced regularly (refer to "Checks").
 - ☞ To ensure correct operation of the air conditioning system, you are also advised to have it checked regularly.
 - ☞ If the system does not produce cold air, do not use it and contact a PEUGEOT dealer or a qualified workshop.




The heating and air conditioning use energy from the main battery. Their use increases electrical consumption and reduces the range of the vehicle. Remember to switch off the heating or air conditioning as soon as it is no longer needed.

Heating / Ventilation Air conditioning

The heating and ventilation can be used as soon as the "Ready" lamp is on.

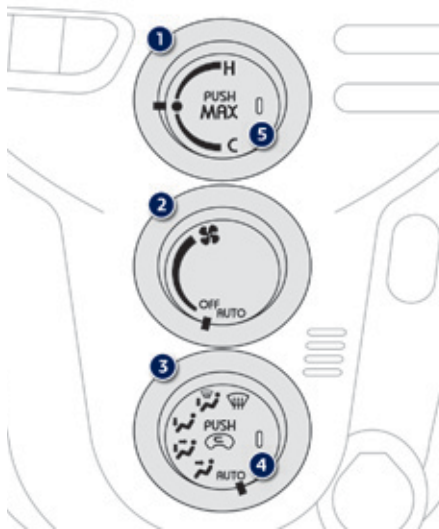

The air conditioning can be used as soon as the "Ready" lamp is on.

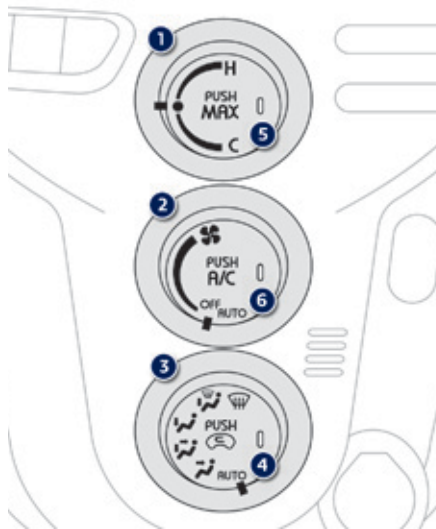

Adjustments can be made manually or automatically.

1. Temperature
2. Air flow
3. Air distribution
4. Exterior air intake / Interior air recirculation
5. "Max" button
6. Air conditioning On / Off

1. Temperature adjustment



Turn the dial from blue (cold) to red (hot) to adjust the temperature to your requirements.

i When the dial is placed on "●", the fan air will be at ambient temperature. If you move the dial to "●" while using the heating or air conditioning, these will stop immediately.

2. Air flow adjustment



☞ Turn the dial to the right to increase air flow and to the left to reduce it.

i With the dial in the "AUTO" position, the air flow is adjusted automatically, according to the interior temperature.

3. Air distribution adjustment



Place the dial in the desired position to distribute air to:



central and side vents,



central, side and footwell vents,



footwells,



windscreen, side windows and footwells,



windscreen and side windows.

The air distribution can be adapted by placing the dial in an intermediate position.

i With the dial in the "AUTO" position, air distribution is adjusted automatically, according to the temperature selected.

4. Air intake / Air recirculation

The intake of exterior air prevents the formation of mist on the windscreen and side windows. The recirculation of interior air isolates the passenger compartment from exterior odours and smoke.

Return to exterior air intake as soon as possible to prevent deterioration of the the air quality and the formation of mist.



☞ Press this button to recirculate the interior air. The indicator lamp comes on to confirm this.
☞ Press the button again to permit the intake of exterior air. The indicator lamp switches off to confirm this.

5. "MAX" button

This button allows the passenger compartment to be quickly heated or cooled. It only works when the air flow control is not in the "OFF" position.



Press this button. The corresponding indicator lamp comes on.

The place the temperature control in the desired position:

- on "●" for maximum ventilation,
- between "●" and "H" for maximum heating,
- between "C" and "●" for maximum air conditioning.

6. Air conditioning On / Off



The air conditioning is designed to operate effectively in all seasons, with the windows closed.

It enables you to:

- lower the temperature, in summer,
- increase the effectiveness of the demisting in winter, above 3 °C.

Switching on

- ☞ Press the "A/C" button, the associated indicator lamp comes on.

The air conditioning does not operate when the air flow adjustment is set to off.

i To obtain cool air sooner, you can use air recirculation for a few moments. Then return to the intake of exterior air.

Switching off

- ☞ Press the "A/C" button again, the associated indicator lamp goes off.

Switching off may result in some discomfort (humidity, misting).

Front demist - defrost

Front demisting-defrosting can be used as soon as the "Ready" lamp is on.



Place the air distribution control in this position.

The intake of exterior air is selected (indicator lamp off) and depending on equipment, the air conditioning starts running (indicator lamp on).



Place the temperature control between "●" and "H".



Place the air flow control in the desired position.



For rapid demisting - defrosting, you can also press the "MAX" button.

Rear screen demist - defrost

The control button is located on the right of the centre console.



Switching on

Rear screen demisting/defrosting can only operate when the "Ready" lamp is on.



Press this button to demist/defrost the rear screen and (depending on version) the door mirrors. The indicator lamp associated with the button comes on.

Switching off

The demisting/defrosting switches off automatically to prevent an excessive electric consumption.

It is possible to stop the demisting/defrosting operation before it is switched off automatically by pressing the button again. The indicator lamp associated with the button goes off.



Switch off the demisting/defrosting of the rear screen and door mirrors as soon as appropriate, so as to limit electrical consumption and optimise the range of the vehicle.

A few driving recommendations

Observe the driving regulations at all times and remain vigilant whatever the traffic conditions. Pay close attention to the traffic and keep your hands on the wheel so that you are ready to react at any time to any eventuality.

On a long journey, a break every two hours is strongly recommended.

In difficult weather, drive smoothly, anticipate the need to brake and increase the distance from other vehicles.

Driving on flooded roads

We strongly advise against driving on flooded roads, as this could cause serious damage to the drive train, as well as to the electrical systems of your vehicle.

If you are obliged to drive through water:



- check that the depth of water does not exceed 15 cm, taking account of waves that might be generated by other users,
- drive as slowly as possible; do not exceed 6 mph (10 km/h),
- do not stop and do not switch off the motor.

On leaving the flooded road, as soon as circumstances allow, make several light brake applications to dry the brake discs and pads.

If in doubt on the state of your vehicle, contact a PEUGEOT dealer or a qualified workshop.


Important!

! Never drive with the parking brake applied - Risk of overheating and damage to the braking system!

! Never leave a vehicle unsupervised with the motor switched on. If you have to leave your vehicle with the motor switched on, apply the parking brake and place the drive selector in position **N** or **P**.

Starting - stopping the vehicle

Ignition switch

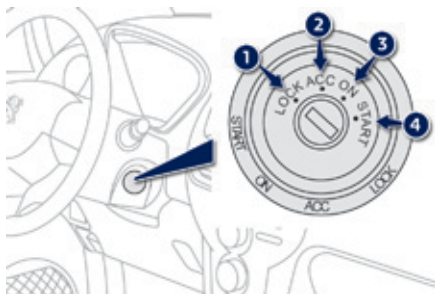

- Position 1: **LOCK**
The steering is locked.
- Position 2: **ACC**
The ancillaries (radio, 12 V socket...) can be used.
- Position 3: **ON**
Ignition on.
- Position 4: **START**
"Ready" lamp on.
Motor ready to drive the vehicle.

! If you use the ancillaries for a prolonged period (with the key in the **ACC** position), you risk discharging the ancillaries battery. Starting your vehicle will then no longer be possible. **Be aware.**

Starting

- ☞ Check that the drive selector is in position **P**.
- ☞ Insert the key in the ignition switch.
- ☞ Turn the key to position **4 (START)**.

READY

- ☞ Hold it in this position for a few seconds until the "**READY**" lamp comes on accompanied by an audible signal.
- ☞ Release the key.
The key returns automatically to position **3 (ON)**.


Stopping

- ☞ Stop the vehicle.
- ☞ Keep your foot on the brake pedal.
- ☞ Place the drive selector in position **P**.
- ☞ Apply the parking brake.
- ☞ Turn the key to position **1 (LOCK)**.
- ☞ Remove the key from the ignition switch.

i Do not attach any heavy objects to the key as this could weigh down on it when in the ignition switch and cause a fault.

4

Parking brake

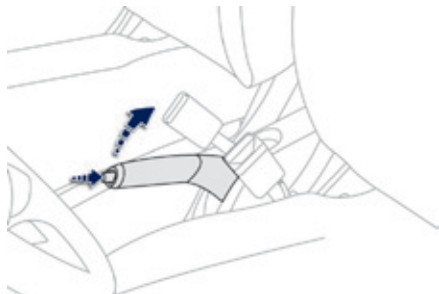

Applying

- ☞ Pull the parking brake lever fully up to immobilise your vehicle.

Releasing

- ☞ Pull the parking brake lever up slightly, press the release button then lower the lever fully.



When the vehicle is being driven, if the parking brake is still on or has not been fully released, this warning lamp comes on.



When parking on a slope, direct your wheels against the kerb, apply the parking brake, place the drive selector in position **P** and switch off the ignition.

Drive selector

Selector positions



P. Park.

This position is used for starting the vehicle. To come out of the **P** position, you must have your foot on the brake.

R. Reverse.

N. Neutral.

D. Drive (Forward).

Displays in the instrument panel



When you move the drive selector through the grille to select a position, the corresponding indicator is displayed in the instrument panel.

Moving off



4

With the motor running, **P** appears in the instrument panel screen.

- ☞ Press the brake pedal to come out of position **P**.
- ☞ Select forward (**D**) or reverse (**R**) gear.
- ☞ Release the parking brake.
- ☞ Take your foot off the brake pedal, the vehicle then moves off slowly to facilitate manoeuvring.
- ☞ Accelerate to go forwards or backwards.
- ☞ "**D**" or "**R**" appears in the instrument panel screen.

Parking the vehicle

To stop the motor, you must select position **P**.
You must apply the parking brake to immobilise the vehicle.

To remove the key from the ignition switch, the drive selector must be in position **P**.



To tow your vehicle, the drive selector must be in position **N**, refer to "Practical Information".

Lighting controls

Main lighting

The various front and rear lamps of the vehicle are designed to adapt the lighting progressively in relation to the climatic conditions and so ensure the best visibility for the driver:

- sidelamps, to be seen,
- dipped beam headlamps to see without dazzling other drivers,
- main beam headlamps to see clearly when the road is clear.


Additional lighting

Other lamps are provided to fulfil the requirements of particular driving conditions:


- a rear foglamp to be seen from a distance,
- front foglamps for even better visibility,
- daytime running lamps to be seen during the day.

Selection ring for main lighting mode

Turn the ring to position the symbol required facing the mark.

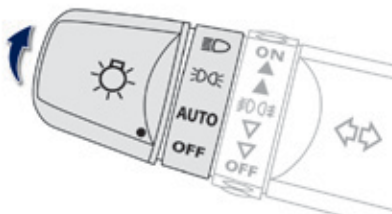

	Dipped or main beam headlamps.
	Sidelamps only.
AUTO	Automatic illumination of headlamps.
OFF	Lighting off.

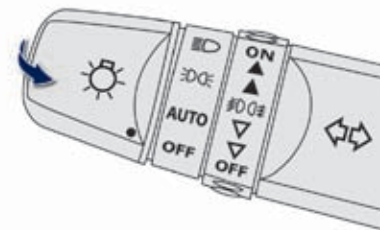

Stalk for switching headlamp beam


Pull the stalk to switch the lighting between dipped / main beam headlamps.

In the lighting off and sidelamps modes, the driver can switch on the main beam headlamps temporarily ("headlamp flash") by maintaining a pull on the stalk.

Displays

Illumination of the corresponding indicator lamp in the instrument panel confirms the lighting switched on.

Front and rear foglamps

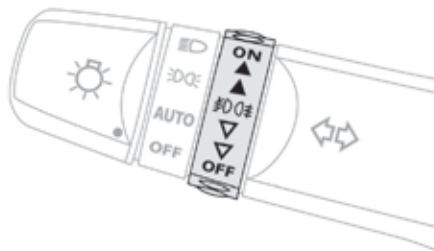

Foglamps selection ring.

The foglamps operate with the sidelamps and dipped and main beam headlamps.



Front and rear foglamps.

- ☞ To switch on the front foglamps, turn the ring forwards once.
- ☞ To switch on the rear foglamp, turn the ring forwards twice.
- ☞ To switch off the rear foglamp, turn the ring rearwards twice.
- ☞ To switch off the front foglamps, turn the ring rearwards once.

The ring returns to its initial position automatically.

The rear foglamp is switched off automatically when you switch off the sidelamps, or the dipped or main beam headlamps.



In good or rainy weather, both day and night, the front foglamps and the rear foglamp is prohibited. In these situations, the power of its beam may dazzle other drivers.

Do not forget to switch off the front foglamps and the rear foglamp when they are no longer necessary.



Lighting on reminder

There is an audible signal when the driver's door is opened, to warn the driver if the vehicle lighting is on, with the ignition off.

Switching off the lighting stops the audible signal.

Daytime running lamps

Special daytime lighting so that the vehicle can be seen more easily.

The daytime running lamps come on automatically when starting the motor, if no other lighting is on.

They cannot be deactivated.

i Although these lamps are located in the same unit as the front foglamp, they operate with a specific bulb. Their use is covered by road vehicle lighting regulations.

Automatic illumination of headlamps

Automatic illumination of headlamps

With the main lighting control ring in the **AUTO** position, the sidelamps and dipped beam headlamps come on automatically, without any action by the driver, when a low level of ambient light is detected. When the light returns to a sufficient level or the wipers are switched off, the lighting is switched off automatically.


The sensor is located at the base of the windscreen.

i In foggy weather or in snow, the sunshine sensor may detect sufficient light. The lighting will not come on automatically. Do not cover the sunshine sensor, the associated functions will no longer be controlled.

Automatic lighting off

When the lighting stalk is in the "AUTO" position, if the ignition switch is in the "LOCK" or "ACC" position or if the key has been removed, the lighting switches off automatically **when the driver's door is opened.**

Headlamp adjustment

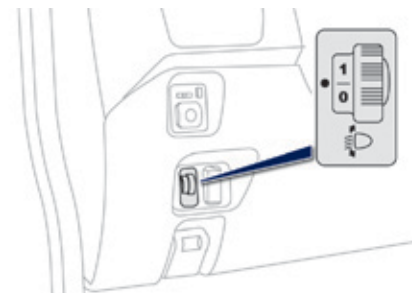


5

To avoid causing a nuisance to other road users, the height of the halogen headlamps should be adjusted according to the load in the vehicle.

- 0.** Driver only or driver + 1 front passenger.
- 1 or 2.** 4 people (including the driver).
- 3.** 4 people (including the driver) + maximum authorised load.
- 4.** Driver + maximum authorised load.

i The initial setting is position "0".

Wiper control

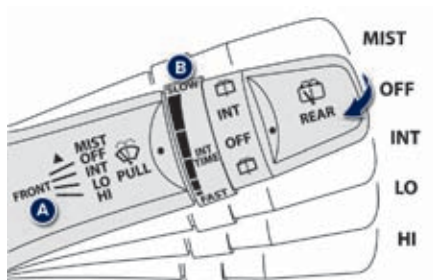

The wipers are controlled directly by the driver by means of the stalk **A** and its ring **B**.

i In wintry conditions, remove snow, ice or frost present on the windscreen, around the wiper arms and blades and the windscreen seal, before operating the wipers.

! Do not operate the wipers on a dry windscreen. Under extremely hot or cold conditions, ensure that the wiper blades are not stuck to the windscreen before operating the wipers.

Windscreen wipers

A. Wiping speed selection stalk: raise or lower the stalk to the desired position.

MIST

Single wipe.

OFF

Park.

INT

Intermittent (the speed can be set manually).

LO

Slow.

HI


Fast.

B. Intermittent operation adjustment ring.

Turn this ring to increase or reduce the wiping frequency in intermittent mode.

Windscreen wash

Pull the wiper stalk towards you. The windscreen wash, then the windscreen wipers, operate for a pre-determined time.

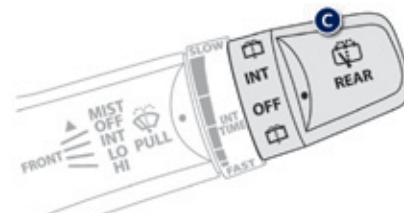

Rear wiper

C. Rear wiper selection ring.

OFF

Park.

INT

Intermittent wipe.


The wiper wipes twice then switches to intermittent mode with an interval of a few seconds.



Wipe with screenwash.

Keep the ring in this position to operate the screenwash with several wipes of the wiper.

Courtesy lamp

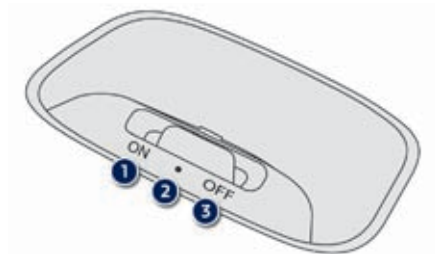

Position 1 "ON"

The courtesy lamp is permanently on.

Position 2 "•"

The courtesy lamp comes on when opening a door or the boot; when the door or boot is closed again, the lighting gradually dims for a few seconds before going off. However, the courtesy lamp is switched off immediately when the doors and boot are closed and you lock the vehicle from the inside or using the remote control.


Position 3 "OFF"

The courtesy lamp is permanently off.



Before leaving the vehicle, ensure that the courtesy lamp is not on. If left on, it discharges the ancillaries battery, even if the main battery is charged or on charge. Starting your vehicle will then no longer be possible.


Direction indicators

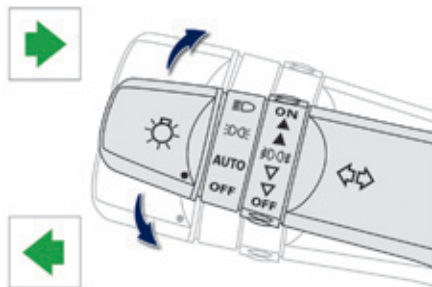

Selection of the left or right direction indicators to signal a change of direction of the vehicle.

- ☞ Left: lower the lighting stalk beyond the point of resistance.
- ☞ Right: raise the lighting stalk beyond the point of resistance.

Automatic operation of brake lamps

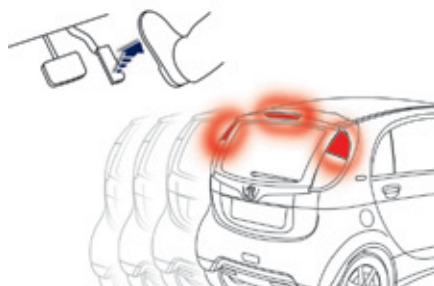

The brake lamps come on automatically when you release the accelerator pedal. This does not happen in all cases and depends on the rate of deceleration.

Hazard warning lamps




A visual warning by means of the direction indicators to alert other road users to a vehicle breakdown, towing or accident.

- ☞ Press this button, the direction indicators flash.

They can operate with the ignition off.

Horn

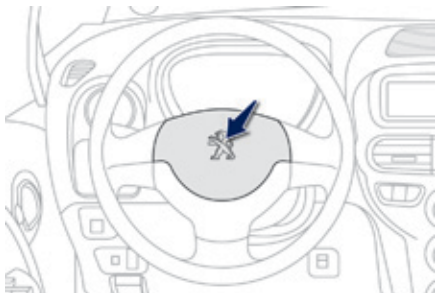

- ☛ Press the central part of the steering wheel.

Emergency or assistance call



This system allows you to make an emergency or assistance call to the emergency services or to the dedicated PEUGEOT service.

For more information on the use of this function, refer to the "Audio equipment and telematics" section.

Under-inflation detection

System which continuously and automatically checks the pressures of the four tyres after switching on the ignition.

A pressure sensor is located in the valve of each tyre.

The system triggers an alert if a drop in pressure is detected in one or more tyres, compared to the reference pressure registered in the system. This reference pressure must be reinitialised every time the tyre pressures are adjusted or a wheel changed.

The system operates on condition that sensor identifiers have first been memorised in the system by a PEUGEOT dealer or a qualified workshop.

You can memorise two sets of tyres (for example: wheels with "standard" tyres and wheels with "winter" tyres).



The tyre under-inflation detection system is an aid to driving which does not replace the need for vigilance on the part of the driver.



This system does not avoid the need to check the tyre pressures regularly and before a long journey.

Driving with under-inflated tyres adversely affects road holding, extends braking distances and causes premature tyre wear, particularly under arduous conditions (vehicle loaded, high speed, long journey).



Driving with under-inflated tyres increases fuel consumption.



The tyre pressures for your vehicle can be found on the tyre pressure label (see the "Identification markings" section). The tyre pressures must be checked when the tyres cold (vehicle stopped for 1 hour or after driving for less than 6 miles (10 km) at moderate speed). Otherwise, add 0.3 bar to the values indicated on the label.

Under-inflation alert



The alert is given by the fixed illumination of this warning lamp.

- ☞ Reduce speed, avoid sudden steering movements or harsh brake applications.
- ☞ Stop as soon as it is safe to do so.



The loss of pressure detected does not always lead to visible deformation of the tyre. Do not rely on just a visual check.

- ☞ Check the four tyre pressures when cold, using the compressor from the temporary puncture repair kit.
If it is not possible to check the tyre pressures at the time, drive carefully at reduced speed.
- or
- ☞ In the event of a puncture, use the temporary puncture repair kit.



The alert is maintained until the reference pressure is reinitialised after the inflation, repair or replacement of the tyres concerned. In the event of the repair or replacement of tyres, the sensor identifiers must be registered in the system by a PEUGEOT dealer or a qualified workshop.

Reinitialising the reference pressure

The system must be reinitialised after any adjustment of tyre pressures and after changing one or more wheels.




6



Before reinitialising the system, ensure that the pressures in the four tyres are suitable for the conditions of use of the vehicle and as specified on the tyre pressure label.

The under-inflation detection system cannot warn of an incorrect pressure at the time of reinitialisation.

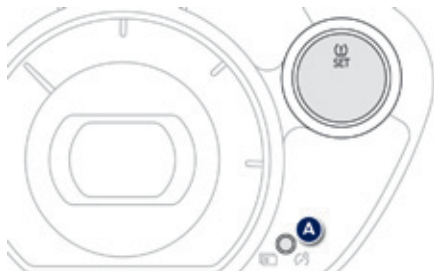

The reinitialisation instruction is entered in the instrument panel screen screen, with the ignition on and the vehicle stationary.

- ☞ Press button **A** select the function
- ☞ Press and hold button **A** for **at least 3 seconds** to reinitialise the under-inflation detection system.

Reinitialisation of the system is confirmed by the flashing of the warning lamp in the instrument panel.

You then have to drive about 100 metres before the warning lamp goes off.



The under-inflation alert is only reliable if the system has been reinitialised with the four tyre pressures correctly adjusted.

Operating fault



The flashing and then fixed illumination of the under-inflation warning lamp indicates a fault with the system.

In this case, monitoring of the tyre pressures is not assured.

This alert is also displayed if:

- one or more wheels is not fitted with a sensor,
- a wireless device operating on the same frequency is close to the vehicle,
- there are accumulations of snow or ice in the wings or wheels,
- the state of charge of the tyre pressure monitoring system battery is too low,
- the wheel sensor identifiers have not been memorised in the system by a PEUGEOT dealer or a qualified workshop.



Go to a PEUGEOT dealer or a qualified workshop to have the system checked or, following the repair of a puncture, to have the original wheel, equipped with a sensor, refitted.




Any tyre repair or replacement on a wheel fitted with this system must be carried out by a PEUGEOT dealer or a qualified workshop. If you fit the second set of tyres memorised in the system, a fault will be signalled until the second set is selected in the configuration menu.

Managing sets of wheels and tyres

If you have had a second set of wheels and tyres registered by a PEUGEOT dealer or a qualified workshop, every time you change the set of wheels (fitting a set of winter tyres, for example), you must select the set you have just fitted in the configuration menu.

Selection of the other set of wheels and tyres is done via the instrument panel screen, with the ignition on and the vehicle stationary.

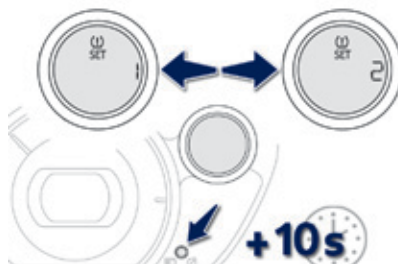

After fitting the new set of wheels and tyres, you should check and adjust the tyre pressures to the values specified on the tyre pressure label (see the "Identification markings" section).

- ☞ Press button **A** to select the function.
- ☞ Press and hold button **A** button for **more than 10 seconds** to change successively from set of wheels and tyres **1** to set of wheels and tyres **2** or the other way round.



The system automatically reinitialises the reference pressure based on the pressure in the new set (the under-inflation detection warning lamp flashes during the operation).

Braking assistance systems

Group of supplementary systems which help you to obtain optimum braking in complete safety in emergency situations:

- anti-lock braking system (ABS),
- electronic brake force distribution (EBFD),
- emergency braking assistance (EBA).

Anti-lock braking system and electronic brake force distribution

Linked systems which improve the stability and manoeuvrability of your vehicle when braking, in particular on poor or slippery surfaces.

Activation

The anti-lock braking system comes into operation automatically when there is a risk of wheel lock.

Normal operation of the ABS may make itself felt by slight vibration of the brake pedal.



When braking in an emergency, press very firmly without releasing the pressure.

Operating fault

Vehicle stationary



Illumination of this warning lamp indicates a malfunction of the anti-lock braking system, which could result in a loss of control of the vehicle when braking.

Contact a PEUGEOT dealer or a qualified workshop.



The warning lamp comes on for a few seconds when the ignition is switched on (ON position). If it does not go off or does not come on, contact a PEUGEOT dealer or a qualified workshop.

Vehicle moving



Fixed illumination of this warning lamp indicates a malfunction of the anti-lock braking system which could result in a loss of control of the vehicle on braking.

You must stop as soon as it is safe to do so.

Contact a PEUGEOT dealer or a qualified workshop.



Illumination of these two warning lamps indicates a malfunction of the electronic brake force distribution

which could result in a loss of control of the vehicle on braking.

You MUST stop as soon as it is safe to do so.

Contact a PEUGEOT dealer or a qualified workshop.

When replacing wheels (tyres and rims), ensure that they conform to the manufacturer's recommendations.

Emergency braking assistance

System which, in an emergency, enables you to obtain the optimum braking pressure more quickly, thus reducing the stopping distance.

Activation

It is triggered by the speed at which the brake pedal is pressed.

The effect of this is a reduction in the resistance of the pedal and an increase in braking efficiency.



When braking in an emergency, press firmly without releasing the pressure.

Trajectory control systems

Anti-slip regulation (ASR) and electronic stability programme (ESP)

The anti-slip regulation (also known as Traction Control) optimises traction to limit wheel spin, by acting on the brakes of the driving wheels and on the engine.


The electronic stability programme acts on the brake of one or more wheels and on the engine to keep the vehicle on the trajectory required by the driver, within the limits of the laws of physics.

Activation

These systems are activated automatically each time the vehicle is started. They come into operation in the event of a grip or trajectory problem.



This is indicated by flashing of this symbol in the instrument panel.

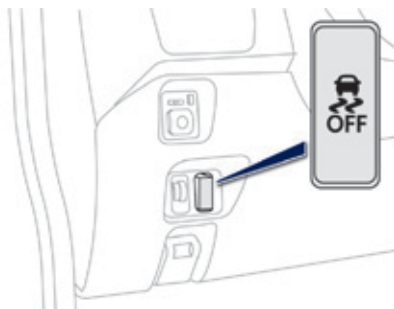

Deactivation

In exceptional conditions (starting a vehicle which is bogged down, stuck in snow, on soft ground, ...), it may be advisable to deactivate the ASR and ESP systems to regain grip.

☞ Press this button, located on the dashboard (driver's side), until the corresponding symbol appears in the instrument panel screen.



The display of this symbol indicates that the ASR and ESP systems are deactivated.



Excessive wheel spin may cause damage to the differential of your vehicle.

Reactivation

These systems are not reactivated automatically. ☞ Press this button again to reactivate them manually.

The symbol going off in the instrument panel indicates the reactivation of the ASR and ESP systems.

Operating fault



The display of this message in the instrument panel indicates a malfunction of these systems.

Contact a PEUGEOT dealer or a qualified workshop to have the ASR/ESP systems checked.



The ASR/ESP systems should not encourage the driver to take extra risks or drive at high speed.


The correct functioning of these systems depends on observation of the manufacturer's recommendations regarding the wheels (tyres and rims), the braking components, the electronic components and the assembly and repair procedures used by the PEUGEOT dealer network.

After an impact, have these systems checked by a PEUGEOT dealer or a qualified workshop.

Seat belts

Front seat belts

The front seat belts are fitted with a pretensioning and force limiting system. This system improves safety in the front seats in the event of a front or side impact. Depending on the severity of the impact, the pretensioning system instantly tightens the seat belts against the body of the occupants. The pretensioning seat belts are active when the ignition is on. The force limiter reduces the pressure of the seat belt on the chest of the occupant, so improving their protection.

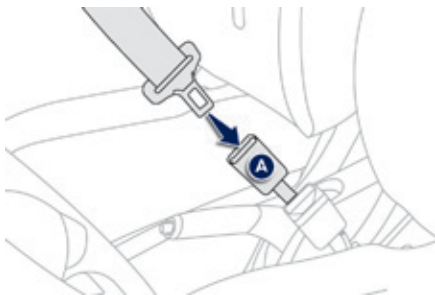

Fastening

- ☞ Pull the strap, then insert the tongue in the buckle **A**.
- ☞ Check that the seat belt is fastened correctly by pulling the strap.

Unfastening

- ☞ Press the red button on the buckle **A**.

Front seat belt not fastened / unfastened warning lamp



When the ignition is switched on, this warning lamp comes on accompanied by an audible signal for a few seconds if the driver and/or passenger has not fastened their seat belt.

If the driver does not fasten their seat belt within one minute after switching on the ignition, the warning lamp flashes accompanied by an intermittent audible signal. After about 90 seconds, the warning lamp, the audible signal and the display stop, and then return until the driver fastens their seat belt. If the seat belt is unfastened **while the vehicle is moving**, you are warned by the same alerts.

Rear seat belts

Each rear seat is fitted with a three-point inertia reel seat belt.



Fastening

- ☞ Pull the strap, then insert the tongue in the buckle.
- ☞ Check that the seat belt is fastened correctly by pulling the strap.

Unfastening

- ☞ Press the red button in the buckle.

Seat belt unfastened warning lamps



Right hand rear seat belt warning lamp.



Left hand rear seat belt warning lamp.

Illumination of one of these warning lamps in the instrument panel indicates that one of the rear passengers has unbuckled their seat belt.

i The driver must ensure that passengers use the seat belts correctly and that they are all restrained securely before setting off. Wherever you are seated in the vehicle, always fasten your seat belt, even for short journeys.

Do not interchange the seat belt buckles as they will not fulfil their role fully.

The seat belts are fitted with an inertia reel permitting automatic adjustment of the length of the strap to your size. The seat belt is stowed automatically when not in use.

Before and after use, ensure that the seat belt is reeled in correctly.

The lower part of the strap must be positioned as low as possible on the pelvis. The upper part must be positioned in the hollow of the shoulder.

The inertia reels are fitted with an automatic locking device which comes into operation in the event of a collision, emergency braking or if the vehicle rolls over. You can release the device by pulling the strap firmly and then releasing it so that it reels in slightly.

In order to be effective, a seat belt must:

- be tightened as close to the body as possible,
- be pulled in front of you with a smooth movement, checking that it does not twist,
- be used to restrain only one person,
- not bear any trace of cuts or fraying,
- not be converted or modified to avoid affecting its performance.

In accordance with current safety regulations, for all repairs on your vehicle's seat belts, go to a qualified workshop with the skills and equipment needed, which a PEUGEOT dealer is able to provide. Have your seat belts checked regularly by a PEUGEOT dealer or a qualified workshop, particularly if the straps show signs of damage.

Clean the seat belt straps with soapy water or a textile cleaning product, sold by PEUGEOT dealers.

After folding or moving a seat or rear bench seat, ensure that the seat belt is positioned and reeled in correctly.

Recommendations for children

Use a suitable child seat if the passenger is less than 12 years old or shorter than one and a half metres.

Never use the same seat belt to secure more than one person.

Never allow a child to travel on your lap. For more information, refer to the "Child seats" section.

In the event of an impact

Depending on the nature and seriousness of the impact, the pretensioning device may be deployed before and independently of the airbags. Deployment of the pretensioners is accompanied by a slight discharge of harmless smoke and a noise, due to the activation of the pyrotechnic cartridge incorporated in the system.

In all cases, the airbag warning lamp comes on. Following an impact, have the seat belts system checked, and if necessary replaced, by a PEUGEOT dealer or a qualified workshop.

Airbags


The airbags have been designed to contribute towards improving the safety of the occupants in the event of violent collisions. They supplement the action of the force-limiting seat belts.

In this case, the electronic detectors record and analyse the front and side impacts suffered in the impact detection zones:

- in the event of a serious impact, the airbags are deployed instantaneously and contribute towards protecting the occupants of the vehicle; immediately after the impact, the airbags deflate rapidly so that they do not hinder the visibility of the occupants or their possible exit from the vehicle,
- in the event of a minor impact or rear impact and in certain roll-over conditions, the airbags may not be deployed; the seat belt alone contributes towards providing your protection in these situations.

! The airbags do not operate when the ignition is off.

This equipment only operates once. If a second impact occurs (during the same or a subsequent accident), the airbag will not be deployed again.

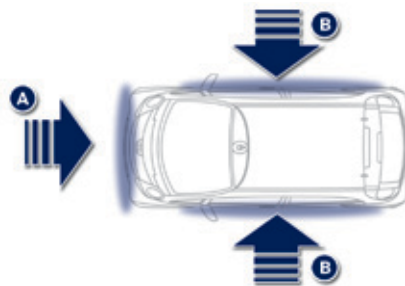


Impact detection zones

- A. Front impact zone.
- B. Side impact zone.

i The deployment of one or more airbags is accompanied by a slight discharge of smoke and a noise, due to the activation of the pyrotechnic cartridge incorporated in the system. This smoke is not harmful, but sensitive individuals may experience some irritation. The noise of the detonation related to the deployment of one or more airbags may result in a slight loss of hearing for a short time.

Front airbags

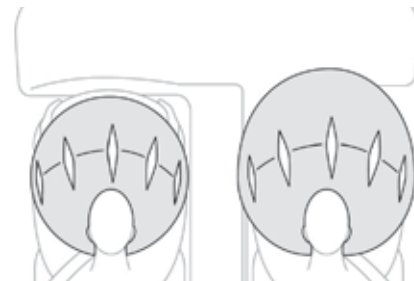

System which protects the head and chest of the driver and front passenger in the event of a front impact.

The driver's airbag is fitted in the centre of the steering wheel; the front passenger's airbag is fitted in the dashboard above the glove box.

Deployment

The airbags are deployed, except the passenger's front airbag if it is deactivated, in the event of a serious front impact applied to all or part of the front impact zone A, in the longitudinal centreline of the vehicle on a horizontal plane and directed from the front to the rear of the vehicle.


The front airbag inflates between the front occupant of the vehicle and the dashboard to cushion their forward movement.



Deactivation

Only the front passenger's airbag can be deactivated:

- 🔑 **with the ignition off**, insert the key in the passenger airbag deactivation switch **A**,
- 🔑 turn it to the **"OFF"** position,
- 🔑 remove the key.

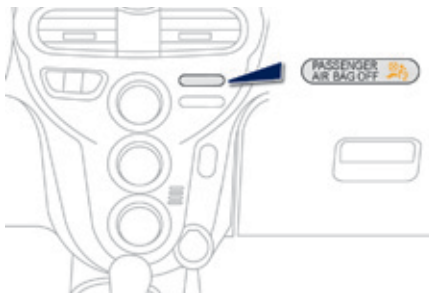

This warning lamp comes on in the centre console when the ignition is on and until the airbag is reactivated.



To ensure the safety of your child, the passenger airbag must be deactivated when you install a rearward facing child seat on the front passenger seat. Otherwise, the child would risk being seriously injured or killed if the airbag were deployed.

Reactivation

When you remove the child seat, turn switch **A** to the **"ON"** position to reactivate the airbag and so ensure the safety of your front passenger in the event of an impact. The associated warning lamp goes off.

Operating fault



If this warning lamp comes on in the instrument panel, contact a PEUGEOT dealer or a qualified workshop without delay to have the system checked. The airbags may no longer be deployed in the event of a serious impact. In this case, do not install a child seat or seat an adult on the front passenger seat.

Lateral airbags




System which protects the driver and front passenger in the event of a serious side impact in order to limit the risk of injury to the chest, between the hip and the shoulder. Each lateral airbag is fitted in the seat backrest frame, door side.

Deployment

A lateral airbag is deployed unilaterally in the event of a serious side impact applied to all or part of the side impact zone **B**, perpendicular to the longitudinal centreline of the vehicle on a horizontal plane and directed from the outside towards the inside of the vehicle.

The lateral airbag inflates between the hip and shoulder of the front occupant of the vehicle and the corresponding door trim panel.

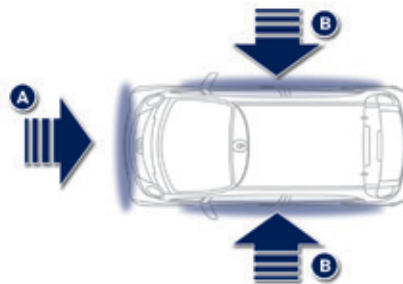

Impact detection zones

- A. Front impact zone.
- B. Side impact zone.

Curtain airbags

System which protects the driver and passengers in the event of a serious side impact in order to limit the risk of injury to the head.

Each curtain airbag is fitted in the pillars and the upper section of the passenger compartment.

Deployment

Each curtain airbag is deployed at the same time as the corresponding lateral airbag in the event of a serious side impact applied to all or part of the side impact zone **B**, perpendicular to the longitudinal centreline of the vehicle on a horizontal plane and directed from the outside towards the inside of the vehicle.

The curtain airbag inflates between the front or rear occupant of the vehicle and the windows.

Operating fault



If this warning lamp comes on in the instrument panel, contact a PEUGEOT dealer or a qualified workshop to have the system checked. The airbags may no longer be deployed in the event of a serious impact.



In the event of a minor impact or bump on the side of the vehicle or if the vehicle rolls over, the airbag may not be triggered.

In the event of a rear or front collision, the airbag is not triggered.

! For the airbags to be fully effective, observe the following safety rules:

Sit in a normal upright position.
Wear a correctly adjusted seat belt.
Do not leave anything between the occupants and the airbags (a child, pet, object...). This could hamper the operation of the airbags or injure the occupants.
After an accident or if the vehicle has been stolen or broken into, have the airbag systems checked.
All work on the airbag system must be carried out by a PEUGEOT dealer or a qualified workshop.
Even if all of the precautions mentioned are observed, a risk of injury or of minor burns to the head, chest or arms when an airbag is deployed cannot be ruled out. The bag inflates almost instantly (within a few milliseconds) then deflates within the same time discharging the hot gas via openings provided for this purpose.

Front airbags

Do not drive holding the steering wheel by its spokes or resting your hands on the centre part of the wheel.
Passengers must not place their feet on the dashboard.
Do not smoke as deployment of the airbags can cause burns or the risk of injury from a cigarette or pipe.
Never remove or pierce the steering wheel or hit it violently.
Do not fit or attach anything to the steering wheel or dashboard, this could cause injuries with deployment of the airbags.

Lateral airbags

Use only approved covers on the seats, compatible with the deployment the lateral airbags. For information on the range of seat covers suitable for your vehicle, you can contact a PEUGEOT dealer.
Refer to the "Accessories" section.
Do not fix or attach anything to the seat backs (clothing...). This could cause injury to the chest or arms if the lateral airbag is deployed.
Do not sit with the upper part of the body any nearer to the door than necessary.

Curtain airbags

Do not fix or attach anything to the roof. This could cause injury to the head if the curtain airbag is deployed.
If fitted on your vehicle, do not remove the grab handles installed on the roof, they play a part in securing the curtain airbags.

General points relating to child seats

Although one of PEUGEOT main criteria when designing your vehicle, the safety of your children also depends on you.

For maximum safety, please observe the following recommendations:

- in accordance with European regulations, **all children under the age of 12 or less than one and a half metres tall must travel in approved child seats suited to their weight**, on seats fitted with a seat belt or ISOFIX mountings*,
- **statistically, the safest seats in your vehicle for carrying children are the rear seats,**
- **a child weighing less than 9 kg must travel in the rearward facing position both in the front and in the rear.**

i **PEUGEOT recommends** that children should travel in the **outer rear seats** of your vehicle:

- **rearward facing** up to the age of 3,
- **forward facing** over the age of 3.


* The regulations on carrying children are specific to each country. Refer to the legislation in force in your country.

Child seat at the rear



Rearward facing

When a rearward facing child seat is installed **on a rear passenger seat**, move the vehicle's front seat forwards and straighten the backrest so that the rearward facing child seat does not touch the vehicle's front seat.

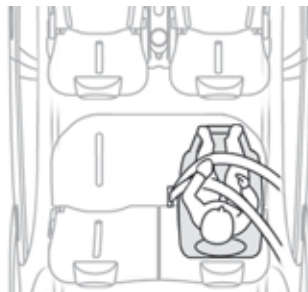

Forward facing

When a forward facing child seat is installed **on a rear passenger seat**, move the vehicle's front seat forwards and straighten the backrest so that the legs of the child in the forward facing child seat do not touch the vehicle's front seat.

! Ensure that the seat belt is correctly tightened. For child seats with a support leg, ensure that the support leg is in stable contact with the floor.

7

Child seat in the front*



Rearward facing

When a rearward facing child seat is installed on the **front passenger seat**, adjust the seat to the intermediate longitudinal position, with the backrest straightened.

The passenger's front airbag must be deactivated. Otherwise, **the child would risk being seriously injured or killed if the airbag were to inflate.**




Forward facing

When a forward facing child seat is installed on the **front passenger seat**, adjust the vehicle's seat to the intermediate longitudinal position with seat backrest straightened and leave the passenger's front airbag activated.



Ensure that the seat belt is correctly tensioned.

For child seats with a support leg, ensure that the support leg is in stable contact with the floor. If necessary, adjust the passenger seat.

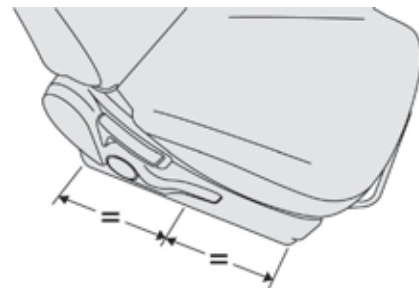

Passenger seat adjusted to the intermediate longitudinal position.

* Refer to the current legislation in your country before installing your child on the front seat.

Deactivating the passenger's front airbag

! Never install a rearward facing child restraint system on a seat protected by an active front airbag. This could cause the death of the child or serious injury.

The warning label present on both sides of the passenger's sun visor repeats this advice. In line with current legislation, the following tables contain this warning in all of the languages required.



Passenger airbag OFF

This label is located on the middle door pillar, passenger side.

! For information on deactivating the passenger's front airbag, refer to the "Airbags" section.



AR	لا يجب أبدا تركيب نظام لإجلاس الطفل الوجه باتجاه الراء على مقعد سيارة مجهز بوسادة أمان هوائية أمامية مغلقة، فقد يؤدي هذا إلى التسبب بموت الطفل أو بإصابات خطيرة لديه.
BG	НИКОГА НЕ инсталирайте детско столче на седалка с АКТИВИРАНА предна ВЪЗДУШНА ВЪЗГЛАВНИЦА. Това може да причини СМЪРТ или СЕРИОЗНО НАРАНАВАНЕ на детето.
CS	NIKDY neumistujte dětské zádržné zařízení orientované směrem dozadu na sedadlo chráněné AKTIVOVANÝM čelním AIRBAGEM. Hrozí nebezpečí SMRTI DÍTĚTE nebo VÁŽNĚHO ZRANĚNÍ.
DA	Brug ALDRIG en bagudvendt barnestol på et sæde, der er beskyttet af en AKTIV AIRBAG. BARNET risikerer at blive ALVORLIGT KVÆSTET eller DRÆBT.
DE	Montieren Sie auf einem Sitz mit AKTIVIERTEM Front-Airbag NIEMALS einen Kindersitz oder eine Babyschale entgegen der Fahrtrichtung, das Kind könnte schwere oder sogar tödliche Verletzungen erleiden.
EL	Μη χρησιμοποιείτε ΠΟΤΕ παιδικό κάθισμα με την πλάτη του προς το εμπρός μέρος του αυτοκινήτου, σε μια θέση που προστατεύεται από ΜΕΤΩΠΙΚΟ αερόσακο που είναι ΕΝΕΡΓΟΣ. Αυτό μπορεί να έχει σαν συνέπεια το ΘΑΝΑΤΟ ή το ΣΟΒΑΡΟ ΤΡΑΥΜΑΤΙΣΜΟ του ΠΑΙΔΙΟΥ
EN	NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur
ES	NO INSTALAR NUNCA un sistema de retención para niños de espaldas al sentido de la marcha en un asiento protegido mediante un AIRBAG frontal ACTIVADO, ya que podría causar lesiones GRAVES o incluso la MUERTE del niño.
ET	Ärge MITTE KUNAGI paigaldage "seljaga sõidusuunas" lapseistet juhi kõrvalistmele, mille ESITURVAPADI on AKTIVEERITUD. Turvapadja avanemine võib last TÕSISELT või ELUOHTLIKULT vigastada.
FI	ÄLÄ KOSKAAN aseta lapsen turvaistuinta selkää ajosuuntaan istuimelle, jonka edessä suojana on käyttöön aktivoitu TURVATYYNYY. Sen laukeaminen voi aiheuttaa LAPSEN KUOLEMAN tai VAKAVAN LOUKKAANTUMISEN.
FR	NE JAMAIS installer de système de retenue pour enfants faisant face vers l'arrière sur un siège protégé par un COUSSIN GONFLABLE frontal ACTIF. Cela peut provoquer la MORT de l'ENFANT ou le BLESSER GRAVEMENT
HR	NIKADA ne postavljati dječju sjedalicu leđima u smjeru vožnje na sjedalo zaštićeno UKLJUČENIM prednjim ZRAČNIM JASTUKOM. To bi moglo uzrokovati SMRT ili TEŠKU OZLJEDU djeteta.
HU	SOHA ne használjon menetiránynak háttal beszerelt gyermekülést AKTIVÁLT (BEKAPCSOLT) FRONTLÉGSZÁKKAL védett ülésen. Ez a gyermek HALÁLÁT vagy SÜLYÖS SÉRÜLÉSÉT okozhatja.
IT	NON installare MAI seggiolini per bambini posizionati in senso contrario a quello di marcia su un sedile protetto da un AIRBAG frontale ATTIVATO. Ciò potrebbe provocare la MORTE o FERITE GRAVI al bambino.
LT	NIEKADA neįrengkite vaiko prilaikymo priemonės su atgal atgrežtu vaiku ant sėdynės, kuri saugoma VEIKIANČIOS priekinės ORO PAGALVĖS. Išsiskleidus oro pagalvei vaikas gali būti MIRTINAI arba SUNKIAI TRAUMUOTAS.
LV	NEKAD NEuzstādiet uz aizmuguri vērstu bērnu sēdekli priekšējā pasažiera sēdvietā, kurā ir AKTIVIZĒTS priekšējais DROŠĪBAS GAISA SPILVENS. Tas var izraisīt BĒRNA NĀVI vai radīt NOPIETNUS IEVAINOJUMUS.

MT	Qatt m'ghandek thalli tifel/tifla marbut f'siggu dahru lejn l-Airbag attiva, ghaliex tista' tikkawza korriment serju jew anke mewt lit-tifel/tifla
NL	Plaats NOOIT een kinderzitje met de rug in de rijrichting op een zitplaats waarvan de AIRBAG is INGESCHAKELD. Bij het afgaan van de airbag kan het KIND LEVENSGEVAARLIJK GEWOND RAKEN
NO	Installer ALDRI et barnesete med ryggen mot kjøreretningen i et sete som er beskyttet med en frontal AKTIVERT KOLLISJONSPUTE, BARNET risikerer å bli DREPT eller HARDT SKADET.
PL	NIGDY nie instalować fotelika dziecięcego w pozycji "tyłem do kierunku jazdy" na siedzeniu wyposażonym w CZOŁOWĄ PODUSZKĘ POWIETRZNĄ w stanie AKTYWNYM. Może to doprowadzić do ŚMIERCI DZIECKA lub spowodować u niego POWAŻNE OBRAŻENIA CIAŁA.
PT	NUNCA instale um sistema de retenção para crianças de costas para a estrada num banco protegido por um AIRBAG frontal ACTIVADO. Esta instalação poderá provocar FERIMENTOS GRAVES ou a MORTE da CRIANÇA.
RO	Nu instalati NICIODATA un sistem de retenere pentru copii, dispus cu spatele in directia de mers, pe un loc din vehicul protejat cu AIRBAG frontal ACTIVAT. Aceasta ar putea provoca MOARTEA COPILULUI sau RANIREA lui GRAVA.
RU	ВО ВСЕХ СЛУЧАЯХ ЗАПРЕЩАЕТСЯ использовать обращенное назад детское удерживающее устройство на сиденье, защищенном ФУНКЦИОНИРУЮЩЕЙ ПОДУШКОЙ БЕЗОПАСНОСТИ, установленной перед этим сиденьем. Это может привести к ГИБЕЛИ РЕБЕНКА или НАНЕСЕНИЮ ЕМУ СЕРЬЕЗНЫХ ТЕЛЕСНЫХ ПОВРЕЖДЕНИЙ
SK	NIKDY neinštalujte detské zádržné zariadenie orientované smerom dozadu na sedadlo chránené AKTIVOVANÝM čelným AIRBAGOM. Mohlo by dôjsť k SMRTEĽNÉMU alebo VÁŽNEMU PORANENIU DIEŤAŤA.
SL	NIKOLI ne nameščajte otroškega sedeža s hrbtom v smeri vožnje, če je VARNOSTNA BLAZINA pred sprednjim sopotnikovim sedežem AKTIVIRANA. Takšna namestitve lahko povzroči SMRT OTROKA ali HUDE POŠKODBE.
SR	NIKADA ne koristite dečje sedište koje se okreće unazad na sedištu zaštićenim AKTIVNIM VAZDUŠNIM JASTUKOM ispred njega, jer mogu nastupiti SMRT ili OZBILJNA POVREDA DETETA.
SV	Passagerarkrockkudden fram MÅSTE vara avaktiverad om en bakåtvänd bilbarnstol installerats på denna plats. Annars riskerar barnet att DÖDAS eller SKADAS ALLVARLIGT.
TR	KESİNLİKLE HAVA YASTIĞI AKTİF olan ön koltuğa yüzü arkaya dönük bir çocuk koltuğu yerleştirmeyiniz. Bu ÇOCUĞUN ÖLMESİNE veya ÇOK AĞIR YARALANMASINA sebep olabilir.

Child seats recommended by PEUGEOT

PEUGEOT offers a range of recommended child seats which are secured using a **three point seat belt**.

Group 0+: from birth to 13 kg



L1

"RÖMER Baby-Safe Plus"
Installed in the rearward facing position.

Groups 2 and 3: from 15 to 36 kg



L4

"KLIPPAN Optima"
From 22 kg (approximately 6 years), the booster is used on its own.



L5

"RÖMER KIDFIX"
Can be fitted to the vehicle's ISOFIX mountings.
The child is restrained by the seat belt.

Installing child seats using the seat belt

In accordance with European regulations, this table indicates the options for installing child seats secured using a seat belt and universally approved **(a)** in accordance with the weight of the child and the seat in the vehicle.

Weight of the child and indicative age				
Seat	Under 13 kg (groups 0 (b) and 0+) Up to approx 1 year	From 9 to 18 kg (group 1) 1 to 3 years approx	From 15 to 25 kg (group 2) 3 to 6 years approx	From 22 to 36 kg (group 3) 6 to 10 years approx
Front passenger seat (c) (e) 	L1	ISOFIX ROMER Duo Plus (secured with the seat belt)	X	X
Outer rear seats (d) 	U	U	U	U

(a) Universal child seat : child seat that can be installed in all vehicles using a seat belt.

(b) Group 0: from birth to 10 kg. Shells seats and baby carriers cannot be installed in the front passenger seat.

(c) Consult the legislation in force in your country before installing your child on this seat.

(d) To install a child seat on a rear seat, rearward or forward facing, move the front seat forward, then straighten the backrest to allow enough room for the child seat and the child's legs.

(e) When a rearward facing child seat is installed on the **front passenger seat**, the passenger's airbag must be deactivated. Otherwise, **the child risks being seriously injured or killed if the airbag is deployed**. When a forward facing child seat is installed on the **front passenger seat**, the passenger's airbag must remain active.

U: Seat suitable for the installation of a child seat secured using a seat belt and universally approved, rearward facing and/or forward facing.

X: Seat not suitable for the installation of a child seat of the weight group indicated.

! Remove and stow the head restraint before installing a child seat with a backrest on a passenger seat. Refit the head restraint once the child seat has been removed.

Advice on child seats

! The incorrect installation of a child seat in a vehicle compromises the child's protection in the event of an accident.

Check that there is no seat belt or seat belt buckle under the child seat as this could destabilise it.

Remember to fasten the seat belts or the child seat harnesses keeping the slack in relation to the child's body to a minimum, even for short journeys.

When installing a child seat using the seat belt, check that the seat belt is tightened correctly on the child seat and that it secures the child seat firmly on the seat of your vehicle.

At the rear seats, always leave sufficient space between the front seat and:

- a rearward facing child seat,
- the feet of a child seated in a forward facing child seat.

For this, move the front seat forward and if necessary straighten its backrest.

For optimum installation of a forward facing child seat, ensure that the back of the child seat is as close as possible to the backrest of the vehicle's seat, or in contact if possible.

The head restraint must be removed before installing a child seat with a backrest on the passenger seat. Ensure that the head restraint is stowed or attached securely so that it is not thrown around the vehicle in the event of sharp braking.

Refit the head restraint as soon as the child seat is removed.

Children at the front

The legislation on carrying a child on the front passenger seat is specific to each country.

Refer to the legislation in force in your country.

Deactivate the passenger's airbag when a rearward facing child seat is installed on the front seat.

Otherwise, the child would risk being seriously injured or killed if the airbag were deployed.

Installing a booster seat

The chest part of the seat belt must be positioned on the child's shoulder without touching the neck.

Ensure that the lap part of the seat belt passes correctly over the child's thighs. PEUGEOT recommends the use of a booster seat which has a back, fitted with a seat belt guide at shoulder level.

As a safety precaution, do not leave:

- one or more children alone and unsupervised in a vehicle,
- a child or an animal in a vehicle which is exposed to the sun, with the windows closed,
- the keys within reach of children inside the vehicle.

To prevent accidental opening of the doors, use the "Child lock".


Take care not to open the rear windows by more than one third.

To protect young children from the rays of the sun, fit side blinds on the rear windows.

"ISOFIX" mountings

Your vehicle has been approved in accordance with the **latest ISOFIX regulation**.

The seats, represented below, are fitted with regulation ISOFIX mountings:

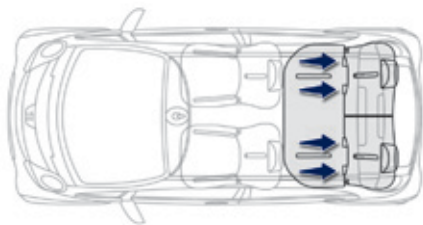

There are three rings for each seat:

- two rings **A** located in the angle between the vehicle seat's cushion and backrest, indicated by a marking



- a ring **B** for securing the upper strap called the **TOP TETHER**, located in the boot. It is indicated by a marking.

The TOP TETHER is used to secure the upper strap of child seats that have one. This arrangement limits the forward tipping of the child seat in the event of a front impact.

This ISOFIX mounting system provides fast, reliable and safe fitting of the child seat in your vehicle.

The **ISOFIX child seats** are fitted with two latches which are secured on the two rings **A**. Some seats also have an **upper strap** which is secured to the ring **B**.

To secure the child seat to the TOP TETHER:

- pass the top strap of the child seat centrally over the top of the vehicle seat backrest,
- raise the TOP TETHER cover,
- secure the hook on the upper strap to the ring **B**,
- tighten the upper strap.

i The incorrect installation of a child seat in a vehicle compromises the child's protection in the event of an accident.


! Follow precisely the fitting instructions in the installation guide provided with the child seat

For information on the possibilities for installing ISOFIX child seats in your vehicle, refer to the summary table.

ISOFIX child seats recommended by PEUGEOT and approved for your vehicle

RÖMER BabySafe Plus ISOFIX (size category E)

Group 0+: up to 13 kg

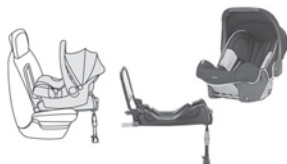

It is installed in the rearward facing position using an ISOFIX base which attaches to the rings **A**. The base has a support leg, adjustable for height, that sits on the vehicle floor. This child seat can also be secured using a child seat. In this case, only the shell is used and is secured to the vehicle's seat using the three-point seat belt.

RÖMER Duo Plus ISOFIX (size class B1)

Group 1: from 9 to 18 kg



It is installed only in the forward facing position. Secured to the rings **A**, as well as ring **B**, called the Top Tether, using an upper strap. Three angles for the shell: sitting, inclined and lying positions. This child seat can also be used on seats which are not fitted with ISOFIX mountings. In this case, it must be attached to the vehicle seat using the three point seat belt.



Follow the instructions for fitting the child seat given in their manufacturer's installation guide.

Installing ISOFIX child seats

In accordance with European regulations, this table indicates the options for the installation of ISOFIX child seats on the vehicle seats fitted with ISOFIX mountings.

In the case of the universal and semi-universal ISOFIX child seats, the child seat's ISOFIX size category, determined by a letter between **A** and **G**, is indicated on the child seat next to the ISOFIX logo.

	Weight of the child / indicative age									
	Less than 10 kg (group 0) Up to 6 months approx		Less than 10 kg (group 0) Less than 13 kg (group 0+) Up to 1 year approx			From 9 to 18 kg (group 1) From 1 to 3 years approx				
Type of ISOFIX child seat	Infant car seat*		rearward facing			rearward facing		forward facing		
ISOFIX size category	F	G	C	D	E	C	D	A	B	B1
Universal and semi-universal ISOFIX child seats which can be installed on the outer rear seats	X		X	X	RÖMER BabySafe Plus ISOFIX	X	X	IUF		

IUF: seat suitable for the installation of an Isofix Universal seat, Forward facing and secured using the "Top Tether" upper strap.

X: seat which is not suitable for the installation of an ISOFIX seat of the size category indicated.


* Infant car seats and "car cots" cannot be installed on the front passenger seat.

! Remove and stow the head restraint before installing a child seat with a backrest on a passenger seat. Refit the head restraint once the child seat has been removed.

Child lock

Mechanical system to prevent opening of the rear doors using their interior controls.

The control is located on the edge of each rear door.

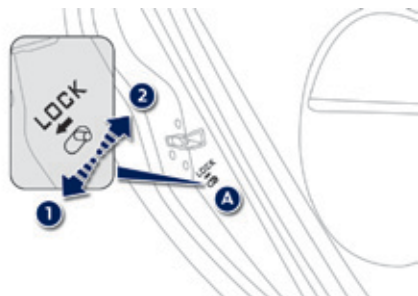

Child lock on

☞ Lower the control **A** to position **1**.

Child lock off

☞ Raise the control **A** to position **2**.

Charging the main battery

There are two types of charging you can use: normal or fast.

Normal charging should be used in preference; it is done from a domestic mains power point.

Fast charging is done at a compatible fast charging station.

Normal charging

- ! Before connecting, check that the electrical installation you want to use meets standards* and is compatible with a current rating of 8A. In particular, check that the electric power point is of suitable quality. There are sockets available that are specially designed for charging electric vehicles.


In all cases, it is recommended that that you first have an initial check and then regular checks on your installation by a qualified electrician.

* For example, in France the standard is NF C 15-100.

- i In most European countries, PEUGEOT has established a partnership with a specialist company that can check and bring your electrical installation up to standard. For more information, contact a PEUGEOT dealer.


- ! You must always use only a genuine PEUGEOT charging cable.

- ! In the event of damage to or deterioration of the charging cable or control unit, do not use it. Contact a PEUGEOT dealer if in doubt or for a replacement.

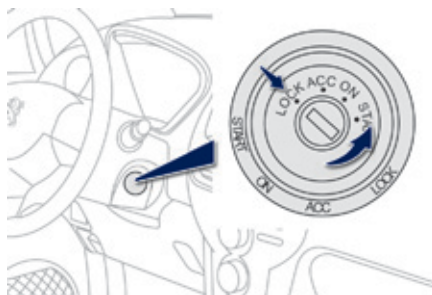

- ☞ Apply the parking brake and put the drive selector in position **P**.
- ☞ Switch off all electrical consumers and turn the ignition switch to the "**LOCK**" position.

- i If the ambient temperature is lower than -25° C, charging may not be possible.

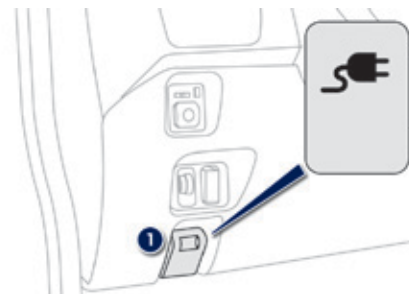

- ☞ Pull lever **1**, located at the bottom of the dashboard, driver's side, to open the access flap for the normal charging socket (right hand side of the vehicle).
- ☞ Take the charging cable from the storage bag provided. This cable has a control unit.
- ☞ Connect the charging cable to a compatible standard power socket. On connecting the cable, the three **POWER**, **FAULT** and **CHARGING** lamps all come on temporarily, then only green **POWER** lamp stays on.

!




Do not use an electrical extension, multi-gang socket, adaptor or timer.


8



! Use the cord supplied to hook the control unit, so that it does not weigh down on the power point (risk of damage to the charging cable or electric power point).

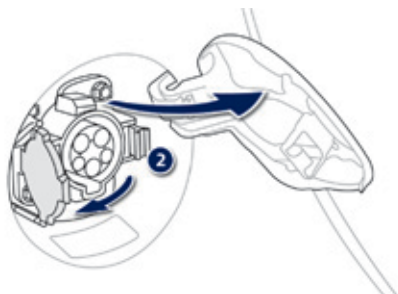

☞ Press the latch 2 to open the socket cover.

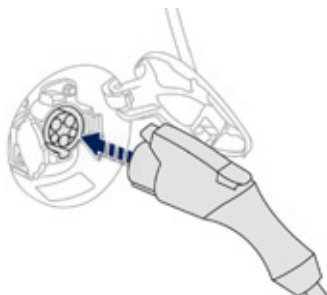

- ☞ Ensure that there is no foreign object on the vehicle's socket.
- ☞ Remove the protective cover from the charging cable.
- ☞ Insert the charging plug into the socket without pressing the button, until it **clicks into place**.

! Do not touch the metal end of the normal charging socket or of the charging cable (risk of electrocution and/or faults).

! Never connect or disconnect the cable or charging plug with **wet hands** (risk of electrocution).



☞ Check that the charging lamp in the instrument panel and the green **CHARGING** lamp in the control unit are on fixed.


If this is not the case, charging has not started; repeat the procedure, ensuring that all connections are correct.

The state of charge indicator for the main battery is displayed in the instrument panel and the number of bars illuminated increases as the battery is charged.

i The start of charging may be accompanied by the noise of a fan running. This noise is perfectly normal.

i The charge may be interrupted at any time by withdrawing the charging plug.


! If exceptionally you have to interrupt the charge by disconnecting the charging cable from the power point, it is essential to first press the **Manual Stop** button on the control unit.

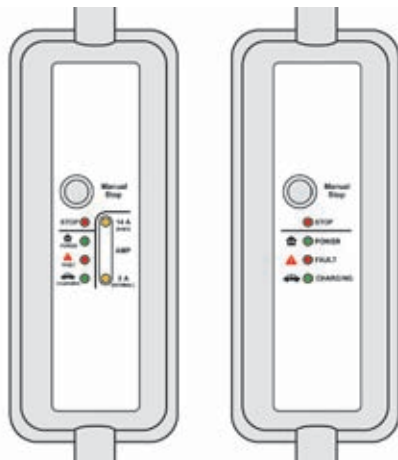

Control unit


There are four indicator lamps:

- **STOP:** on red.
It indicates that charging has been interrupted by a press on the **Manual Stop button**. This action is essential before disconnecting the charging cable from the power point when charging.
- **POWER:** on green.
It indicates that the electric connection has been established. If it does not come on, check that the connections are correct. If the problem persists, contact a PEUGEOT dealer or a qualified workshop.
- **FAULT:** on red.
It indicates the presence of a fault. Check that the connections are correct. If this warning lamp does not go off, contact a PEUGEOT dealer or a qualified workshop.
- **CHARGING:** on green.
It indicates that charging is in progress. If it does not come on, check that the connections are correct. If the problem persists, contact a PEUGEOT dealer or a qualified workshop.

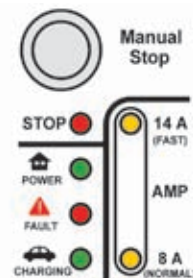

This type of control unit that has a system for recognising the type of power point (depending on country). It detects the power rating of your domestic power point and is able to support and select the best current rating to ensure safe charging:

- **14 A (FAST):** if your electrical installation supports it.
- **8 A (NORMAL):** if your electrical installation is standard.

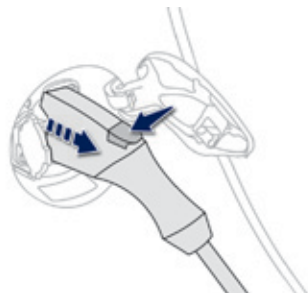

The charge lamp in the instrument panel going off and flashing of the green **CHARGING** lamp indicate that charging is complete.

- ☞ Press the button to remove the charging plug.
- ☞ Refit the protective cover to the charging cable.
- ☞ Close the charging socket cover, then the flap.
- ☞ Disconnect the charging cable from the power point.
- ☞ Stow the charging cable in the bag provided.

i As a safety measure, the motor will not start when the charging cable is connected to the vehicle's socket. Also, any attempt to start the motor interrupts the charging procedure. It will then be necessary to disconnect and reconnect the charging cable plug to continue charging.

! If the 12V ancillaries battery is discharged, it is not possible to charge the main battery.

! If you wear a pacemaker or other electrical medical device, you must not stay inside or near the vehicle during charging. It is also important that you take advice from your doctor on the precautions to take and observe.

! While charging, do not do anything under the bonnet, even with the ignition off, as the cooling fan may start at any time (risk of injury). You must wait for at least one hour after the end of the charging procedure before doing anything under the bonnet, as some areas can be extremely hot (risk of burns).

! After charging, close the charging socket cover and flap. Take care to avoid the ingress of water or dust to the socket and its cover or the charging plug (risk of fire or electrocution).

! After removing the charging plug from the vehicle's socket, do not leave the cable connected to the electric power point (risk of short circuit or electrocution if it is contacted or immersed in water).

! In the event of an accident or an impact to the underbody of the vehicle (contact with a high kerb, a terminal, street furniture, ...), the electric circuit or the main battery may be damaged. Have your vehicle checked by a PEUGEOT dealer or a qualified workshop. Never touch the 300 V components, nor the orange cables.

! In the event of serious damage to the main battery, never touch liquids coming from this component. In the event of contact with your body, wash abundantly with water and contact a doctor without delay.

i **To optimise the service life of the main battery, recharge it completely every 15 days.**

For a complete charge, follow the normal charging procedure (domestic power point) without interruption, until it stops automatically (charging warning lamp off in the instrument panel).

In addition, **every 3 months, carry out this complete recharge of the main battery from a state of charge of 2 bars or less.**

i **Vehicle out of use for a long period**


When your vehicle is going to be out of use for a long period, charge the main battery completely every three months (following the normal charging procedure).

Before charging, check that the ancillaries battery is not disconnected or discharged. If this is the case, refer to the "ancillaries battery" section for reconnecting or charging the battery.

Using a public charging points for normal charging

Several types of electrical socket may be available for charging your vehicle.


Before starting the charging procedure, use the table below to identify the correct type of socket and use the corresponding charging cable.

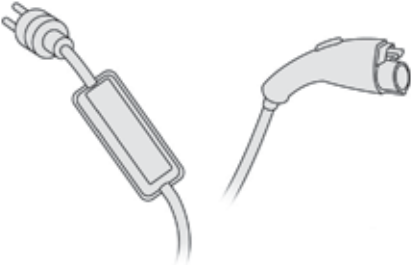Domestic power point	"Mode 3 - Type 2" socket	"Mode 3 - Type 3" socket
		
"Mode 2" cable (supplied with your vehicle)	"Mode 3 - Type 2" cable (available as an accessory)	"Mode 3 - Type 3" cable (available as an accessory)
		


i Some public charging points include a charging cable.
In this case, use the cable provided.

Fast charging*

! Check the compatibility of the charging station and its charging cable with your vehicle.

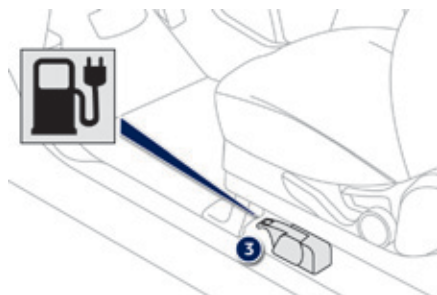


- ☞ Apply the parking brake and put the drive selector in position **P**.
- ☞ Switch off all electrical consumers and turn the ignition switch to the **"LOCK"** position.
- ☞ Pull lever **3**, located alongside the driver's seat, outer side, to open the access flap for the fast charging socket (left hand side of the vehicle).

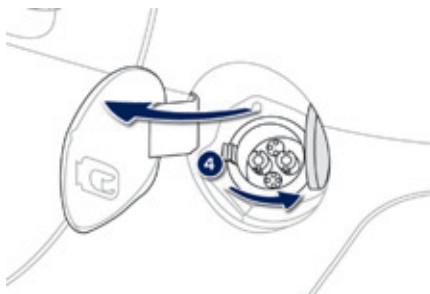

- ☞ Press latch **4** to open the socket cover.
- ☞ Ensure that there is no foreign body on the vehicle's charging socket.

! Do not touch the metal end of the normal charging socket or of the charging cable.
Risk of electrocution and/or faults.

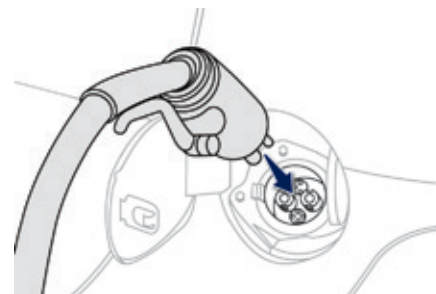

- ☞ Connect the charging cable of the charging station to the vehicle following the instructions on use of the station.

* Depending on equipment.



- ☞ Check that the charging warning lamp in the instrument panel is on fixed.

If this is not the case, charging has not started; check the operating instructions for the charging station.

The charging warning lamp in the instrument panel goes off when charging is complete.

- ☞ Disconnect the charging cable following the instructions for the charging terminal.
- ☞ Close the charging socket cover and the flap.

- i If the ambient temperature is below 0 °C, the charging time may be longer. If the ambient temperature is below -25 °C, charging may not be possible.

- i During the fast charge, the vehicle's air conditioning may start automatically, if needed to cool the main battery. It is therefore perfectly normal to hear the noise of a fan running from outside the vehicle and to see a puddle of water form under the vehicle.

- i As a safety measure, the motor will not start when the charging cable is connected to the vehicle's socket. Also, any attempt to start the motor interrupts the charging procedure. It will then be necessary to disconnect and reconnect the charging cable plug to continue charging, following the instructions for using the charging station.

i Vehicle out of use for a long period

When your vehicle is going to be out of use for a long period, charge the main battery completely every three months (following the normal charging procedure).

Before charging, check that the ancillaries battery is not disconnected or discharged. If this is the case, refer to the "ancillaries battery" section for reconnecting or charging the battery.

- i Fast charging stops automatically when the battery is around 80 % charged. It is possible to attain a level of 100 % charged by restarting the procedure. However, the time taken by this additional charge will be relatively long, as the charging rate is reduced.

- ! After charging, close the charging socket cover and flap. Take care to avoid the ingress of water or dust to the socket and its cover or the charging plug. Risk of fire or electrocution.

Ancillaries battery

All of the electrical components of your vehicle (other than the electric motor, the heating and the air conditioning) are powered by this 12 V ancillaries battery.


It is located in the front compartment and is recharged by the main battery, during phases of operation ("Ready" lamp on in the instrument panel) and charging.

! If the ancillaries battery is discharged, it will not be possible to start the motor and the main battery cannot be charged.

i Disconnecting the battery is not recommended. However, if the vehicle is not to be used for a prolonged period of more than a month, it may be necessary to disconnect and store it to avoid the electrolyte freezing.


! After prolonged disconnection of the battery, you must contact a PEUGEOT dealer or a qualified workshop to have the electronic control unit reinitialised.

Access to the battery

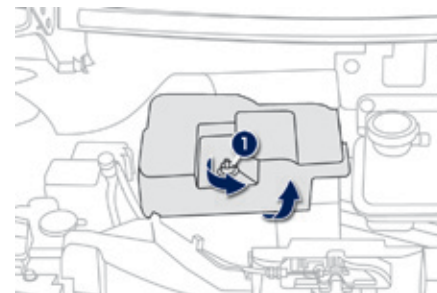


- ☞ Open the front bonnet using the interior release lever, then the exterior safety catch.
- ☞ Secure the bonnet stay.
- ☞ Slacken nut **1**.
- ☞ Remove the battery protective cover for access to the two terminals.

Starting using a battery on another vehicle

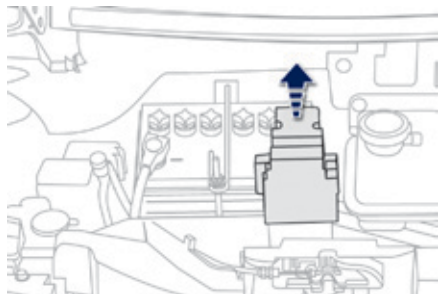


- ! Ensure that the electrolyte is not frozen. Check the electrolyte level and top up with distilled water if necessary (refer to the "checking levels" section in this document).

- ☞ Lift the protective cover on the (+) terminal.

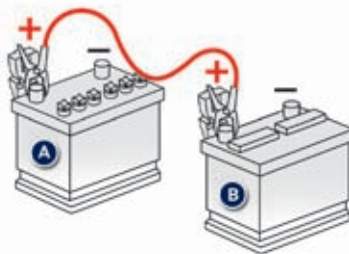

- ! Check that the battery on the other vehicle is a 12 V battery.

- ☞ Connect one end of the red cable to the (+) terminal of your discharged battery **A**, then the other end to the (+) terminal of the battery on the other vehicle **B**.

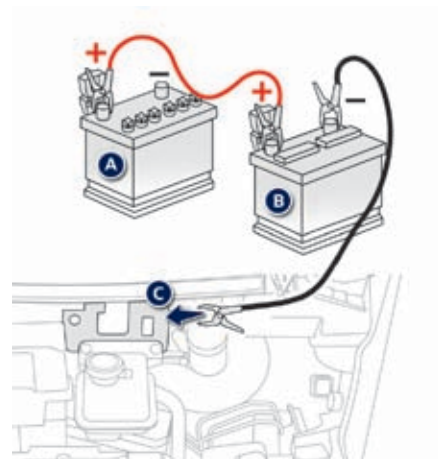

- ☞ Connect one end of the green or black cable to the (-) terminal of the battery on the other vehicle **B**.
- ☞ Connect the other end the green or black cable to the earth point **C** of your vehicle.

Charging the battery using a battery charger

- ☞ Start the other vehicle and wait a few minutes.
- ☞ Turn the ignition key on your vehicle, until the "Ready" lamp comes on.
- ☞ Disconnect the cables in the reverse order.
- ☞ Refit the battery protective cover and tighten the fixing screw.

If the "Ready" lamp does not come on, proceed as follows:


- ☞ Leave the cables connected.
- ☞ Return the ignition switch on your vehicle to the "**LOCK**" position.
- ☞ Put the main battery on charge, following the procedure for normal charging (see the "charging the main battery" section).
- ☞ When the charging warning lamp in the instrument panel comes on fixed, disconnect the cables.
- ☞ Leave the battery on charge for at least one hour.
- ☞ Turn the ignition key on your vehicle, until the "Ready" lamp comes on.

If the problem persists, contact a PEUGEOT dealer or a qualified workshop.


- ☞ Remove the protective cover from the battery.



Ensure that the electrolyte is not frozen. Check the electrolyte level and top up with distilled water if necessary (refer to the "checking levels" section).

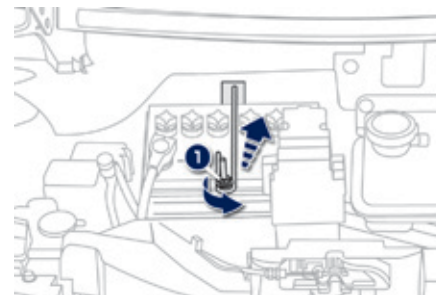

- ☞ Slacken nut 1 and lift off the retaining bar.

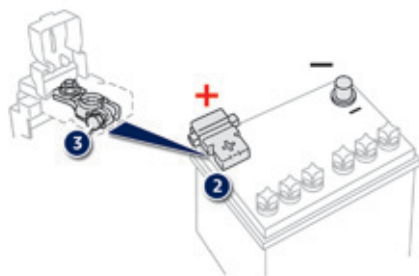

- ☞ Disconnect the negative (-) terminal.
- ☞ Lift the protective cover on the (+) terminal **2**.
- ☞ Slacken nut **3**.
- ☞ Disconnect the positive (+) terminal.
- ☞ Remove the battery.
- ☞ Charge the battery following the instructions given by the manufacturer of the battery charger.
- ☞ Reconnect the battery starting with the (+) cable.

i Ensure that the battery posts and cable terminals are clean. If they are covered with sulphates (whitish or greenish deposit), disconnect and clean them.

! Never charge the battery without first disconnecting the terminals and removing it from the vehicle. Do not disconnect the terminals when the "Ready" lamp is on, nor when the vehicle is being charged.

Before disconnecting

You must wait 2 minutes after switching off the ignition before disconnecting the battery.

After reconnecting

After reconnecting the battery, switch on the ignition and wait 1 minute before starting, to allow initialisation of the electronic systems. However, if minor problems persist after doing this, contact a PEUGEOT dealer or a qualified workshop.

Remember to enter the radio code yourself, referring to the relevant section.

☘ Batteries contain harmful substances such as sulphuric acid and lead. They must be disposed of in line with legal requirements and never put out with household waste. Take used batteries to an authorised collection point.

Temporary puncture repair kit

Complete system consisting of a compressor and a sealant cartridge which permits the **temporary repair** of a tyre so that you can drive to the nearest garage.


It is designed to repair most punctures which could affect the tyre, located on the tyre tread or shoulder.



Access to the kit


This kit is installed in the storage box, under the rear seat, right hand side.

You must therefore remove the rear seat cushion for access to the kit.

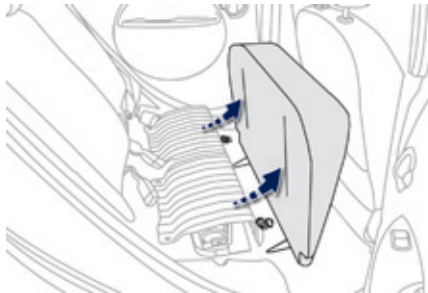

Removing the rear seat cushion


- ☞ Pull the controls **A** forwards to release the rear seat cushion.
- ☞ Lift the front of the cushion and tip it upwards to remove it.

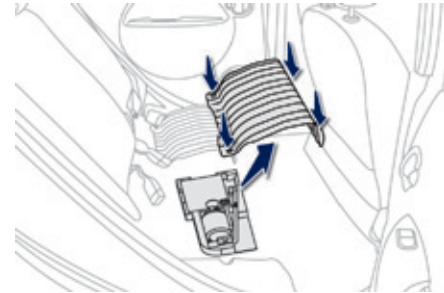

Removing the metal cover

- ☞ Remove the four "butterfly" screws.
- ☞ Remove the metal cover.

You now have access to the repair kit.

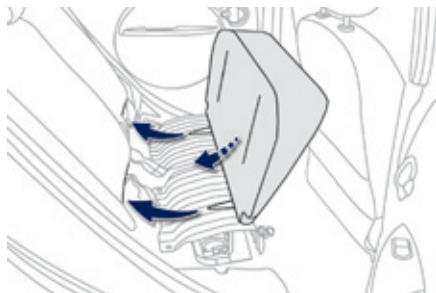


Refitting the rear seat cushion


- ☞ Put the metal cover back into place.
- ☞ Refit the four "butterfly" screws.
- ☞ Insert the metal hooks into the seat backrest.
- ☞ Fold the seat cushion down until it locks in place.

! When refitting the cushion, take care not to trap the seat belt buckles.

Composition of the kit

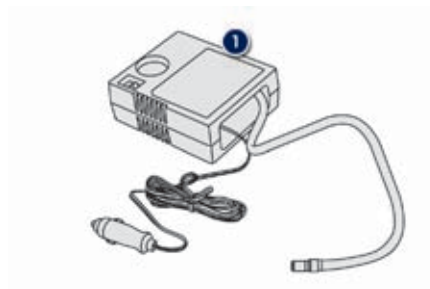


1. 12 V compressor with integral pressure gauge, to measure and adjust the tyre pressure.

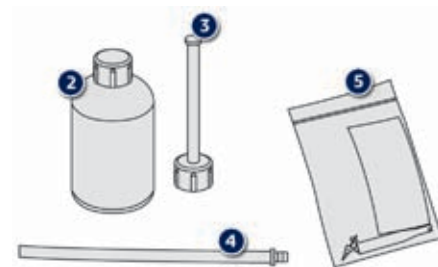

2. Sealant cartridge for the temporary repair of a tyre.
3. Injection pipe.
4. Suction pipe, to remove the sealant product if necessary.
5. Sachet containing a replacement valve core, a tool for removing/refitting the valve core and a speed restriction sticker.

i The speed restriction sticker must be affixed to the vehicle's steering wheel to remind you that a wheel is in temporary use.
Do not exceed a speed of 50 mph (80 km/h) when driving with a tyre repaired using this type of kit.

Repair procedure

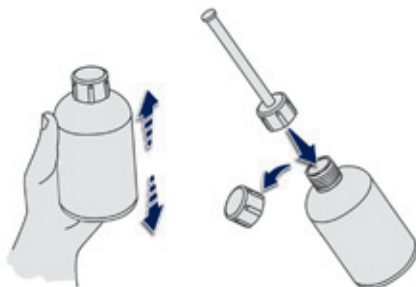


1. Sealing

- ☞ Switch off the ignition.
- ☞ Indicate on the speed restriction sticker provided, the wheel to be repaired, then fix it to the steering wheel as a reminder that a wheel is in temporary use.
- ☞ Shake the sealant cartridge, remove the cap and screw on the injection pipe.

i Avoid removing any foreign bodies which have penetrated into the tyre.



- ☞ Remove the valve cap for the tyre to be repaired.
- ☞ Remove the valve core using the tool provided, and store it in a clean place.
- ☞ Connect the injection pipe to the valve of the tyre to be repaired.

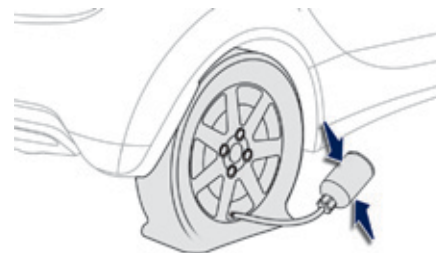

- ☞ Tap the sealant cartridge (top down) several times with your hand, so as to inject **all of the product** into the tyre.
- ☞ Remove the injection pipe.
- ☞ Refit the valve core and tighten it using the tool provided.




Take care, this product is harmful (e.g. ethylene-glycol, colophony...) if swallowed and causes irritation to the eyes.

Keep it out of reach of children.

The use-by date of the sealant is marked on the cartridge.

After use, do not discard the empty cartridge but take it to a PEUGEOT dealer (France) or an authorised waste disposal site.

Don't forget to obtain a replacement cartridge; they are available from a PEUGEOT dealer or a qualified workshop.

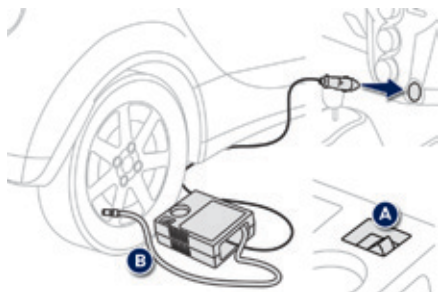

2. Inflation

- ☞ Check that the compressor switch **A** is in the "**OFF**" position.
- ☞ Uncoil the compressor pipe **B**.

- ☞ Connect this pipe to the valve of the repaired wheel.
 - ☞ Connect the compressor's electric plug to the vehicle's 12 V socket (ignition switch in position "ON" or "ACC").
 - ☞ Start the compressor by turning the switch **A** to the "**ON**" position.
 - ☞ Using the compressor, adjust the pressure in accordance with the vehicle's tyre pressure label (located in the driver's door aperture).
- A loss of pressure indicates that the puncture has not been fully plugged; contact a PEUGEOT dealer or a qualified workshop for assistance.
- ☞ Remove the compressor and stow the kit.
 - ☞ Drive off straight away at reduced speed (50 mph [80 km/h] max) limiting the distance travelled to approximately 120 miles (200 km).

i If after around 5 to 7 minutes the pressure is not attained, this indicates that the tyre is not repairable; contact a PEUGEOT dealer or a qualified workshop for assistance.

! As soon as possible, go to a PEUGEOT dealer or a qualified workshop. Tell the technician that you have used the kit. After checking, the technician will advise you whether the tyre can be repaired or must be replaced.

Changing a wheel

i Parking the vehicle

Immobilise the vehicle where it does not block traffic: the ground must be level, stable and not slippery.

Apply the parking brake, switch off the ignition and put the drive selector in position **P** to lock the wheels.

If necessary, place a chock under the wheel diagonally opposite the wheel to be changed.

You must ensure that the occupants get out of the vehicle and wait where they are safe.

Never go underneath a vehicle raised using a jack; use an axle stand.

Tools required

- A jack: for lifting the vehicle.
- A wheelbrace: for removing and refitting the wheel bolts.
- A handle: for operating the jack.


These tools are not supplied with your vehicle.

i Wheel with wheel trim



When removing the wheel, first remove the wheel trim using the wheelbrace, by pulling at the valve hole.

When fitting the wheel, refit the wheel trim starting by aligning the valve hole with the valve, and then press on the edge of the trim with the palm of your hand.


Removing a wheel

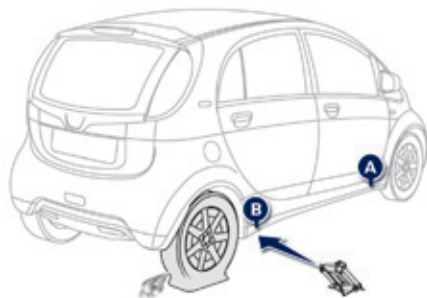

- ☞ Slacken the bolts using the wheelbrace.
- ☞ Position the foot of the jack on the ground and ensure that it is directly below the front **A** or rear **B** jacking point provided on the underbody, whichever is closest to the wheel to be changed.

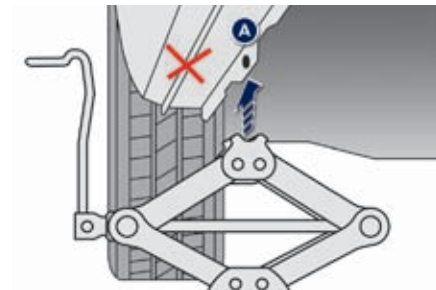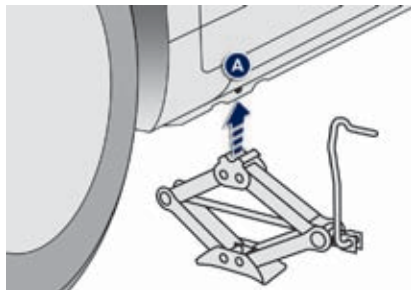

- ☞ Extend the jack until its head comes into contact with the jacking point **A** or **B** used. The vehicle's contact surface **A** or **B** must be engaged with the central part of the head of the jack.
- ☞ Raise the vehicle until there is sufficient space between the wheel and the ground.

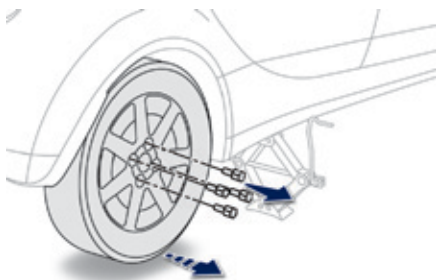


- ☞ Remove the bolts and store them in a clean place.
- ☞ Remove the wheel.




Ensure that the jack is stable. If the ground is slippery or loose, the jack might slip or drop - Risk of injury!
Take care to position the jack only at one of the vehicle's jacking points **A** or **B** under the vehicle, ensuring that the contact surface of the vehicle's jacking point is centred on the head of the jack. Otherwise there is a risk of damage to the vehicle and/or that the jack might drop - Risk of injury!


Fitting a wheel

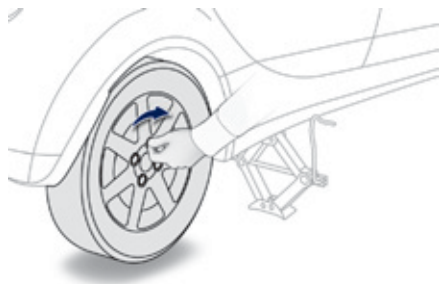

- ☞ Put the wheel in place on the hub.
- ☞ Screw in the bolts by hand.
- ☞ Pre-tighten the bolts using the wheelbrace.

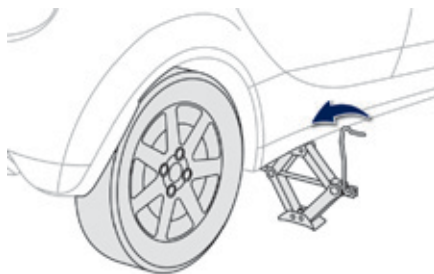

- ☞ Lower the vehicle fully.
- ☞ Fold the jack and detach it.

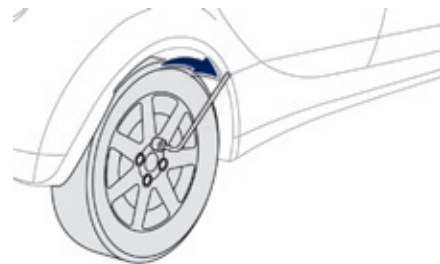

- ☞ Tighten the bolts using the wheelbrace.

i After changing a wheel

Have the tightness of the bolts and the tyre pressure of the new wheel checked by a PEUGEOT dealer or a qualified workshop without delay.

Snow chains

The snow chains must be fitted only to the rear wheels (vehicle with rear wheel drive).

i Take account of the legislation in force in your country on the use of snow chains and the maximum running speed authorised.

Use only the chains designed to be fitted to the type of wheel fitted to your vehicle:

Original tyre size	Maximum link size.
175/55 R15	9 mm
145/65 R15	cannot be fitted with chains

! It is strongly recommended that before you leave, you practise fitting the snow chains on a level and dry surface.

i For more information on snow chains, contact a PEUGEOT dealer or a qualified workshop.

Advice on installation

- ☞ If you have to fit the chains during a journey, stop the vehicle on a flat surface on the side of the road.
- ☞ Apply the parking brake and position any wheel chocks to prevent movement of your vehicle.
- ☞ Fit the chains following the instructions provided by the manufacturer.
- ☞ Move off gently and drive for a few moments, without exceeding 30 mph (50 km/h).
- ☞ Stop your vehicle and check that the snow chains are correctly tightened.

i Avoid driving with snow chains on roads that have been cleared of snow, to avoid damaging your vehicle's tyres and the road surface. If your vehicle is fitted with alloy wheels, check that no part of the chain or its fixings is in contact with the wheel rim.


Changing a bulb

- !** The headlamps are fitted with polycarbonate glass with a protective coating:
- ☞ **do not clean them using a dry or abrasive cloth, nor with a detergent or solvent product,**
 - ☞ use a sponge and soapy water or a pH neutral product,
 - ☞ when using a high pressure washer on persistent marks, do not keep the lance directed towards the lamps or their edges for too long, so as not to damage their protective coating and seals.


Changing a bulb should only be done after the headlamp has been switched off for several minutes (risk of serious burns).

- ☞ Do not touch the bulb directly with your fingers, use a lint-free cloth.
- It is imperative to use only anti-ultraviolet (UV) type bulbs to avoid damaging the headlamp. Always replace a failed bulb with a new bulb with the same type and specification.




Front lamps

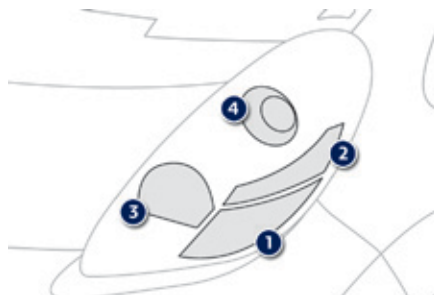

1. Direction indicators (W21W - 21 W).
2. Sidelamps (W5W - 5 W).
3. Main beam headlamps (HB3 - 60 W).
4. Dipped beam headlamps (H11 - 55 W).

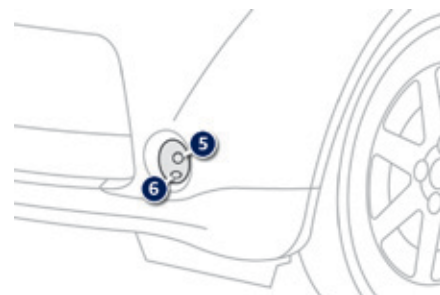

5. Front foglamps (H8 - 35 W).
6. Daytime running lamps (P13W - 13 W).

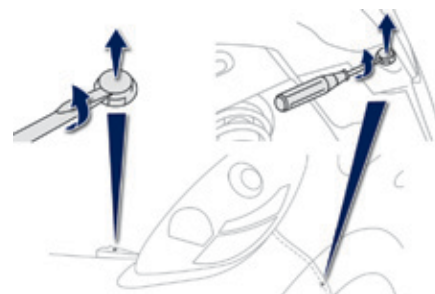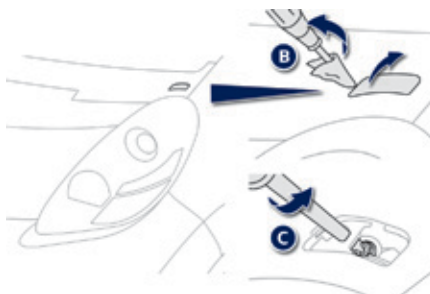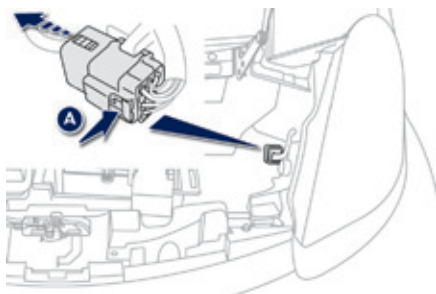


Access to bulbs

To replace a failed bulb, you must first remove the lamp.


To remove the lamp:

- ☞ Open the bonnet.
- ☞ Press tab **A** to release the connector.
- ☞ Lift the cover **B**, using a screwdriver protected by a cloth.
- ☞ Slacken fixing screw **C** until the head of the screw touches the trim.


- ☞ Remove the bumper retaining clips, using a screwdriver.
- ☞ Carefully lift the bumper.

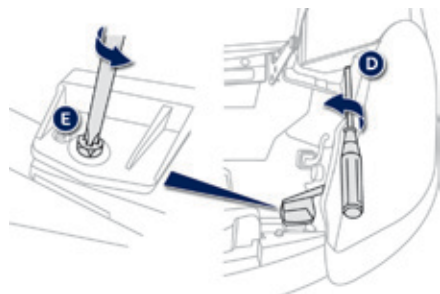

- ☞ Slacken fixing screw **D**, while holding the bumper away.
- ☞ Slacken fixing screw **E**.

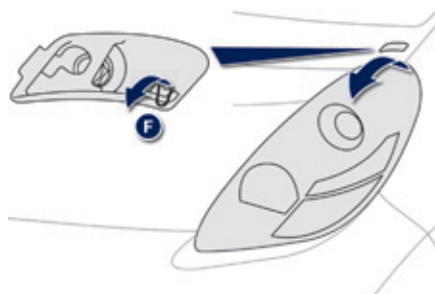


- ☞ Pull the lamp towards you, and disengage the tab **F** to remove it completely.

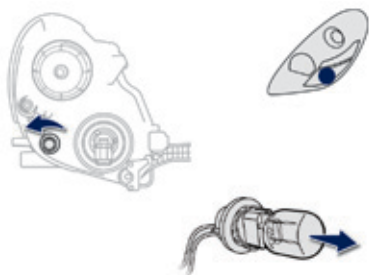

Changing direction indicator bulbs


- ☞ Turn the bulb holder to the left and pull it out.
 - ☞ Pull the bulb out and change it.
- To refit, carry out these operations in reverse order.

i Amber coloured bulbs must be replaced with bulbs of identical specifications and colour.

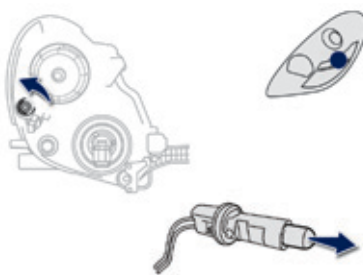

Changing sidelamp bulbs


- ☞ Turn the bulb holder to the left and pull it out.
 - ☞ Pull the bulb out and change it.
- To reassemble, carry out these operations in reverse order.

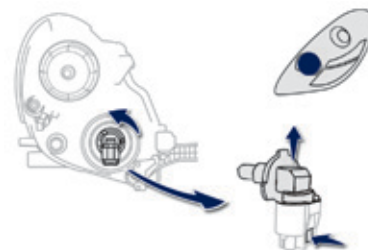

Changing main beam headlamp bulbs

- ☞ Turn the bulb holder to the left and pull it out.
- ☞ Remove the bulb by pressing on the tongue.
- ☞ Change the bulb.


For reassembly, carry out these operations in reverse order.

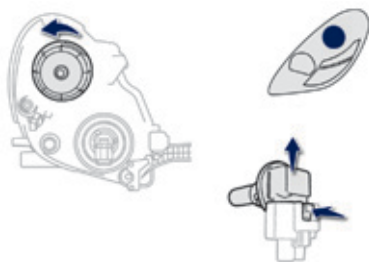

Changing dipped beam headlamp bulbs


- ☞ Turn the bulb holder to the left and pull it out.
- ☞ Remove the bulb by pressing on the tongue.
- ☞ Change the bulb.

To refit, carry out these operations in reverse order.

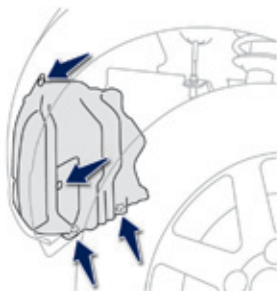

Changing front foglamp bulbs / daytime running lamp bulbs


- ☞ Put the front wheels onto full lock, to facilitate access.
- ☞ Remove the clips securing the protective covers on the bulb holders.
- ☞ Move the cover aside.

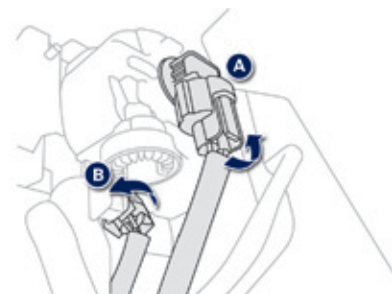

- ☞ Turn the bulb holder (A for the front fog lamp, B for the daytime running lamp) to the left and pull it out.
- ☞ Pull the bulb out and change it.

To reassemble, carry out these operations in reverse order.

Rear lamps

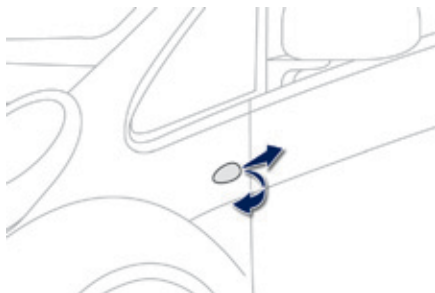

Changing integrated direction indicator side repeater bulbs (WY5W - 5 W)

- ☞ Push the repeater towards the rear and disengage it.
- ☞ Turn the bulb holder to the left and pull it out.
- ☞ Pull the bulb out and change it.

To reassemble, carry out these operations in reverse order.



1. Brake lamps / Sidelamps (21 W / 15 W or LEDs).
2. Direction indicators (WY21W - 21 W).
3. Reversing lamps (W21W - 21 W).


i In some weather conditions (e.g. low temperature or humidity), the presence of misting on the internal surface of the glass of the headlamps and rear lamps is normal; it disappears after the lamps have been on for a few minutes.



Access to bulbs

- ☞ Remove the two screws.
- ☞ Disengage the lamp unit by pulling it towards you.


i Amber coloured bulbs, such as the direction indicators, must be replaced with bulbs of identical specification and colour.

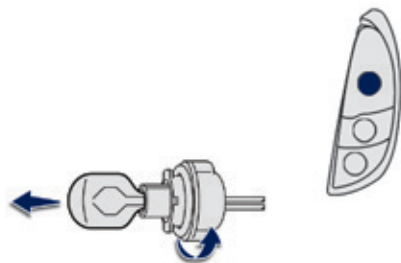

Changing brake lamp / sidelamp bulbs (21 W / 15 W)

- ☞ Turn the bulb holder to the left and pull it out.
- ☞ Pull out the bulb and change it.


To refit, carry out these operations in reverse order.

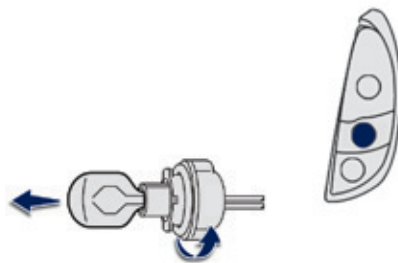

Changing a direction indicator bulb

- ☞ Turn the bulb holder to the left and pull it out.
- ☞ Pull the bulb out and replace it.

To refit, carry out these operations in reverse order.

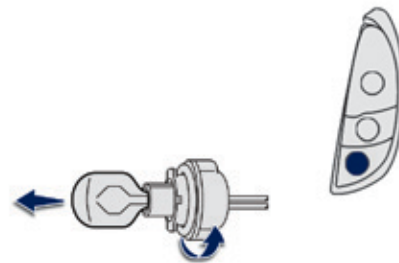


Changing a reversing lamp bulb

- ☞ Turn the bulb holder to the left and pull it out.
- ☞ Pull the bulb out and replace it.

To refit, carry out these operations in reverse order.

Changing brake lamp / sidelamp LEDs


All work on the LED lamps must be carried out by a PEUGEOT dealer or qualified workshop.

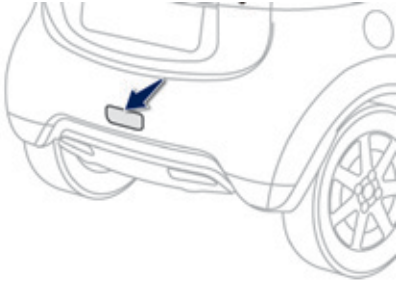

Changing a foglamp bulb (W21W - 21W)

- ☞ Remove the cover.
- ☞ Turn the bulb holder to the left and pull it out.
- ☞ Pull the bulb out and change it.

To refit, carry out these operations in reverse order.

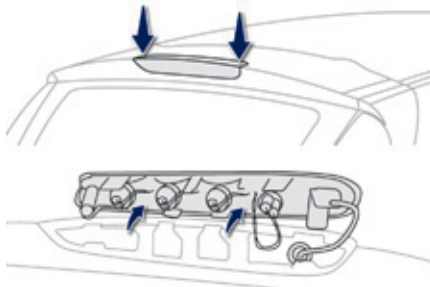

Third brake lamp (W5W - 5W)

- ☞ Remove the two screws.
 - ☞ Pull out the bulb-holder.
 - ☞ Pull out the bulb and change it.
- To refit, carry out these operations in reverse order.



Changing number plate lamp bulbs (W5W - 5W)

- ☞ Push the cover inwards.
- ☞ Turn the bulb holder and pull it out.
- ☞ Remove the bulb and change it.

To refit, carry out these operations in reverse order.

Changing a fuse

Access to tools



The extraction tweezer is fitted to the back of the fusebox cover in the dashboard (left hand side).

For access:

- ☞ Unclip the cover and remove it completely by pulling it towards you.
- ☞ Remove the tweezer.

Changing a fuse



Good



Failed

Before changing a fuse, the cause of the failure must be identified and rectified.

- ☞ Check that the ignition switch is in the "LOCK" position.
- ☞ Identify the faulty fuse by checking the condition of its filament.
- ☞ Use the special tweezer to extract the fuse from its location.
- ☞ Always replace the faulty fuse with a fuse of the same rating.
- ☞ Check that the number etched on the box, the rating etched on the top and the tables below all agree.

i Your vehicle's electrical system is designed to operate with standard or optional equipment.
Before installing other electrical equipment or accessories in your vehicle, contact a PEUGEOT dealer or a qualified workshop.

! PEUGEOT will not accept responsibility for the cost incurred in repairing your vehicle or for rectifying the malfunctions resulting from the installation of accessories not supplied and not recommended by PEUGEOT and not installed in accordance with its instructions, in particular when the consumption of all of the additional equipment connected exceeds 10 milliamperes.

Dashboard fuses



The fusebox is placed in the lower dashboard (left-hand side).

Fuse N°	Rating	Functions
1	7.5 A	Left hand front and rear sidelamps.
2	15 A	Accessory socket.
3	-	Not used.
4	7.5 A	Starter.
5	20 A	Audio system.
6	-	Not used.
7	7.5 A	Vehicle equipment, right hand front and rear sidelamps.
8	7.5 A	Electric door mirrors.
9	7.5 A	Supervisory controller.
10	7.5 A	Air conditioning.
11	10 A	Rear foglamp.
12	15 A	Door locking.
13	10 A	Courtesy lamp.




Access to the fuses

See "Access to tools".

Fuse N°	Rating	Functions
14	15 A	Rear wiper.
15	7.5 A	Instrument panel.
16	7.5 A	Heating.
17	20 A	Heated seat.
18	10 A	Option.
19	7.5 A	Door mirror heating.
20	20 A	Windscreen wiper.
21	7.5 A	Airbags.
22	30 A	Heated rear screen.
23	30 A	Heating.
24	-	Non used.
25	10 A	Radio.
26	15 A	Passenger compartment fuse.


Front compartment fuses

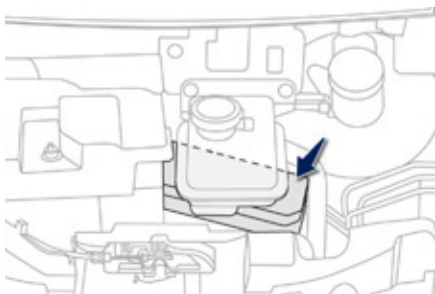

The fusebox is placed in the front compartment under the heating system reservoir. Only these fuses can be replaced.

i The replacement of fuses for other units (vacuum pump and battery accessories) requires the involvement of a PEUGEOT dealer or a qualified workshop.

Fuse N°	Rating	Functions
1	-	Not used.
2	30 A	Internal fuse.
3	40 A	Electric motor.
4	40 A	Radiator fan.
5	40 A	Electric windows.
6	30 A	Vacuum pump.
7	15 A	Main battery ECU.
8	15 A	Third brake lamp.
9	15 A	Front foglamps.
10	15 A	Water pump.

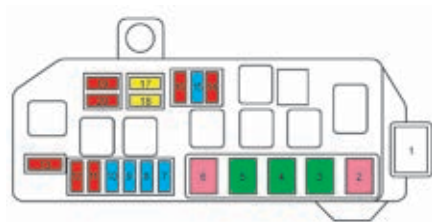


Access to the fuses

- ☞ Open the bonnet (refer to the "Checks" section).
- ☞ Unclip the cover and remove it completely by pulling towards you.
- ☞ Change the fuse (refer to the corresponding paragraph).
- ☞ When you have finished, close the cover carefully to ensure sealing of the fusebox.

Fuse N°	Rating	Functions
11	10 A	On-board charger.
12	10 A	Direction indicator.
13	10 A	Horn.
14	10 A	Daytime running lamps.
15	15 A	Battery fan.
16	10 A	Air conditioning compressor.
17	20 A	Right hand dipped beam.
18	20 A	Left hand dipped beam, headlamp adjusters.
19	10 A	Right hand main beam.
20	10 A	Left hand main beam.

Changing a wiper blade

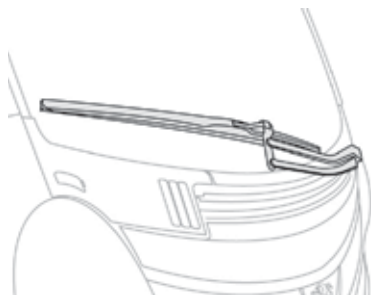

Removing a front or rear wiper blade

- ☞ Raise the corresponding wiper arm.
- ☞ Remove the wiper blade, sliding it towards the outside.


Fitting a front or rear wiper blade

- ☞ Put the new wiper blade in place and secure it.
- ☞ Fold down the wiper arm carefully.

Towing the vehicle

Procedure for having your vehicle towed using fixed mechanical equipment.

Towing your vehicle

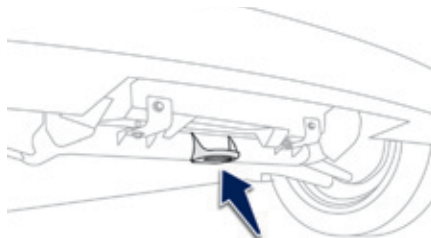

The towing eye is welded to the body below the front bumper.

- ☞ Install the towing bar.
- ☞ Start your vehicle ("Ready" lamp on).
- ☞ Put the drive selector in position **N**.
- ☞ Release the parking brake.
- ☞ Switch on the hazard warning lamps on your vehicle.
- ☞ Have your vehicle towed **for no more than 20 miles (30 km) without exceeding a speed of 20 mph (30 km/h).**

! When towing the vehicle with the four wheels on the ground, always use a towing bar.
When towing with only two wheels on the ground, use professional lifting equipment.

i Failure to follow these instructions may cause damage to braking components and the electric motor.

! Towing another vehicle

Your vehicle cannot be used in any circumstances to tow another vehicle.

Precautions for washing

! Do not wash the vehicle while the battery is being recharged.

! Check - before washing the vehicle - that the charging flaps and the charging socket covers (normal and fast charge) are properly closed.

! To avoid damaging the electrical components, the use of a high pressure jet wash is strictly prohibited:

- in the front compartment (under the bonnet),
- under the body.

i For washing the body, do not use a pressure greater than 80 bars.

Accessories

A wide range of accessories and genuine parts is available from the PEUGEOT dealer network. These accessories and parts are all suitable for your vehicle and benefit from PEUGEOT's recommendation and warranty.

Conversion kits

You can obtain an "Enterprise" kit to convert a trade vehicle to a private car and vice-versa.

"Comfort":

black armrest, reading lamp, insulated modules, rear parking sensors, cigarette lighter, ashtray with base, head restraint mounted coat hanger...

"Transport solutions":

boot liner, boot carpet, rear parcel shelf, boot dividers...

"Security and safety":

alarm, wheel security bolts, child seats, breathalyzer, warning triangle, high visibility vest, first aid kit, snow chains, non-slip covers, pet transport cage, pet safety belt...

"Protection":

mats, boot carpet, vehicle cover, translucent bumper protectors, side rubbing strips...

"Multimedia":

audio systems, driving aids, semi-integral navigation system, iPhone® compatible phone charger, hands-free kit, DVD players...

i Installation of radio communication transmitters

Before installing any after-market radio communication transmitter, you can contact a PEUGEOT dealer for the specification of transmitters which can be fitted (frequency, maximum power, aerial position, specific installation requirements), in line with the Vehicle Electromagnetic Compatibility Directive (2004/104/EC).

i Depending on the legislation in force in the country, certain safety equipment may be compulsory: high visibility safety vests, warning triangles, breathalyzers, spare bulbs, spare fuses, fire extinguisher, first aid kit, mud flaps at the rear of the vehicle.

! The fitting of electrical equipment or accessories which are not recommended by PEUGEOT may result in a failure of your vehicle's electronic system and excessive electrical consumption.
Contact a PEUGEOT dealer for information on the range of recommended equipment and accessories.

PEUGEOT & TOTAL PARTNERS IN THE FUTURE OF THE AUTOMOBILE

PEUGEOT and TOTAL personnel combine their talents to optimise the efficient use of energy and reduce the impact on the environment.

The partnership between our two groups, which is on an international scale, does not merely amount to the supply and maintenance of vehicles to the public: our positions as industrial leaders allow us to meet the environmental challenges of today and of tomorrow.

To provide ecologically responsible mobility to everyone is more than our motor, it is our passion.

Innovation is on the way, the future of the automobile depends on it; we will meet it together.



PEUGEOT



TOTAL

PEUGEOT RECOMMENDS TOTAL

OFFICIAL PARTNERS


Bonnet

Protects the components in the front compartment and provides access for checking levels, charging the 12 V ancillaries battery, changing fuses, ...

Opening



- ☞ Open the front right door.
- ☞ Pull the interior release lever **A**, located at the bottom of the door aperture.

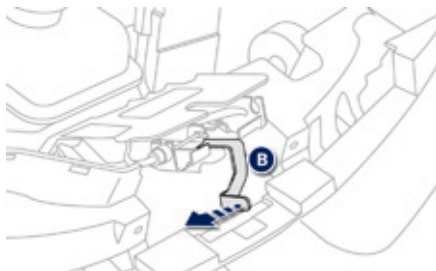


- ☞ Push the exterior safety catch **B** to the left and raise the bonnet.



- ☞ Open the bonnet fully and on the right, unclip the stay **C** from its holder.
- ☞ Fit the stay **C** in one of the two notches to hold the bonnet open.

i The location of the interior release lever prevents opening of the bonnet while the front right door is closed.

Closing

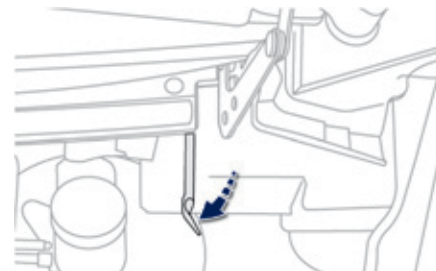


- ☞ Take the stay out of the support notch.
- ☞ Clip the stay in its housing.
- ☞ Lower the bonnet and release it at the end of its travel.
- ☞ Pull on the bonnet to check that it is fully latched.

! Do not press down on the middle of the bonnet if it does not fully close, as there is a risk of deforming it. Open the bonnet fully and close it again.

Front compartment


1. Screenwash fluid reservoir.
2. Heater fluid reservoir.
3. Brake fluid reservoir.
4. Ancillaries battery.
5. Fusebox.

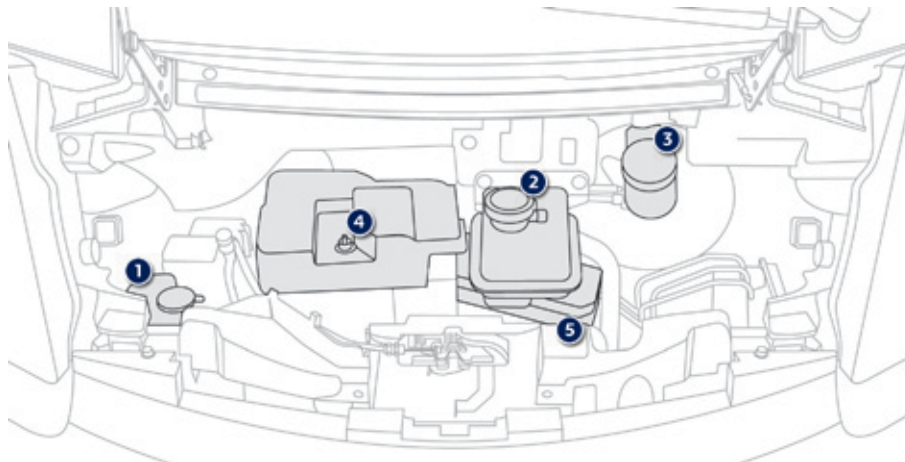


! To avoid damaging electrical components, the use of a high pressure jet washer in the front compartment is strictly prohibited.

Rear compartment


Located under the boot floor, this compartment gives access to the cooling system reservoir.

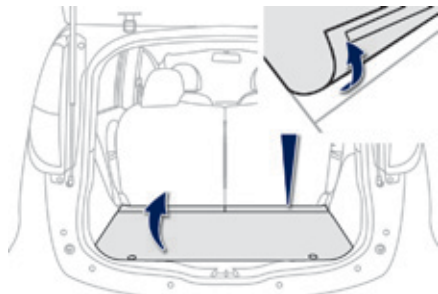

- ☞ Open the boot.
- ☞ Detach the carpet retaining adhesive strip.
- ☞ Remove the boot carpet.

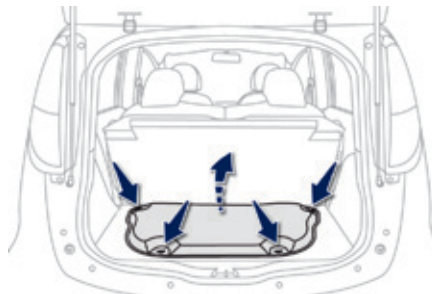

- ☞ Remove the four "butterfly" screws.
- ☞ Remove the protective cover.

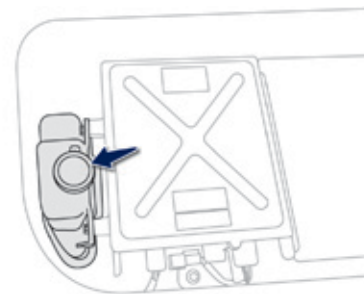

- ☞ Check the coolant level and top up if necessary (see following pages).

! When working in this compartment, you must observe the safety recommendations on the labels.

Checking levels

Check all of these levels regularly and top them up if necessary, unless otherwise indicated.

If a level drops significantly, have the corresponding system checked by a PEUGEOT dealer or a qualified workshop.



Never do anything in the compartments when the "Ready" lamp is on or when your vehicle is being charged. Take care when carrying out checks in the front and rear compartments as some parts of the compartments can be very hot (risk of burns): wait at least one hour after stopping the motor or the end of the charging procedure before carrying out any work.

Front compartment

Brake fluid level



The brake fluid level should be between the "MIN" and "MAX" marks. If it is not, check the brake pad wear.

Changing the fluid

Refer to the manufacturer's service schedule for details of the interval for this operation.

Fluid specification

The brake fluid must conform to the manufacturer's recommendations.

Heating system fluid level

The level of this fluid should be between the "L" MIN and "F" MAX marks.

Changing the fluid

The fluid does not have to be changed.

Fluid specification

The fluid must conform to the manufacturer's recommendations.

Screenwash fluid level




Top up the level when necessary.

Fluid specification

For optimum cleaning and to avoid freezing, this fluid must not be topped up or replaced with plain water.

Ancillaries battery electrolyte level

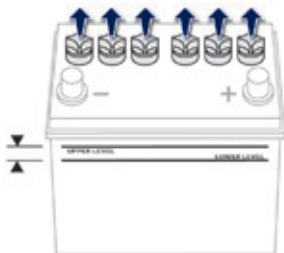

Remove the battery protective cover to check this level (refer to the "ancillaries battery" section).

The electrolyte level should be between the MIN "LOWER LEVEL" and MAX "UPPER LEVEL".

If necessary, top up using distilled water by removing the individual battery caps.

i Check the electrolyte level at least once per month.

Rear compartment

Coolant level



The coolant level should be between the MIN "L" and MAX "F" marks.

As the cooling system is pressurised, wait at least one hour after switching off the motor and/or the end of the charge cycle before carrying out any work.

To avoid any risk of scalding, unscrew the cap by two turns to allow the pressure to drop. When the pressure has dropped, remove the cap and top up the level.

Changing the coolant

The coolant does not have to be changed.

Coolant specification

The coolant must conform to the manufacturer's recommendations.

Used products

! Avoid prolonged contact of used fluids with the skin.
Most of these fluids are harmful to health and some are very corrosive.

♻️ Do not discard used fluids into sewers or onto the ground.
Take used fluids to a PEUGEOT dealer or a qualified workshop (France) or to an authorised waste disposal site.

Checks

Unless otherwise indicated, check these components in accordance with the manufacturer's service schedule. Otherwise, have them checked by a PEUGEOT dealer or a qualified workshop.

Passenger compartment filter



Refer to the manufacturer's service schedule for details of the replacement intervals for this filter.

Depending on the environment (e.g. dusty atmosphere) and the use of the vehicle (e.g. city driving), **replace it twice as often if necessary**. A dirty passenger compartment filter may have an adverse effect on the performance of the air conditioning system and generate undesirable odours.

Brake pads



Brake wear depends on the style of driving, particularly in the case of vehicles used in town, over short distances. It may be necessary to have the condition of the brakes checked, even between vehicle services.

Unless there is a leak in the circuit, a drop in the brake fluid level indicates that the brake pads are worn.

Brake disc / drum wear



For information on checking the brake disc or drum wear, contact a PEUGEOT dealer or a qualified workshop.

Parking brake



If a loss of effectiveness of this system is noticed, the parking brake must be checked, even between two services.

This system must be checked by a PEUGEOT dealer or a qualified workshop.



Only use products recommended by PEUGEOT or products of equivalent quality and specifications. In order to optimise the operation of units as important as the braking system, PEUGEOT selects and offers very specific products.

Motor and main battery

Model type code:	1 N ZKY Z
Electric motor	Y51
Technology	Synchronous with neodymium permanent magnets
Max. power: EU standard (kW)	49
Max. power speed (rpm)	4 000 to 8 800
Max. torque: EU standard (Nm)	196
Max. torque speed (rpm)	0 to 300
Main battery	Lithium-Ion
Energy capacity (kWh)	14.5
Normal charge	
Voltage (V) AC	230
Charging time (*) (**):	
- 16 A	5 hours 30 minutes
- 14 A	6 hours
- 10 A	8 hours
- 8 A	11 hours
Fast charge	
Voltage (V) DC	300
Charging time (80% charge)**	30 minutes

* Depending on the power supply in the country.

** Time measured for ambient temperatures between 20 and 25° C.


Range varies according to the exterior climatic conditions, the driver's style of driving, the use of electrical equipment, the frequency of normal or fast charges and ageing of the main battery.

Weights (in kg)

Electric motor	Y51
Main battery	Lithium-Ion
Model type code:	1 N ZKY Z
Unladen weight	1 065
Kerb weight	1 140
Gross vehicle weight (GVW)	1 450
Gross train weight (GTW)	1 450
Maximum load on the roof (including the roof bars)	43


! Your vehicle cannot be fitted with a towbar. It cannot tow a trailer.

Dimensions (in mm)

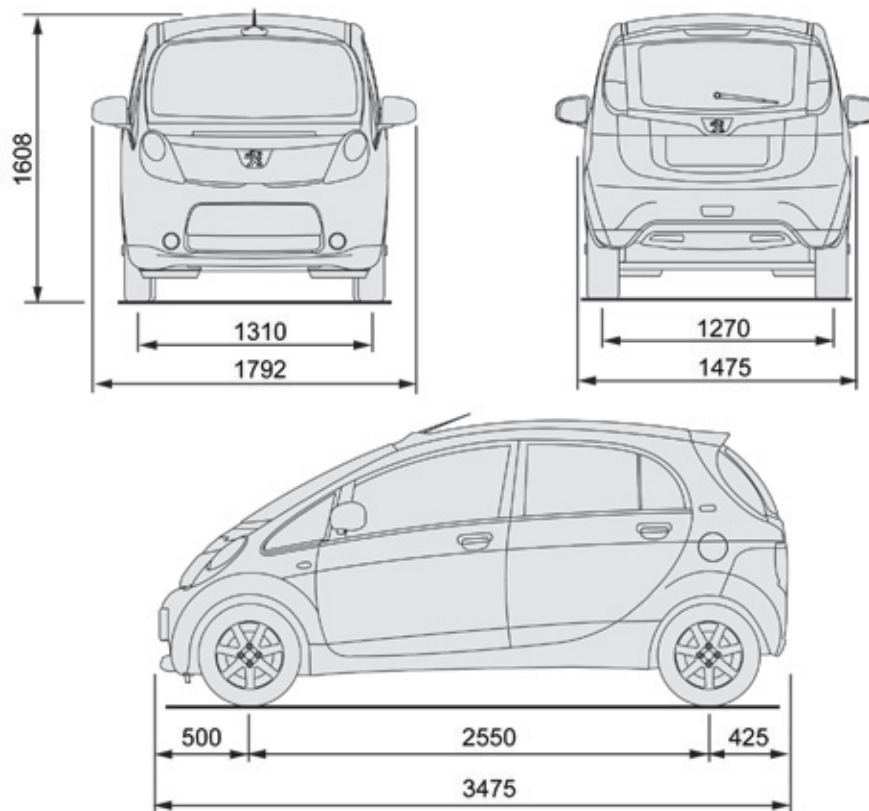

Identification markings

Various visible markings for the identification of your vehicle.

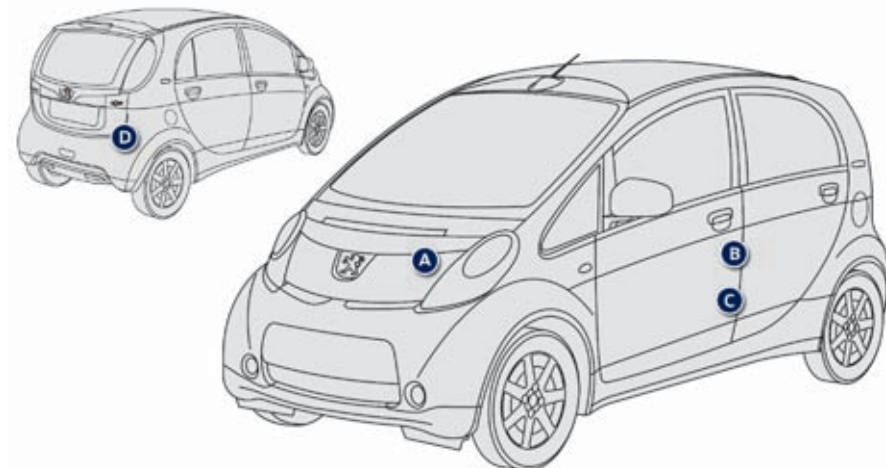

A. Service - Replacement Parts identification plate.

This plate is riveted to the underside of the bonnet.

It bears in particular the following information:

- the vehicle model,
- the paint code,
- the type, variant, version.

B. Tyre identification label.

This label is affixed to the driver's centre pillar.

It bears the following information:

- the tyre pressures (in bars),
- the tyre specification,
- the type of tyre.

C. Manufacturer's plate.

This plate is riveted to the left hand centre pillar.

D. Vehicle identification number (VIN).


This number is engraved on the inner wheel arch, inside the boot, right hand side.

i For information on fitting snow chains, contact a PEUGEOT dealer or a qualified workshop.

i Tyre pressures must be checked when the tyres are cold, at least once a month.



Low tyre pressures increase the electrical power consumption of your vehicle, which reduces its range.

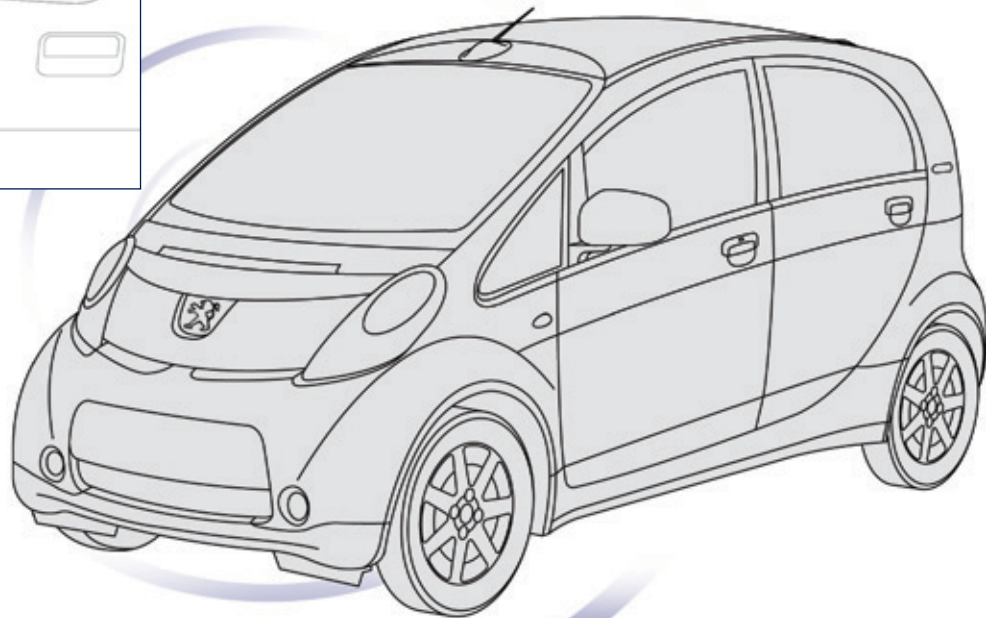

EMERGENCY OR ASSISTANCE CALL

EMERGENCY OR ASSISTANCE CALL

PEUGEOT Connect SOS



In an emergency, press this button for more than 2 seconds. Flashing of the green LED and a voice message confirm that the call has been made to the "PEUGEOT Connect SOS" centre*.

The green LED remains on (without flashing) when communication is established. It goes off at the end of communication.

Pressing this button again immediately cancels the request. The green LED goes off. Cancellation is confirmed by a voice message

To cancel a call, tell the "PEUGEOT Connect SOS" call centre that the call was a mistake.

"PEUGEOT Connect SOS" immediately locates your vehicle, starts communication with you in your language**, and where necessary sends the appropriate public emergency services**. In countries where the service is not available, or when the locating service has been expressly declined, the call sent directly to the emergency services (112) without the vehicle location.



If an impact is detected by the airbag control unit, and independently of the deployment of any airbags, an emergency call is made automatically.

PEUGEOT Connect Electric

If you benefit from the PEUGEOT Electric offer, you have other services available to you in your MyPEUGEOT personal space, via the PEUGEOT website in your country, accessible on www.peugeot.co.uk.

* Subject to the general conditions for the service available from dealers and to technological and technical limitations.

** Depending on the geographical cover of "PEUGEOT Connect SOS", "PEUGEOT Connect Assistance" and the official national language selected by the owner of the vehicle.

The list of countries covered and PEUGEOT CONNECT services services is available from dealers or at www.peugeot.co.uk.

PEUGEOT Connect Assistance



Press this button for more than 2 seconds to request assistance if the vehicle breaks down. A voice message confirms that the call has been made**.

Pressing this button again immediately cancels the request. The cancellation is confirmed by a voice message.

Operation of the system



When the ignition is switched on, the green LED comes on for 3 seconds indicating that the system is operating correctly.



If the orange LED flashes: there is a system fault.

If the orange LED is on continuously: the backup battery must be replaced.

In either case, contact a PEUGEOT dealer.

If you purchased your vehicle outside the PEUGEOT dealer network, we invite you to have a dealer check the configuration of these services and, if desired, modified to suit your wishes. In a multi-lingual country, configuration is possible in the official national language of your choice.

For technical reasons and in particular to improve the quality of "PEUGEOT CONNECT services" services to customers, the manufacturer reserves the right to carry out updates to the vehicle's on-board telematic system.



Audio system / Bluetooth®



After a battery disconnection, a code has to be entered for operation of the radio.

A maximum of five attempts are possible. For the last two attempts, a 15 minutes wait is imposed between each attempt.

Refer to the end of this document to find the label indicating this code:



CONTENTS

01 First steps	p. 136
02 Radio	p. 137
03 Audio	p. 140
04 Using the telephone	p. 146
05 Audio settings	p. 152
06 Configuration	p. 153
07 Screen menu maps	p. 154
Frequently asked questions	p. 155



For safety reasons, the driver must only carry out operations which require prolonged attention while the vehicle is stationary.

When the engine is switched off and to prevent discharging of the battery, the system switches off after activation of the energy economy mode.

01 FIRST STEPS

Selection of source:

- FM1, FM2, CD, USB, AUX, Streaming.

- Accept an incoming call.

Long press:

- access to the calls log of the telephone connected.
- or end a call if in progress.

Adjust audio settings: sound ambience, treble, bass, loudness, distribution, left/right balance, front/rear balance, automatic volume.

On / Off and volume adjustment.

Abandon the current operation.
Go up one level (menu or folder).

Eject CD.



Display the list of stations received, the CD/USB tracks or folders.

Long press: update the list of stations received.

Open the main menu.

Automatic search for a lower / higher radio frequency.

Select previous / next CD, USB track..

Navigation in a list.

Press and hold: fast forwards or backwards.

Select a preset radio station.

Radio: long press: preset a radio station.

Other than radio: see the corresponding sections.

02 RADIO

Radio



The exterior environment (hills, buildings, tunnel, car park, below ground...) may prevent reception, even in RDS station tracking mode. This phenomenon is normal in the propagation of radio waves and is in no way indicative of a fault with the audio system.

Presetting and selecting a station

1



 
Press **SRC/TEL** several times in succession and select the FM1 or FM2 radio band.



2



Make a long press on one of the buttons to preset the station being heard. The name of the station is displayed accompanied by an audible signal to confirm the preset.



Press a button to listen to the corresponding preset station.



Managing the list



A long press on **LIST** builds or updates the list of stations; audio reception is cut momentarily.



1



Press **LIST** to display the list of stations received in alphabetical order.



2



 
Select the desired radio station and confirm by pressing **"OK"**.



3



A press changes to the next or previous letter (e.g. A, B, D, F, G, J, K, ...).



02 RADIO

RDS

Entering a frequency manually

1



 
 
Press **MENU**, select "**Radio**", then select "**Write freq.**".



2



Press **+** or **-** to select the desired frequency and confirm with "**OK**".



i

RDS, if displayed, enables you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

1



With source FM1 or FM2, press **MENU** then select "**Radio**".



2



Select or deselect "**RDS**" to activate or deactivate RDS then confirm with "**OK**" to save the setting.



02 RADIO

Receiving TA messages



The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source (Radio, CD, USB, ...) is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.

1



 
Press **MENU**, select **"Radio"**.



2



Select or deselect **"TA"** to activate or deactivate the reception of traffic messages.



Displaying RADIO TEXT



Radio text is information transmitted by the radio station related to the current programme or song.

1



With the radio displayed on the screen, press **MENU** then select **"Radio"**.



2

Select or deselect **"TXT"** to activate or deactivate the display of Radio Text.

03 AUDIO

Audio CD

Playing a CD



Insert 12 cm diameter circular compact discs only.

Some anti-pirating systems, on original discs or CDs copied using a personal recorder, may cause faults which are no reflection on the quality of the original player.

Without pressing the **EJECT** button, insert a CD in the player, play begins automatically.

1



 
To play a disc which has already been inserted, press the **SRC/TEL** button several times until CD play is displayed.



2



Press one of the buttons to select a track on the CD.
Press and hold one of the buttons for fast forward or backward.



03 AUDIO

CD, USB

Information and advice



The audio system will only play files with ".mp3", ".wma" and ".wav" on a CD and can play files with ".ogg" extension only on USB.



A high compression rate can adversely affect sound quality.



The playlists accepted on CD, MP3, iPod and USB connection are types ".m3u" and ".wpl".
The number of files recognised is limited to 5 000 in 500 folders on a maximum of 8 levels.



On a single disc, the CD player can read up to 255 MP3 files spread over 8 folder levels with a maximum of 192 folders. However, it is recommended that this be kept to 2 levels so as to limit the time taken to access and play the CD.

During play, the folder structure is not observed.



In order to be able to play a recorded CDR or CDRW, when recording it is preferable to select standards ISO 9660 level 1.2 or Joliet. If the disc is recorded in another format, it may not be played correctly. It is recommended that the same recording standard is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.

In the particular case of a multi-session CD, the Joliet standard is recommended.



Do not connect a hard disk or USB device other than audio players to the USB port. This may cause damage to your installation.

03 AUDIO

CD, USB

Playing a compilation



Insert an MP3 compilation in the CD player or connect a memory stick to the USB port.



The system creates playlists (temporary memory) the creation time for which can take from a few seconds to several minutes. The playlists are updated every time the ignition is switched off or a USB memory stick is connected. Play starts automatically after a period which depends on the capacity of the USB memory stick.



At a first connection, the order suggested is by folder. When connecting again, the order previously chosen is retained.

1



 
To play a disc or memory stick which has already been inserted, press **SRC/TEL** several times in succession and select "**CD**" or "**USB**".



2




Press one of the buttons to select the next or previous track.



3



 
Press one of the buttons to select the next or previous folder in the order chosen.







4



 Press and hold one of the buttons for fast forwards or backwards.



03 AUDIO

    5  Press LIST to display the structure of the folders in the compilation.		9  Press MENU, select "Media" then select or deselect "TA" to activate or deactivate reception of traffic messages.	
6  Select a line in the list.		10  Select the play mode: "Normal", "Random", "Random all" or "Repeat".	
7  Jump a page.		11   Return to the top level of the folder structure to select the type of tracks. - By Folders (CD or USB): all folders containing audio files recognised on the peripheral device, in alphabetical order without following the folder structure. - By Artist (USB only): all of the artist names defined in the ID3 Tags, in alphabetical order. - By Genre (USB only): all of the genres defined in the ID3 Tags. - By Playlist (CD or USB): if playlists have been saved.	
8  Up a level in the menu.			

03 AUDIO

APPLE® player or portable player



The audio files on a Mass Storage portable player* can be heard through the vehicle's speakers by connecting it to the USB port (cable not supplied).



Management of the device is via the audio system controls; refer to the **"CD, USB"** section.



The Apple® player must be updated regularly for the best connection.



The playlists are those defined in the Apple® player.



The Apple® player must be generation 3 or later.

* Check your player's manual.

03 AUDIO

Streaming - Playing audio files via Bluetooth



Depending on the compatibility of the phone



Streaming allows music files on a telephone to be heard via the vehicle's speakers.

The telephone must support the appropriate Bluetooth® profiles (profiles A2DP / AVRCP).

1



Connect the telephone: see the "USING THE TELEPHONE" section.

2



Activate the streaming source by pressing **SRC/TEL**. Control of playback is via the audio system. The contextual information can be displayed in the screen.



In certain cases, playing of the audio files must be initiated from the telephone.



The audio quality depends on the quality of the transmission from the telephone.

04 USING THE TELEPHONE

Pairing a Bluetooth telephone / First connection



The services offered depend on the network, the SIM card and the compatibility of the Bluetooth telephone used. Consult your telephone's manual and your operator to find out which services are available to you.



For safety reasons and because they require prolonged attention on the part of the driver, the operations for pairing of the Bluetooth mobile telephone with the Bluetooth hands-free system of your audio system must be carried out with the vehicle stationary and the ignition on.



Visit www.peugeot.co.uk for more information (compatibility, more help, ...).



It is not possible to pair more than 5 telephones. Press **MENU** and select **"Bluetooth"**. Select **"BT management"**. If 5 telephones are already paired, select the telephone to be deleted by pressing **"OK"** and select **"Delete"** (refer to "Managing connections").

1

Activate the telephone's Bluetooth function and ensure that it is set as visible to all (refer to the telephone instructions).



 
2



Press **MENU** then select **"Bluetooth"**.



3



Select **"Search"**.



 
4

A window is displayed with **"Searching device"**.

5



Select the telephone to be paired from the list and confirm with **"OK"**. Only one telephone can be paired at a time.




04 USING THE TELEPHONE



In some cases, the Bluetooth address of the telephone may appear instead of the name of the telephone.

 6



A virtual keypad is displayed on the screen: choose a 4 digit code then confirm with **OK**.



7

A message is displayed on the screen of the telephone: enter the same code and confirm.



If pairing fails, try again; the number of attempts is not limited.

8

Accept the connection to the telephone.

9

A message appears in the screen to confirm the result of the connection.

!

Pairing can also be initiated from the telephone by searching for detected Bluetooth devices.

!

The directory and the calls list can be accessed after the synchronisation period (if the telephone is compatible). Automatic connection must be configured in the telephone to allow the connection each time the vehicle is started.

04 USING THE TELEPHONE

Managing connections

 
1




Press **MENU** then select **"Bluetooth"**.



2



 
Select **"BT management"** and confirm. The list of paired telephones is displayed.



3



 Select a telephone and confirm **"OK"**.




4



Then select or deselect:

- **"Tel."**: hands-free connection
- **"Audio"**: play audio files

 "OK" to confirm the choice.
Select **"Delete"** to delete the pairing.



Indicates connection of the audio profile.



Indicates connection of the hands-free profile.

04 USING THE TELEPHONE

Making a call - Recently called numbers*

1



 
Make along press on **SRC/TEL** to display the calls list.



i

For access to the calls list, it is also possible to press **MENU**, select **"Telephone"**, then select **"Call"**, and finally select **"Calls list"**.

2




In the list of calls, select the number and choose **"Missed calls"**, **"Dialed calls"** or **"Answered calls"**.



3



 
Navigation in the calls list.



4



 
Previous or next page in the calls list.



5



 "OK" starts the call.



i

The calls list includes the calls sent from and by from the vehicle via the connected telephone.

It is possible to make a call directly from the telephone; stop the vehicle as a safety measure.

* Depending on the compatibility of the telephone.

04 USING THE TELEPHONE

Making a call - From the directory

 
1




Press **MENU**, select **"Telephone"**.



2




Select **Call** then **"Directory"**.

 

3



 Select the desired number and confirm. **"OK"** to start the call.



Receiving a call

1

An incoming call is announced by a ring and a superimposed display in the screen.

2



Press **SRC/TEL** or select **"YES"** to accept the call,
or
select **"NO"** to reject the call.



A long press on **ESC** or on **SRC/TEL** also rejects an incoming call.



 
04 USING THE TELEPHONE

Managing calls

1a Hang up



In the contextual menu, select **"Hang up"** to end the call.



A long press on **SRC/TEL** also ends the call.

 


1b Secret - Mute (so that the caller cannot hear)



In the contextual menu:

- select **"Micro OFF"** to switch off the microphone.
- select **"Micro OFF"** to switch the microphone on again.




1c Combined mode (to leave the vehicle without ending the call)



In the contextual menu:

 - select **"Combined mode"** to transfer the call to the telephone.
- select **"Combined mode"** to transfer the call to the vehicle.



In certain cases, the combined mode has to be activated from the telephone.

The Bluetooth connection will be restored automatically if the ignition has been switched off, then on again (depending on the compatibility of the telephone).

05 AUDIO SETTINGS

1



Press  to display the audio settings menu.
Press  to go to the next setting.



2

The settings available are:

- AMBIANCE: BASS, TREBLE and LOUDNESS.
- BALANCE (left/right balance), FADER (front/rear balance)
- SOUND DIST. (driver or passenger).
- AUTO VOLUME.



The distribution, or spatialisation of sound, is an audio process which allows the sound quality to be improved according to the setting chosen, corresponding to the position of the listeners in the vehicle.



The AMBIANCE, TREBLE and BASS audio settings are different and independent for each sound source.

06 CONFIGURATION

Display and language settings

 
1




Press **MENU** then **"Config."**




2a



 
Select **"Displaying"** to activate or deactivate scrolling text.



2b

 

 
Select **"Language"** to modify the display language.



2c



 Select **"Version"** for information on the software.



2d



Select **"System"** when you want to install an update. Information can be obtained from a PEUGEOT dealer.



07 SCREEN MENU MAP(S)

MENU

1 Radio

2 TA

2 RDS

2 TXT

2 Write freq.

1 Media

2 Normal

2 Random

2 Random all

2 Repeat

2 TA

1 Telephone

2 Call

3 Directory

3 Calls list

4 Missed calls

4 Dialed calls

4 Answered calls

2 Phone status

1 Bluetooth

2 BT management

2 Search

1 Config.

2 Displaying

3 Scrolling

2 Language

3 Deutsch

3 English

3 Español

3 Français

3 Italiano

3 Nederlands

3 Português

3 Português-Brasil

3 Русский

3 Türkçe

2 Version

2 System

FREQUENTLY ASKED QUESTIONS

The following tables contain answers to the most frequently asked questions.

QUESTION	ANSWER	SOLUTION
There is a difference in sound quality between the different audio sources (radio, CD...).	For optimum sound quality, the audio settings (volume, bass, treble, ambience, loudness) can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).	Check that the audio settings (volume, bass, treble, ambience, loudness) are adapted to the sources listened to. It is advisable to adjust audio settings (bass, treble, Front-Rear balance, Left-Right balance) to the middle position, select the musical ambience and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.
When changing the settings for treble and bass, the ambience setting is deselected. When changing the ambience setting, treble and bass are reset to zero.	Choosing an ambience imposes settings for treble and bass. Modifying one without the other is only possible with a personalised ambience.	Modify the treble and bass settings or the ambience setting to obtain the desired sound quality.
When changing the balance setting, distribution is deselected.	Choosing the "driver" distribution setting imposes a balance setting.	Modify the balance setting or the distribution setting to obtain the desired sound quality.

FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 MHz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the RDS function to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a failure of the audio equipment.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a PEUGEOT dealer.
Sound cut-outs of 1 to 2 seconds in radio mode.	During this brief sound cut-out, the RDS searches for any frequency permitting better reception of the station.	Deactivate the RDS function if the phenomenon is too frequent and always on the same route.
Traffic announcement TA is displayed. I do not receive any traffic information.	The radio station does not broadcast traffic information.	Tune to a radio station which broadcasts traffic information.
The stored stations are not found (no sound, 87.5 MHz is displayed...).	An incorrect waveband is selected.	Press the SRC/TEL button to return to the waveband (FM1 or FM2) on which the stations are stored.

FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
The CD is ejected automatically or is not played by the player.	The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play. The CD is protected by an anti-pirating protection system which is not recognised by the audio equipment.	- Check that the CD is inserted in the player the right way up. - Check the condition of the CD: the CD cannot be played if it is too damaged. - Check the content in the case of a recorded CD: consult the advice in the "Audio" section. - The audio equipment's CD player does not play DVDs. - Due to their quality level, certain writeable CDs will not be played by the audio system.
The CD player sound is poor.	The CD used is scratched or of poor quality.	Insert good quality CDs and store them in suitable conditions.
	The audio settings (bass, treble, ambience) are unsuitable.	Set the treble or bass level to 0, without selecting an ambience.
The Bluetooth connection is cut.	The battery of the peripheral may not be sufficiently charged.	Recharge the battery of the peripheral device.
The message "USB device error" is displayed on the screen.	The USB memory stick is not recognised.	Use only USB memory sticks formatted to FAT 32 (28-bit file allocation table).
A telephone connects automatically, disconnecting another telephone.	Automatic connection overrides manual connection.	Modify the telephone settings to remove automatic connection.

FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
An iPod is not recognised when connecting to the USB port.	The iPod is of a generation that is not compatible with the USB.	
The hard disk or device is not recognised when connecting to the USB port.	Some hard disks and devices need a power supply greater than is provided by the audio system.	Connect the device to the 230 V socket, the 12 V socket or an external power supply. Caution: ensure that the device does not transmit a voltage greater than 5 V (risk of destruction of the system).
When streaming, the sound cuts momentarily.	Some telephones prioritise connection of the "hands-free" profile.	Delete the "hands-free" connection profile to improve streaming.
In "Random all" play, not all of the tracks are played.	In "Random all" play, the system can only take into account up to 999 tracks.	
With the engine off, the audio system switches off after a few minutes of use.	When the engine is switched off, the audio system operating time depends on the battery charge. The switch-off is normal: the audio system switches to economy mode and switches off to prevent discharging the vehicle's battery.	Start the vehicle's engine to increase the battery charge.
The message "the audio system is overheated" appears on the display.	In order to protect the installation if the surrounding temperature is too high, the audio system switches to an automatic thermal protection mode leading to a reduction of the volume or stopping of the playing of the CD.	Switch the audio system off for a few minutes to allow the system to cool.

Exterior

Remote control key
- unfolding / folding the key
- unlocking /locking the vehicle
- anti-theft protection
Starting - Stopping the vehicle

24-25
47

Accessories 120-121

Door mirrors 35

Lighting 51-53
Headlamp height adjustment 53
Changing bulbs 106-111
- front lamps
- foglamps
- daytime running lamps
- direction indicator repeaters

Changing bulbs 111-113
- rear lamps
- 3rd brake lamp
- number plate lamps
- foglamp

Wipers 54
Changing a wiper blade 119

Boot 28
- opening / closing


ABS, EBFD, EBA, ASR, ESP 62-64
Tyre pressures 132
Under-inflation detection 58-61
Changing a wheel 101-104
Snow chains 105

Recovery 119


Doors 27
- opening / closing
Electric windows 29

Charging flaps 30
Charging the main battery 85-92
- normal
- fast

Interior

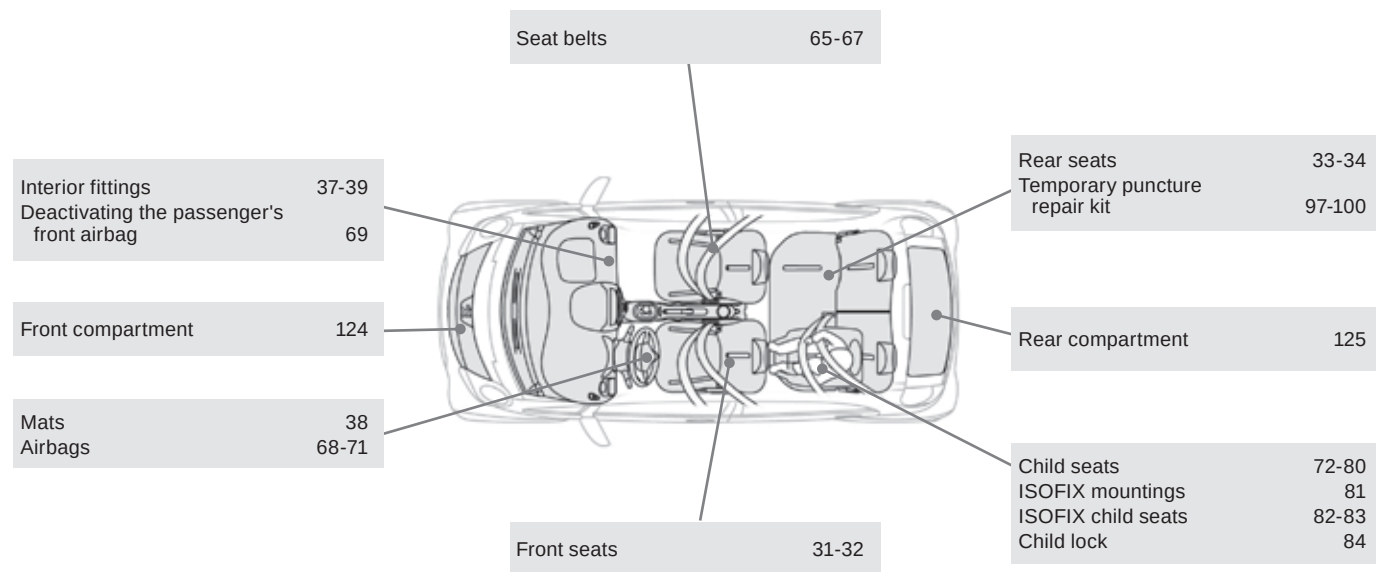

Instruments and controls

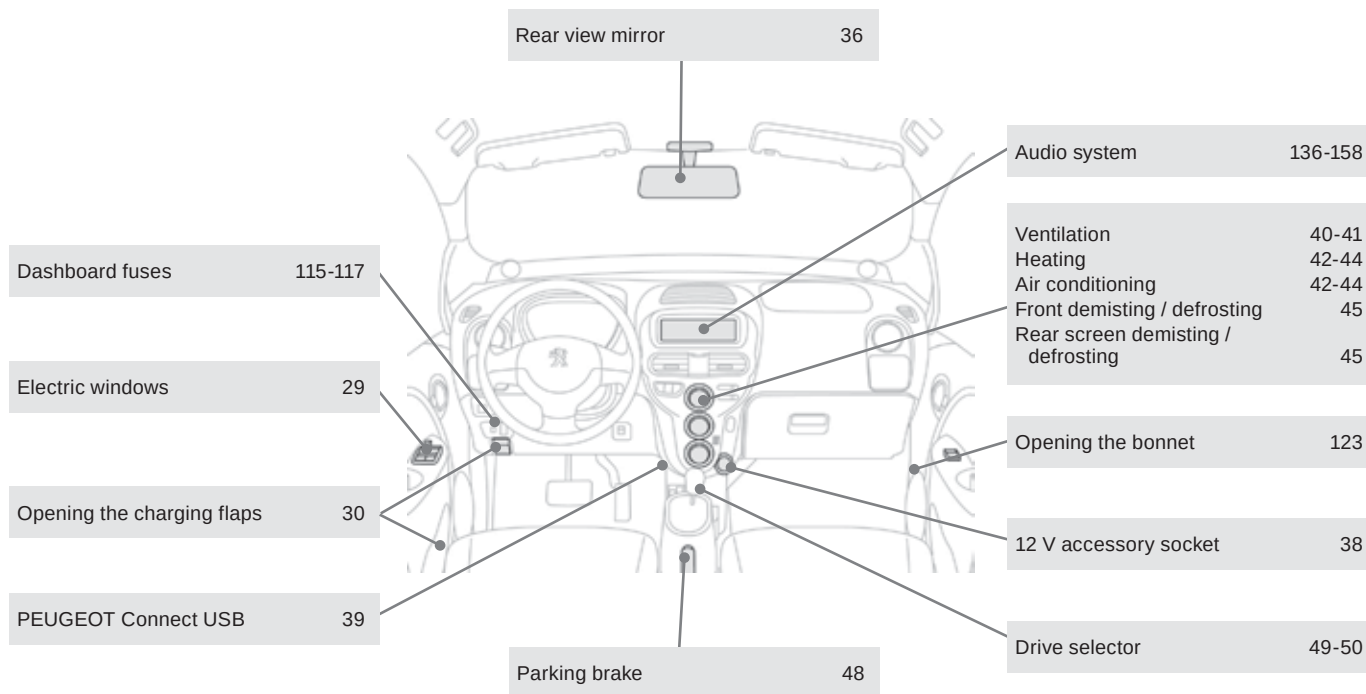

Instruments and controls (continued)

Instrument panels9

Warning lamps10-17

Indicators18-23

- main battery state of charge indicator

- energy consumption / generation indicator

- speedometer

- total distance recorder

- trip distance recorder

- lighting dimmer

- service indicator

- range indicator


Lighting control51-53

Direction indicators56

Automatic operation of brake lamps56

Door mirrors35

Headlamp height adjustment53

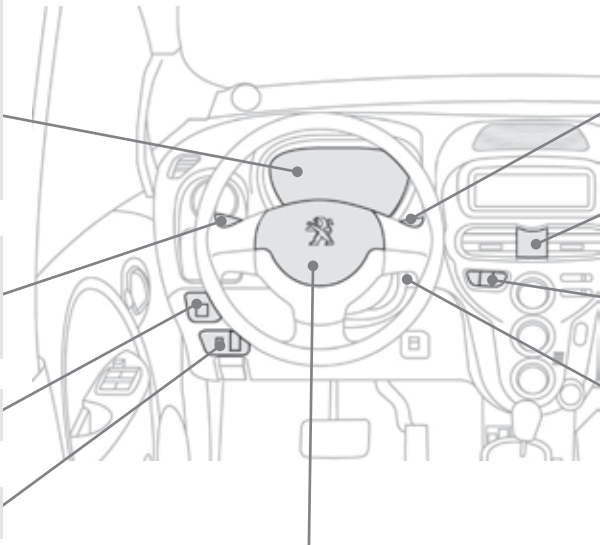

Wiper control54

Hazard warning lamps56

Emergency or assistance call57, 133-134

Ignition switch, starting/stopping the vehicle47

Horn57

Technical data - Maintenance

Front compartment	124
Checking levels	126-127
- ancillaries battery electrolyte	
- brake fluid	
- heating system fluid	
- screenwash fluid	
Checks	128

Changing front bulbs

106-111

Ancillaries battery

93-96

Front compartment fuses

114, 117-118

Opening the bonnet
Electric motor

123
129

Rear compartment
Checking the coolant level




125
127

Weights

130

Dimensions
Identification markings

131
132

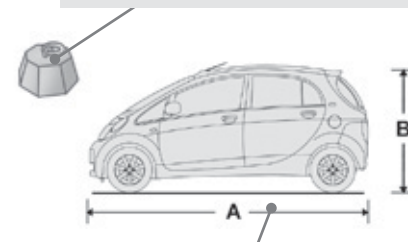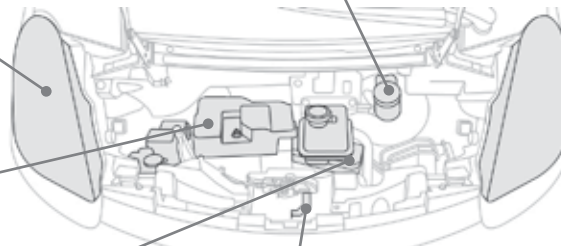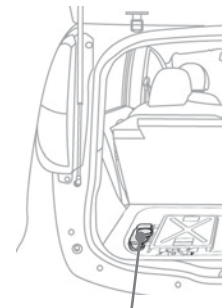

A

ABS and EBF systems	62
Accessories	120
Accessory socket, 12V	37, 38
Access to bulbs	107, 111
Adjusting headlamps	53
Adjusting head restraints	31
Advice on driving	46
Airbags	68
Airbags, curtain	70, 71
Airbags, front	68, 71
Airbags, lateral	70, 71
Air conditioning	41, 42, 44
Air vents	40
Anti-lock braking system (ABS)	62
Assistance call	57, 133, 134
Audible warning	57
Audio streaming (Bluetooth)	145
Audio system (radio)	135
Automatic illumination of headlamps	53
Automatic operation of brake lamps	56
Automatic switching off of lighting	53

B

Battery, ancillaries	93, 126
Battery, main	85, 129
Bluetooth (hands-free)	146
Bonnet, front	123
Bonnet stay	123
Brake discs	128
Brake lamps	56, 112
Brake pads	128
Brake discs/drums	128
Braking assistance system	62
Bulbs (changing, type)	106-113

C

CD MP3	140-143
Changing a bulb	106-113
Changing a fuse	114-118
Changing a wheel	101-104
Changing a wiper blade	119
Charge main battery	85
Charging time	129
Checking levels	126, 127
Checking tyre pressures (using the kit)	98
Checks	124-128
Children	67, 69, 72-84
Child lock	84
Child seats	72-83
Child seats, conventional	78
Child seats, ISOFIX	82
Closing the boot	28
Control unit	87
Coolant level	127
Cup holder	37

D

Daytime running lamps	53, 110
Deactivating the passenger airbag	69
Deactivation of the passenger and rear window control switches	29
Demisting/Defrosting, front	45
Demisting/Defrosting, rear	45
Dimensions	131
Dipped beam	51, 110
Direction indicators	56, 109, 112
Display screen	20, 21
Doors	27
Door pockets	37
Drive selector	49

E

EBA (Emergency braking assistance)	62, 63
Electric motor	129
Electronic brake force distribution (EBFD)	62
Electronic engine immobiliser	25, 26
Emergency braking system	63
Emergency call	57, 133, 134
Emergency warning lamps	56
Energy consumption / generation indicator	19
Environment	8, 41, 45, 58, 96, 127
ESP/ASR	64

F

Fast charge	91
Fitting a wheel	104
Fitting the mat	38
Flashing indicators	56, 109, 111, 112
Foglamps, front	52, 110
Foglamps, rear	52, 113
Folding/unfolding the door mirrors	35
Front compartment	124
Front seats	31
Fuses	114

H

Hands-free kit	146
Hazard warning lamps	56
Headlamp adjustment	53
Head restraints	31-33
Heating	42
Heating system fluid level	126

I

Indicators, direction	56
Instrument panel	9
Interior fittings	37
Interior lamp	55
ISOFIX mountings	81

J

Jack	101
------------	-----

K

Keeping children safe	67, 69, 72-84
Key with remote control	24, 26

L

Labels, identification	132
Lamps, front	106
Lamps, rear	111
Lamps, warning and indicator	10-17
Level, brake fluid	126
Levels and checks	124-128
Lighting bulbs (replacement)	106-113
Lighting control stalk	51

Lighting dimmer	20, 21
Lighting on reminder	52
Locking from the inside	27

M

Main beam	109
Markings, identification	132
Mat	38
Mirror, rear view	36
Mirrors, door	35
Mountings for ISOFIX seats	81
MP3 CD	141, 142

N

Normal charge	85
Number plate lamps	113

O

Opening the boot	28
Opening the front compartment	123
Operation indicator lamps	10-17

P

Parking brake	48, 128
Passenger compartment filter	128
PEUGEOT Connect Assistance	134
PEUGEOT Connect SOS	134
Player, CD MP3	141, 142
Port, USB	39, 142
Protecting children	67, 69, 72-84
Puncture	97

R

Radio	137
Range	20, 23
Rear compartment	125
Rear foglamp	52, 113
Rear screen (demisting)	45
Recharging flaps	30
Recirculation / exterior air intake	42
Remote control	24, 26
Removing a wheel	102
Removing the mat	38
Repair kit, puncture	97
Replacing bulbs	106-113
Replacing fuses	114-118
Replacing the passenger compartment filter	128
Replacing wiper blades	119
Reversing lamps	112

S

Screen menu map	154
Screenwash	54
Screenwash fluid level	126
Screen-wash reservoir	126
Seat adjustment	31, 33
Seat belts	65-67, 78
Seat belts warning lamp	65
Seat, rear, folding backrest	34
Seats, rear	33
Serial number, vehicle	132
Service indicator	21
Sidelamps	109, 112
Side repeater	111
Snow chains	105
Speedometer	9
Stability control (ESP)	64
Starting the vehicle	47, 49
Stopping the vehicle	47, 50
Storage	37
Sun visor	38
Systems, ASR and ESP	64

T

Technical data	129, 130
Temporary puncture repair kit	97
Third brake lamp	113
Total distance recorder	20
Towing another vehicle	119
Traction control (ASR)	64
Traffic information (TA)	139
Tyre pressures	58, 132
Tyres	58
Tyre under-inflation detection	16, 23, 58

U

Under-inflation (detection)	58
Unlocking from the inside	27
USB player	37, 39

V


Ventilation	40-42
-------------------	-------

W

Warning lamps	10-17
Weights	130
Window controls	29
Wiper control stalk	54
Wiper, rear	54
Wipers	54





 

RADIO CODE



After battery disconnection, a code must be entered for operation of the radio.

A maximum of 5 attempts are possible. For the last two attempts, a wait of around 15 minutes is imposed.

Keep your code in a safe place, never inside the vehicle.

When undertaking a long trip or journey, however, it is advisable to take the code with you along with your personal papers.



This handbook describes all of the equipment available in the whole range.

Your vehicle will be fitted with some of this equipment described in this document, depending on its trim level, version and the specification for the country in which it is sold.

The descriptions and illustrations are given without any obligation. Automobiles PEUGEOT reserves the right to modify the technical specifications, equipment and accessories without having to update this edition of the handbook.

This document is an integral part of your vehicle. It should be passed on to the new user in the event of sale or transfer.

In addition, there are labels present in your vehicle to warn you of the need for certain precautions to take for your safety; don't remove them, they will be useful again for a new owner.

Automobiles PEUGEOT declares, by application of the provisions of the European regulation (Directive 2000/53) relating to End of Life Vehicles, that it achieves the objectives set by this regulation and that recycled materials are used in the manufacture of the products that it sells.

Reproduction or translation of all or part of this document is prohibited without written authorisation from Automobiles PEUGEOT.

For any work on your vehicle, use a qualified workshop that has the technical information, competence and equipment required, which a PEUGEOT dealer is able to provide.

Printed in the EU

Anglais

08-14



PEUGEOT

AUTOMOBILES PEUGEOT - Siège Social : 75, avenue de la Grande-Armée 75016 Paris - France

Tél. : +33 (0)1 40 66 55 11 - Fax : +33 (0)1 40 66 54 14 - Téléc. : 645 700 F

<http://www.peugeot.com>

Société anonyme au capital de 172.711.770 € - R.C.S. : 552 144 503 R.C.S. Paris - SIRET : 552 144 503 00018 - APE : 2910Z

