


GMC Sierra 2007 fuse box diagram

Instrument Panel Fuse Block

The instrument panel fuse block access door is located on the driver's side edge of the instrument panel.

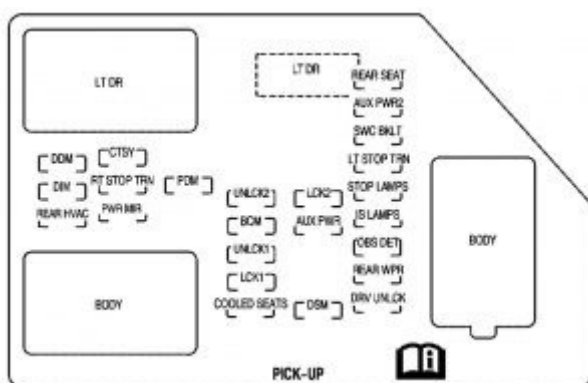

GMC Sierra – fuse box – instrument panel


Fuses	Usage
REAR SEAT	Rear Seats
AUX PWR2	Rear Accessory Power Outlet
SWC BKLT	Steering Wheel Controls Backlight
DDM	Driver Door Module
CTSY	Dome Lamps, Driver's Side Turn Signal
LT STOP TRN	Driver Side Turn Signal, Stoplamp
DIM	Instrument Panel Back Lighting
RT STOP TRN	Passenger Side Turn Signal, Stoplamp
PDM	Passenger Door Module, Universal Home Remote System
UNLCK2	Power Door Lock 2 (Unlock Feature)
LCK2	Power Door Lock 2 (Lock Feature)
STOP LAMPS	Stoplamps, Center-High Mounted Stoplamp
REAR HVAC	Rear Climate Controls
PWR MIR	Power Mirror
BCM	Body Control Module (BCM)
AUX PWR	Accessory Power Outlets
IS LAMPS	Interior Lamps
UNLCK1	Power Door Lock 1 (Unlock Feature)
OBS DET	Ultrasonic Rear Parking Assist
LCK1	Power Door Lock 1 (Lock Feature)
REAR WPR	Not Used
COOLED SEATS	Not Used
DSM	Driver Seat Module, Remote Keyless Entry System
DRV UNLCK	Driver's Power Door Lock (Unlock Feature)

Circuit Breaker	Usage
LT DR	Driver's Side Power Window Circuit Breaker

Harness Connector	Usage
LT DR	Driver's Door Harness Connection
BODY	Harness Connector
BODY	Harness Connector

Center Instrument Panel Fuse Block

The center instrument panel fuse block is located underneath the instrument panel, to the left of the steering column.

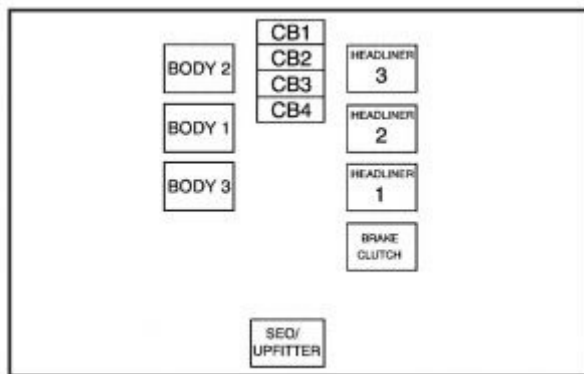


GMC Sierra – fuse box – central instrument panel

Harness Connector	Usage
BODY 2	Body Harness Connector 2
BODY 1	Body Harness Connector 1
BODY 3	Body Harness Connector 3
HEADLINER 3	Headliner Harness Connector 3
HEADLINER 2	Headliner Harness Connector 2
HEADLINER 1	Headliner Harness Connector 1
BRAKE CLUTCH	Brake Clutch Harness Connector
SEQ/UPFITTER	Special Equipment Option Upfitter Harness Connector

Circuit Breaker	Usage
CB1	Passenger's Side Power Window Circuit Breaker
CB2	Passenger's Seat Circuit Breaker
CB3	Driver's Seat Circuit Breaker
CB4	Not Used

Underhood Fuse Block

The underhood fuse block is located in the engine compartment, on the driver's side of the vehicle.

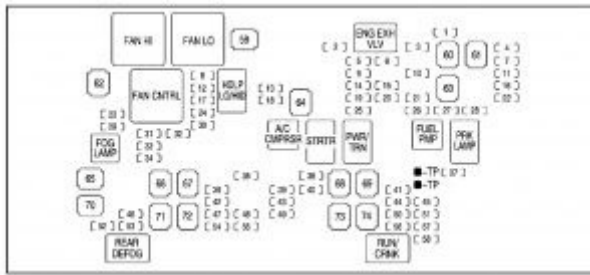

GMC Sierra – fuse box – engine compartment

Fuses	Usage
1	Right Trailer Stop/Turn Lamp
2	Not Used
3	Electronic Stability Suspension Control, Automatic Level Control Exhaust
4	Left Trailer Stop/Turn Lamp
5	Engine Controls
6	Engine Control Module, Throttle Control
7	Trailer Brake Controller
8	Front Washer
9	Oxygen Sensors
10	Anti-lock Brakes System 2
11	Trailer Back-up Lamps
12	Driver's Side Low-Beam Headlamp
13	Engine Control Module (Battery)
14	Fuel Injectors, Ignition Coils (Right Side)
15	Transmission Control Module (Battery)
16	Vehicle Back-up Lamps
17	Passenger's Side Low-Beam Headlamp
18	Air Conditioning Compressor
19	Oxygen Sensors
20	Transmission Controls (Ignition)
21	Fuel Pump
22	Fuel System Control Module
23	Not Used
24	Not Used
25	Fuel Injectors, Ignition Coils (Left Side)
26	Trailer Park Lamps
27	Driver's Side Park Lamps

28	Passenger's Side Park Lamps
29	Fog Lamps
30	Horn
31	Passenger's Side High-Beam Headlamp
32	Daytime Running Lamps
33	Driver's Side High-Beam Headlamp
34	Not Used
35	Sunroof
36	Key Ignition System, Theft Deterrent System
37	Windshield Wiper
38	SEO B2 Upfitter Usage (Battery)
39	Electric Adjustable Pedals
40	Climate Controls (Battery)
41	Airbag System (Ignition)
42	Amplifier
43	Audio System
44	Miscellaneous (Ignition), Cruise Control
45	Tailgate Open/Close Assist
46	Airbag System (Battery)
47	OnStar®, Rear Seat Entertainment Display
48	Instrument Panel Cluster
49	Power Take-Off
50	Auxiliary Climate Control (Ignition), Compass-Temperature Mirror
51	Center High-Mounted Stoplamp (CHMSL)
52	Rear Defogger
53	Heated Mirrors
54	SEO B1 Upfitter Usage (Battery)
55	Cigarette Lighter, Auxiliary Power Outlet
56	Automatic Level Control Compressor Relay, SEO Upfitter Usage
57	Climate Controls (Ignition)
58	Engine Control Module, Secondary Fuel Pump (Ignition)

J-Case	Usage
59	Cooling Fan 1
60	Automatic Level Control Compressor

61	Heavy Duty Anti-lock Brake System
62	Cooling Fan 2
63	Anti-lock Brake System 1
64	Starter
65	Stud 2 (Trailer Brakes)
66	Left Bussed Electrical Center 1
67	Not Used
68	Heated Windshield Washer System
69	Four-Wheel Drive System
70	Stud 1 (Trailer Connector Battery Power) (Optional – 40A Fuse Required)
71	Mid-Bussed Electrical Center 1
72	Climate Control Blower
73	Tailgate Open/Close Assist
74	Left Bussed Electrical Center 2

Relays	Usage
FAN HI	Cooling Fan High Speed
FAN LO	Cooling Fan Low Speed
ENG EXH VLV	Not Used
FAN CNTRL	Cooling Fan Control
HDLP LO/HID	Low-Beam Headlamp
FOG LAMP	Front Fog Lamps
A/C CMPSR	Air Conditioning Compressor
STRTR	Starter
PWR/TRN	Powertrain
FUEL PMP	Fuel Pump
PRK LAMP	Parking Lamps
REAR DEFOG	Rear Defogger
RUN/CRANK	Switched Power