


Chrysler Voyager 1996 – 2000 fuse box diagram

Engine Compartment Fuse Box ('96-'99)

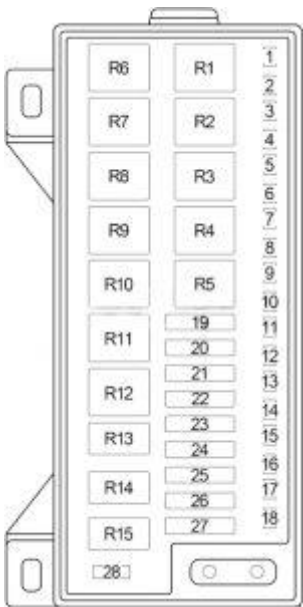

Chevrolet Voyager – fuse box diagram – engine compartment

No.	A	Circuit Protected
1	10	Airbag Control Module
2	10	Airbag Control Module
3	–	–
4	10	Dodge, Plymouth, Export: Left Headlamp (High Beam)
		Chrysler: Left High Headlamp
5	10	Dodge, Plymouth, Export: Right Headlamp (High Beam), Message Center
		Chrysler: Right High Headlamp, Message Center

6	15	Dodge, Plymouth: Left Headlamp (Low Beam), Left/Right Fog Lamp, Headlamp Switch
		Chrysler: Left Low Headlamp, Fog Lamp Relay
		Export: Left Headlamp (Low Beam)
7	15	Dodge, Plymouth: Right Headlamp (Low Beam)
		Chrysler: Right Low Headlamp
		Export: Right Headlamp, Headlamp Switch, Left/Right Headlamp Leveling Motor
8	20	Cigar Lighter/Accessory Relay (Front Cigar Lighter/Power Outlet, Rear Cigar Lighter/Power Outlet)
9	20	Horn Relay
10	20	Combination Flasher/DRL Module
11	15	Air Conditioner Compressor Clutch Relay
12	25	ABS
13	20	Stop Lamp Switch
14	–	–
15	20	<i>Gasoline</i> : Transmission Control Module, Transmission Control Relay

16	20	<i>Gasoline:</i> Fuel Pump Relay, Powertrain Control Module, Fuel Tank Module
	20	<i>Diesel:</i> Fuel Heater Relay, Fuel Heater, Crank Case Heater
17	20	<i>Gasoline:</i> Automatic Shut Down Relay (Powertrain Control Module, Downstream Heated Oxygen Sensor, Upstream Heated Oxygen Sensor, Generator, Ignition Coil, Fuel Injector)
	25	<i>Diesel:</i> Diesel Power Relay (Powertrain Control Module, EGR Solenoid, Generator, Fuel Pump Module, Air Conditioner Compressor Clutch Relay, Glow Plug Relay, Radiator Fan Relay: No.1, No.2, No.3)
	20	<i>Diesel:</i> Diesel Power Relay (Powertrain Control Module, EGR Solenoid, Generator, Fuel Pump Module, Hot Film Air Mass Meter, Air Conditioner Compressor Clutch Relay, Glow Plug Relay, Radiator Fan Relay: No.1, No.2, No.3)
18	15	Front Reading Lamps/Switch, Mid Reading Lamp, Rear Lamp Reading, Visor/Vanity Mirror Lamps, Power Mirror Switch, Glove Box Lamp, Sentry Key Immobilizer Module (Export), Universal Garage Door Opener, Courtesy Lamp Relay (Headlamp Switch, Key-in Halo Lamp, Courtesy Lamp, Liftgate Lamp Flood, Center Dome Lamp, Rear Dome Lamp, Reading Lamp), Power Mirror Unfold Relay (Export), Power Mirror Fold Relay (Export)
19	30	Wiper On Relay (Body Control Module, Wiper High/Low Relay (Front Wiper Switch, Wiper Module))
20	40	<i>Diesel:</i> Radiator Fan Relay No.3
21	40	Front Blower Relay
22	40	Park Lamp Relay (Fuse (Passenger Compartment): "1", "3", "4", "5")
23	40	Starter Relay, Ignition Switch (Fuse (Passenger Compartment): "2", "6", "8", "9", "10", "13", "19", "20", "21")

24	40	Gasoline: Radiator Fan Relay
		Diesel: Radiator Fan Relay No.2
25	40	ABS
26	40	Ignition Switch, Power Seat Circuit Breaker, Fuse (Passenger Compartment): "15"
27	40	Rear Window Defogger Relay, Fuse (Passenger Compartment): "7"
28	10	MemorySeat/Mirror Module, Body Control Module, Instrument Cluster, Message Center, Remote Keyless Entry Module, Data Link Connector, Radio, Ignition Switch (Diode: "1", "3", Fuse (Passenger Compartment): "2")
Relay		
R1	Cigar Lighter/Accessory	
R2	Wiper High/Low	
R3	Wiper On	
R4	High Beam	
R5	Low Beam	
R6	–	
R7	Horn	

R8	Air Conditioner Compressor Clutch
R9	–
R1 0	Front Blower Motor
R1 1	Starter
R1 2	Park Lamp
R1 3	<i>Gasoline:</i> Transmission Control
R1 4	<i>Gasoline:</i> Fuel Pump
	<i>Diesel:</i> Fuel Heater
R1 5	<i>Gasoline:</i> Automatic Shut Down
	<i>Diesel:</i> Diesel Power

Engine Compartment Fuse Box ('00)



Chevrolet Voyager – fuse box diagram – engine compartment

No.	A	Circuit Protected
1	15	Air Conditioner Compressor Clutch Relay
2	20	<i>Gasoline:</i> Transmission Control Module, Transmission Control Relay
3	20	<i>Gasoline:</i> Automatic Shut Down Relay (Powertrain Control Module, Downstream Heated Oxygen Sensor, Upstream Heated Oxygen Sensor, Generator, Ignition Coil, Fuel Injector)
	20	<i>Diesel:</i> Diesel Power Relay (Engine Control Module, EGR Solenoid, Generator, Fuel Pump Module, Air Conditioner Compressor Clutch Relay, Glow Plug Relay: No.1, No.2; Radiator Fan Relay: No.1, No.2, No.3)
4	20	Cigar Lighter/Accessory Relay
5	20	<i>Gasoline:</i> Fuel Pump Relay, Powertrain Control Module
	20	<i>Diesel:</i> Fuel Heater Relay


6	15	Front Reading Lamps/Switch, Mid Reading Lamp, Rear Lamp Reading, Visor/Vanity Mirror Lamps, Power Mirror Switch, Glove Box Lamp, Sentry Key Immobilizer Module (Export), Universal Garage Door Opener, Courtesy Lamp Relay (Headlamp Switch, Key-in Halo Lamp, Courtesy Lamp, Liftgate Lamp Flood, Center Dome Lamp, Rear Dome Lamp, Reading Lamp), Power Mirror Unfold Relay (Export), Power Mirror Fold Relay (Export)
7	20	Horn Relay
8	20	Chrysler: Left Low Headlamp, Fog Lamp Relay
	20	Dodge, Plymouth, Export: Left Headlamp (Low Beam)
9	15	Chrysler: Right Low Headlamp
	15	Dodge, Plymouth: Right Headlamp (Low Beam)
	15	Export: Right Headlamp, Headlamp Switch, Left/Right Headlamp Leveling Motor
10	25	ABS
11	20	Stop Lamp Switch
12	10	Airbag Control Module
13	10	Airbag Control Module
14	20	Combination Flasher/DRL Module
15	10	MemorySeat/Mirror Module, Body Control Module, Instrument Cluster, Message Center, Remote Keyless Entry Module, Data Link Connector,

		Radio, Ignition Switch (Diode: "1", "3", Fuse (Passenger Compartment): "2")
16	–	–
17	–	–
18	10	Chrysler: Left High Headlamp
	10	Dodge, Plymouth, Export: Left Headlamp (High Beam)
19	10	Chrysler: Right Low Headlamp
	10	Dodge, Plymouth: Right Headlamp (High Beam)
	10	Export: Right Headlamp, Headlamp Switch, Left/Right Headlamp Leveling Motor
20	–	–
10 1	40	Park Lamp Relay (Fuse (Passenger Compartment): "1", "3", "4", "5")
10 2	40	ABS
10 3	40	Ignition Switch (Fuse (Passenger Compartment): "11", "12"), Power Seat Circuit Breaker, Fuse (Passenger Compartment): "15"
10 4	40	Starter Relay, Ignition Switch (Body Control Module, Fuse (Passenger Compartment): "6", "8", "9", "10", "13", "19", "20", "21")
10 5	40	<i>Diesel</i> : Radiator Fan Relay No.3

106	40	<i>Gasoline:</i> Radiator Fan Relay
	40	<i>Diesel:</i> Radiator Fan Relay No.2
107	40	Front Blower Motor Relay
108	40	Rear Window Defogger Relay, Fuse (Passenger Compartment): "7"
109	30	Wiper On Relay (Body Control Module, Wiper High/Low Relay (Front Wiper Switch, Wiper Module))
Relay		
R1	<i>Gasoline:</i> Transmission Control	
R2	Starter	
R3	Cigar Lighter/Accessory	
R4	Front Blower Motor	
R5	Wiper On	
R6	Wiper High/Low	
R7	Air Conditioner Compressor Clutch	
R8	<i>Diesel:</i> Diesel Power	
	<i>Gasoline:</i> Automatic Shut Down	

R9	<i>Diesel:</i> Fuel Heater
	<i>Gasoline:</i> Fuel Pump
R10	Horn
R11	Park Lamp
R12	High Beam
R13	Low Beam

Passenger Compartment Fuse Box

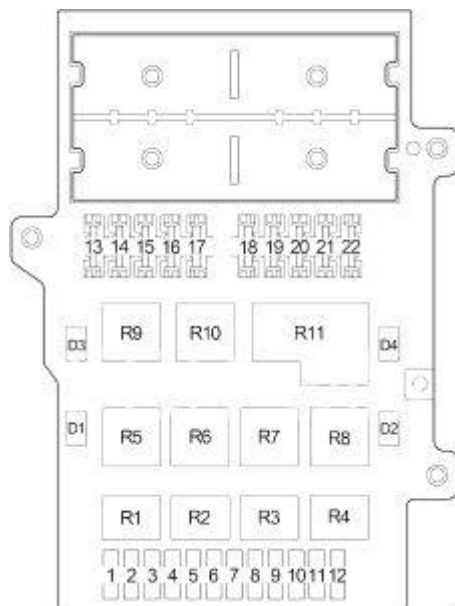

Chevrolet Voyager – fuse box diagram – passenger compartment

No.	A	Circuit Protected
1	10	Body Control Module
2	10	Instrument Cluster, Body Control Module, Transmission Control Module, Brake Shift Interlock Solenoid

3	15	'98-'00: Right Front Park/Turn Signal Lamp (Trailer), Right Rear Lamp Assembly, Trailer Tow Connector, Fuse (Passenger Compartment): "1"
	20	'96-'97: A/C Heater Control, Message Center, Body Control Module, Rear Wiper Motor
4	15	'98-'00: Left/Right Fog Lamp
	15	'96-'97: Right Front Park/Turn Signal Lamp, Right Rear Lamp Assembly
5	15	'98-'00: Washer Module (Export), Headlamp Switch (Export), Left Front Park/Turn Signal Lamp (Trailer), License Lamp, Left Rear Lamp Assembly
	15	'96-'97: Left/Right Fog Lamp
6	20	'98-'00: Body Control Module, A/C Heater Control, Message Center, Automatic Day/Night Mirror, Compass/Mini-Trip Computer, Rear Wiper Motor
	15	'96-'97: Left Front Park/Turn Signal Lamp, Left Rear Lamp Assembly, Headlamp Switch, License Lamp
7	10	Heated Mirror, Driver Power Mirror, Passenger Power Mirror
8	10	Radio
		Premium: Radio, Speaker Relay (Choke Radio)
9	15	'98-'99: Electric Wiper De-icer
	10	'00: Electric Wiper De-icer
10	10	'98-'00: Starter Relay, Transmission Control Module, Clutch Interlock Switch (Manual Transmission)

	10	'96-'97: ABS
11	20	Rear A/C Heater Control
12	10	Driver/Passenger Heated Seat Switch, Combination Flasher/DRL Module, ABS, Front Blower Motor Relay, Rear Window Defogger Relay (A/C Heater Control), Back-Up Lamp (Back-Up Lamp Switch (Manual Transmission), Transmission Range Sensor (Automatic Transmission – EATX), Park/Neutral Position Switch (Automatic Transmission – ATX)), Automatic Day/Night Mirror
13	9	<i>Gasoline:</i> Fuel Pump Relay, Powertrain Control Module, Sentry Key Immobilizer Module (Export), EVAP Leak Detection Pump, Air Conditioner Compressor Clutch Relay, Torque Converter Clutch Solenoid (ATX), EGR Solenoid, Fuse (Engine Compartment): "2" ('96-'99), "13" ('00))
	9	<i>Diesel:</i> Fuel Heater Relay, Engine Control Module, Air Conditioner Compressor Clutch Relay, Vehicle Speed Sensor, Sentry Key Immobilizer Module (Export), Fuse (Engine Compartment): "2" ('96-'99), "13" ('00))
14	3	'96-'97: Left Front Door Lock Motor
15	9	'98-'00: Driver Door Unlock Relay, Door Unlock Relay, Door Lock Relay, Washer Module (Export)
	4	'96-'97: Liftgate Lock Motor, Left Rear Sliding Door Contact
16	6	'96-'97: Right Front Door Lock Motor, Right Rear Sliding Door Contact
17	4	'96-'97: Left Front Door Lock Motor, Right Front Door Lock Motor
18	6	'96-'97: Liftgate Lock Motor, Left Rear Sliding Door Contact, Right Rear Sliding Door Contact
19	9	'98-'00: Cigar Lighter/Accessory Relay, Washer Module (Export), Front Washer Motor, Rear Washer Motor, Front Wiper Switch

	6	'96-'97: Front Washer Motor, Rear Washer Motor
20	9	'98-'00: Driver/Passenger Power Window Switch
	9	'96-'97: Driver Power Window Switch
21	9	'98-'00: Driver Power Window Switch
	6	'96-'97: Driver/Passenger Power Window Switch
22	3	'96-'97: Starter Relay, Transmission Control Module, Clutch Interlock Switch (Manual Transmission)
Relay		
R1	Rear Window Defogger	
R2	Speaker	
R3	Fog Lamp	
R4	Courtesy Lamp	
R5	Driver Door Unlock	
R6	Washer Module	
R7	Power Mirror Fold	
R8	Power Mirror Unfold	

R9	Door Unlock
R1 0	Door Lock
R1 1	Combination Flasher/DRL Module