

TRANSFER CASE

TC

	Page
1. General Description	2
2. Transfer Case and Extension Case Assembly	3
3. Transfer Clutch	4
4. Extension Case	5
5. Oil Seal	6
6. Transfer Drive Gear	7
7. Transfer Driven Gear	8
8. Reduction Drive Gear	9
9. Reduction Driven Gear	10
10. Center Differential	11
11. Transfer Clutch Pressure Test	12

General Description

TRANSFER CASE

1. General Description

A: NOTE

For general description, refer to “CVT (TR580)”, “CVT (TR690)” or “6MT” section.

CVT (TR580) model:

<Ref. to CVT(TR580)-3, General Description.>

CVT (TR690) model:

<Ref. to CVT(TR690)-3, General Description.>

6MT model:

<Ref. to 6MT-2, General Description.>

2. Transfer Case and Extension Case Assembly

A: NOTE

For removal, installation and inspection, refer to "6MT" section. <Ref. to 6MT-44, Transfer Case and Extension Case Assembly.>

Transfer Clutch

TRANSFER CASE

3. Transfer Clutch

A: NOTE

For removal, installation and inspection, refer to “CVT (TR580)” or “CVT (TR690)” section.

CVT (TR580) model:

<Ref. to CVT(TR580)-171, Transfer Clutch.>

CVT (TR690) model:

<Ref. to CVT(TR690)-146, Transfer Clutch.>



4. Extension Case

A: NOTE

For removal, installation and inspection, refer to “CVT (TR580)” or “CVT (TR690)” section.

CVT (TR580) model:

<Ref. to CVT(TR580)-167, Extension Case.>

CVT (TR690) model:

<Ref. to CVT(TR690)-138, Extension Case.>

Oil Seal

TRANSFER CASE

5. Oil Seal

A: NOTE

For removal, installation and inspection, refer to “CVT (TR580)”, “CVT (TR690)” or “6MT” section.

CVT (TR580) model:

<Ref. to CVT(TR580)-85, Extension Case Oil Seal.>

CVT (TR690) model:

<Ref. to CVT(TR690)-86, Extension Case Oil Seal.>

6MT model:

<Ref. to 6MT-36, Oil Seal.>

6. Transfer Drive Gear

A: NOTE

For removal, installation and inspection, refer to "6MT" section. <Ref. to 6MT-50, Transfer Drive Gear.>

Transfer Driven Gear

TRANSFER CASE

7. Transfer Driven Gear

A: NOTE

For removal, installation and inspection, refer to “CVT (TR580)” or “6MT” section.

CVT (TR580) model:

<Ref. to CVT(TR580)-186, Transfer Driven Gear.>

6MT model:

<Ref. to 6MT-52, Transfer Driven Gear.>



8. Reduction Drive Gear

A: NOTE

For removal, installation and inspection, refer to "CVT (TR580)" section. <Ref. to CVT(TR580)-218, Reduction Drive Gear.>

Reduction Driven Gear

TRANSFER CASE

9. Reduction Driven Gear

A: NOTE

For removal, installation and inspection, refer to “CVT (TR580)” or “CVT (TR690)” section.

CVT (TR580) model:

<Ref. to CVT(TR580)-191, Reduction Driven Gear.>

CVT (TR690) model:

<Ref. to CVT(TR690)-200, Reduction Driven Gear.>

10.Center Differential

A: NOTE

For removal, installation and inspection, refer to "6MT" section. <Ref. to 6MT-54, Center Differential.>

Transfer Clutch Pressure Test

TRANSFER CASE

11. Transfer Clutch Pressure Test

A: NOTE

For inspection, refer to "CVT (TR580)" or "CVT (TR690)" section.

CVT (TR580) model:

<Ref. to CVT(TR580)-51, Transfer Clutch Pressure Test.>

CVT (TR690) model:

<Ref. to CVT(TR690)-53, Transfer Clutch Pressure Test.>

Provided Exclusively on Ebay
by Seller "4SubaruManuals"

