

# Chevrolet Spark 2013 fuse box diagram (EU version)

## Engine compartment fuse box

The fuse box is located in the engine compartment.




Chevrolet Spark – fuse box – engine compartment

| Number | Circuit                   |
|--------|---------------------------|
| 1      | Fuel pump                 |
| 2      | Parking light relay       |
| 3      | Fan low speed relay       |
| 4      | Fan high speed            |
| 5      | Air condition             |
| 6      | Fan high speed relay      |
| 7      | Air condition relay       |
| 8      | ABS 2                     |
| 9      | Parking light LH          |
| 10     | Parking light RH          |
| 11     | Front fog light           |
| 12     | Fan low speed             |
| 13     | ABS 1                     |
| 14     | Front fog light relay     |
| 15     | Fuel pump relay           |
| 16     | Spare fuse                |
| 17     | Headlight high beam relay |
| 18     | Headlight high beam       |
| 19     | Headlight low beam LH     |
| 20     | Headlight low beam RH     |
| 21     | Spare fuse                |
| 22     | Spare fuse                |
| 23     | Ignition 2/starter        |
| 24     | Ignition 1/accessory      |
| 25     | Hazard warning flashers   |
| 26     | Horn                      |
| 27     | Headlight low beam        |
| 28     | Horn relay                |

|    |                          |
|----|--------------------------|
| 29 | Engine main relay        |
| 30 | Ignition                 |
| 31 | EMS 1                    |
| 32 | EMS 2                    |
| 33 | Instrument panel battery |
| 34 | —                        |
| 35 | Heated seat              |
| 36 | Heated seat relay        |
| 37 | Engine control module    |
| 38 | —                        |
| 39 | Spare fuse               |

### Instrument panel fuse box

Interior fuse box is located on the underside of the driver's side instrument panel.

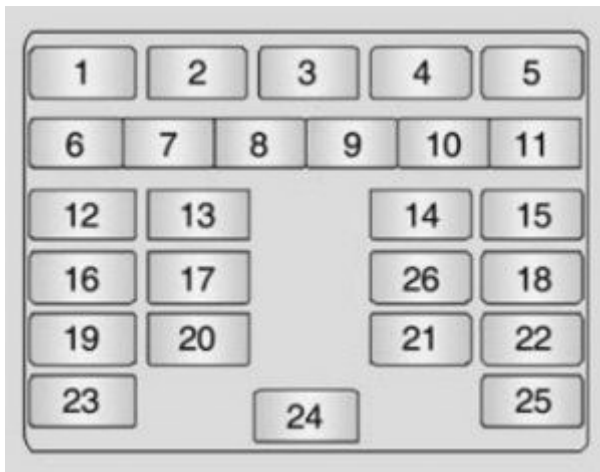

Chevrolet Spark – fuse box – instrument panel

| Number | Circuit                         |
|--------|---------------------------------|
| 1      | Rear wiper                      |
| 2      | Mirror outside rear view mirror |
| 3      | Headlight                       |
| 4      | Electric OSRVM                  |
| 5      | Door lock                       |
| 6      | Front wiper                     |
| 7      | —                               |
| 8      | Reverse lights                  |
| 9      | Turn signals                    |
| 10     | Rear defogger                   |
| 11     | Rear fog lights                 |
| 12     | Instrument cluster              |
| 13     | Blower motor control module     |
| 14     | Airbag                          |

|    |                                             |
|----|---------------------------------------------|
| 15 | Theft deterrent/data link connector         |
| 16 | Transmission control module                 |
| 17 | Rear power windows                          |
| 18 | Radio/remote keyless entry/remote entry     |
| 19 | Engine control module (ECM)/theft deterrent |
| 20 | Front power windows                         |
| 21 | Cigarette lighter                           |
| 22 | Brake light                                 |
| 23 | Starter                                     |
| 24 | Radio/clock/remote keyless entry            |
| 25 | SDM                                         |
| 26 | —                                           |