

Dodge Durango 2012 fuse box diagram

Totally Integrated Power Module

The Totally Integrated Power Module is located in the engine compartment.

Cavity	Cartridge Fuse	Mini Fuse	Description
J01	40		Air Suspension
J02	30		Power Liftgate Module
J03	30		Trailer Tow
J04	25		Driver Door Node
J05	25		Passenger Door Node
J06	40		Antilock Brakes Pump/Stability Control System
J07	30		Antilock Brakes Valve/Stability Control System
J08	40		Power Seat
J09	30		E-Brake
J10	30		Headlamp Wash Relay Contact
J11	30		Drive Train Control Module

J12	30		Rear Defroster
J13	60		Main Ignition Off Draw (IOD)
J14	20		Trailer Tow Lamps/Park Lamps
J15	40		Front Cabin Fan/Blower
J17	40		Starter Motor Solenoid
J18	20		Powertrain Control Module/Powertrain Control Module Transmission Range
J19	60		Radiator Fan Motor HI/Radiator Fan Motor Low
J20	30		Front Wiper
J21	20		Front/Rear Washer Control
J22	25		Sunroof Module
M1		15	Stop Lamp
M2		20	Electronic Limit Slip Differential/Air Suspension
M3		20	Liftgate Unlock/DRL Relay
M5		25	115V AC Power Inverter
M6		20	Rain Sensor/Cigar Lighter

M7		20	Power Outlet #2 (Switchable)
M8		20	Front Heated Seat & Steering Wheel
M9		20	Rear Heated Seats
M10		15	Video/Universal Garage Door Opener
M11		10	Heating, Ventilation & Air Conditioning (Climate Control System)
M12		30	Radio/Amplifier
M13		20	Instrument Cluster
M14		20	Back Up Camera
M15		20	Power Seat Module(s)/Adaptive Cruise Control/Audio Telematics/Daytime Running Lights Relay/Air Suspension Module/Instrument Cluster
M16		10	Occupant Restraint Controller
M18		15	Stop Lamp
M19		25	Automatic Shutdown 1 and 2
M20		15	Instrument Cluster
M21		20	Automatic Shutdown 3

M22		10	Horns (Low/High) – Right
M23		10	Horns (Low/High) – Left
M24		25	Rear Wiper
M25		20	Fuel Pump Motor Output/Diesel Lift Pump (Export Only)
M26		10	Driver Door Switch Bank
M27		10	Ignition Switch/Wireless Control Module/Keyless Entry Module
M28		15	Powertrain Controller/Transmission Controller
M29		10	Tire Pressure Monitor
M30		15	J1962 Diag Connector
M31		20	Backup Lamps
M32		10	Occupant Restraint Controller
M33		10	Powertrain Controller/Transmission Controller
M34		10	Park Assist Module/Climate Control System Module/IR Sensor/Compass Module
M35		15	LH Rear Parklamps
M36		20	Power Outlet

M37		10	Antilock Brakes/Stability Control System Module/ Stoplamp Switch Sensor
M38		25	All Door Lock &Unlock