


INSPECTION

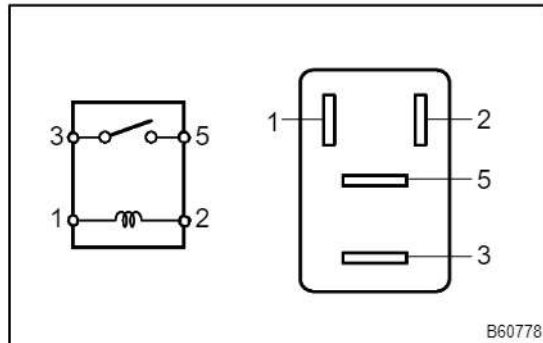


1. INSPECT RELAY (HORN)

- Remove the HORN relay from the engine room J/B.
- Measure the HORN relay resistance.

Standard:

Tester Connection	Specified Condition
3 - 5	10 kΩ or higher
3 - 5	Below 1 Ω (when battery voltage is applied to terminals 1 and 2)

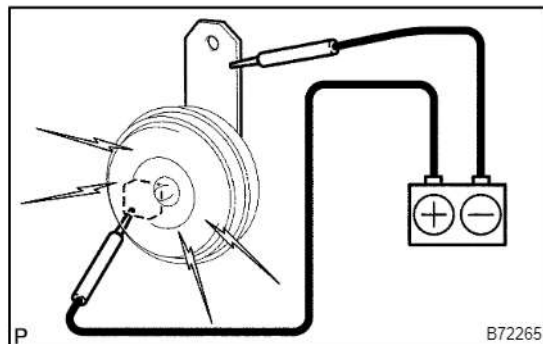


2. INSPECT HIGH PITCHED HORN ASSY

- Check operation of the horn.

Standard:

Measurement Condition	Specified Operation
Battery positive (+) → Terminal 1 Battery negative (-) → Horn bracket	Horn sounds

If the result is not as specified, replace the horn assy.

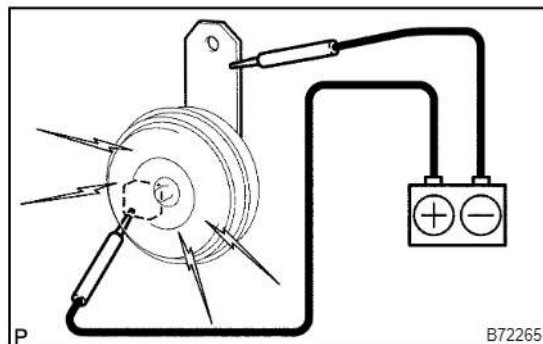

3. INSPECT LOW PITCHED HORN ASSY

- Check operation of the horn.

Standard:


Measurement Condition	Specified Operation
Battery positive (+) → Terminal 1 Battery negative (-) → Horn bracket	Horn sounds

If the result is not as specified, replace the horn assy.

HORN SYSTEM

LOCATION

6900G-04

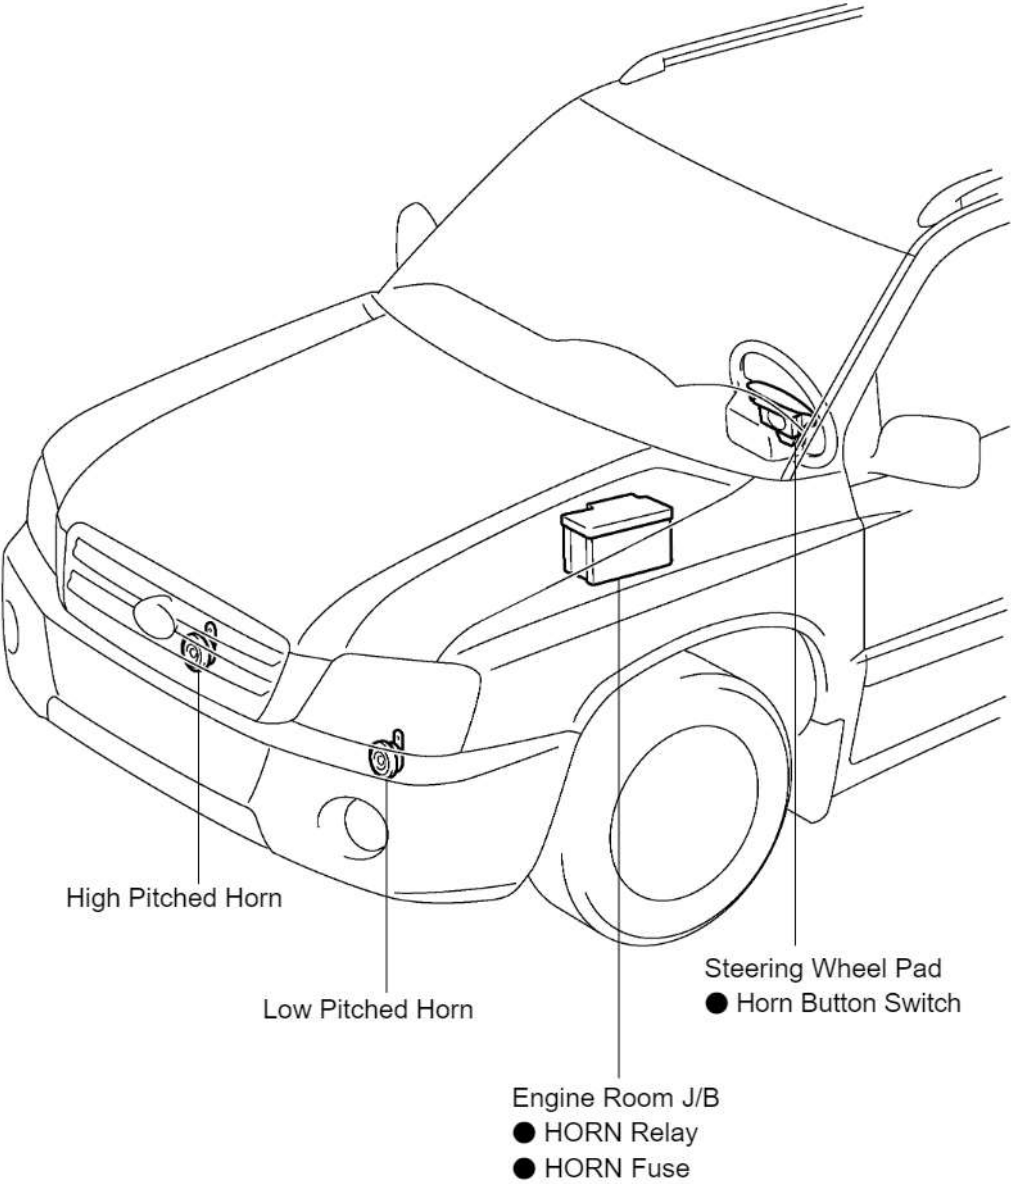

T

B74626