




F RELAY LOCATIONS

[Engine Compartment]

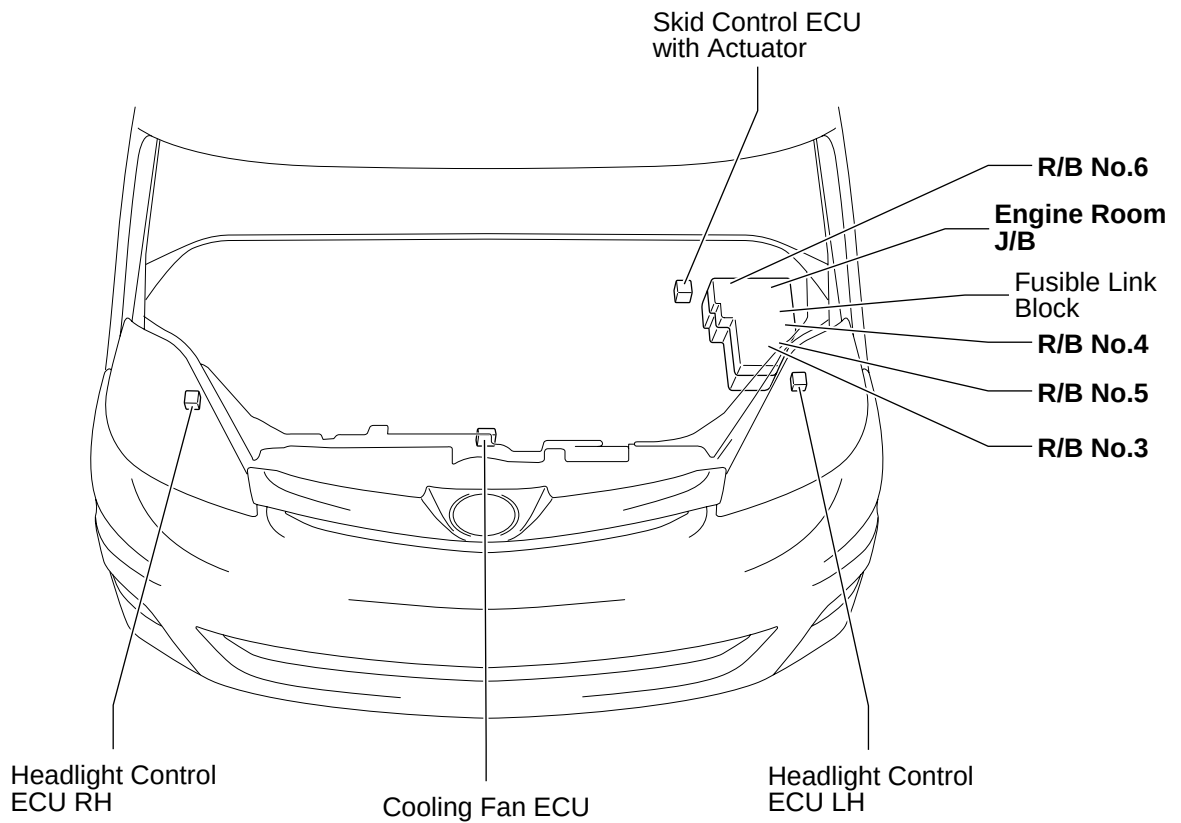


[Instrument Panel]

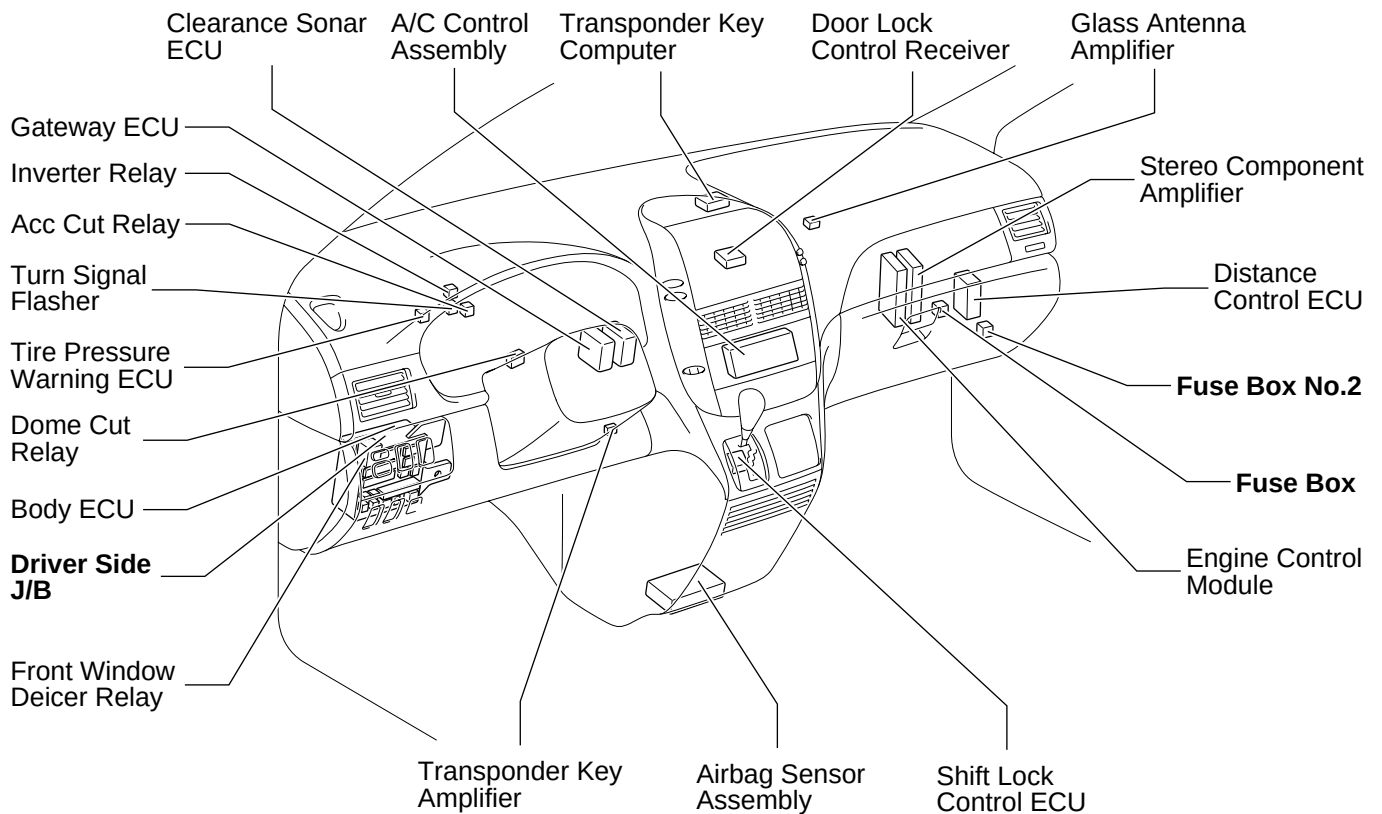

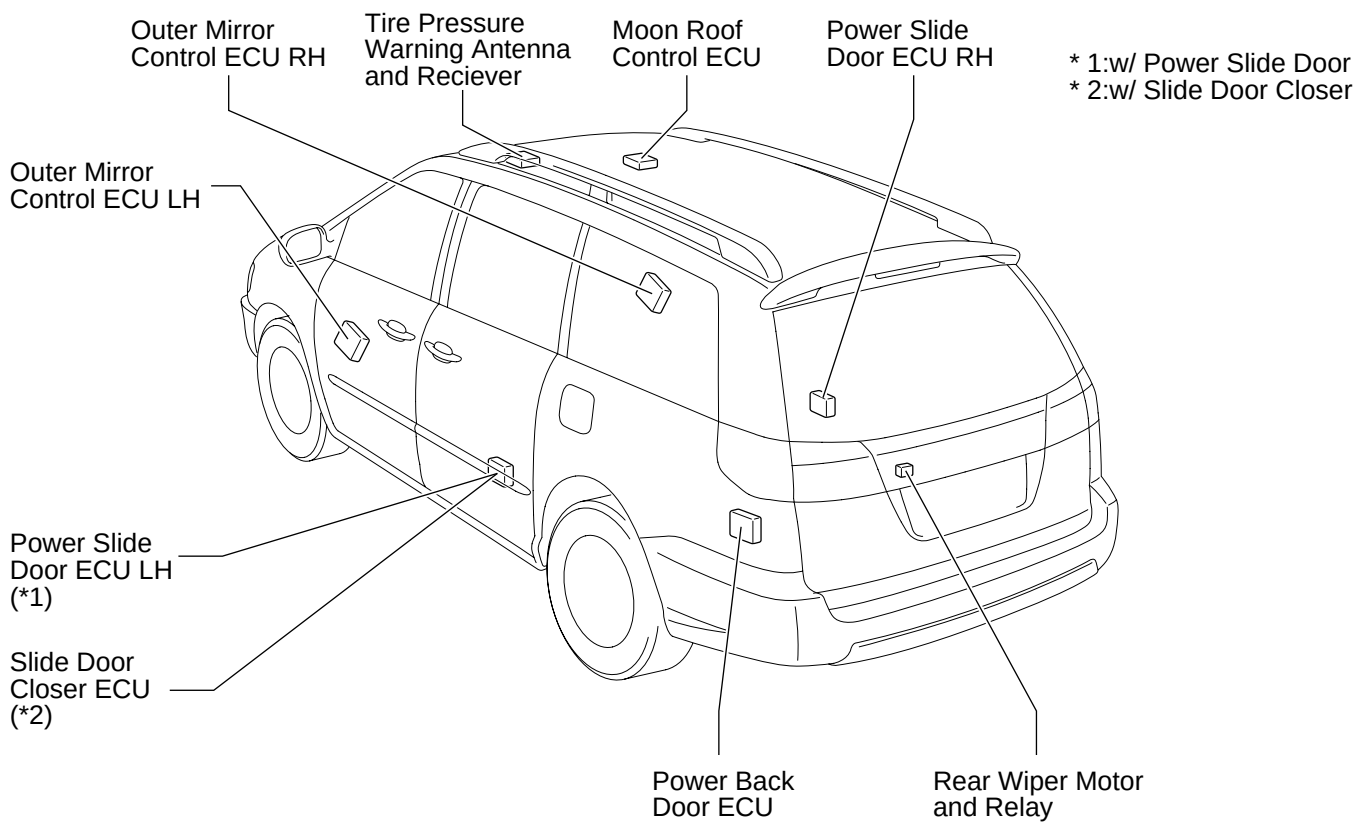
[Body]

F RELAY LOCATIONS

[Front Seat]

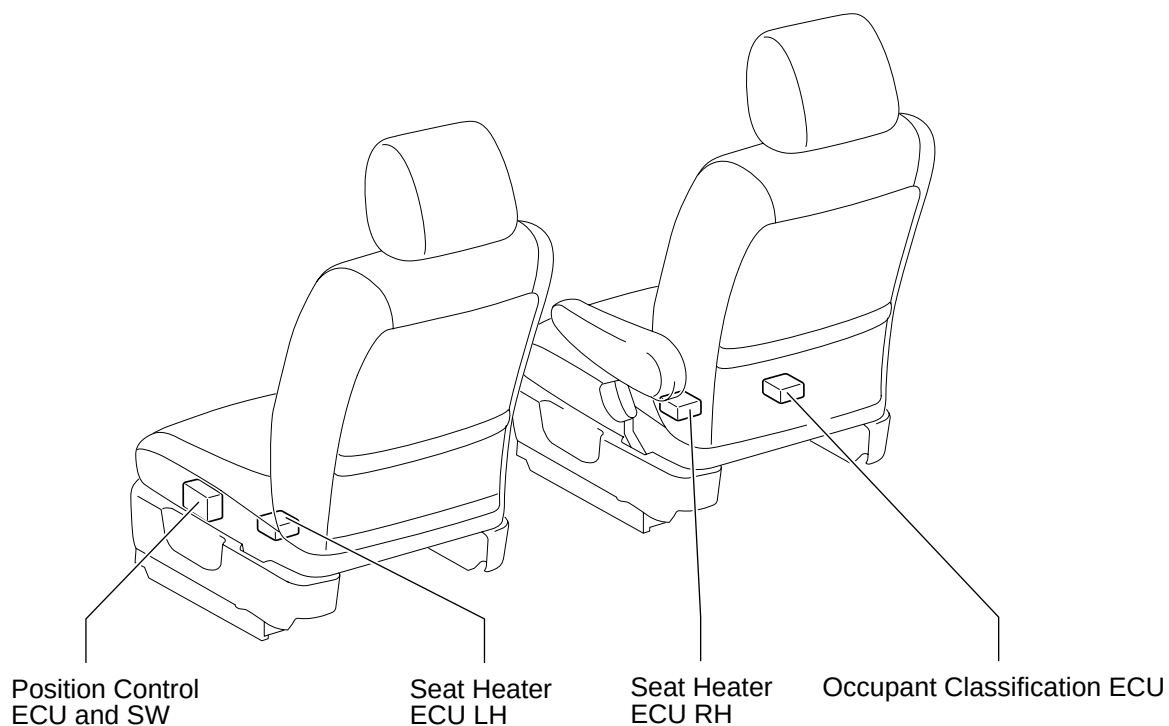


[Rear No.2 Seat]

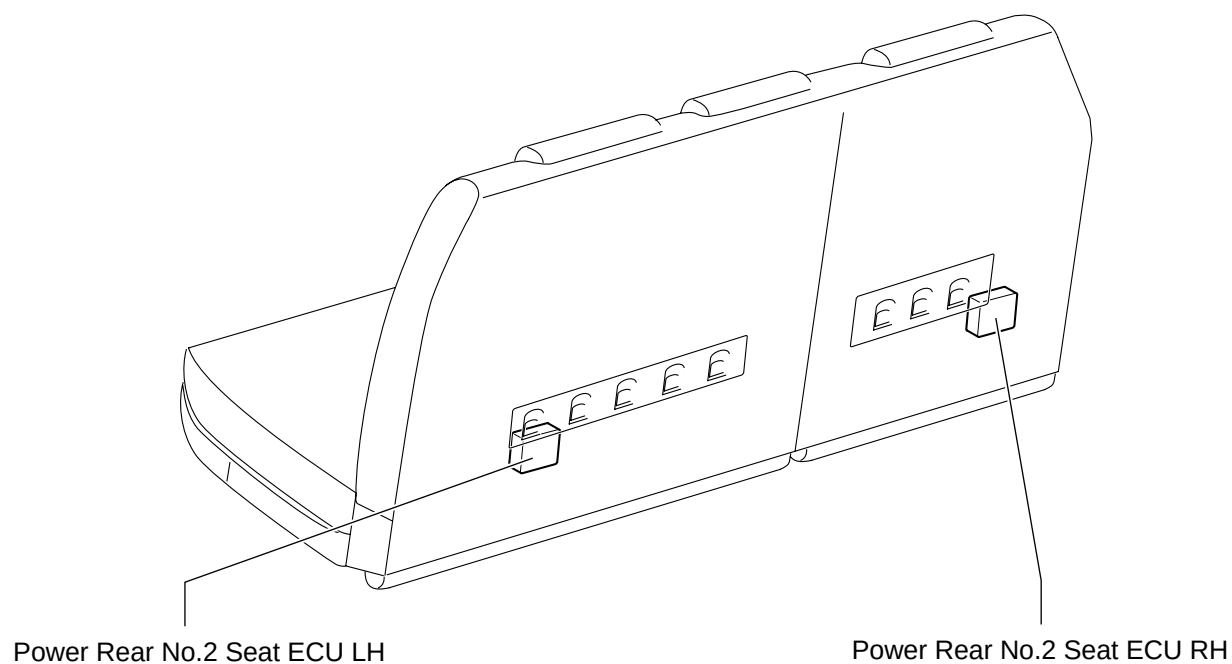


F RELAY LOCATIONS

 : Engine Room J/B

Engine Compartment Left (See Page 20)

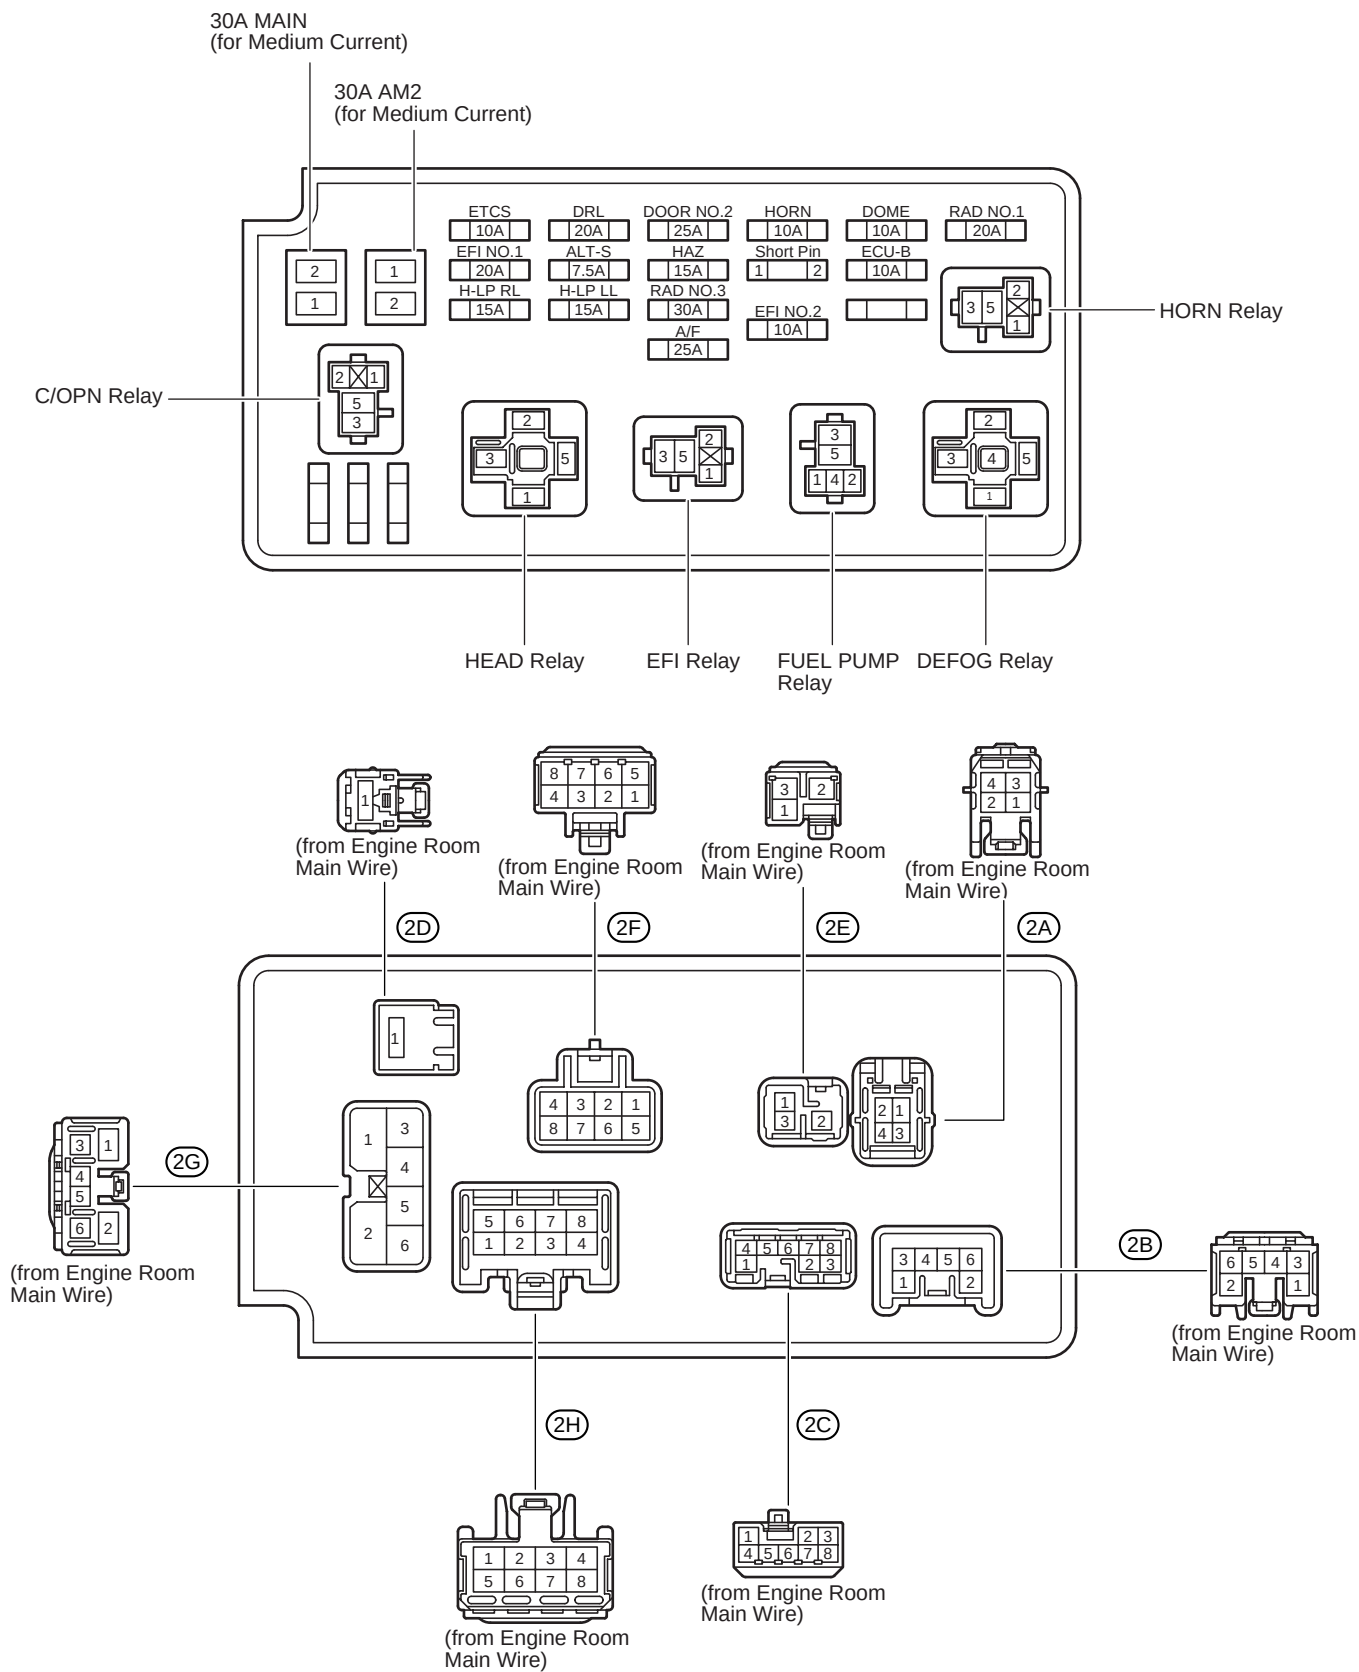

[Engine Room J/B Inner Circuit]

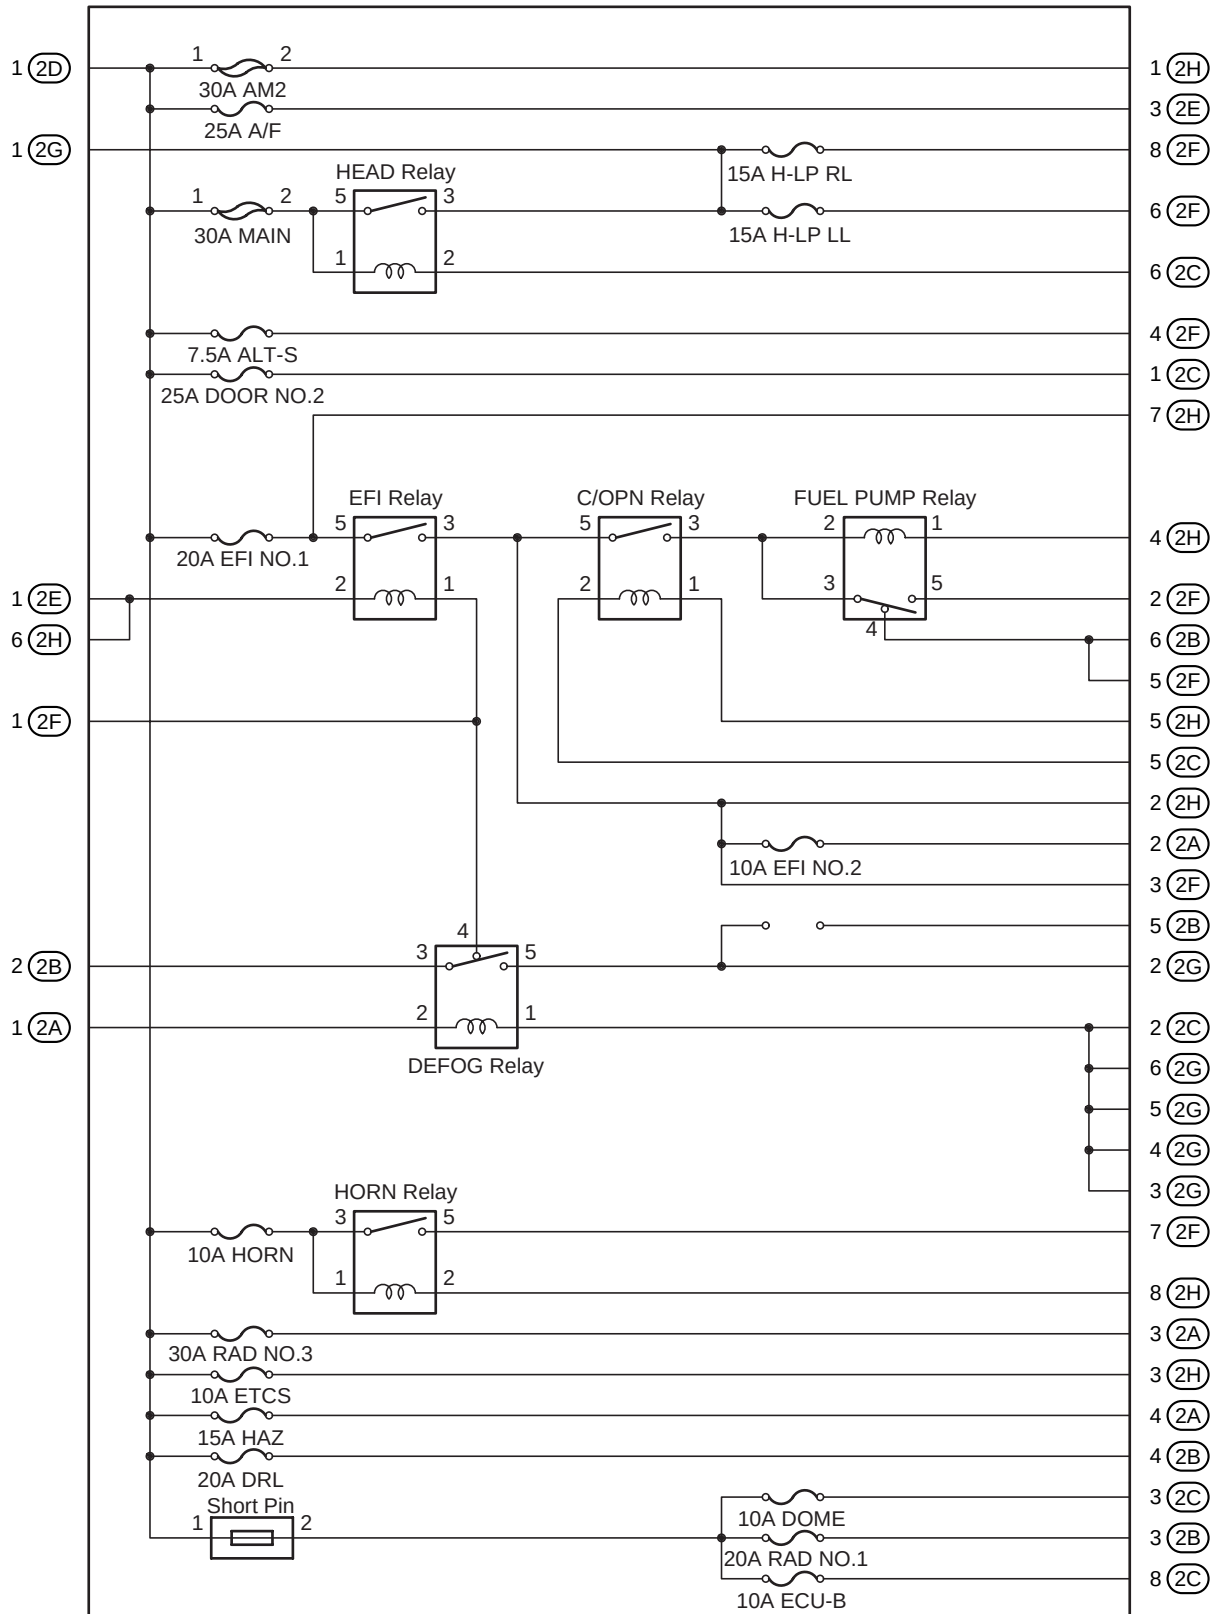


F RELAY LOCATIONS


③ : R/B No.3

Engine Compartment Left (See Page 20)

(Automatic A/C)

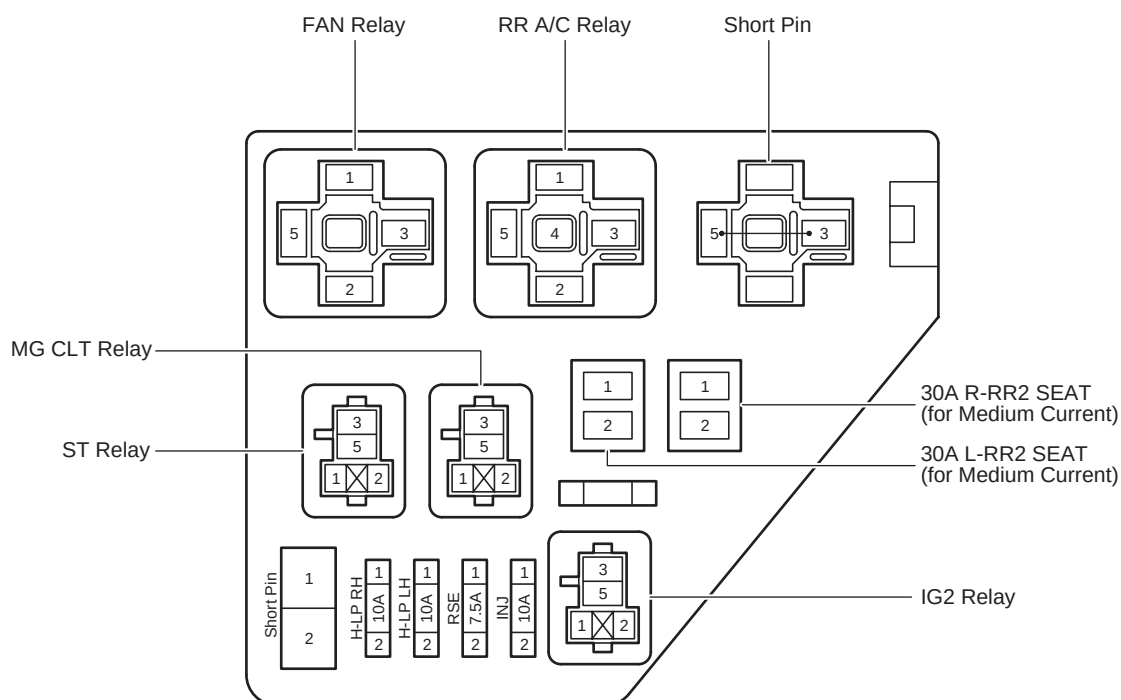


(Manual A/C)

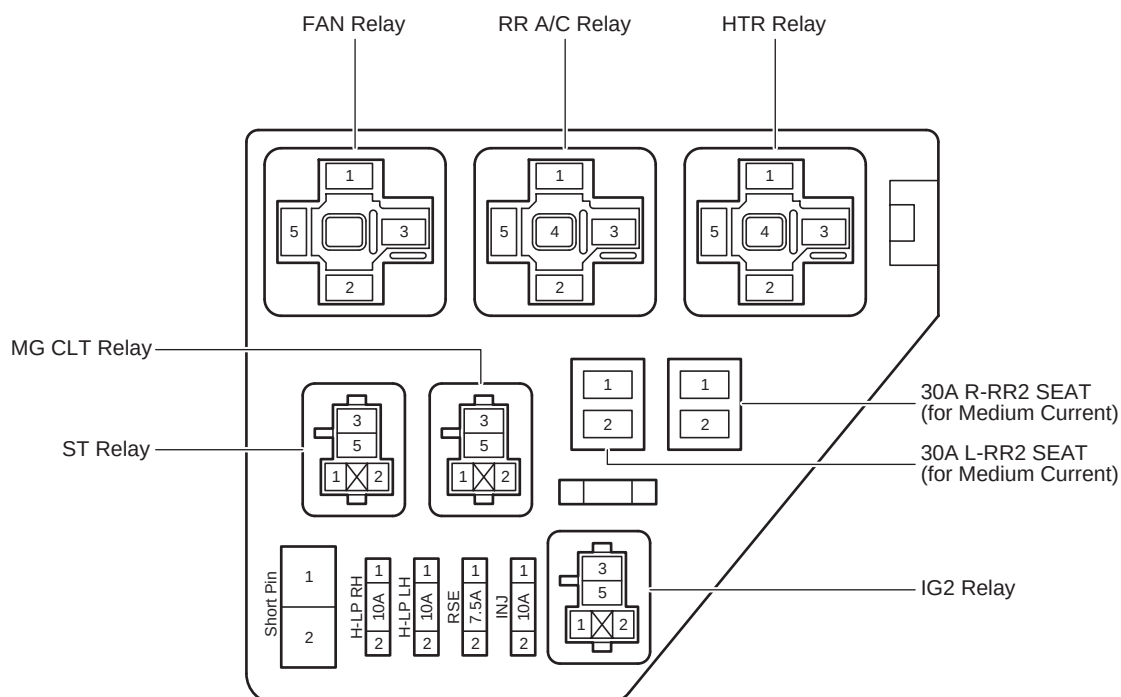


④ : R/B No.4

Engine Compartment Left (See Page 20)

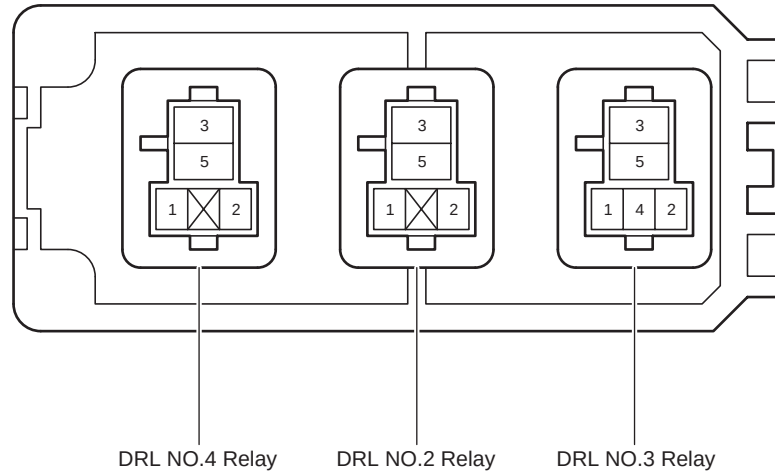


⑤ : R/B No.5

Engine Compartment Left (See Page 20)

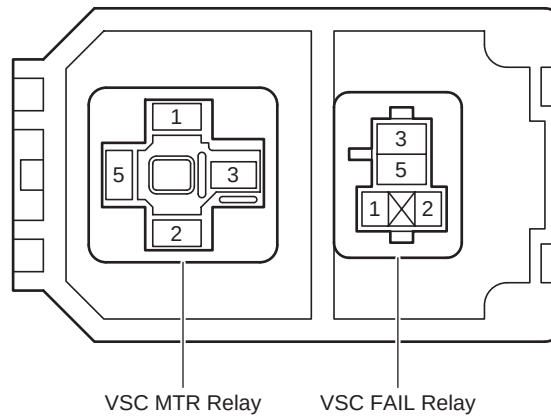

F RELAY LOCATIONS

⑥ : R/B No.6	Engine Compartment Left (See Page 20)
--------------	---------------------------------------

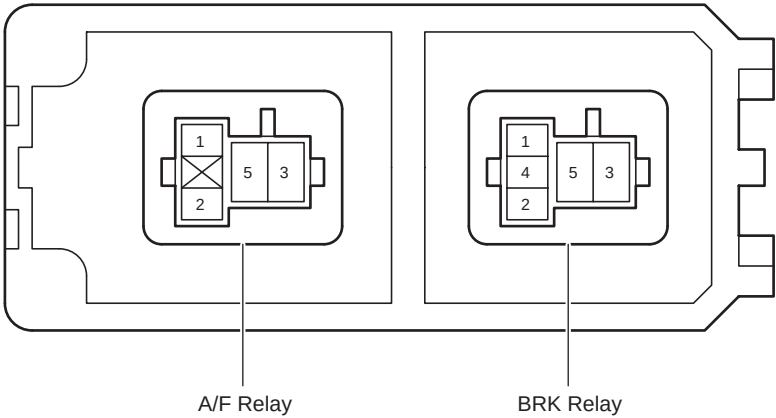


Fuse Box	Right Kick Panel (See Page 20)
----------	--------------------------------




Fuse Box No.2


Right Kick Panel (See Page 20)

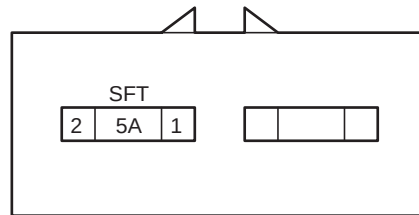

F RELAY LOCATIONS

 : Driver Side J/B	Lower Finish Panel (See Page 20)
---	----------------------------------

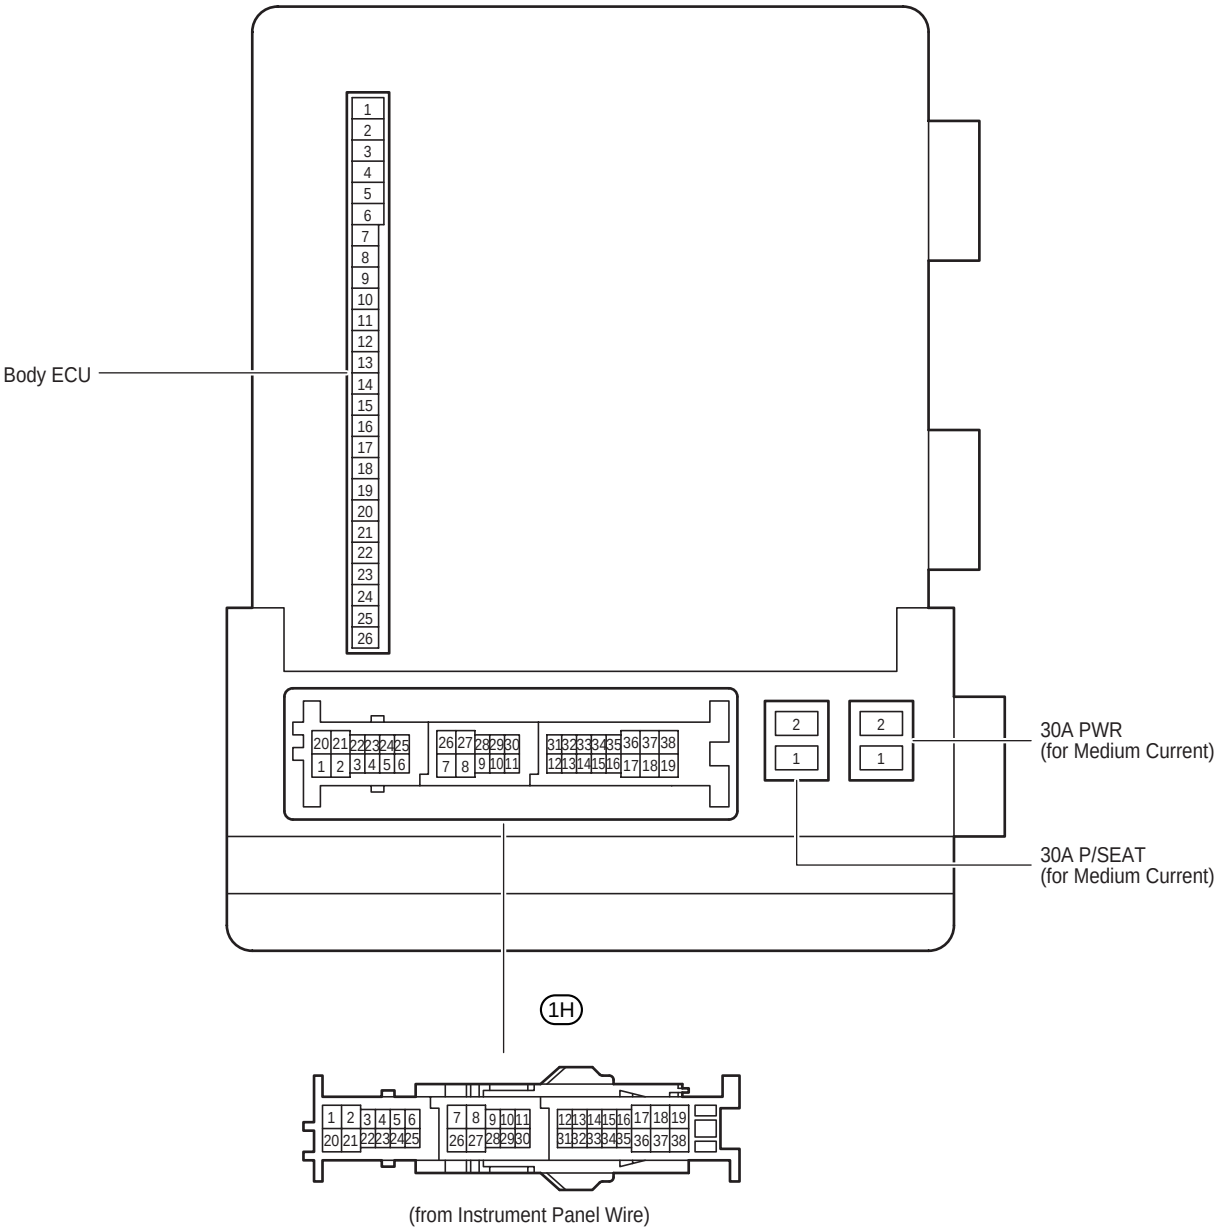


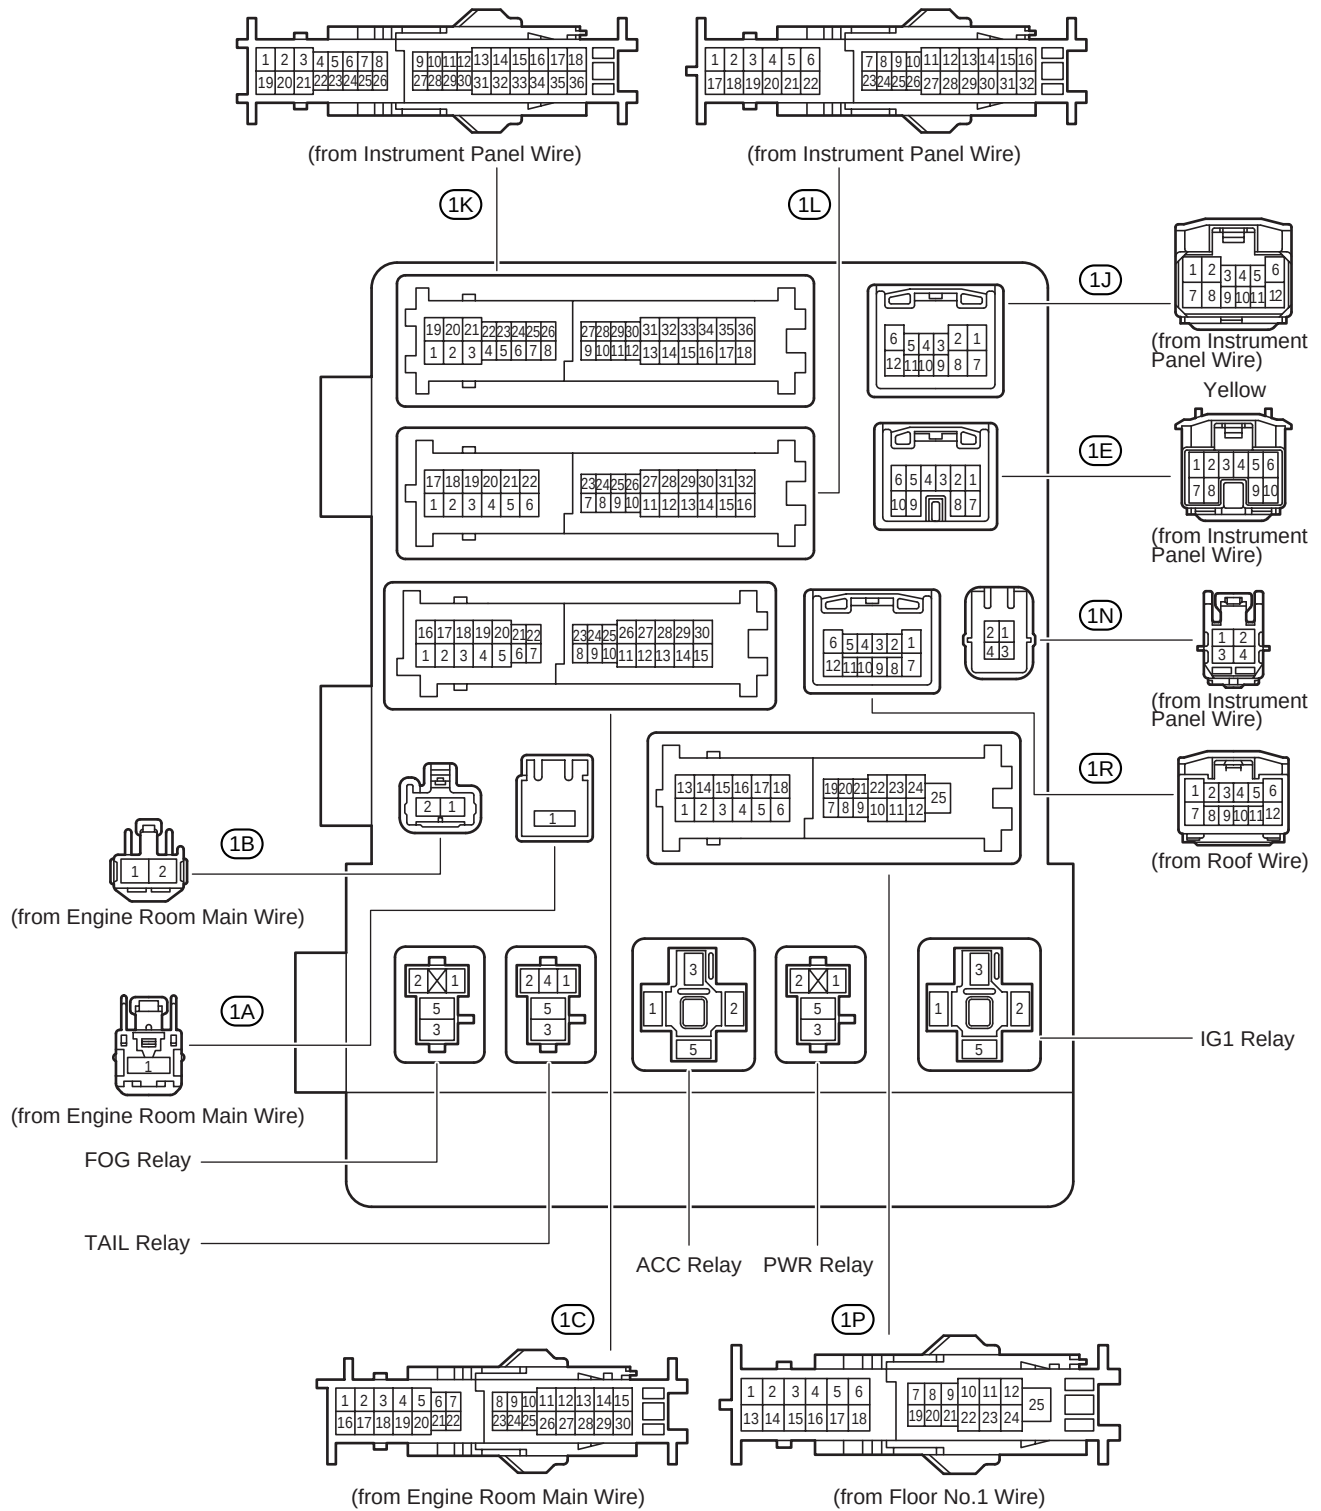


F RELAY LOCATIONS

 : Driver Side J/B

Lower Finish Panel (See Page 20)

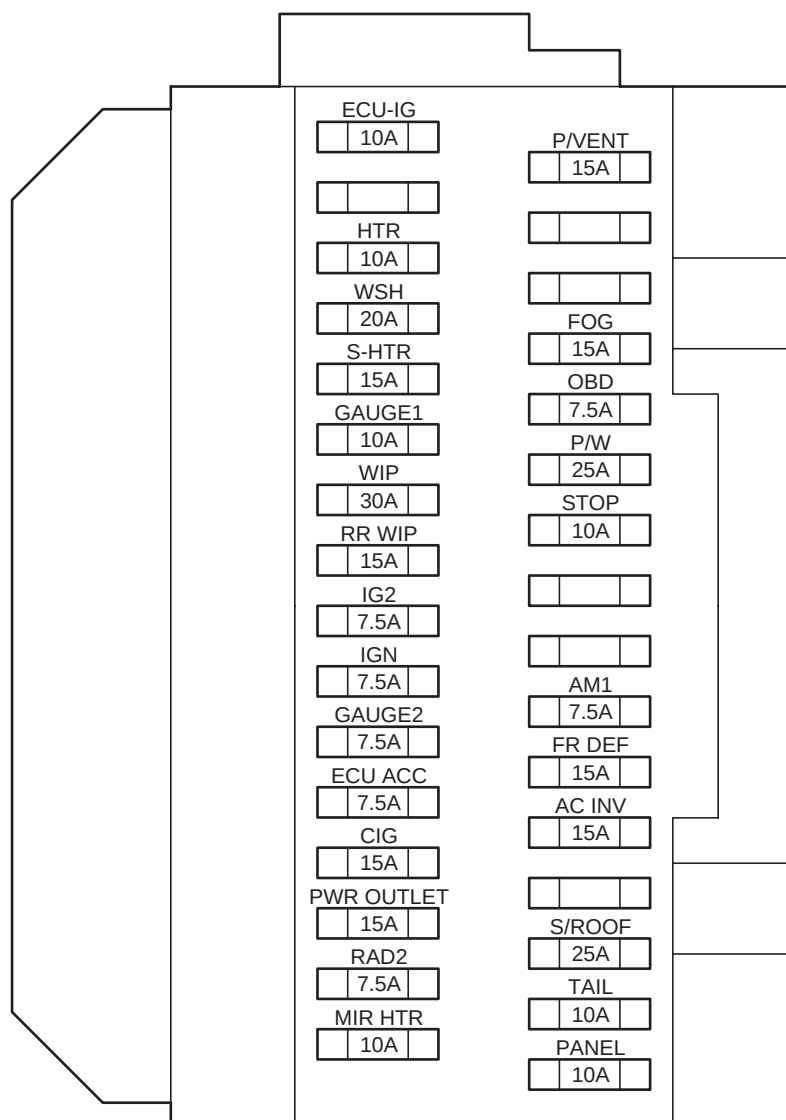

[Driver Side J/B Inner Circuit]

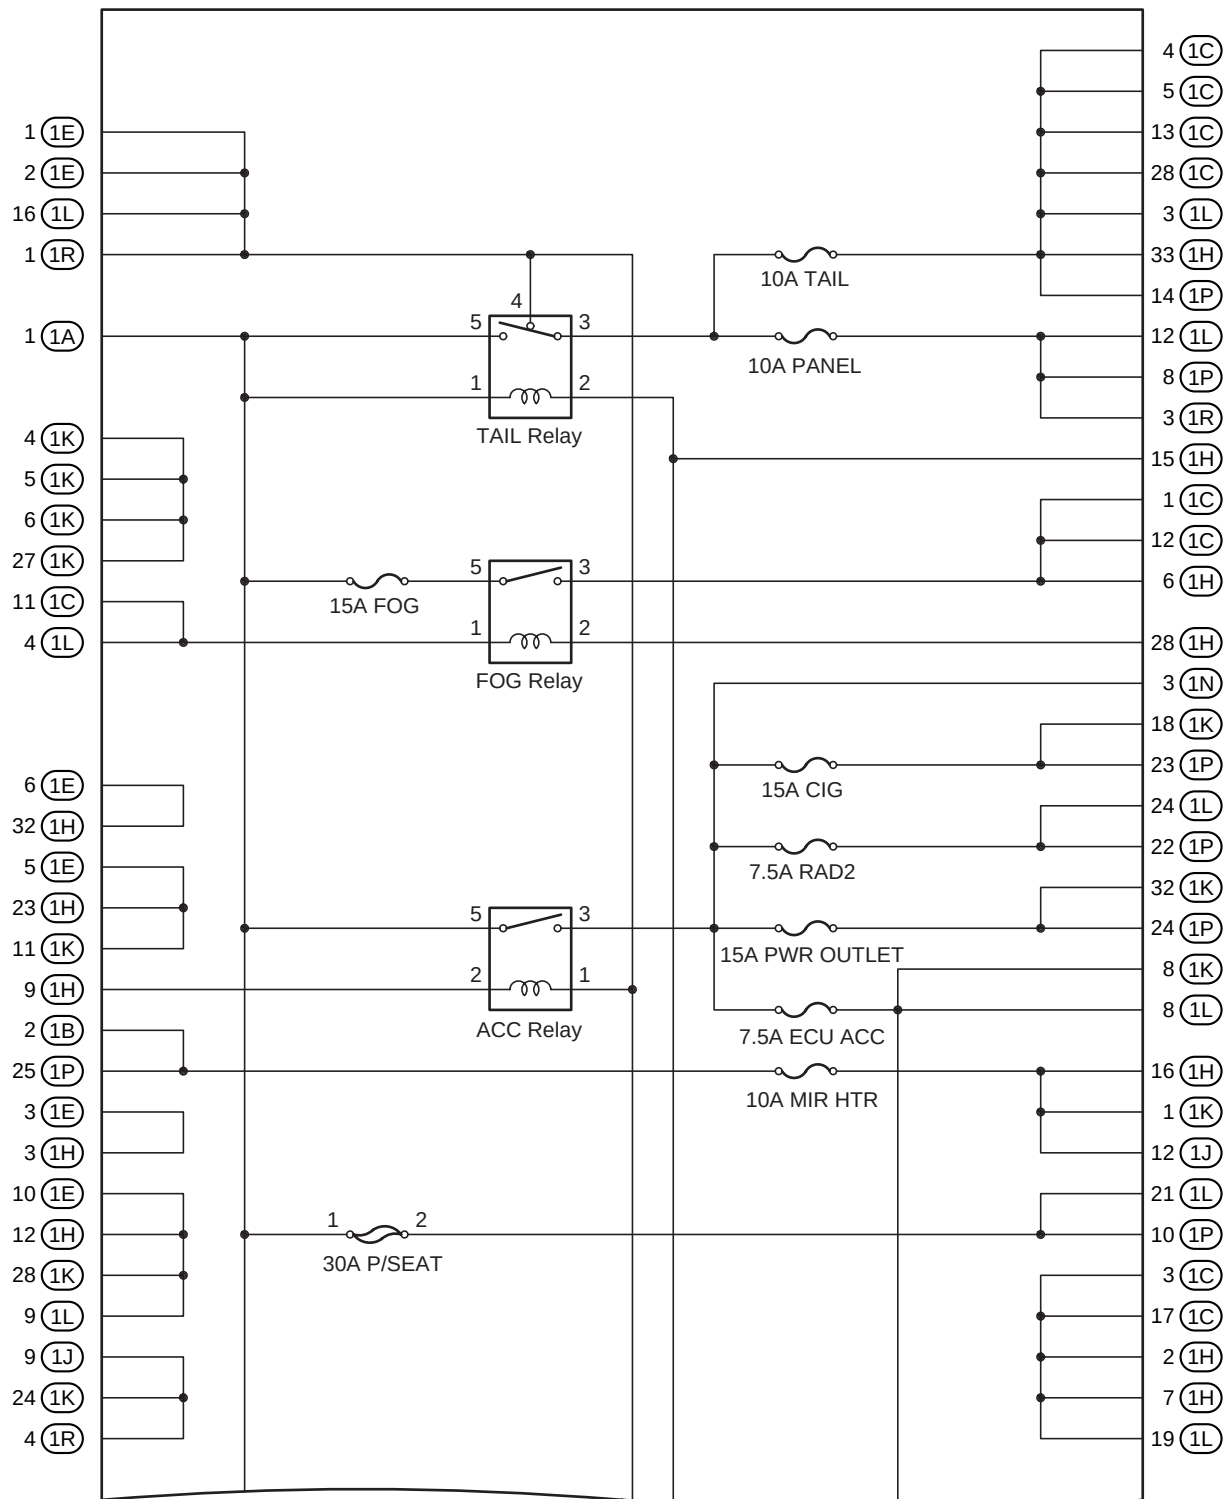


(Cont. Next Page)

F RELAY LOCATIONS

[Driver Side J/B Inner Circuit]

(Cont'd)

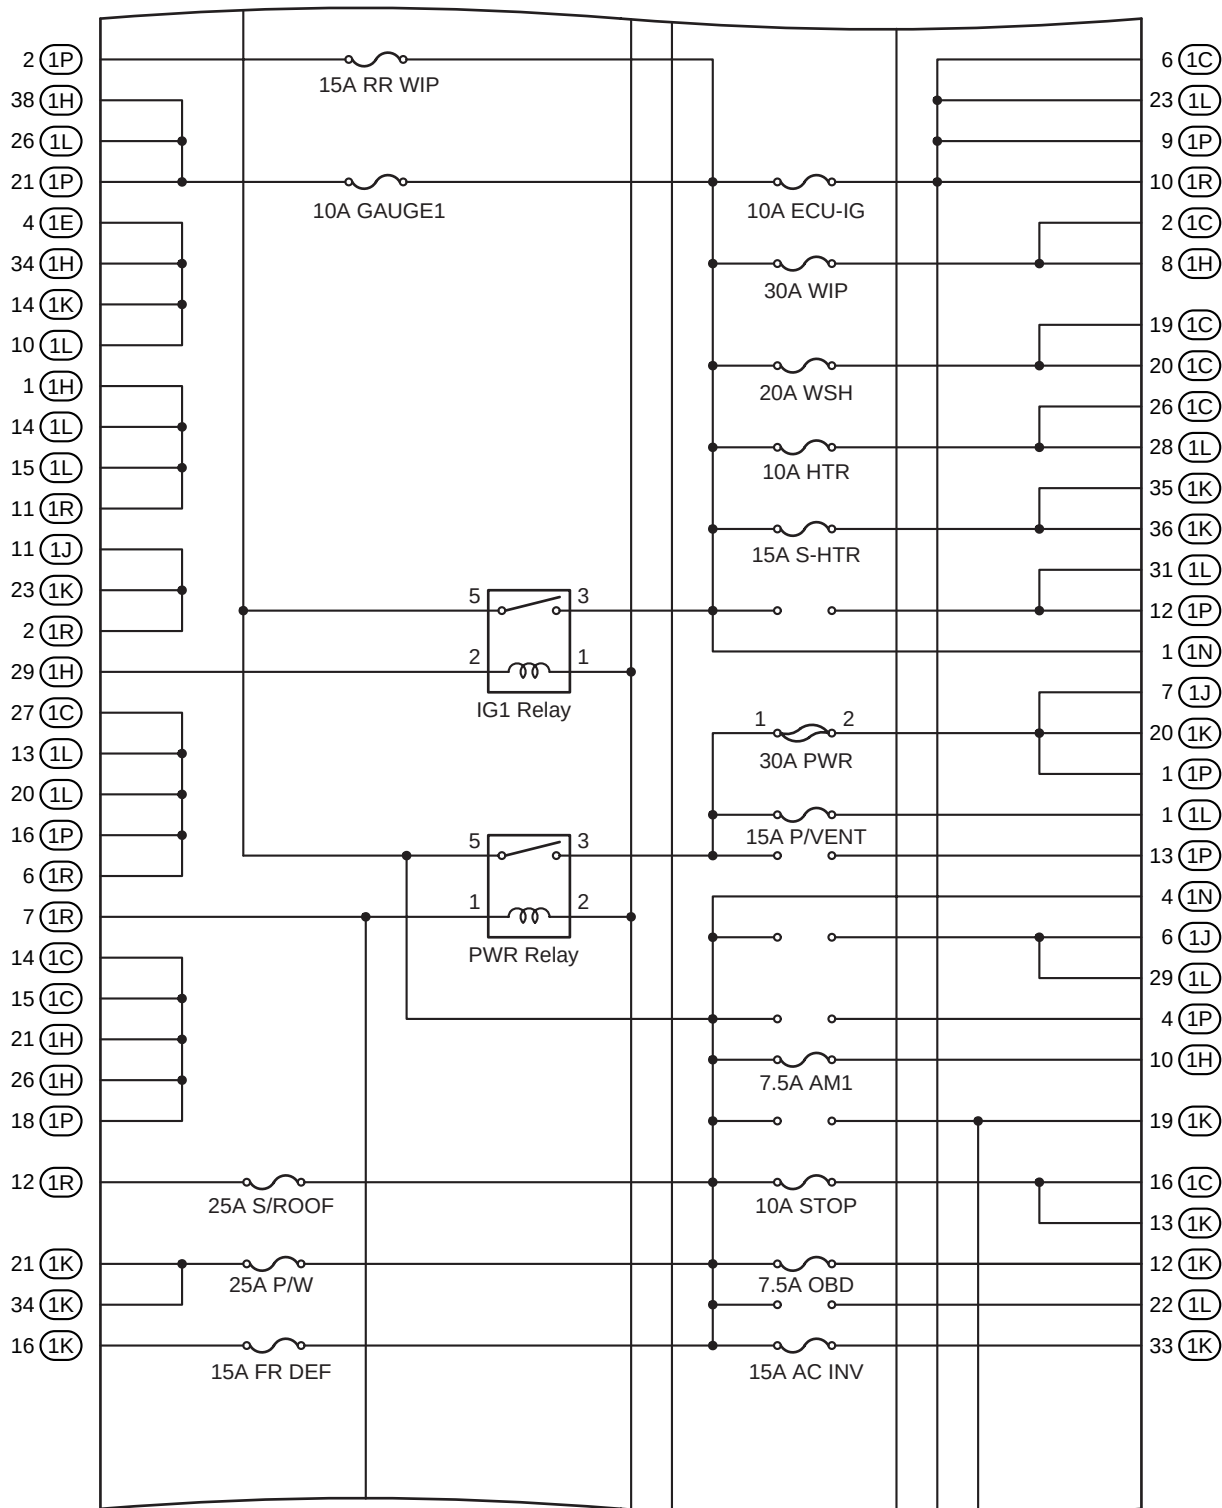

(Cont. Next Page)

(Cont'd)

