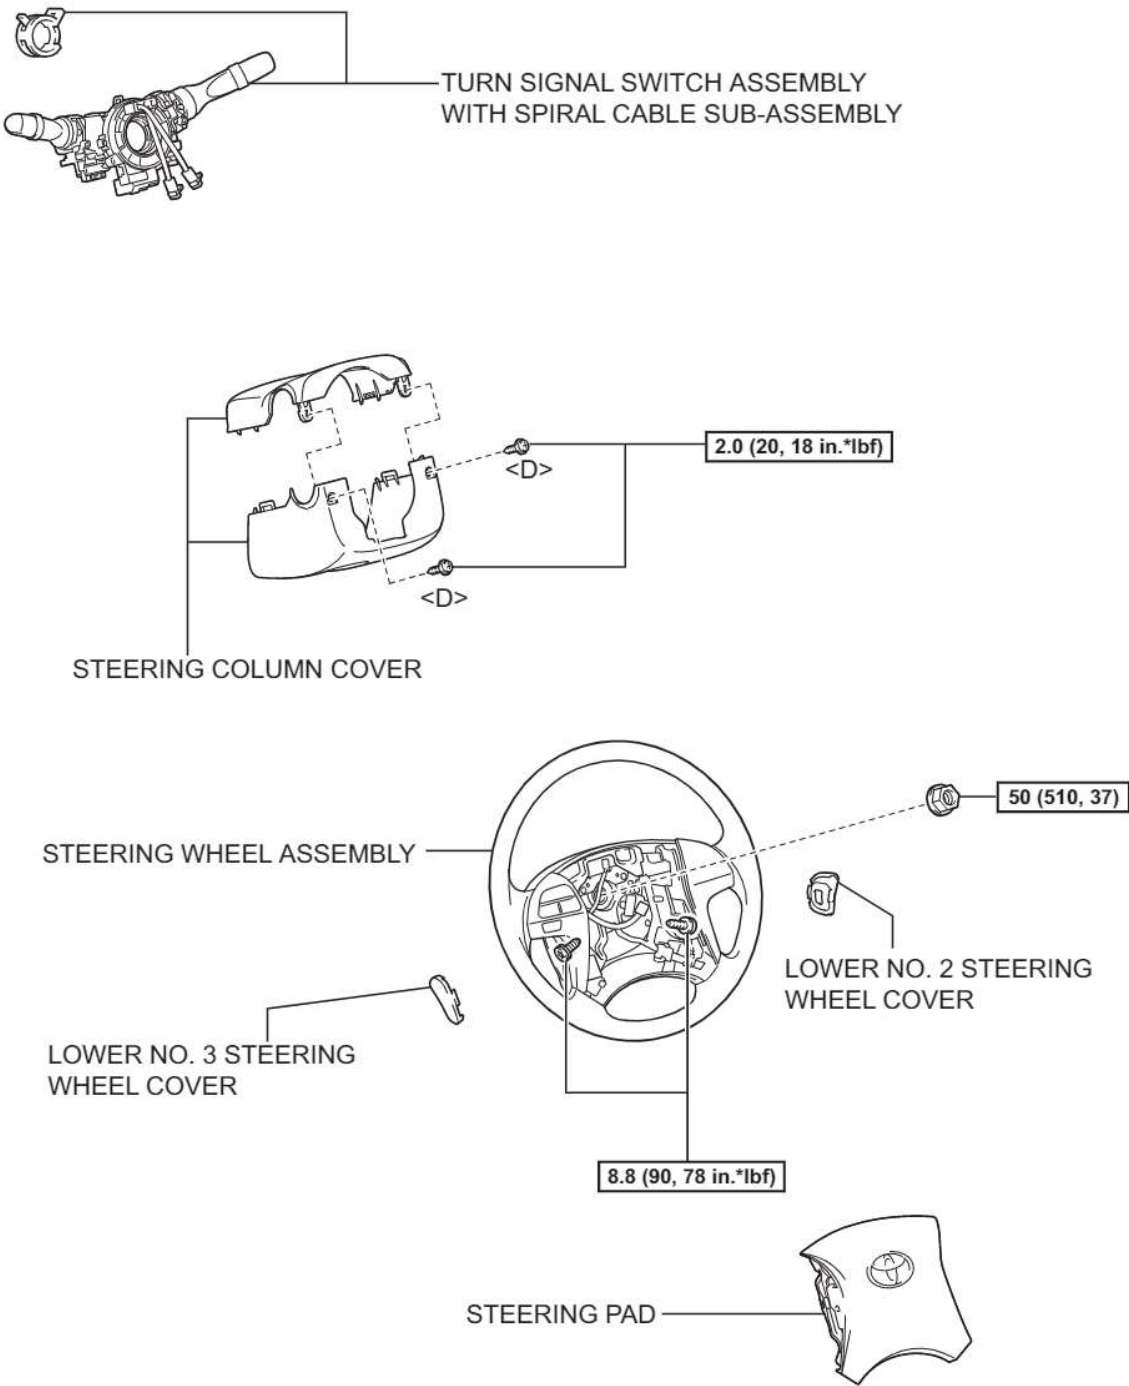


COMPONENTS

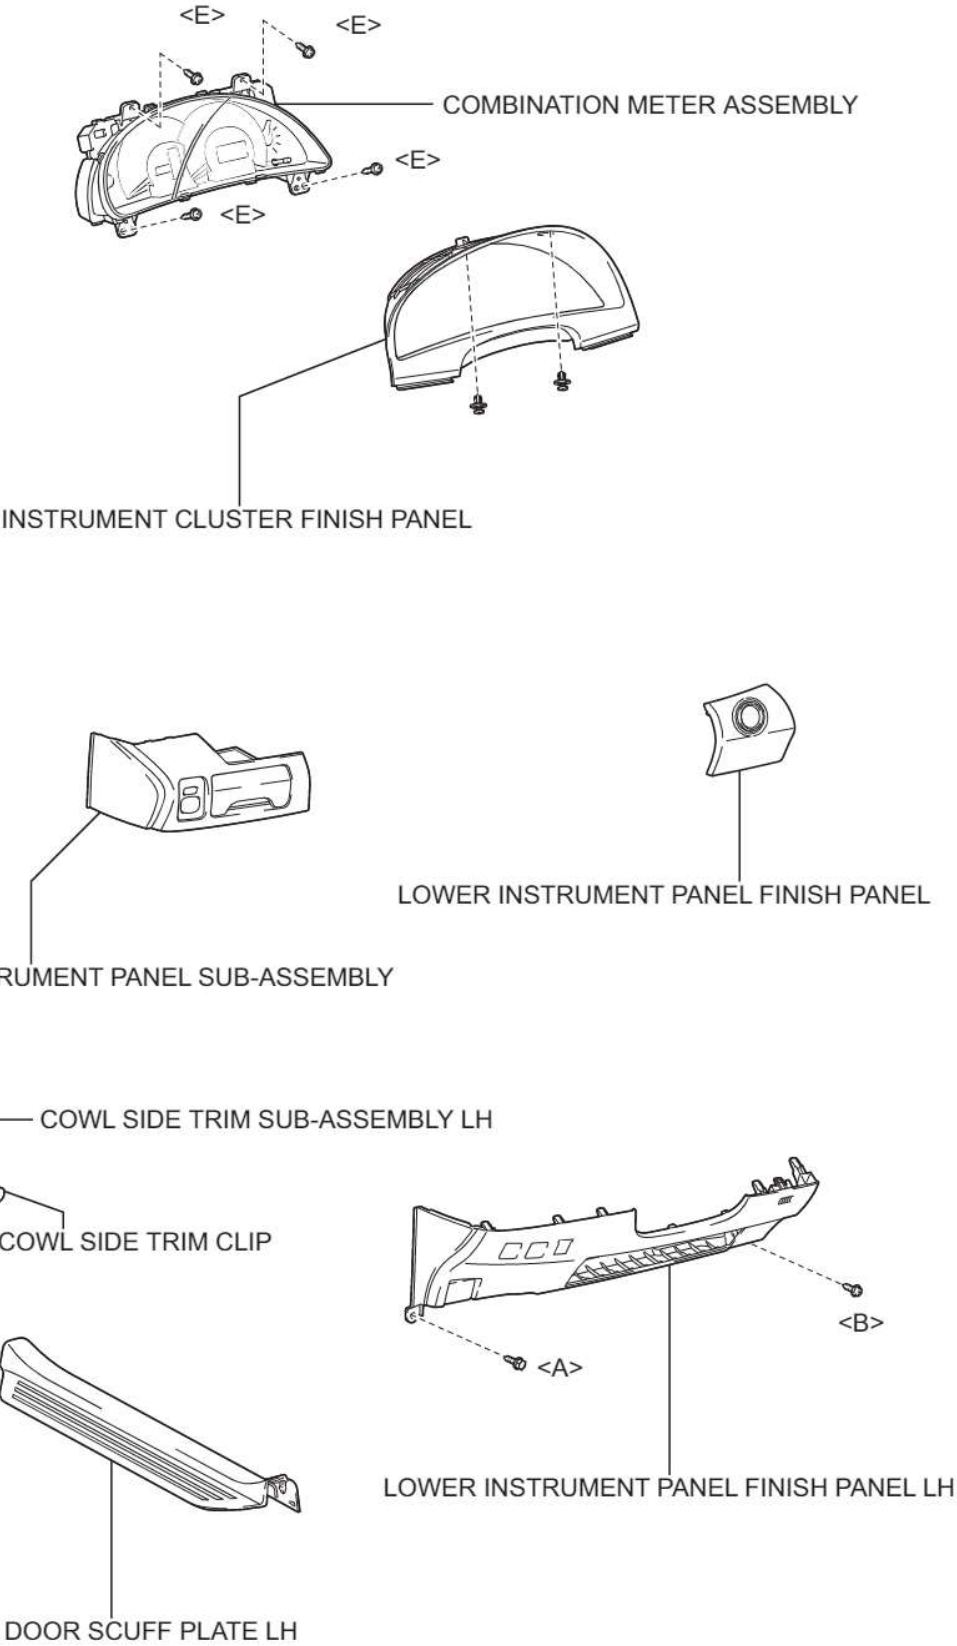


N*m (kgf*cm, ft.*lbf) : Specified torque

IP

IP-4

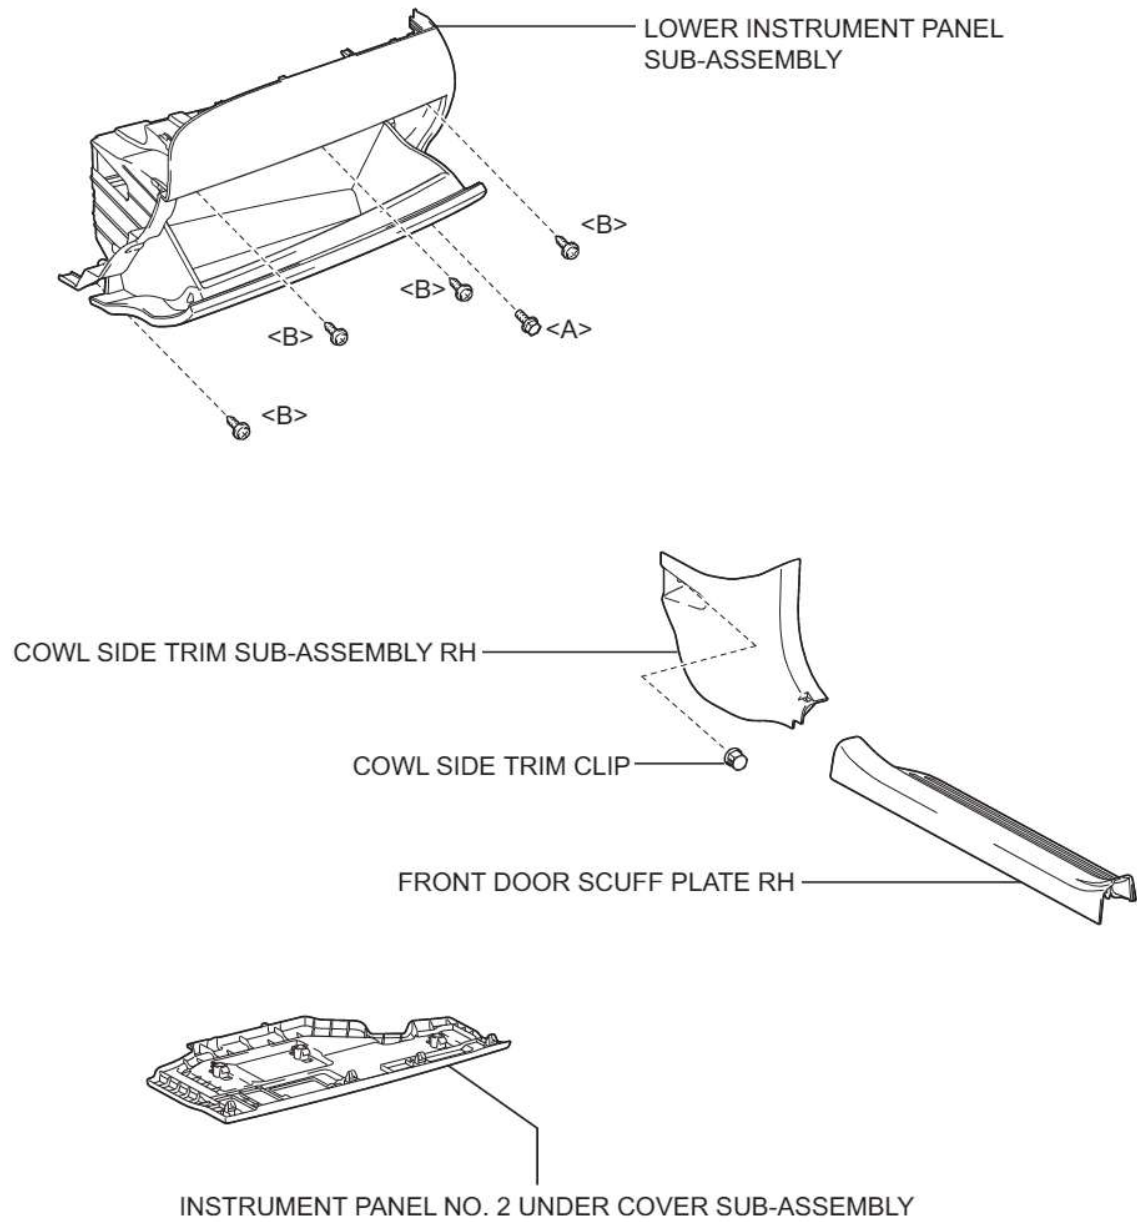
INSTRUMENT PANEL – INSTRUMENT PANEL SAFETY PAD



IP

INSTRUMENT PANEL – INSTRUMENT PANEL SAFETY PAD

IP-5



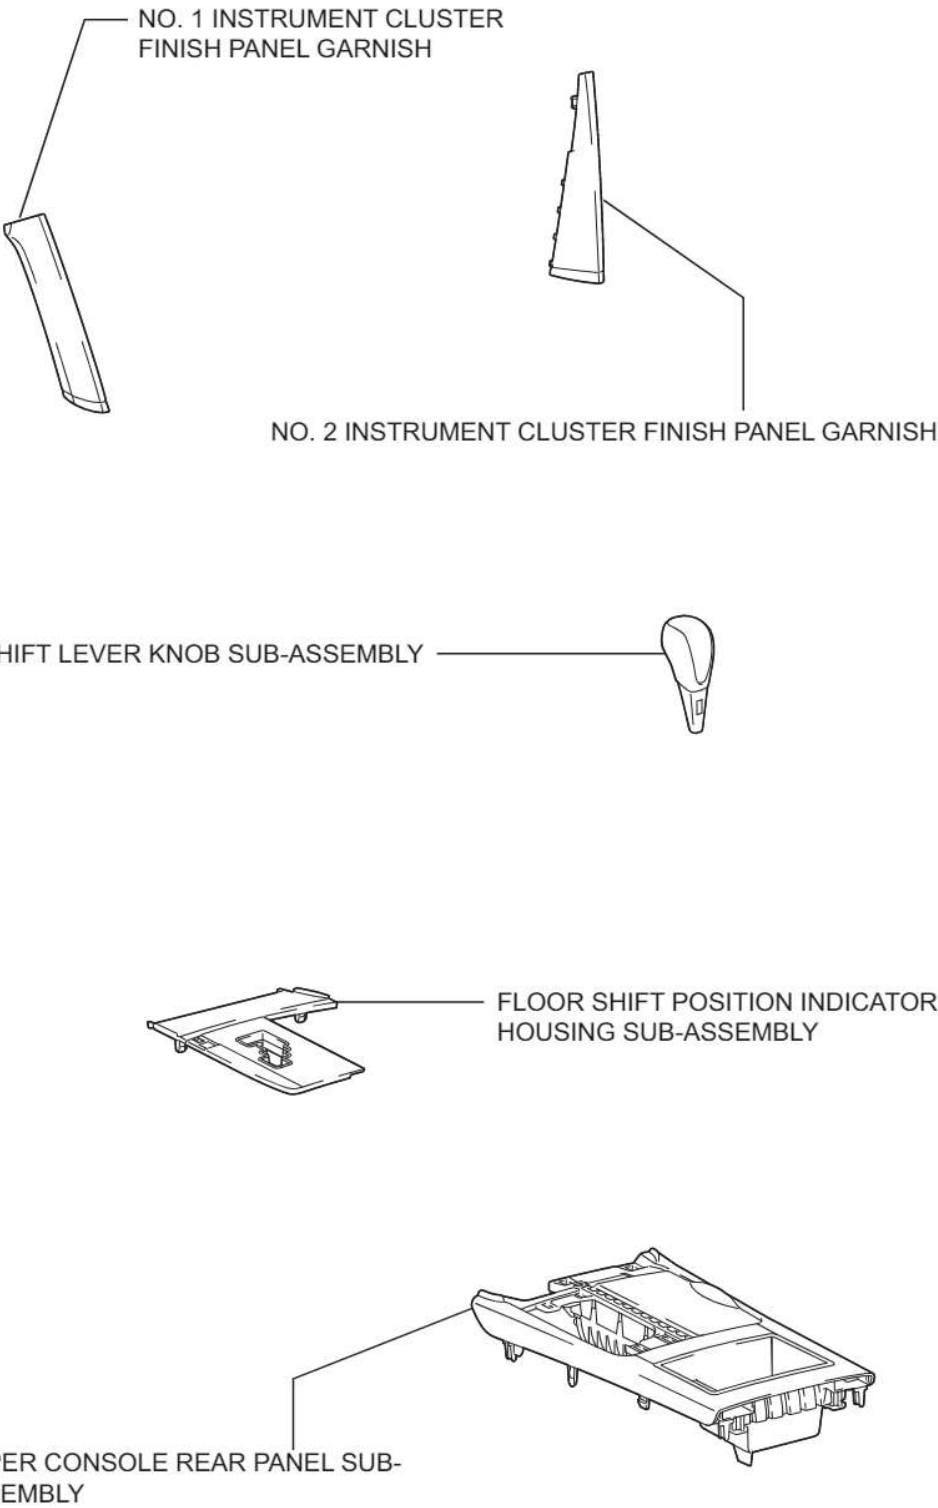
IP

P

B137282E05

IP-6

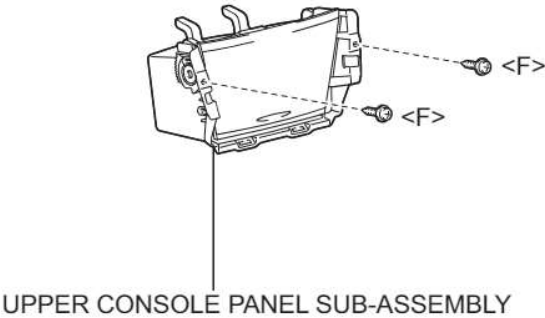
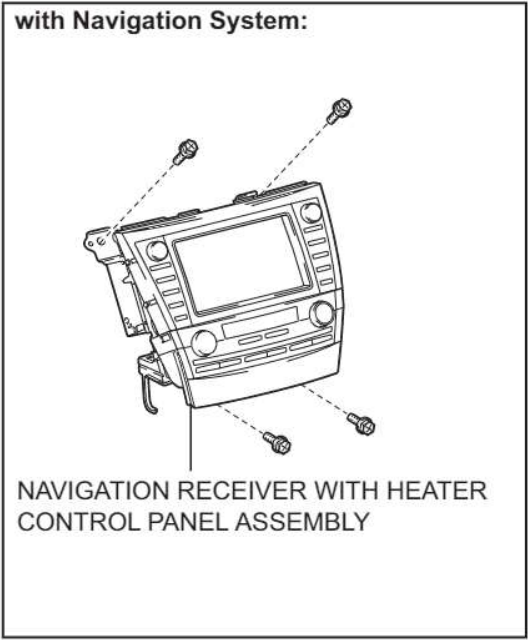
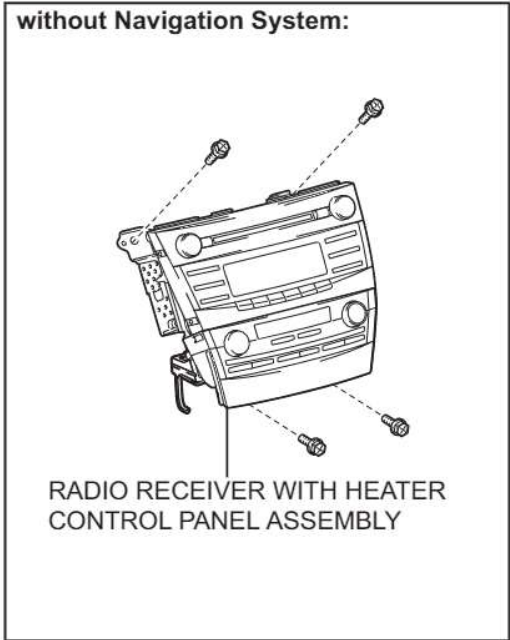
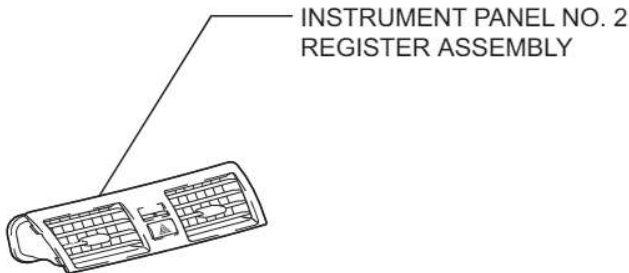
INSTRUMENT PANEL – INSTRUMENT PANEL SAFETY PAD



IP

INSTRUMENT PANEL – INSTRUMENT PANEL SAFETY PAD

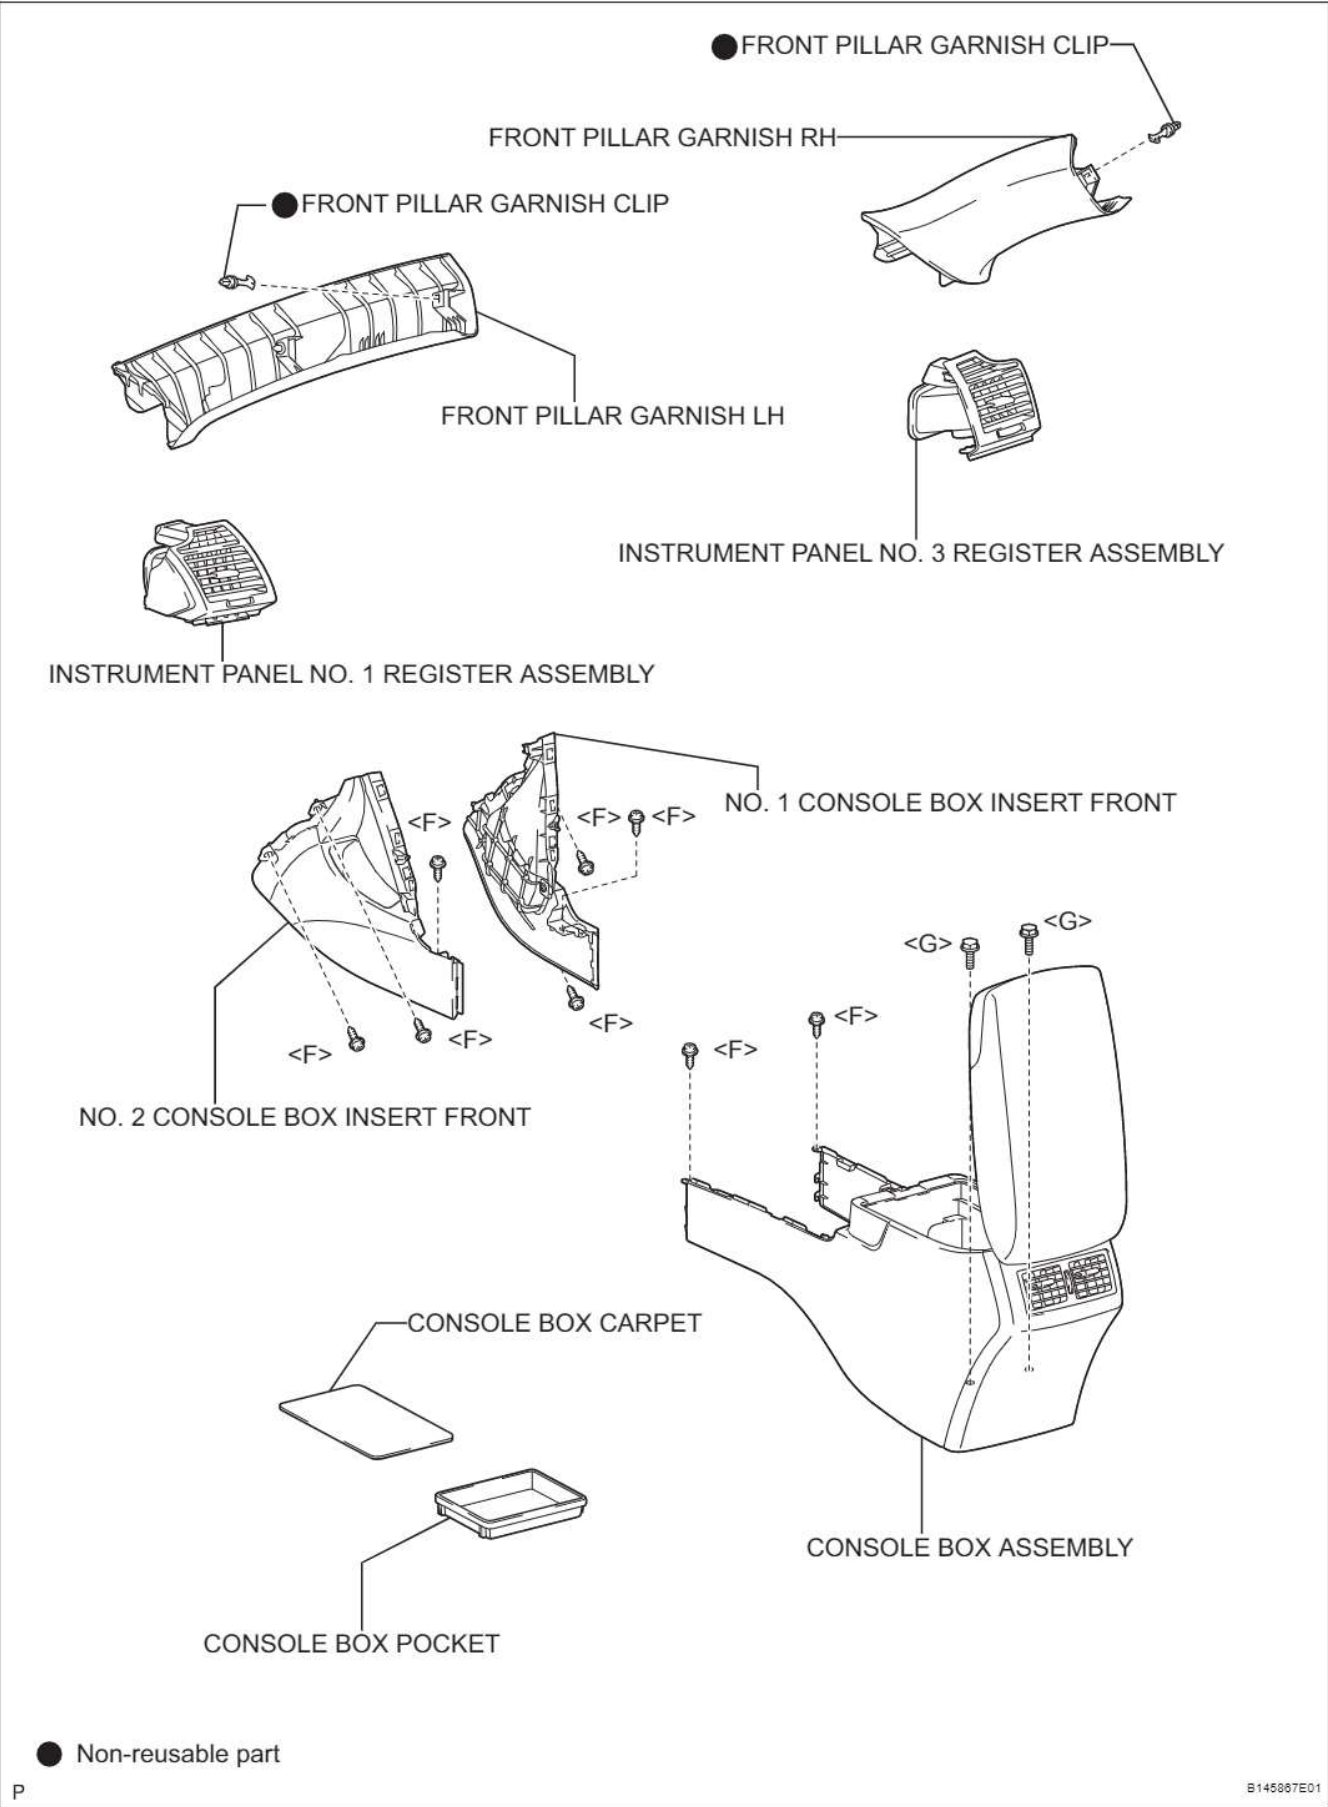
IP-7



IP

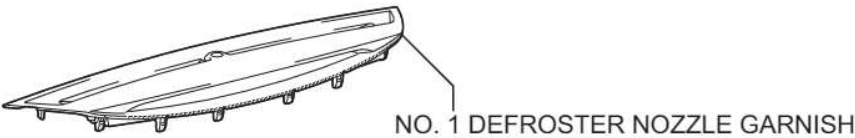
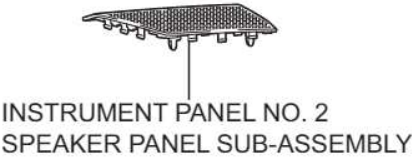
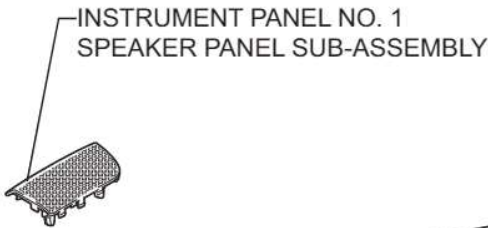
IP-8

INSTRUMENT PANEL – INSTRUMENT PANEL SAFETY PAD

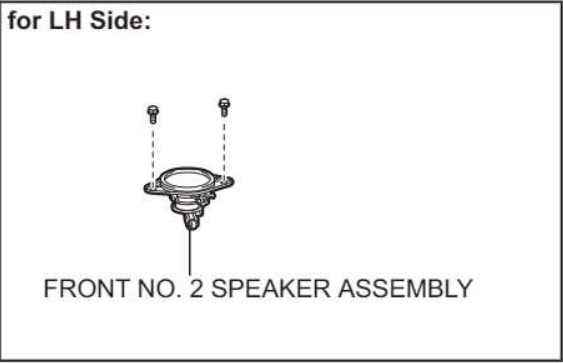


INSTRUMENT PANEL – INSTRUMENT PANEL SAFETY PAD

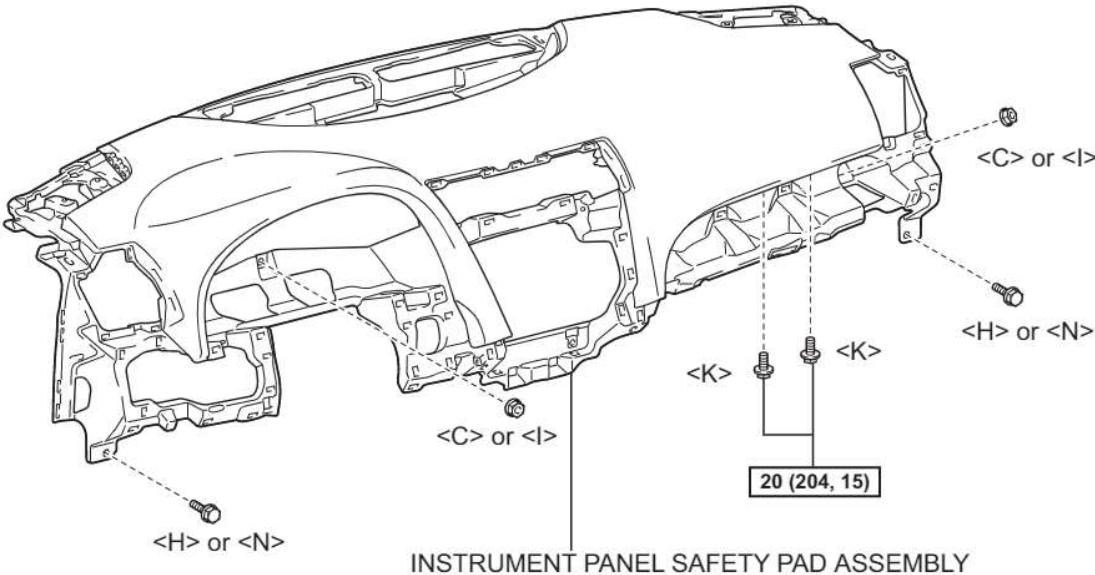
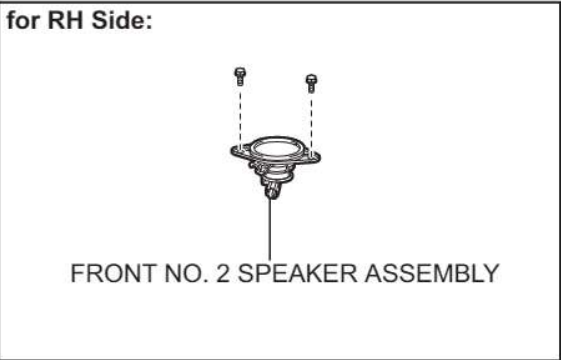
IP-9



for LH Side:



for RH Side:



N*m (kgf*cm, ft.*lbf) : Specified torque

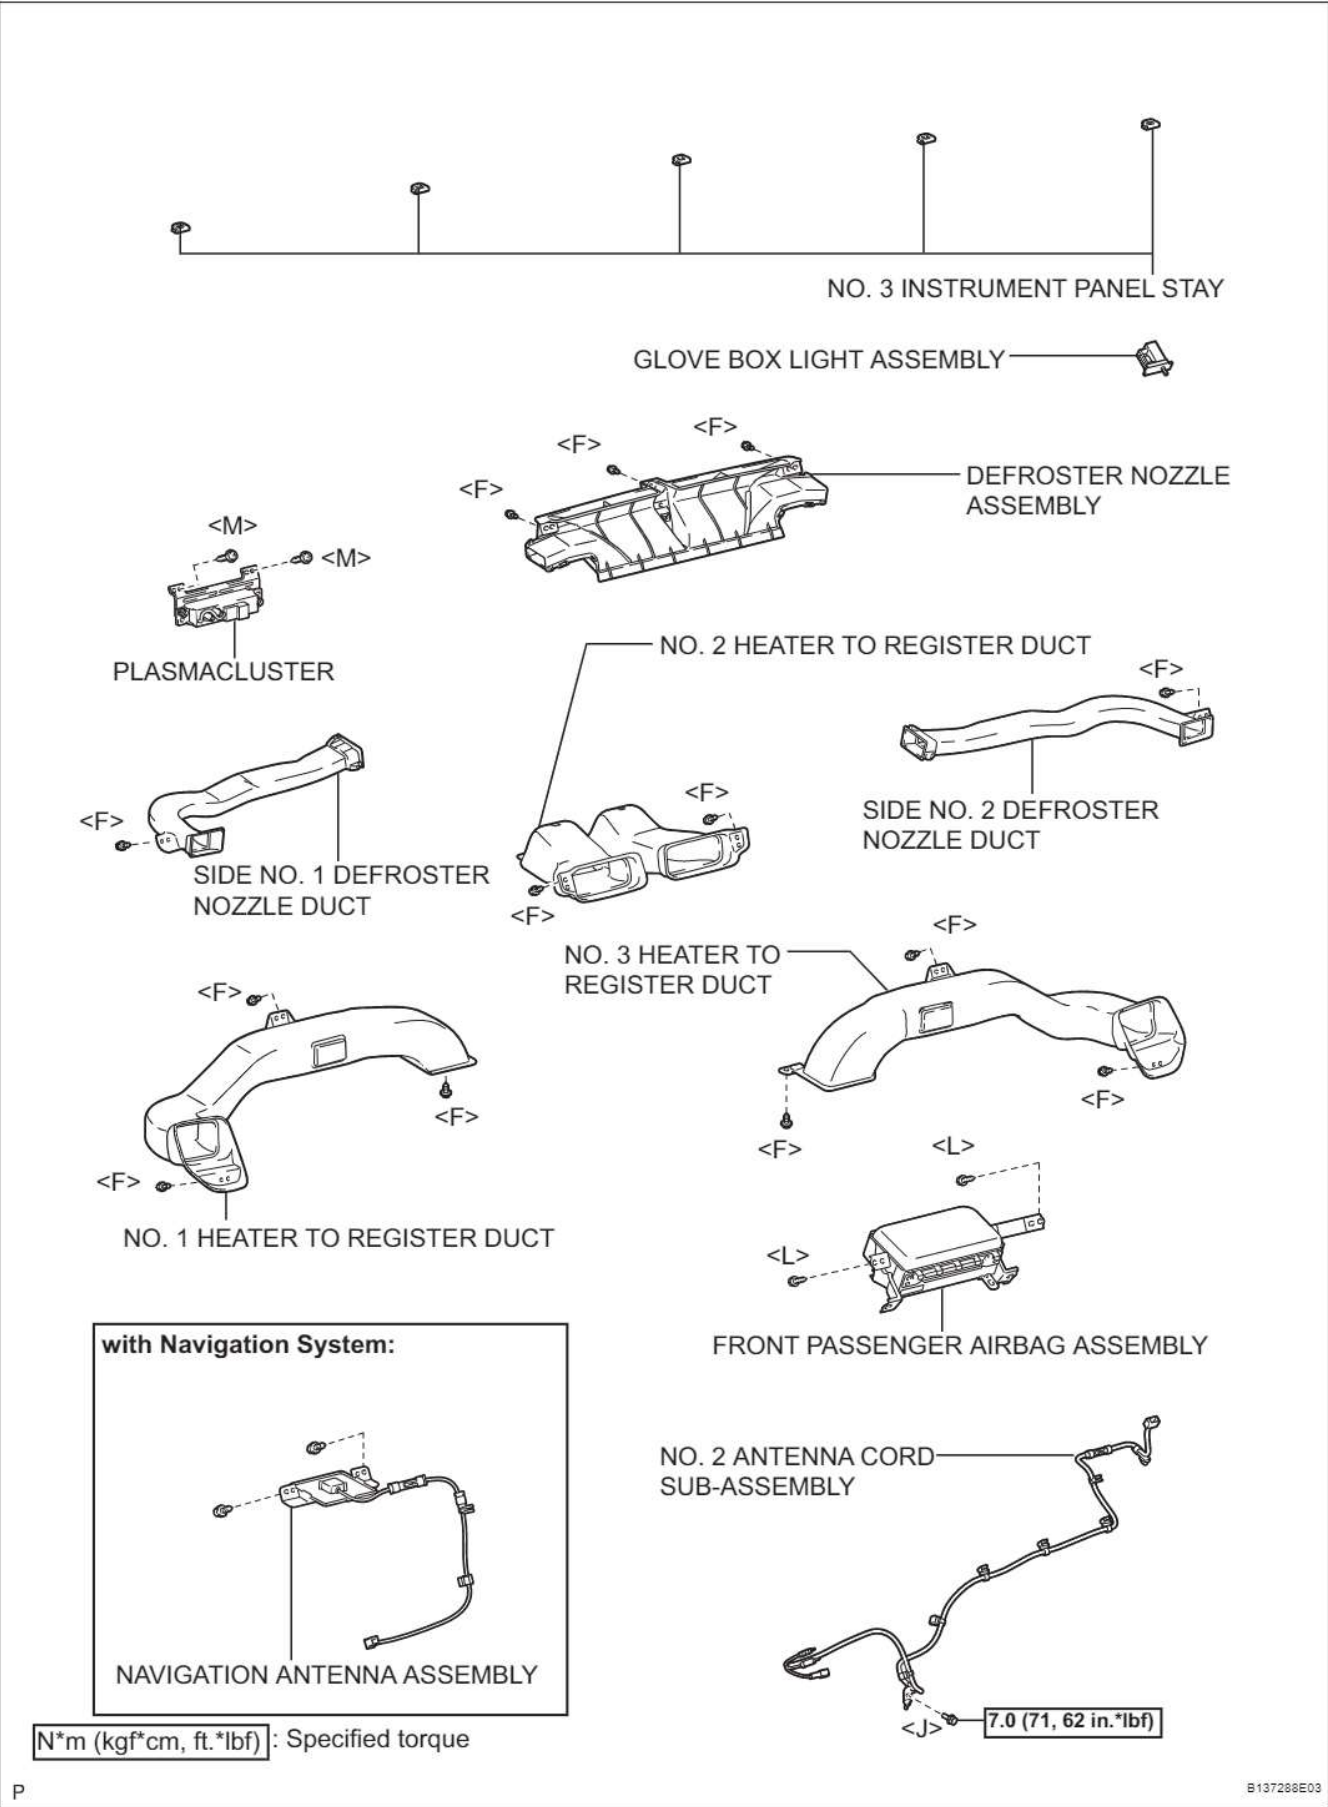
P

B145008E02

IP

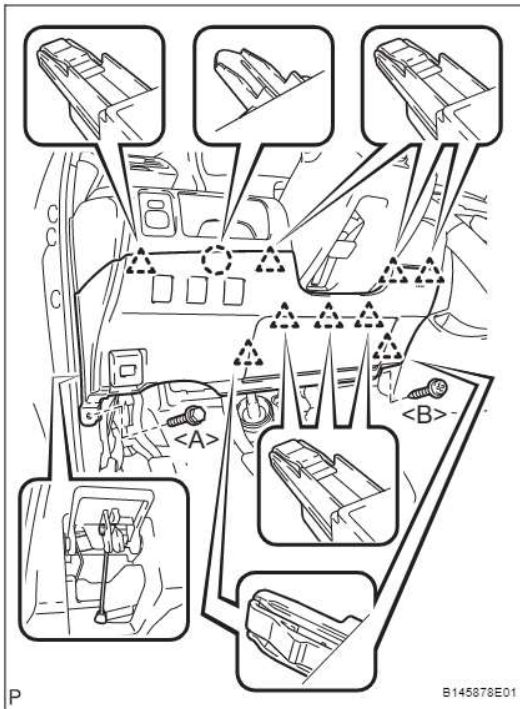
IP-10

INSTRUMENT PANEL – INSTRUMENT PANEL SAFETY PAD



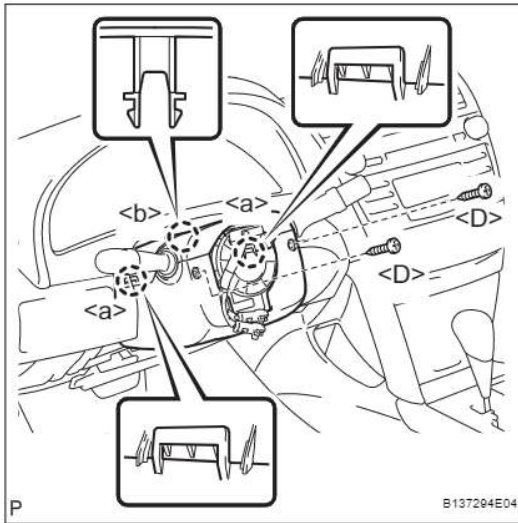
REMOVAL

1. **PRECAUTION**
(See page [IP-1](#))
2. **ALIGN FRONT WHEELS FACING STRAIGHT AHEAD**
3. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
CAUTION:
Wait for 90 seconds after disconnecting the cable to prevent airbag deployment (See page [RS-1](#)).
4. **REMOVE LOWER NO. 3 STEERING WHEEL COVER**
(See page [RS-345](#))
5. **REMOVE LOWER NO. 2 STEERING WHEEL COVER**
(See page [RS-345](#))
6. **REMOVE STEERING PAD** (See page [RS-345](#))
7. **REMOVE STEERING WHEEL ASSEMBLY** (See page [SR-36](#))
8. **REMOVE FRONT DOOR SCUFF PLATE LH** (See page [IR-13](#))
9. **REMOVE COWL SIDE TRIM SUB-ASSEMBLY LH** (See page [IR-14](#))
10. **REMOVE LOWER INSTRUMENT PANEL FINISH PANEL LH**
 - (a) Remove the bolt <A> and the screw .
 - (b) Disconnect the hood lock control cable assembly.
 - (c) Disengage the claw and the 9 clips.
 - (d) Remove the air hose, disconnect each connector, and then remove the lower instrument panel finish panel LH.



IP-12

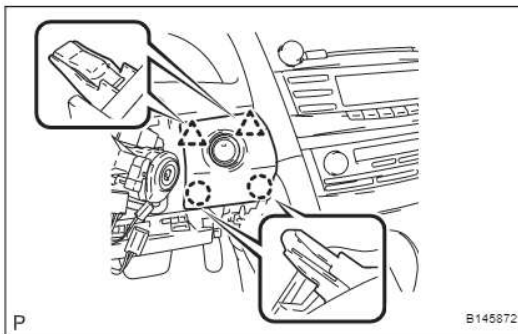
INSTRUMENT PANEL – INSTRUMENT PANEL SAFETY PAD

**11. REMOVE STEERING COLUMN COVER**

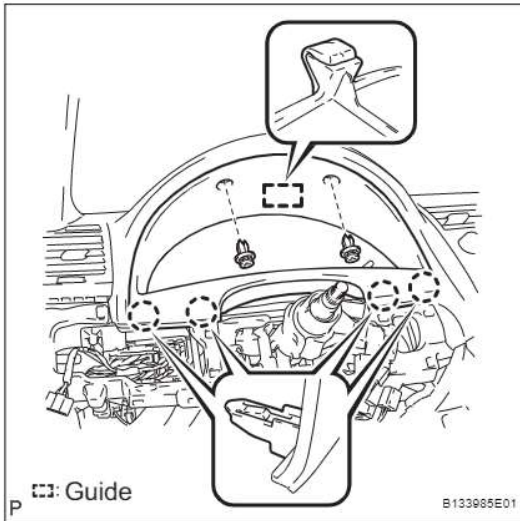
- (a) Remove the 2 screws <D>.
- (b) Disengage the 2 claws <a> and remove the lower steering column cover.
- (c) Disengage the claw and remove the upper steering column cover.

12. REMOVE TURN SIGNAL SWITCH ASSEMBLY WITH SPIRAL CABLE SUB-ASSEMBLY (See page [SR-37](#))**13. REMOVE NO. 1 INSTRUMENT PANEL SUB-ASSEMBLY**

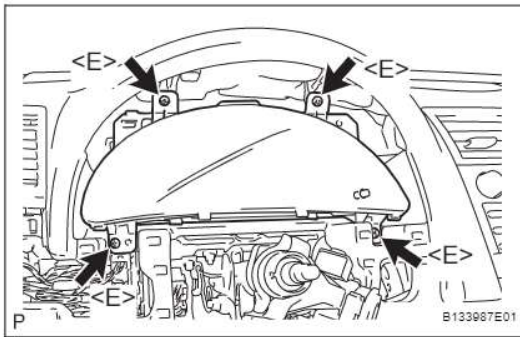
- (a) Disengage the 3 claws and the 2 clips.
- (b) Disconnect the connector and remove the instrument panel sub-assembly.

**14. REMOVE LOWER INSTRUMENT PANEL FINISH PANEL**

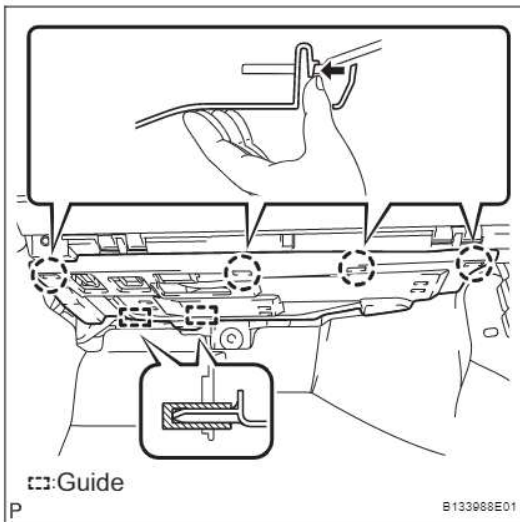
- (a) Disengage the 2 claws and 2 clips.
- (b) Disconnect the connector and remove the lower instrument panel finish panel.

**15. REMOVE INSTRUMENT CLUSTER FINISH PANEL**

- (a) Remove the 2 clips.
- (b) Disengage the guide and 4 claws, and then remove the instrument cluster finish panel.

**16. REMOVE COMBINATION METER ASSEMBLY**

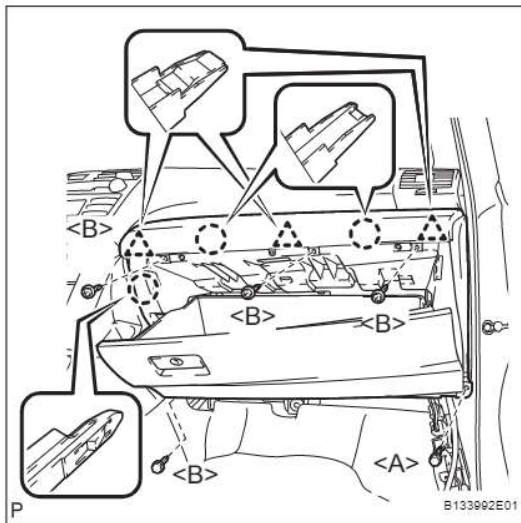
- (a) Remove the 4 screws <E>.
- (b) Disconnect each connector and remove the combination meter assembly.

17. REMOVE FRONT DOOR SCUFF PLATE RH (See page [IR-15](#))**18. REMOVE COWL SIDE TRIM SUB-ASSEMBLY RH (See page [IR-15](#))****19. REMOVE INSTRUMENT PANEL NO. 2 UNDER COVER SUB-ASSEMBLY**

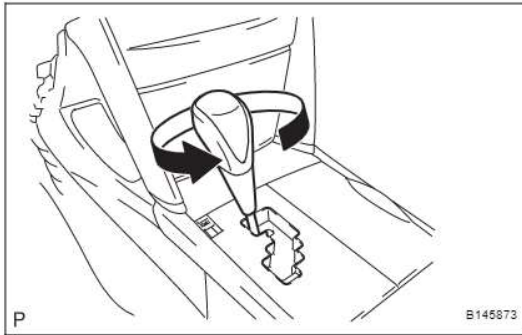
- (a) Disengage the 4 claws.
- (b) Disengage the 2 guides and remove the No. 2 under cover sub-assembly.

IP-14

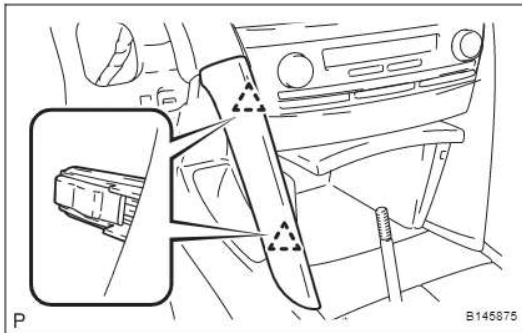
INSTRUMENT PANEL – INSTRUMENT PANEL SAFETY PAD

**20. REMOVE LOWER INSTRUMENT PANEL SUB-ASSEMBLY**

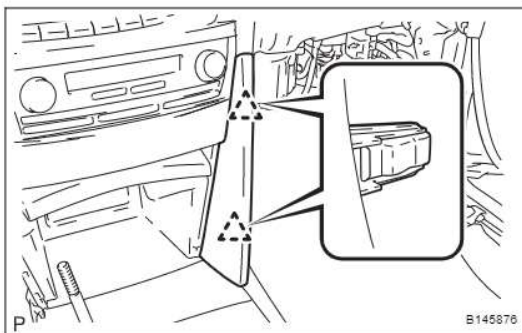
- (a) Remove the bolt <A>.
- (b) Remove the 4 screws .
- (c) Disengage the 3 claws and the 3 clips.
- (d) Disconnect the connector and remove the lower instrument panel sub-assembly.

**21. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY**

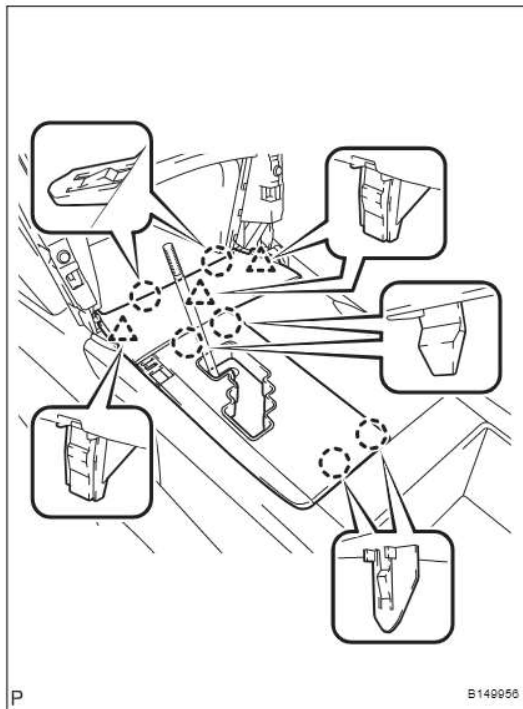
- (a) Turn the shift lever knob counterclockwise and remove the shift lever knob sub-assembly.

**22. REMOVE NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH**

- (a) Disengage the 2 clips and remove the No. 1 instrument cluster finish panel garnish.

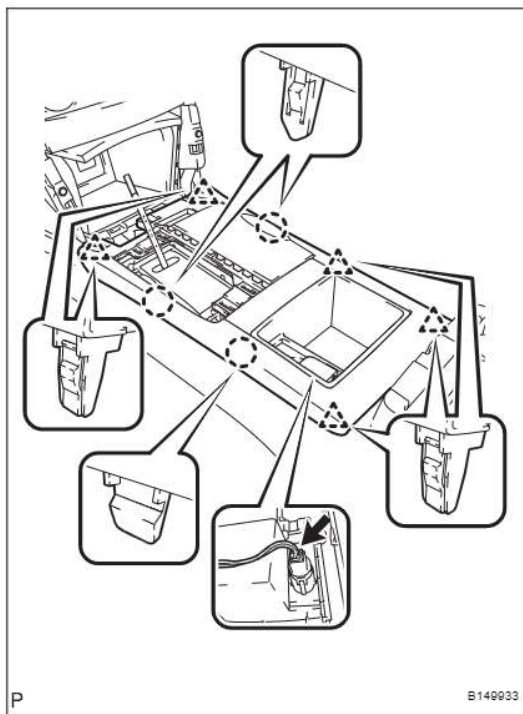
**23. REMOVE NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH**

- (a) Disengage the 2 clips and remove the No. 2 instrument cluster finish panel garnish.



24. REMOVE FLOOR SHIFT POSITION INDICATOR HOUSING SUB-ASSEMBLY

- (a) Disengage the 6 claws and the 3 clips, and then remove the floor shift position indicator housing sub-assembly.
- (b) with Seat Heater System:
 - (1) Disconnect each connector.

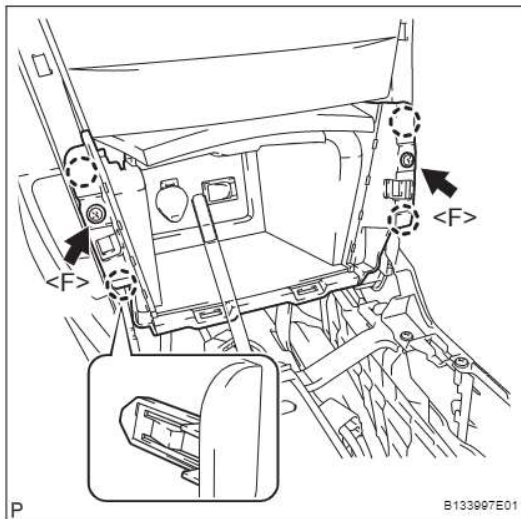


25. REMOVE UPPER CONSOLE REAR PANEL SUB-ASSEMBLY

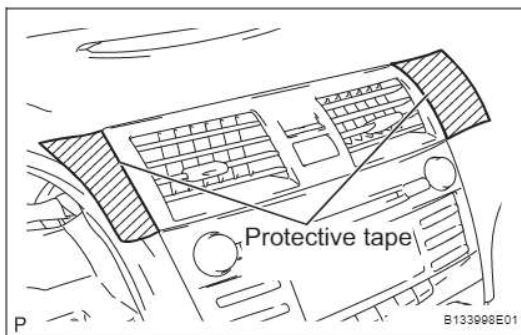
- (a) Disengage the 3 claws and the 5 clips.
- (b) Disconnect the connector and remove the upper console rear panel sub-assembly.

IP-16

INSTRUMENT PANEL – INSTRUMENT PANEL SAFETY PAD

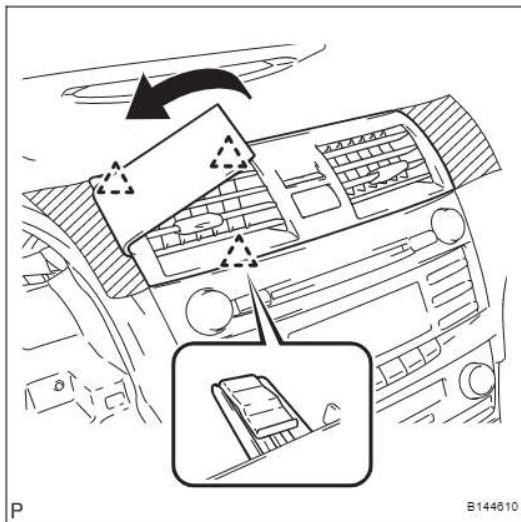
**26. REMOVE UPPER CONSOLE PANEL SUB-ASSEMBLY**

- (a) Remove the 2 screws <F>.
- (b) Disengage the 4 claws.
- (c) Disconnect each connector and remove the upper console panel sub-assembly.

**27. REMOVE INSTRUMENT PANEL NO. 2 REGISTER ASSEMBLY**

- (a) Apply protective tape to the areas shown in the illustration.

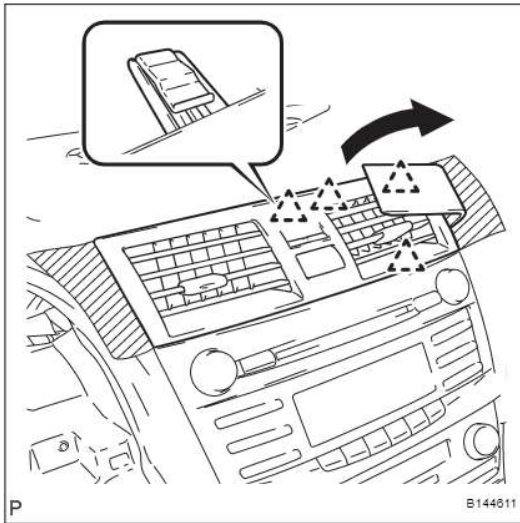
- (b) Using a moulding remover, disengage the 3 clips.



IP

INSTRUMENT PANEL – INSTRUMENT PANEL SAFETY PAD

IP-17



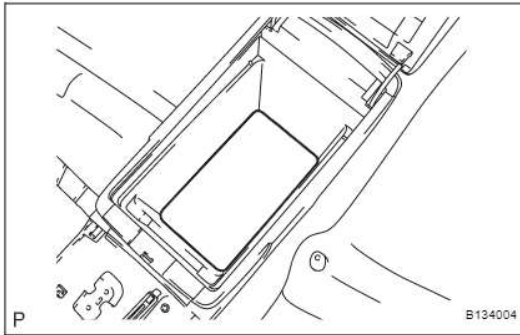
- (c) Using a moulding remover, disengage the 4 clips.
- (d) Disconnect the connector and remove the instrument panel No. 2 register assembly.

28. REMOVE RADIO RECEIVER WITH HEATER CONTROL PANEL ASSEMBLY (w/o Navigation System) (See page [AV-136](#))

29. REMOVE NAVIGATION RECEIVER WITH HEATER CONTROL PANEL ASSEMBLY (w/ Navigation System) (See page [NS-193](#))

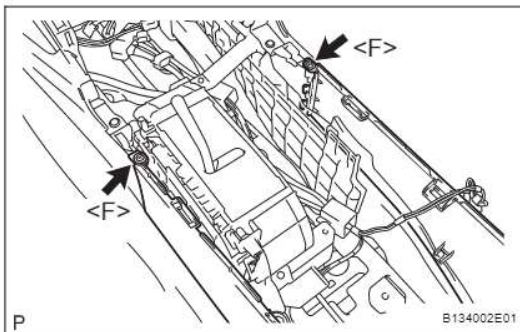
30. REMOVE CONSOLE BOX POCKET

- (a) Remove the console box pocket.



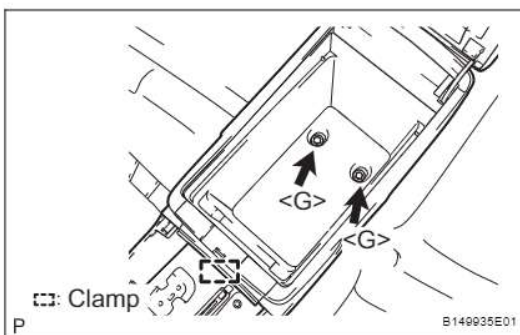
31. REMOVE CONSOLE BOX CARPET

- (a) Remove the console box carpet.



32. REMOVE CONSOLE BOX ASSEMBLY

- (a) Remove the 2 screws <F>.

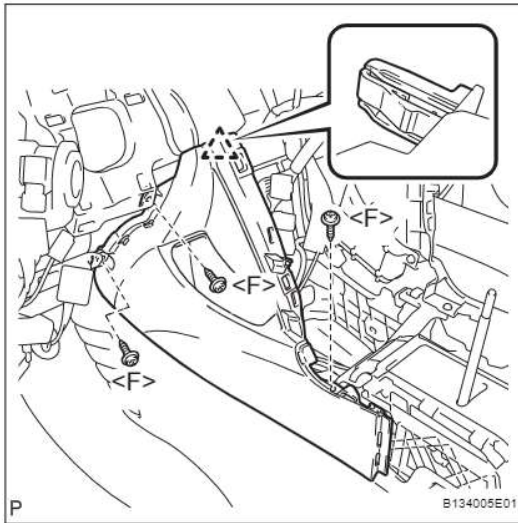


- (b) Disengage the clamp.
- (c) Remove the 2 bolts <G> and the console box assembly.

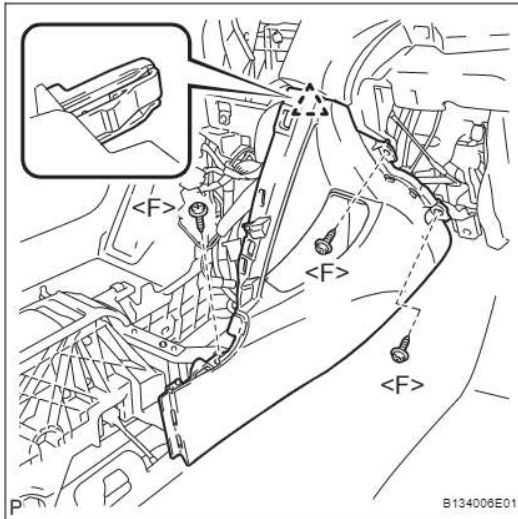
IP

IP-18

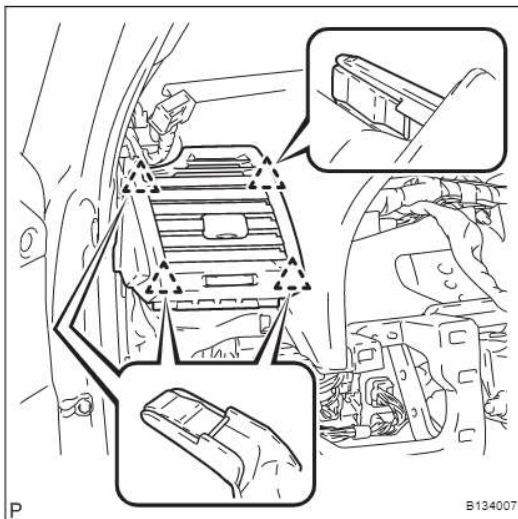
INSTRUMENT PANEL – INSTRUMENT PANEL SAFETY PAD

**33. REMOVE NO. 2 CONSOLE BOX INSERT FRONT**

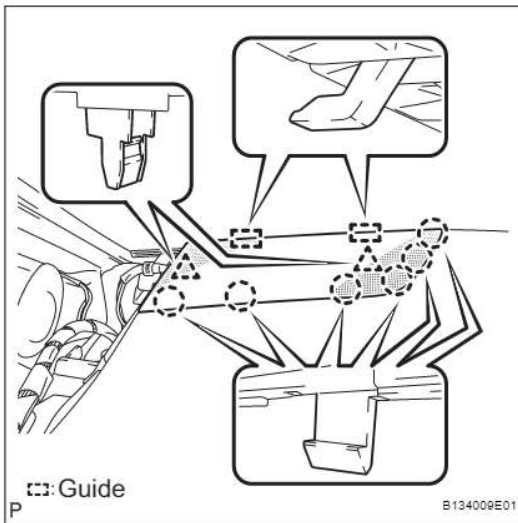
- Remove the 3 screws <F>.
- Disengage the clip and remove the No. 2 console box insert front.

**34. REMOVE NO. 1 CONSOLE BOX INSERT FRONT**

- Remove the 3 screws <F>.
- Disengage the clip and remove the No. 1 console box insert front.

35. REMOVE FRONT PILLAR GARNISH LH (See page [IR-16](#))**36. REMOVE INSTRUMENT PANEL NO. 1 REGISTER ASSEMBLY**

- Disengage the 4 clips and remove the instrument panel No. 1 register assembly.

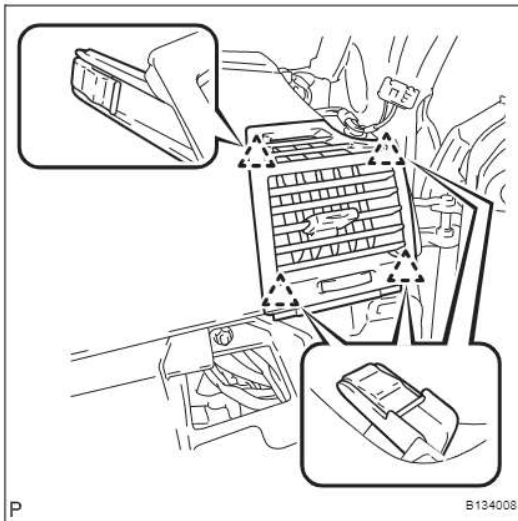


37. REMOVE INSTRUMENT PANEL NO. 1 SPEAKER PANEL SUB-ASSEMBLY

- Disengage the 6 claws and the 2 clips.
- Disengage the 2 guides and remove the instrument panel No. 1 speaker panel sub-assembly.

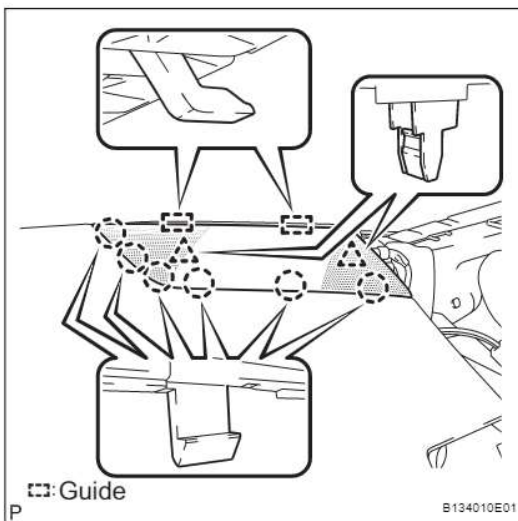
38. REMOVE FRONT NO. 2 SPEAKER ASSEMBLY (for LH Side) (See page [AV-146](#))

39. REMOVE FRONT PILLAR GARNISH RH (See page [IR-16](#))



40. REMOVE INSTRUMENT PANEL NO. 3 REGISTER ASSEMBLY

- Disengage the 4 clips and remove the instrument panel No. 3 register assembly.



41. REMOVE INSTRUMENT PANEL NO. 2 SPEAKER PANEL SUB-ASSEMBLY

- Disengage the 6 claws and the 2 clips.
- Disengage the 2 guides and remove the instrument panel No. 2 speaker panel sub-assembly.

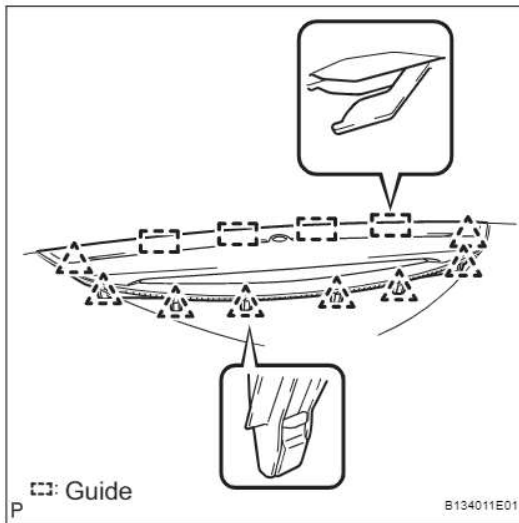
42. REMOVE FRONT NO. 2 SPEAKER ASSEMBLY (for RH Side)

HINT:

Use the same procedures described for the LH side (See page [AV-146](#)).

IP-20

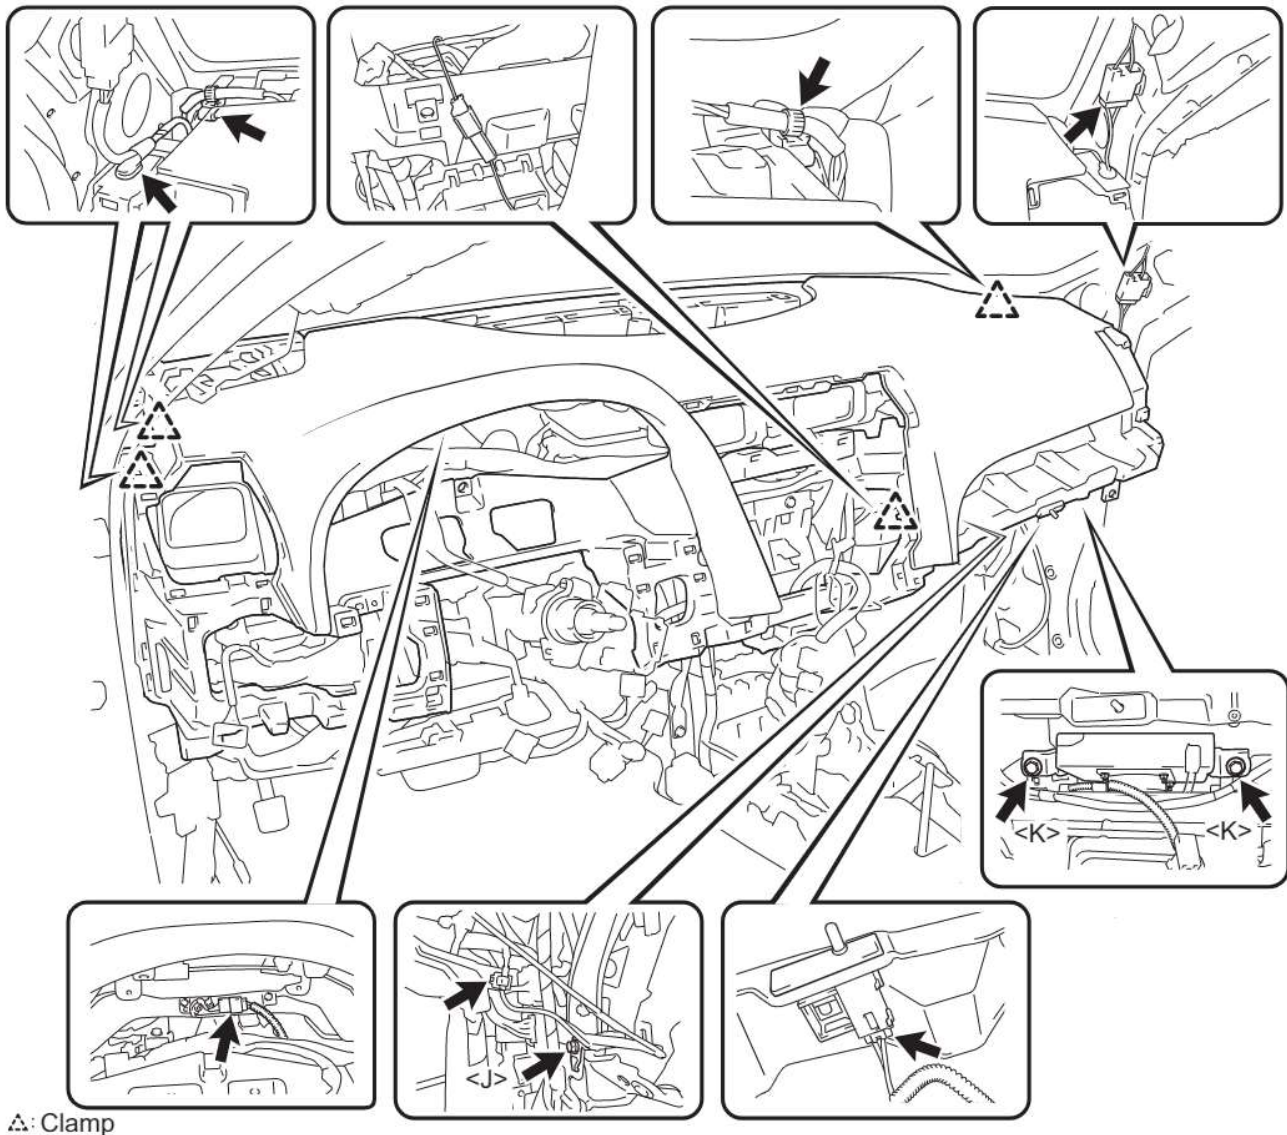
INSTRUMENT PANEL – INSTRUMENT PANEL SAFETY PAD

**43. REMOVE NO. 1 DEFROSTER NOZZLE GARNISH**

- (a) Disengage the 8 clips and the 4 guides.
- (b) Disconnect each connector and remove the No. 1 defroster nozzle garnish.

44. DISCONNECT INSTRUMENT PANEL WIRE ASSEMBLY (See page RS-381)**45. REMOVE INSTRUMENT PANEL SAFETY PAD ASSEMBLY**

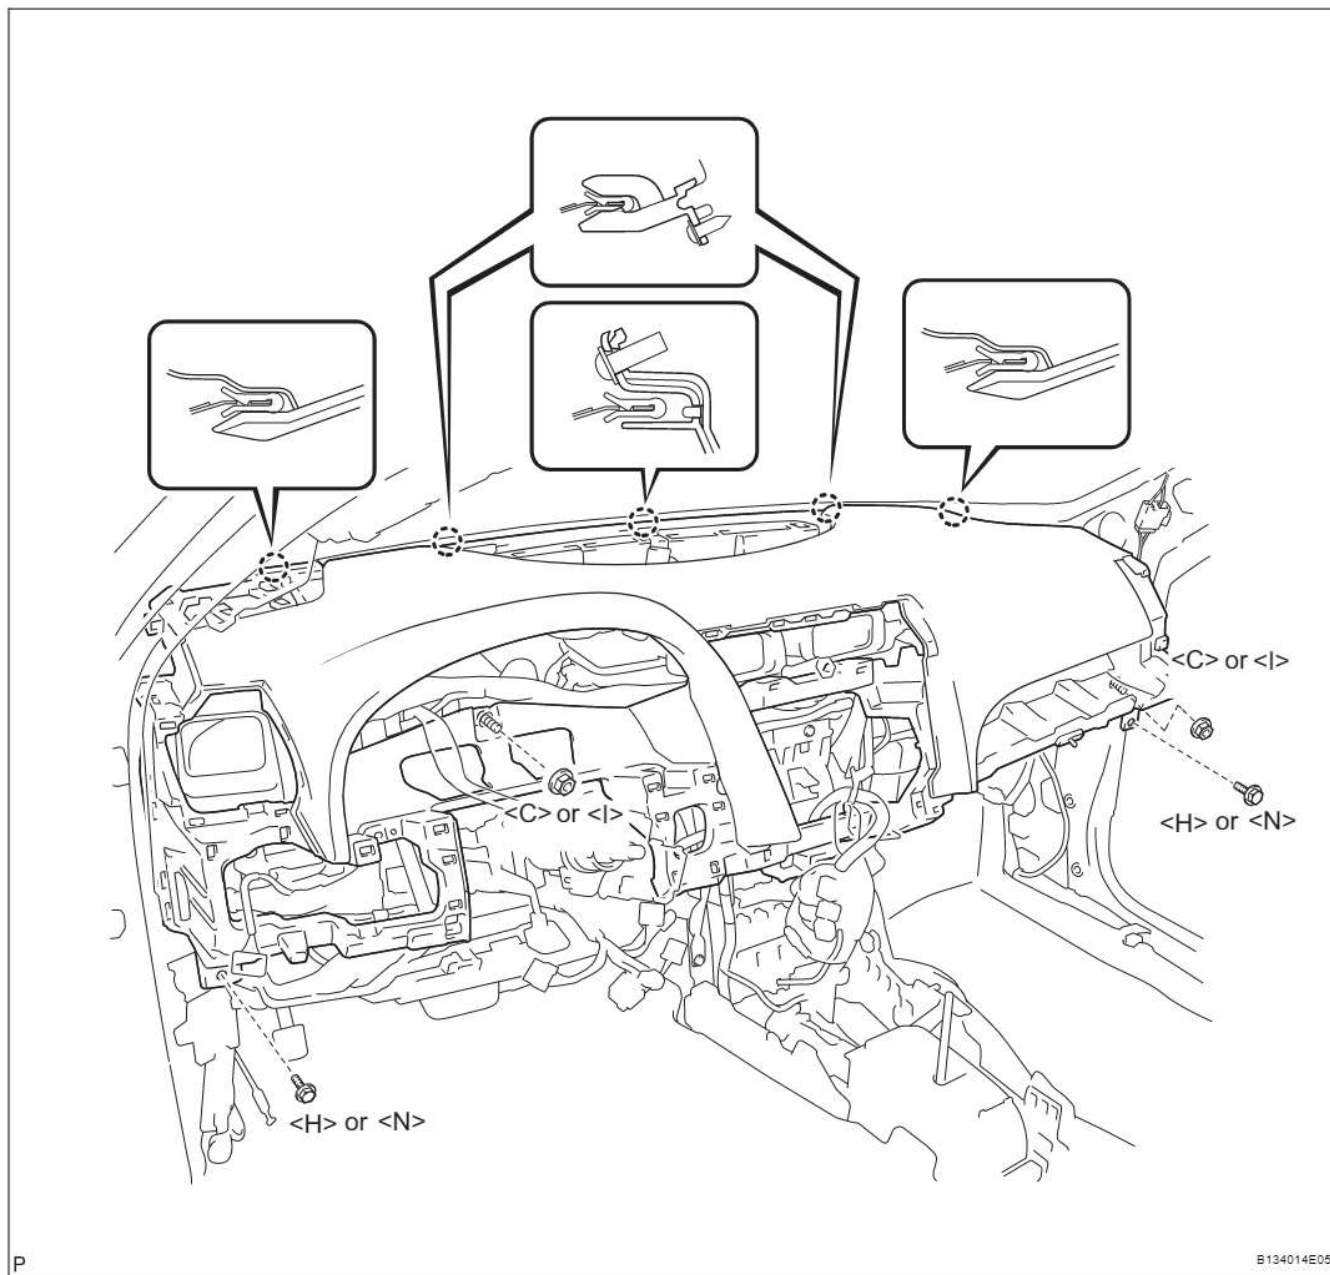
- (a) Disengage each clamp.
- (b) Disconnect each connector.
- (c) Remove the bolt <J>.
- (d) Remove the 2 passenger airbag bolts <K>.



INSTRUMENT PANEL – INSTRUMENT PANEL SAFETY PAD

IP-21

- (e) Remove the 2 bolts <H> or <N>.
- (f) Remove the 2 nuts <C> or <I>.
- (g) Disengage the 5 claws and remove the instrument panel safety pad assembly.



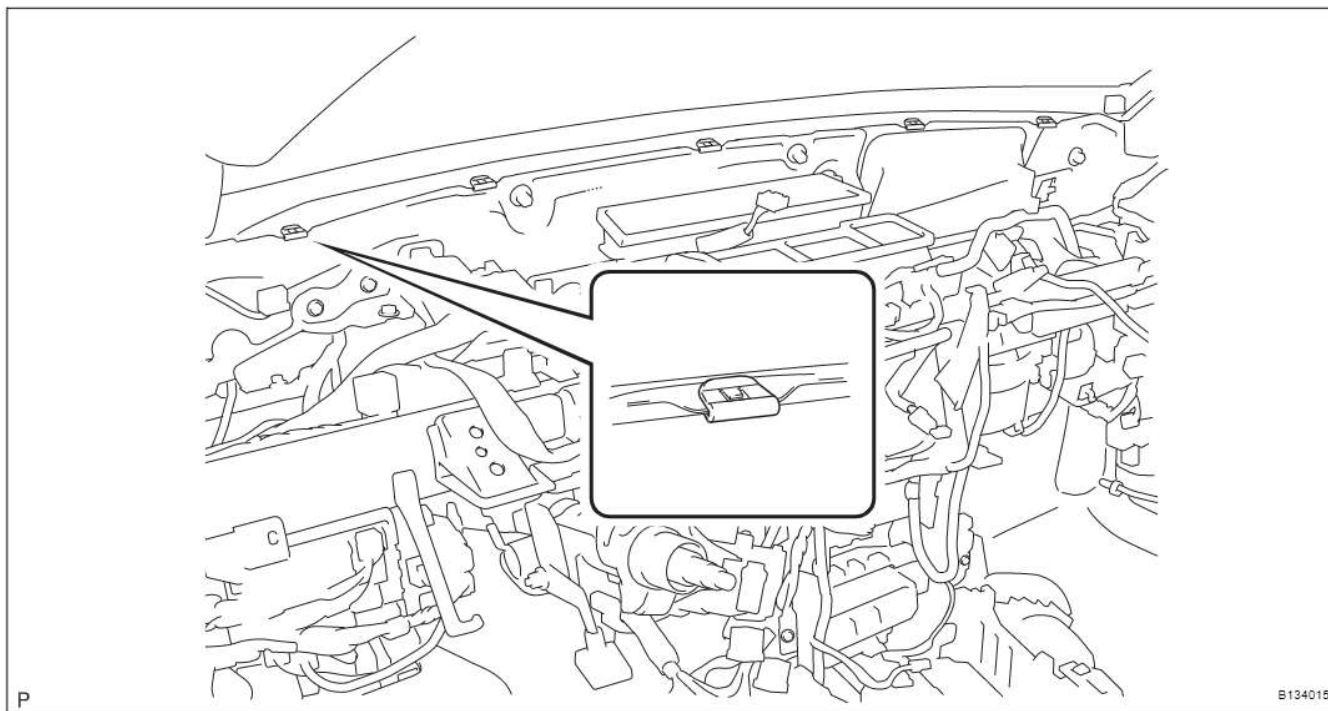
IP

IP-22

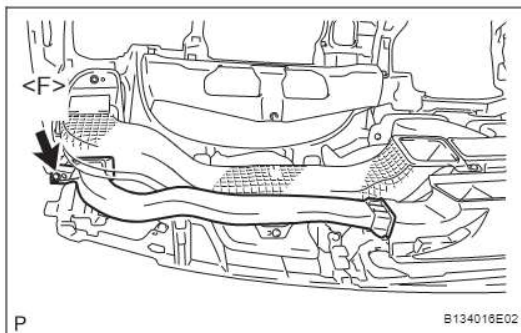
INSTRUMENT PANEL – INSTRUMENT PANEL SAFETY PAD

46. REMOVE NO. 3 INSTRUMENT PANEL STAY

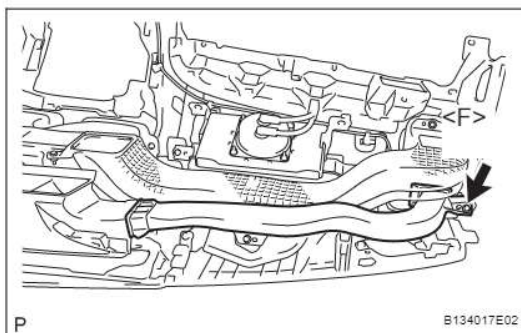
- (a) Disengage the 5 claws and remove the 5 No. 3 instrument panel stays.

**DISASSEMBLY****1. REMOVE SIDE NO. 1 DEFROSTER NOZZLE DUCT**

- (a) Remove the screw <F> and the side No. 1 defroster nozzle duct.

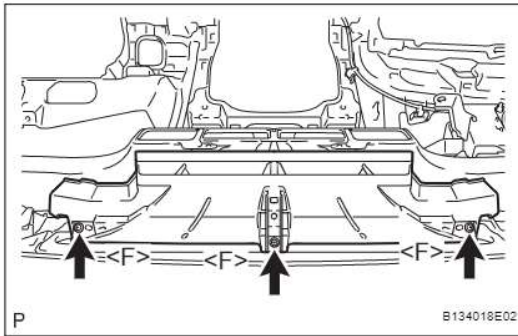
**2. REMOVE SIDE NO. 2 DEFROSTER NOZZLE DUCT**

- (a) Remove the screw <F> and the side No. 2 defroster nozzle duct.

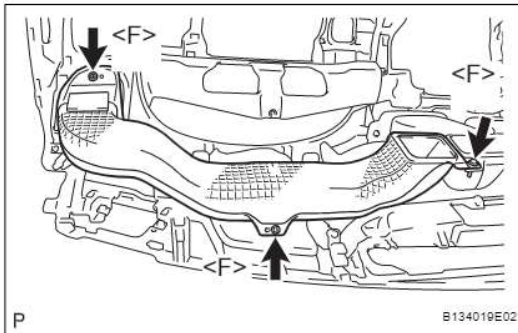


INSTRUMENT PANEL – INSTRUMENT PANEL SAFETY PAD

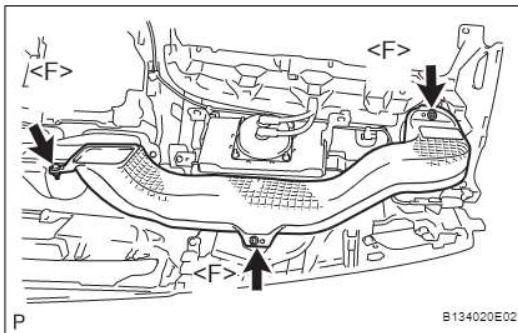
IP-23

**3. REMOVE DEFROSTER NOZZLE ASSEMBLY**

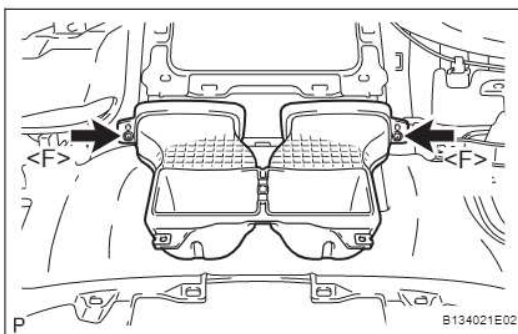
- (a) Remove the 3 screws <F> and the defroster nozzle assembly.

**4. REMOVE NO. 1 HEATER TO REGISTER DUCT**

- (a) Remove the 3 screws <F> and the No. 1 heater to register duct.

**5. REMOVE NO. 3 HEATER TO REGISTER DUCT**

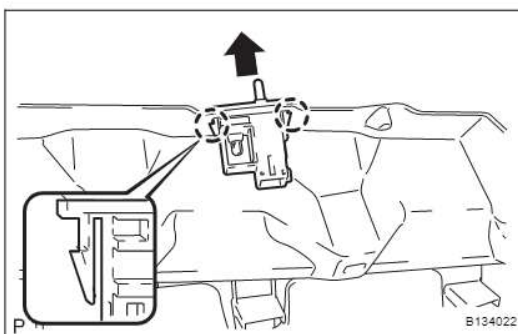
- (a) Remove the 3 screws <F> and the No. 3 heater to register duct.

**6. REMOVE NO. 2 HEATER TO REGISTER DUCT**

- (a) Remove the 2 screws <F> and the No. 2 heater to register duct.

7. REMOVE NO. 2 ANTENNA CORD SUB-ASSEMBLY (See page [AV-173](#))**8. REMOVE NAVIGATION ANTENNA ASSEMBLY (See page [NS-204](#))****9. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY (See page [RS-381](#))****10. REMOVE GLOVE BOX LIGHT ASSEMBLY**

- (a) Disengage the 2 claws and remove the glove box light assembly.

11. REMOVE PLASMACLUSTER (See page [AC-279](#))

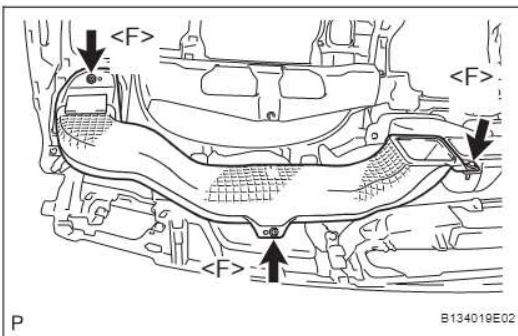
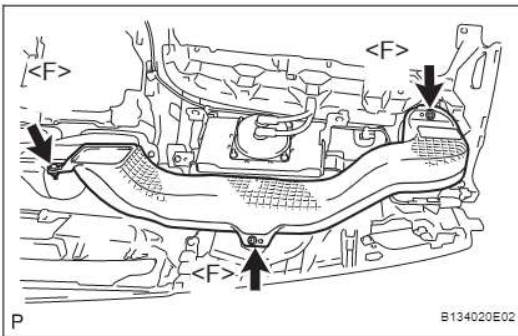
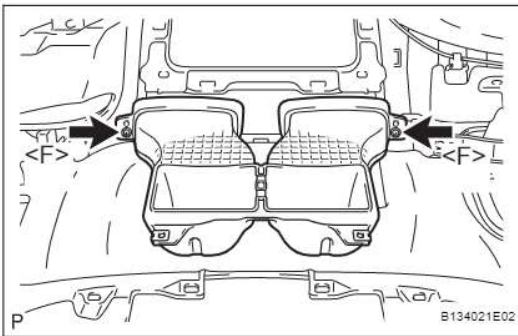
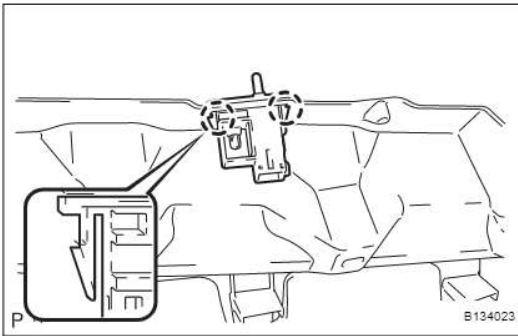
IP

IP-24

INSTRUMENT PANEL – INSTRUMENT PANEL SAFETY PAD

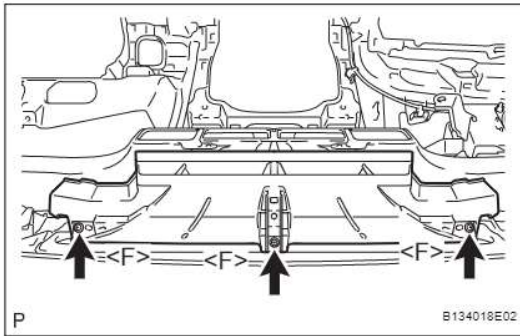
REASSEMBLY

1. **INSTALL PLASMACLUSTER** (See page [AC-280](#))
2. **INSTALL GLOVE BOX LIGHT ASSEMBLY**
 - (a) Engage the 2 claws and install the glove box light assembly.
3. **INSTALL FRONT PASSENGER AIRBAG ASSEMBLY** (See page [RS-383](#))
4. **INSTALL NAVIGATION ANTENNA ASSEMBLY** (See page [NS-204](#))
5. **INSTALL NO. 2 ANTENNA CORD SUB-ASSEMBLY** (See page [AV-185](#))
6. **INSTALL NO. 2 HEATER TO REGISTER DUCT**
 - (a) Install the No. 2 heater to register duct with the 2 screws <F>.
7. **INSTALL NO. 3 HEATER TO REGISTER DUCT**
 - (a) Install the No. 3 heater to register duct with the 3 screws <F>.
8. **INSTALL NO. 1 HEATER TO REGISTER DUCT**
 - (a) Install the No. 1 heater to register duct with the 3 screws <F>.

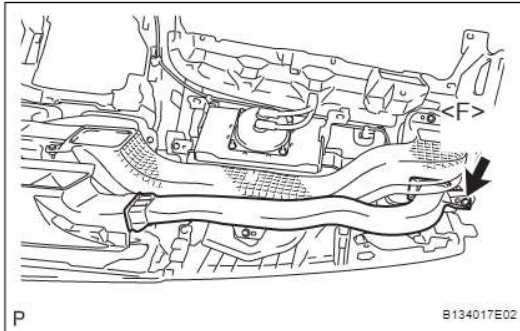


INSTRUMENT PANEL – INSTRUMENT PANEL SAFETY PAD

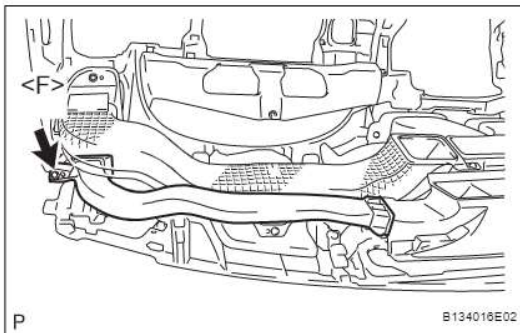
IP-25

**9. INSTALL DEFROSTER NOZZLE ASSEMBLY**

- (a) Install the defroster nozzle assembly with the 3 screws <F>.

**10. INSTALL SIDE NO. 2 DEFROSTER NOZZLE DUCT**

- (a) Install the side No. 2 defroster nozzle duct with the screw <F>.

**11. INSTALL SIDE NO. 1 DEFROSTER NOZZLE DUCT**

- (a) Install the side No. 1 defroster nozzle duct with the screw <F>.

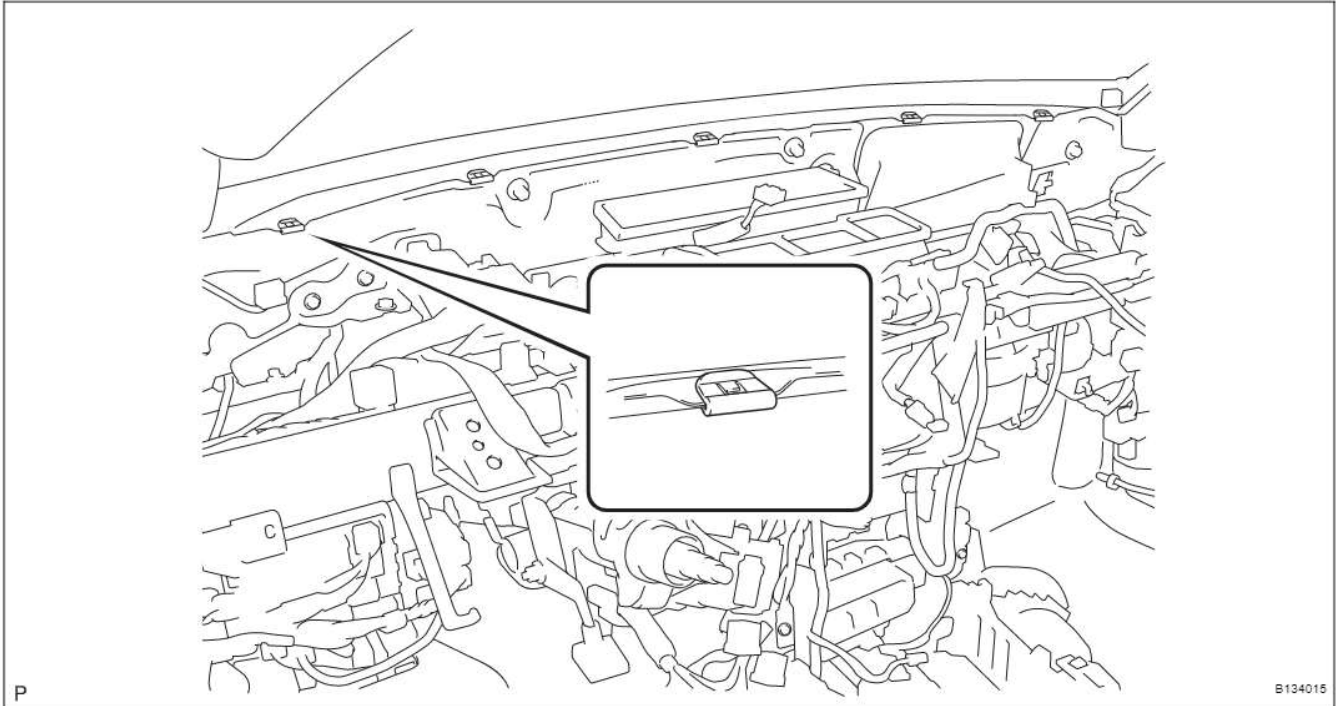
IP

IP-26

INSTRUMENT PANEL – INSTRUMENT PANEL SAFETY PAD

INSTALLATION**1. INSTALL NO. 3 INSTRUMENT PANEL STAY**

- (a) Engage the 5 claws and install the 5 No. 3 instrument panel stays.

**2. INSTALL INSTRUMENT PANEL SAFETY PAD ASSEMBLY**

- (a) Engage the 5 claws.

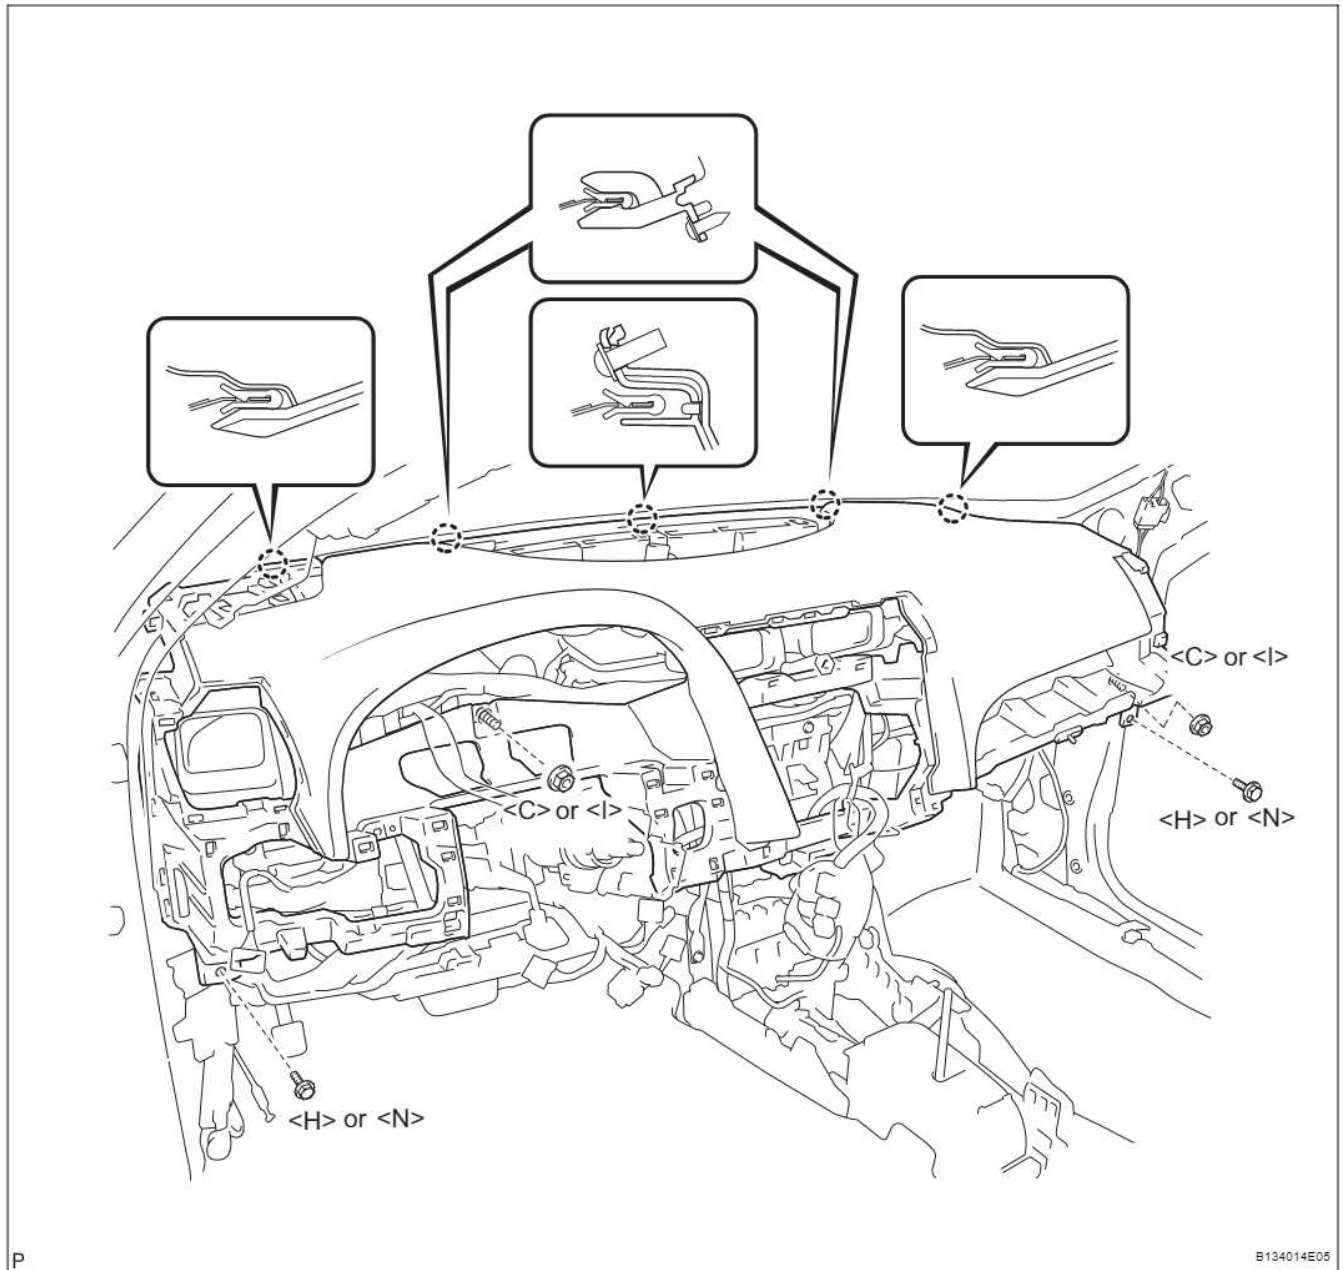
NOTICE:

Do not allow the wire harness to get caught in the claws.

INSTRUMENT PANEL – INSTRUMENT PANEL SAFETY PAD

IP-27

(b) Install the 2 bolts <H> or <N> and 2 nuts <C> or <I>.

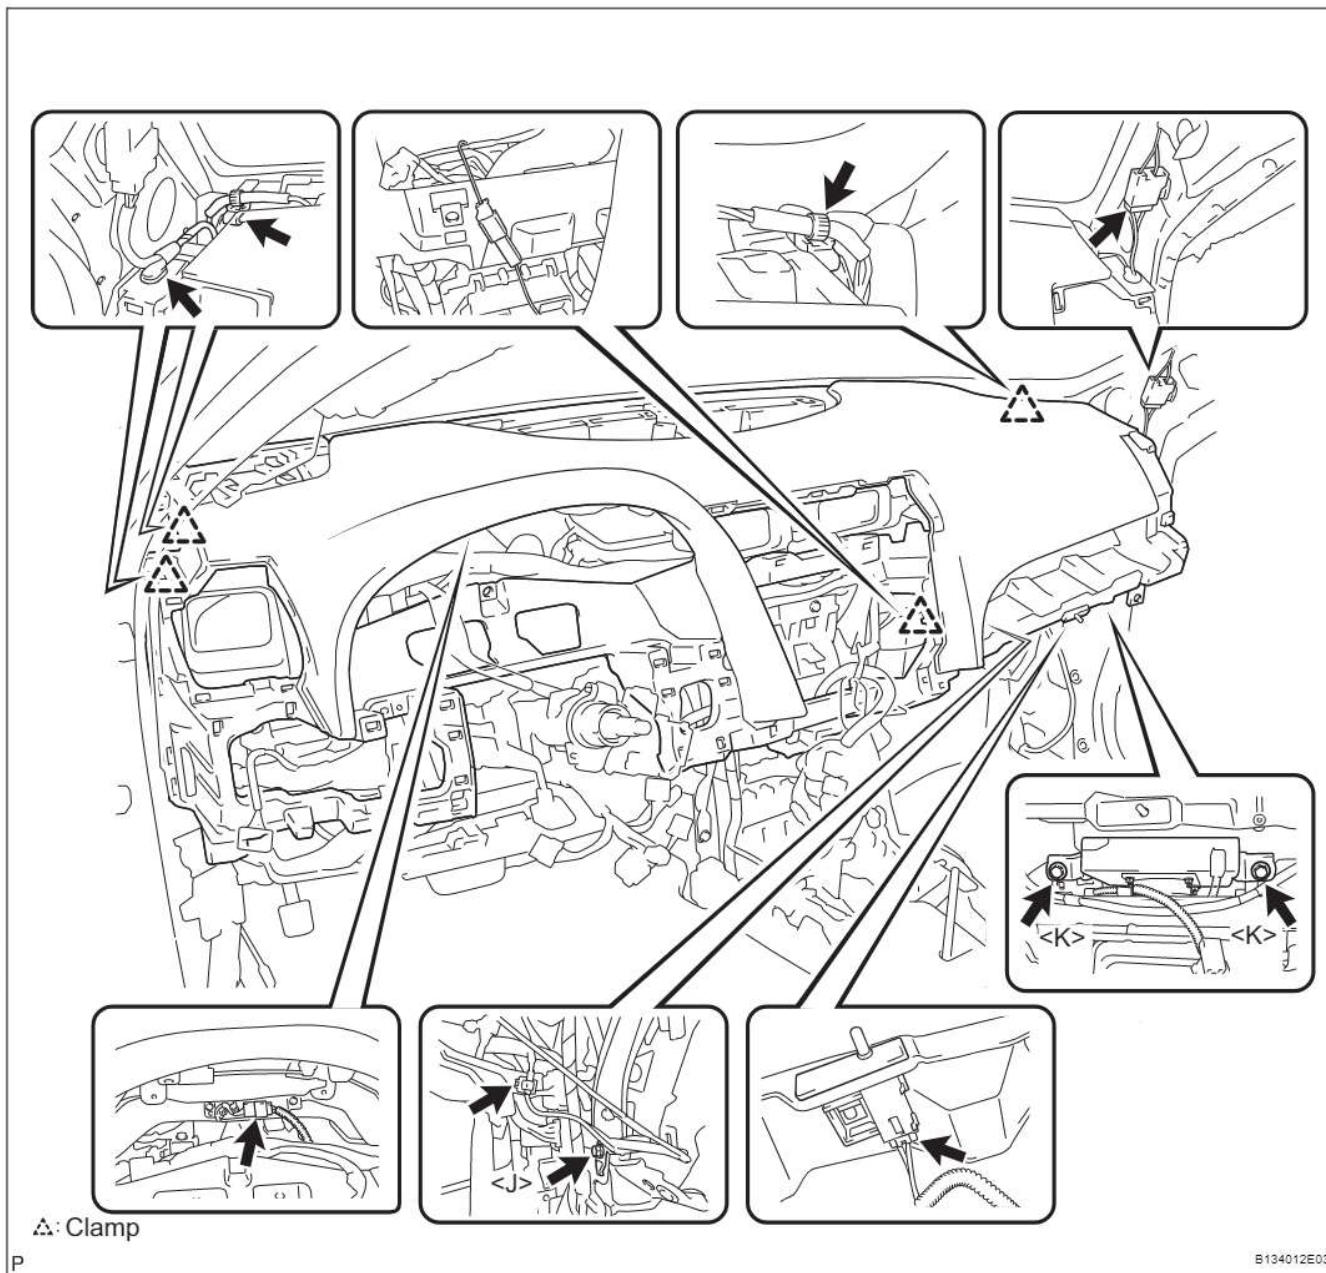


- (c) Engage each clamp.
- (d) Install the bolt <J>.
Torque: 7.0 N*m (71 kgf*cm, 62 in.*lbf)
- (e) Install the 2 passenger airbag bolts <K>.
Torque: 20 N*m (204 kgf*cm, 15 ft.*lbf)

IP-28

INSTRUMENT PANEL – INSTRUMENT PANEL SAFETY PAD

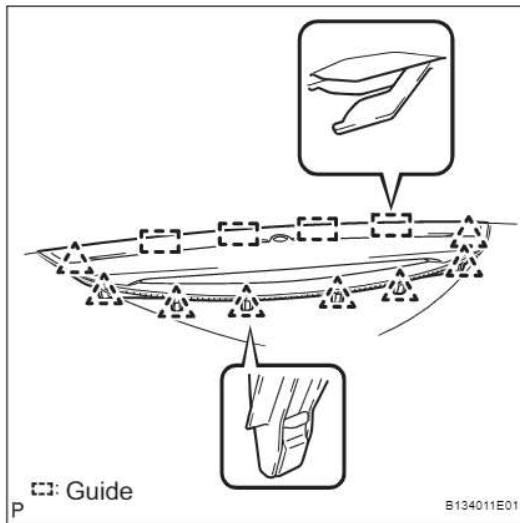
- (f) Connect each connector and install the instrument panel safety pad assembly.



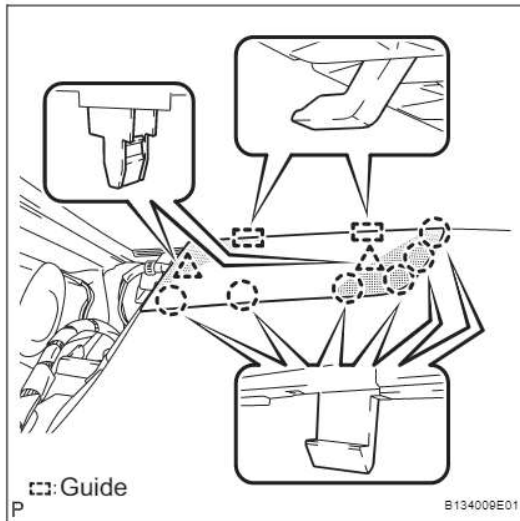
3. CONNECT INSTRUMENT PANEL WIRE ASSEMBLY (See page RS-383)

INSTRUMENT PANEL – INSTRUMENT PANEL SAFETY PAD

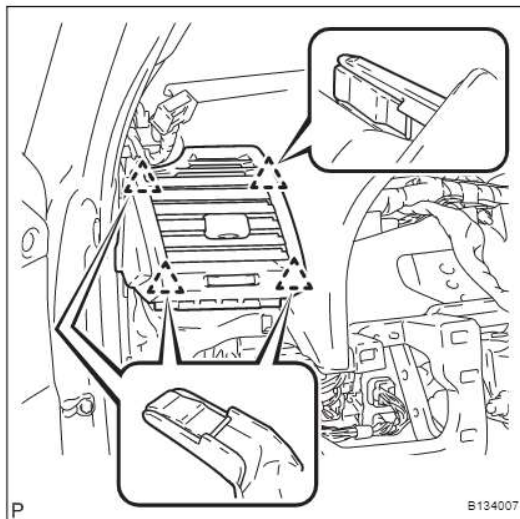
IP-29

**4. INSTALL NO. 1 DEFROSTER NOZZLE GARNISH**

- (a) Connect each connector.
- (b) Engage the 4 guides.
- (c) Engage the 8 clips and install the No. 1 defroster nozzle garnish.

5. INSTALL FRONT NO. 2 SPEAKER ASSEMBLY (for LH Side) (See page [AV-146](#))**6. INSTALL INSTRUMENT PANEL NO. 1 SPEAKER PANEL SUB-ASSEMBLY**

- (a) Engage the 2 guides.
- (b) Engage the 6 claws and the 2 clips to install the instrument panel No. 1 speaker panel sub-assembly.

**7. INSTALL INSTRUMENT PANEL NO. 1 REGISTER ASSEMBLY**

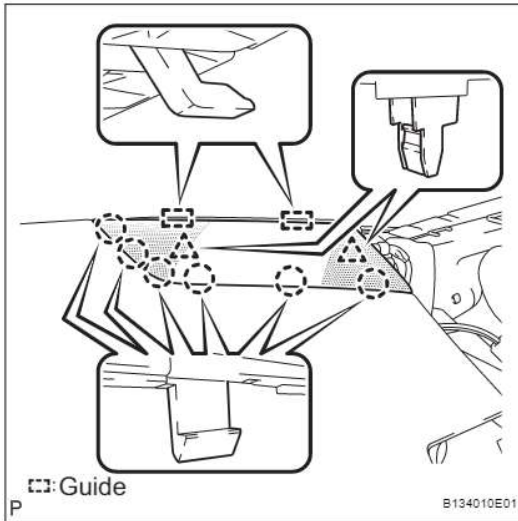
- (a) Engage the 4 clips and install the instrument panel No. 1 register assembly.

8. INSTALL FRONT PILLAR GARNISH LH (See page [IR-38](#))**9. INSTALL FRONT NO. 2 SPEAKER ASSEMBLY (for RH Side)****HINT:**Use the same procedures described for the LH side (See page [AV-146](#)).

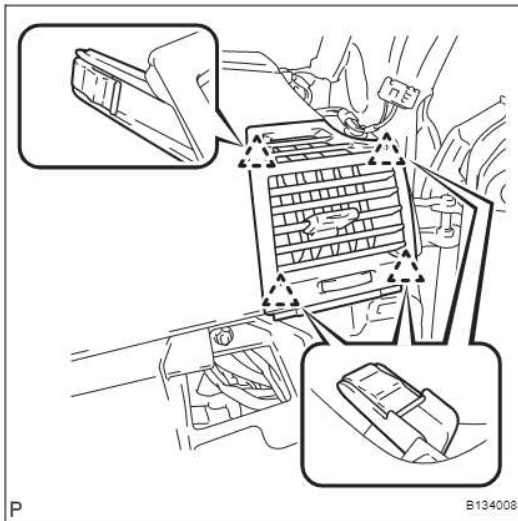
IP

IP-30

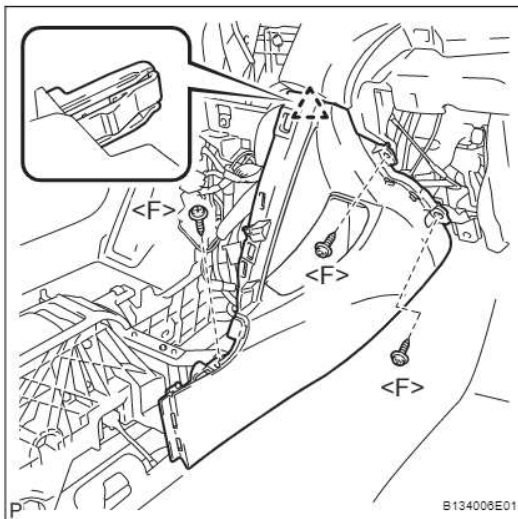
INSTRUMENT PANEL – INSTRUMENT PANEL SAFETY PAD

**10. INSTALL INSTRUMENT PANEL NO. 2 SPEAKER PANEL SUB-ASSEMBLY**

- (a) Engage the 2 guides.
- (b) Engage the 6 claws and the 2 clips to install the instrument panel No. 2 speaker panel sub-assembly.

**11. INSTALL INSTRUMENT PANEL NO. 3 REGISTER ASSEMBLY**

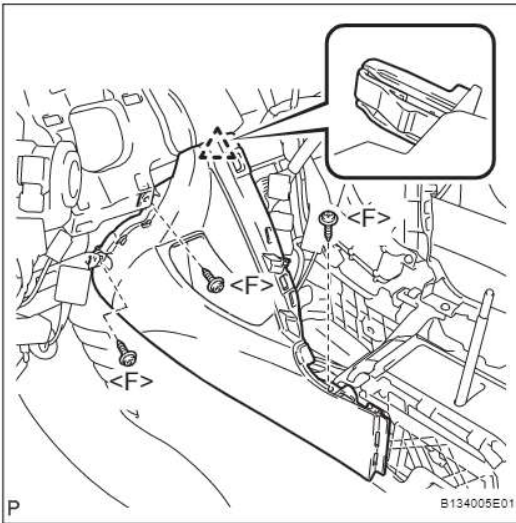
- (a) Engage the 4 clips and install the instrument panel No. 3 register assembly.

12. INSTALL FRONT PILLAR GARNISH RH (See page [IR-39](#))**13. INSTALL NO. 1 CONSOLE BOX INSERT FRONT**

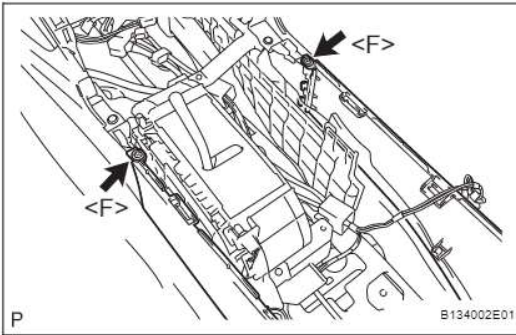
- (a) Engage the clip.
- (b) Install the No. 1 console box insert front with the 3 screws <F>.

INSTRUMENT PANEL – INSTRUMENT PANEL SAFETY PAD

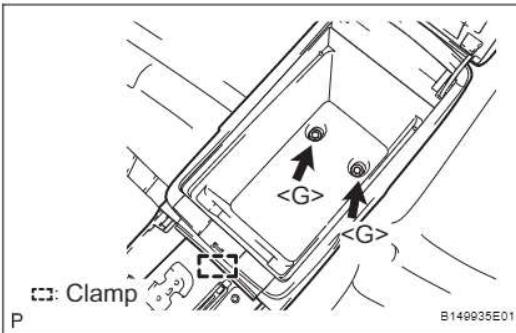
IP-31

**14. INSTALL NO. 2 CONSOLE BOX INSERT FRONT**

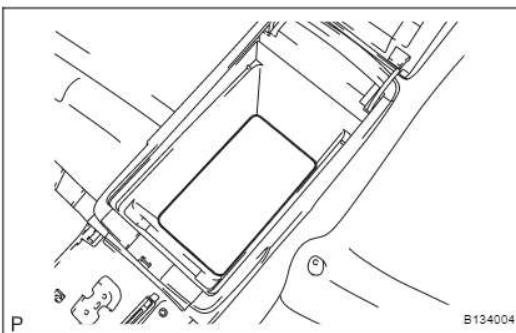
- (a) Engage the clip.
- (b) Install the No. 2 console box insert front with the 3 screws <F>.

**15. INSTALL CONSOLE BOX ASSEMBLY**

- (a) Install the 2 screws <F>.



- (b) Install the console box assembly with the 2 bolts <G>.
- (c) Engage the clamp.

**16. INSTALL CONSOLE BOX CARPET**

- (a) Install the console box carpet.

17. INSTALL CONSOLE BOX POCKET

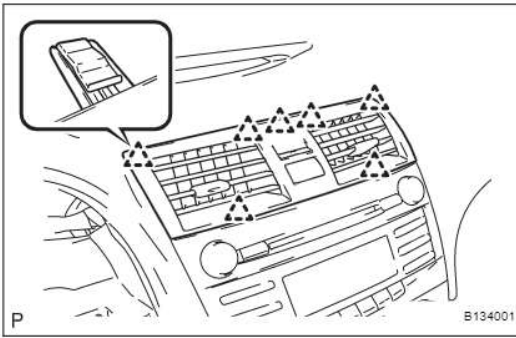
- (a) Install the console box pocket.

18. INSTALL RADIO RECEIVER WITH HEATER CONTROL PANEL ASSEMBLY (w/o Navigation System) (See page [AV-137](#))**19. INSTALL NAVIGATION RECEIVER WITH HEATER CONTROL PANEL ASSEMBLY (w/ Navigation System) (See page [NS-194](#))**

IP

IP-32

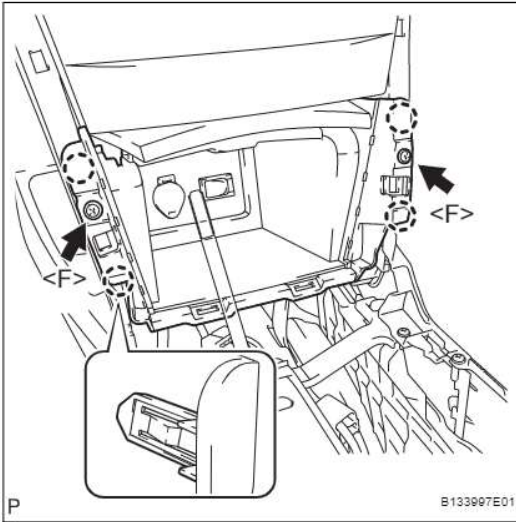
INSTRUMENT PANEL – INSTRUMENT PANEL SAFETY PAD

**20. INSTALL INSTRUMENT PANEL NO. 2 REGISTER ASSEMBLY**

- (a) Engage the 7 clips and install the instrument panel No. 2 register assembly.

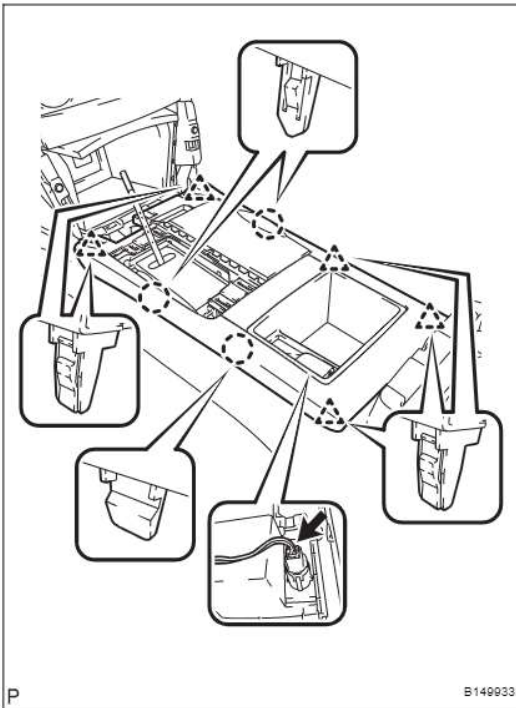
21. INSTALL UPPER CONSOLE PANEL SUB-ASSEMBLY

- (a) Connect each connector.



- (b) Engage the 4 claws.

- (c) Install the upper console panel sub-assembly with the 2 screws <F>.

**22. INSTALL UPPER CONSOLE REAR PANEL SUB-ASSEMBLY**

- (a) Connect the connector.
(b) Engage the 3 claws and 5 clips to install the upper console rear panel sub-assembly.

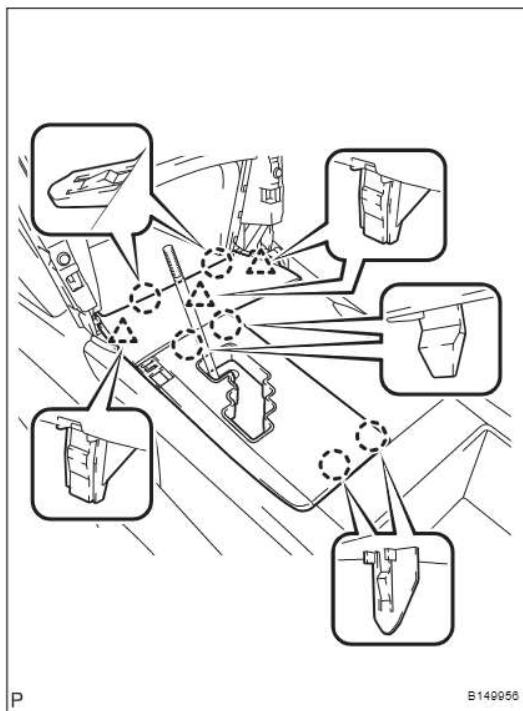
23. INSTALL FLOOR SHIFT POSITION INDICATOR HOUSING SUB-ASSEMBLY

- (a) with Seat Heater System:
(1) Connect each connector.

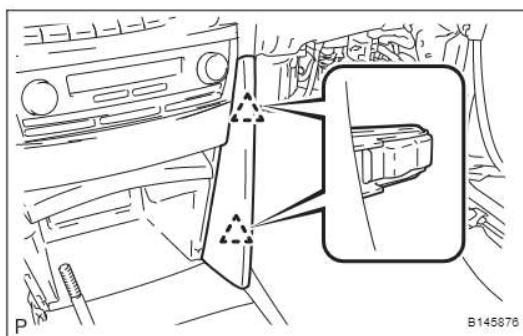
IP

INSTRUMENT PANEL – INSTRUMENT PANEL SAFETY PAD

IP-33

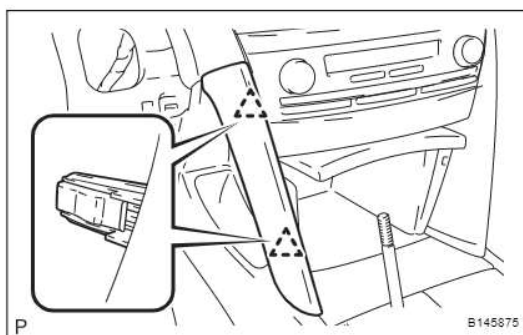


- (b) Engage the 6 claws and the 3 clips to install the floor shift position indicator housing sub-assembly.



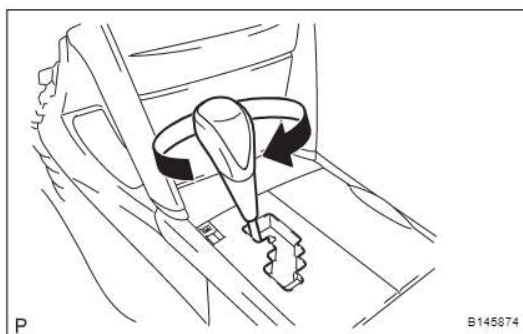
24. INSTALL NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH

- (a) Engage the 2 clips and install the No. 2 instrument cluster finish panel garnish.



25. INSTALL NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

- (a) Engage the 2 clips and install the No. 1 instrument cluster finish panel garnish.



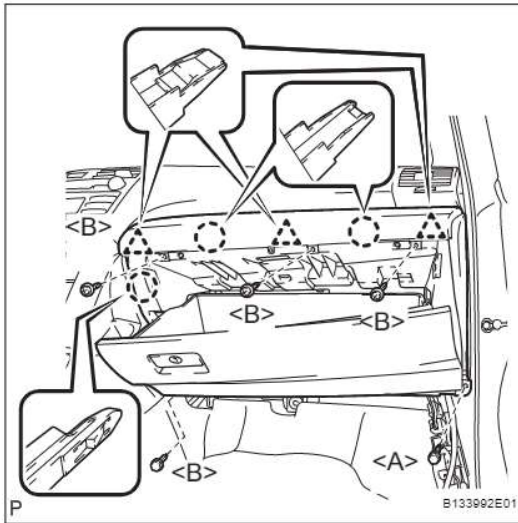
26. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY

- (a) Install the shift lever knob sub-assembly.

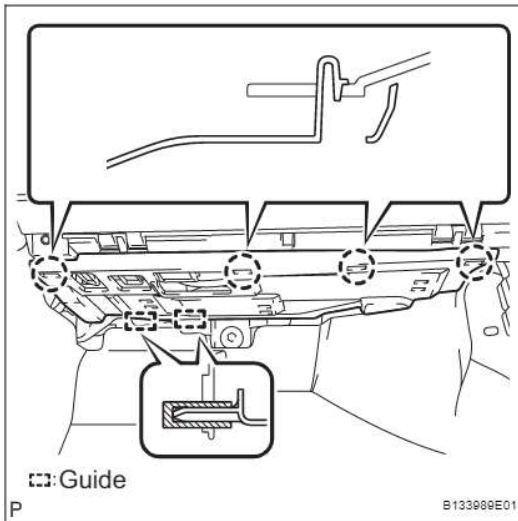
IP

IP-34

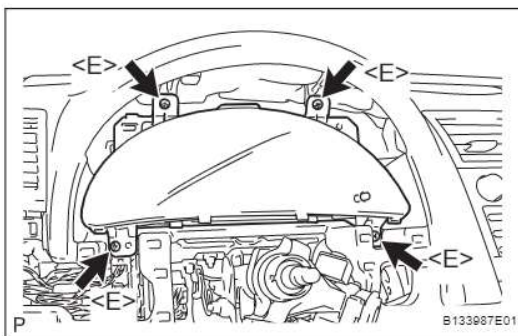
INSTRUMENT PANEL – INSTRUMENT PANEL SAFETY PAD

**27. INSTALL LOWER INSTRUMENT PANEL SUB-ASSEMBLY**

- (a) Engage the 3 claws and 3 clips.
- (b) Install the 4 screws .
- (c) Install the lower instrument panel sub-assembly with the bolt <A>.

**28. INSTALL INSTRUMENT PANEL NO. 2 UNDER COVER SUB-ASSEMBLY**

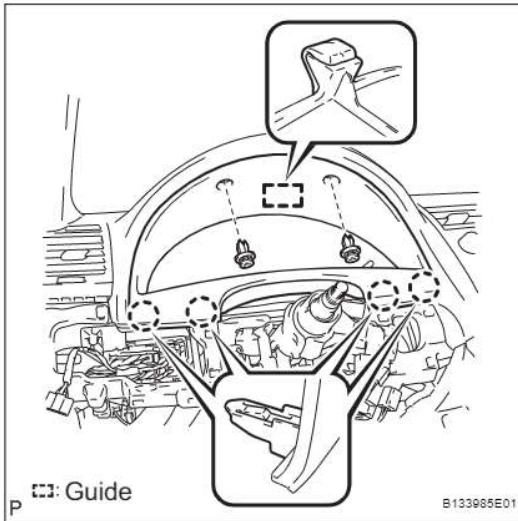
- (a) Engage the 4 claws and 2 guides and install the instrument panel No. 2 under cover.

29. INSTALL COWL SIDE TRIM SUB-ASSEMBLY RH (See page [IR-42](#))**30. INSTALL FRONT DOOR SCUFF PLATE RH (See page [IR-42](#))****31. INSTALL COMBINATION METER ASSEMBLY**

- (a) Connect each connector.
- (b) Install the combination meter assembly with the 4 screws <E>.

INSTRUMENT PANEL – INSTRUMENT PANEL SAFETY PAD

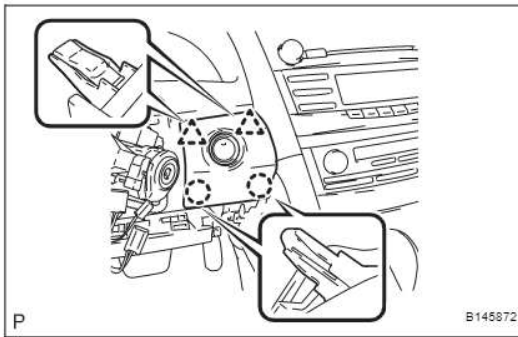
IP-35

**32. INSTALL INSTRUMENT CLUSTER FINISH PANEL**

- (a) Engage the guide and the 4 claws.
- (b) Install the instrument cluster finish panel with the 2 clips.

33. INSTALL LOWER INSTRUMENT PANEL FINISH PANEL

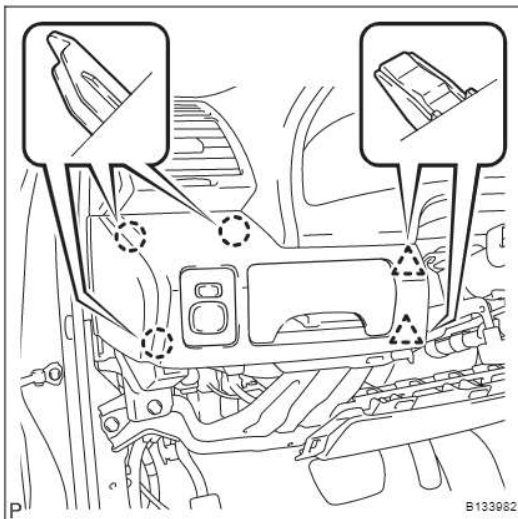
- (a) Connect the connector.



- (b) Engage the 2 claws and 2 clips to install the lower instrument panel finish panel.

34. INSTALL NO. 1 INSTRUMENT PANEL SUB-ASSEMBLY

- (a) Connect the connector.



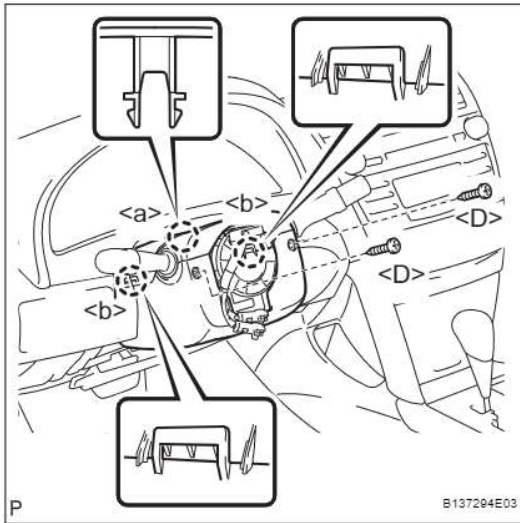
- (b) Engage the 3 claws and 2 clips to install the No. 1 instrument panel sub-assembly.

35. INSTALL TURN SIGNAL SWITCH ASSEMBLY WITH SPIRAL CABLE SUB-ASSEMBLY (See page [SR-41](#))**36. ADJUST SPIRAL CABLE SUB-ASSEMBLY (See page [RS-360](#))**

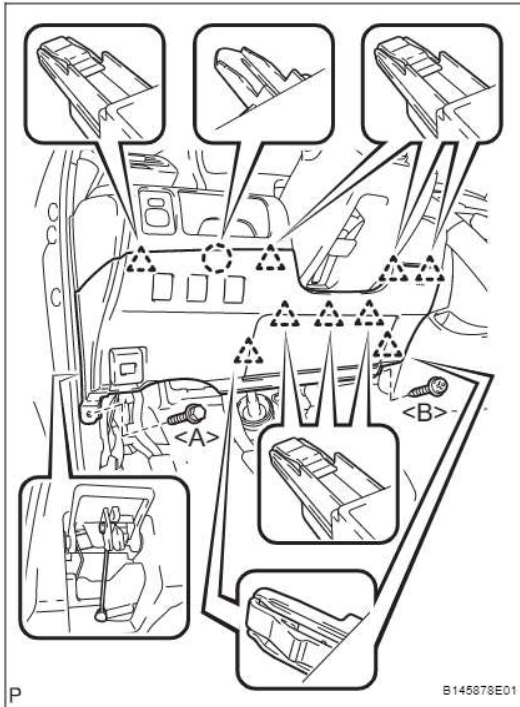
IP

IP-36

INSTRUMENT PANEL – INSTRUMENT PANEL SAFETY PAD

**37. INSTALL STEERING COLUMN COVER**

- (a) Engage the claw <a> and install the upper steering column cover.
- (b) Engage the 2 claws and install the lower steering column cover.
- (c) Install the steering column cover with the 2 screws <D>.

**38. INSTALL LOWER INSTRUMENT PANEL FINISH PANEL LH**

- (a) Install the air hose and connect each connector.
- (b) Engage the claw and the 9 clips.
- (c) Install the instrument panel finish panel LH with the screw and bolt <A>.

39. INSTALL COWL SIDE TRIM SUB-ASSEMBLY LH (See page [IR-41](#))**40. INSTALL FRONT DOOR SCUFF PLATE LH (See page [IR-41](#))****41. INSTALL STEERING WHEEL ASSEMBLY (See page [SR-42](#))****42. INSTALL STEERING PAD (See page [RS-346](#))****43. INSTALL LOWER NO. 3 STEERING WHEEL COVER (See page [RS-347](#))****44. INSTALL LOWER NO. 2 STEERING WHEEL COVER (See page [RS-347](#))****45. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL****46. INSPECT STEERING PAD (See page [RS-347](#))****47. INSPECT SRS WARNING LIGHT ([RS-1](#))****48. PERFORM INITIALIZATION NOTICE:**

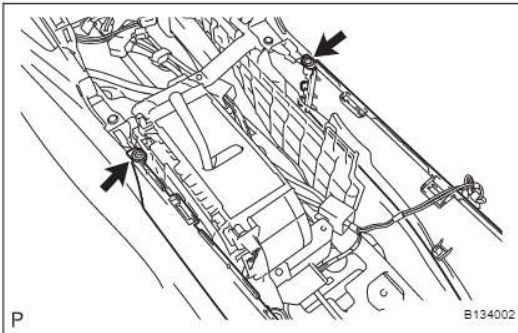
Some systems need initialization after reconnecting the cable to the negative battery terminal. (See page [IN-43](#))

IP-38

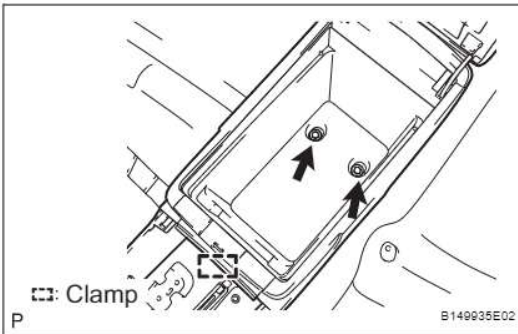
INSTRUMENT PANEL – REAR CONSOLE BOX

REMOVAL

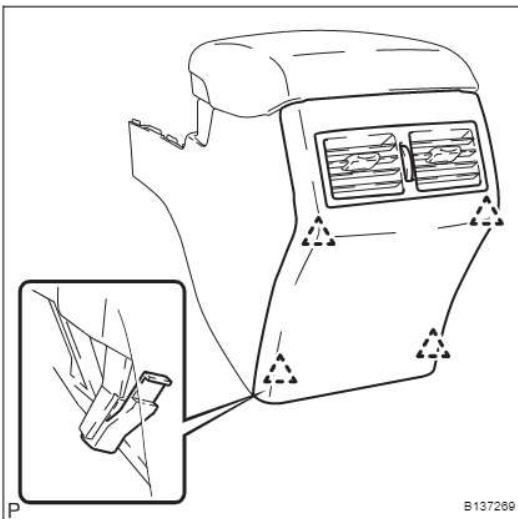
1. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY (See page [IP-14](#))
2. REMOVE NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH (See page [IP-14](#))
3. REMOVE NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH (See page [IP-14](#))
4. REMOVE FLOOR SHIFT POSITION INDICATOR HOUSING SUB-ASSEMBLY (See page [IP-15](#))
5. REMOVE UPPER CONSOLE REAR PANEL SUB-ASSEMBLY (See page [IP-15](#))
6. REMOVE CONSOLE BOX POCKET (See page [IP-17](#))
7. REMOVE CONSOLE BOX CARPET (See page [IP-17](#))
8. REMOVE CONSOLE BOX ASSEMBLY
 - (a) Remove the 2 screws.



- (b) Disengage the clamp.
- (c) Remove the 2 bolts and the console box assembly.

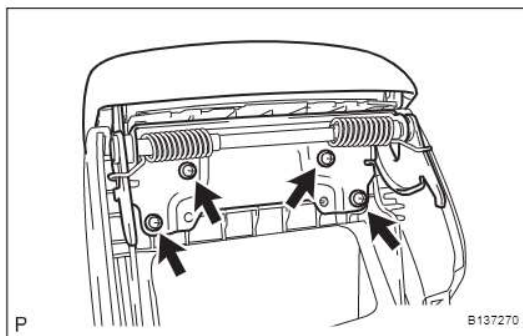
**DISASSEMBLY**

1. REMOVE REAR CONSOLE END PANEL SUB-ASSEMBLY
 - (a) Disengage the 4 clips and remove the rear console end panel sub-assembly.



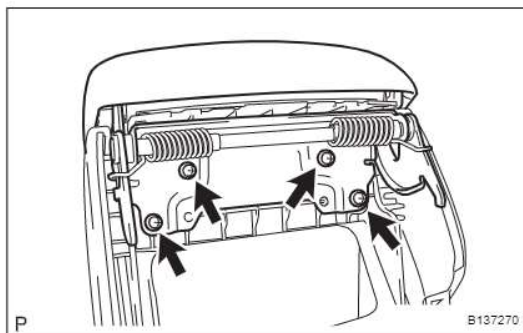
INSTRUMENT PANEL – REAR CONSOLE BOX

IP-39



2. REMOVE CONSOLE COMPARTMENT DOOR SUB-ASSEMBLY

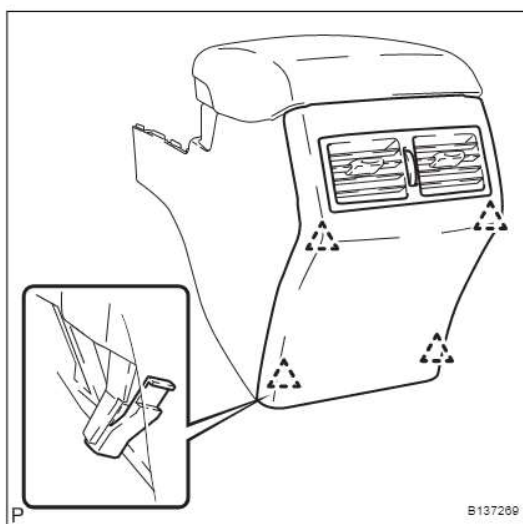
- (a) Remove the 4 screws and the console compartment door sub-assembly.



REASSEMBLY

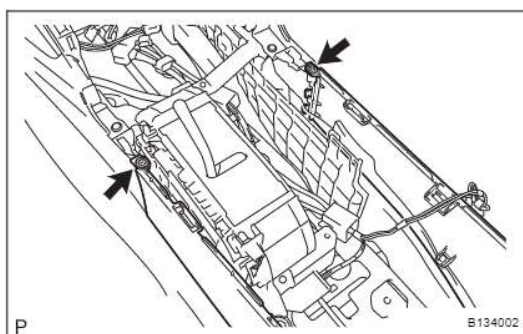
1. INSTALL CONSOLE COMPARTMENT DOOR SUB-ASSEMBLY

- (a) Install the console compartment door sub-assembly with the 4 screws.



2. INSTALL REAR CONSOLE END PANEL SUB-ASSEMBLY

- (a) Engage the 4 clips and install the rear console end panel sub-assembly.



INSTALLATION

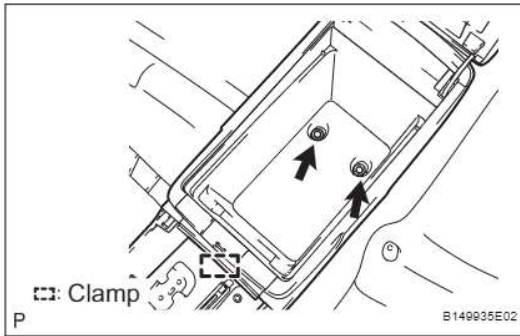
1. INSTALL CONSOLE BOX ASSEMBLY

- (a) Install the 2 screws.

IP

IP-40

INSTRUMENT PANEL – REAR CONSOLE BOX



(b) Install the console box assembly with the 2 bolts.

(c) Engage the clamp.

2. **INSTALL CONSOLE BOX CARPET** (See page [IP-30](#))
3. **INSTALL CONSOLE BOX POCKET** (See page [IP-30](#))
4. **INSTALL UPPER CONSOLE REAR PANEL SUB-ASSEMBLY** (See page [IP-31](#))
5. **INSTALL FLOOR SHIFT POSITION INDICATOR HOUSING SUB-ASSEMBLY** (See page [IP-31](#))
6. **INSTALL NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH** (See page [IP-32](#))
7. **INSTALL NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH** (See page [IP-32](#))
8. **INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY** (See page [IP-32](#))

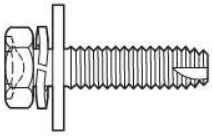
 
 
 
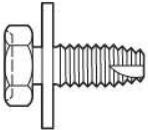
INSTRUMENT PANEL SAFETY PAD

PRECAUTION

1. PRECAUTION FOR VEHICLE WITH SRS AIRBAG AND SEAT BELT PRETENSIONER

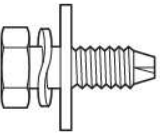
 
 
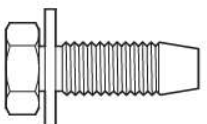
 
 
- (a) Some operations in this section may affect the SRS airbags. Prior to performing the corresponding operations, read the SRS airbag NOTICE.

2. TABLE OF BOLT, SCREW AND NUT

Code	Shape	Size	Parts No.
<A>		$\phi=6$ mm (0.24 in.) Length=20 mm (0.79 in.)	90119-06166
		$\phi=5$ mm (0.20 in.) Length=16 mm (0.63 in.)	93567-55016
<C>		$\phi=6$ mm (0.24 in.)	90179-06115
<D>		$\phi=5$ mm (0.20 in.) Length=15 mm (0.59 in.)	90164-50034
<E>		$\phi=5$ mm (0.20 in.) Length=20 mm (0.79 in.)	93567-15020
<F>		$\phi=5$ mm (0.20 in.) Length=16 mm (0.63 in.)	93567-15016
<G>		$\phi=6$ mm (0.24 in.) Length=16 mm (0.63 in.)	90119-06480

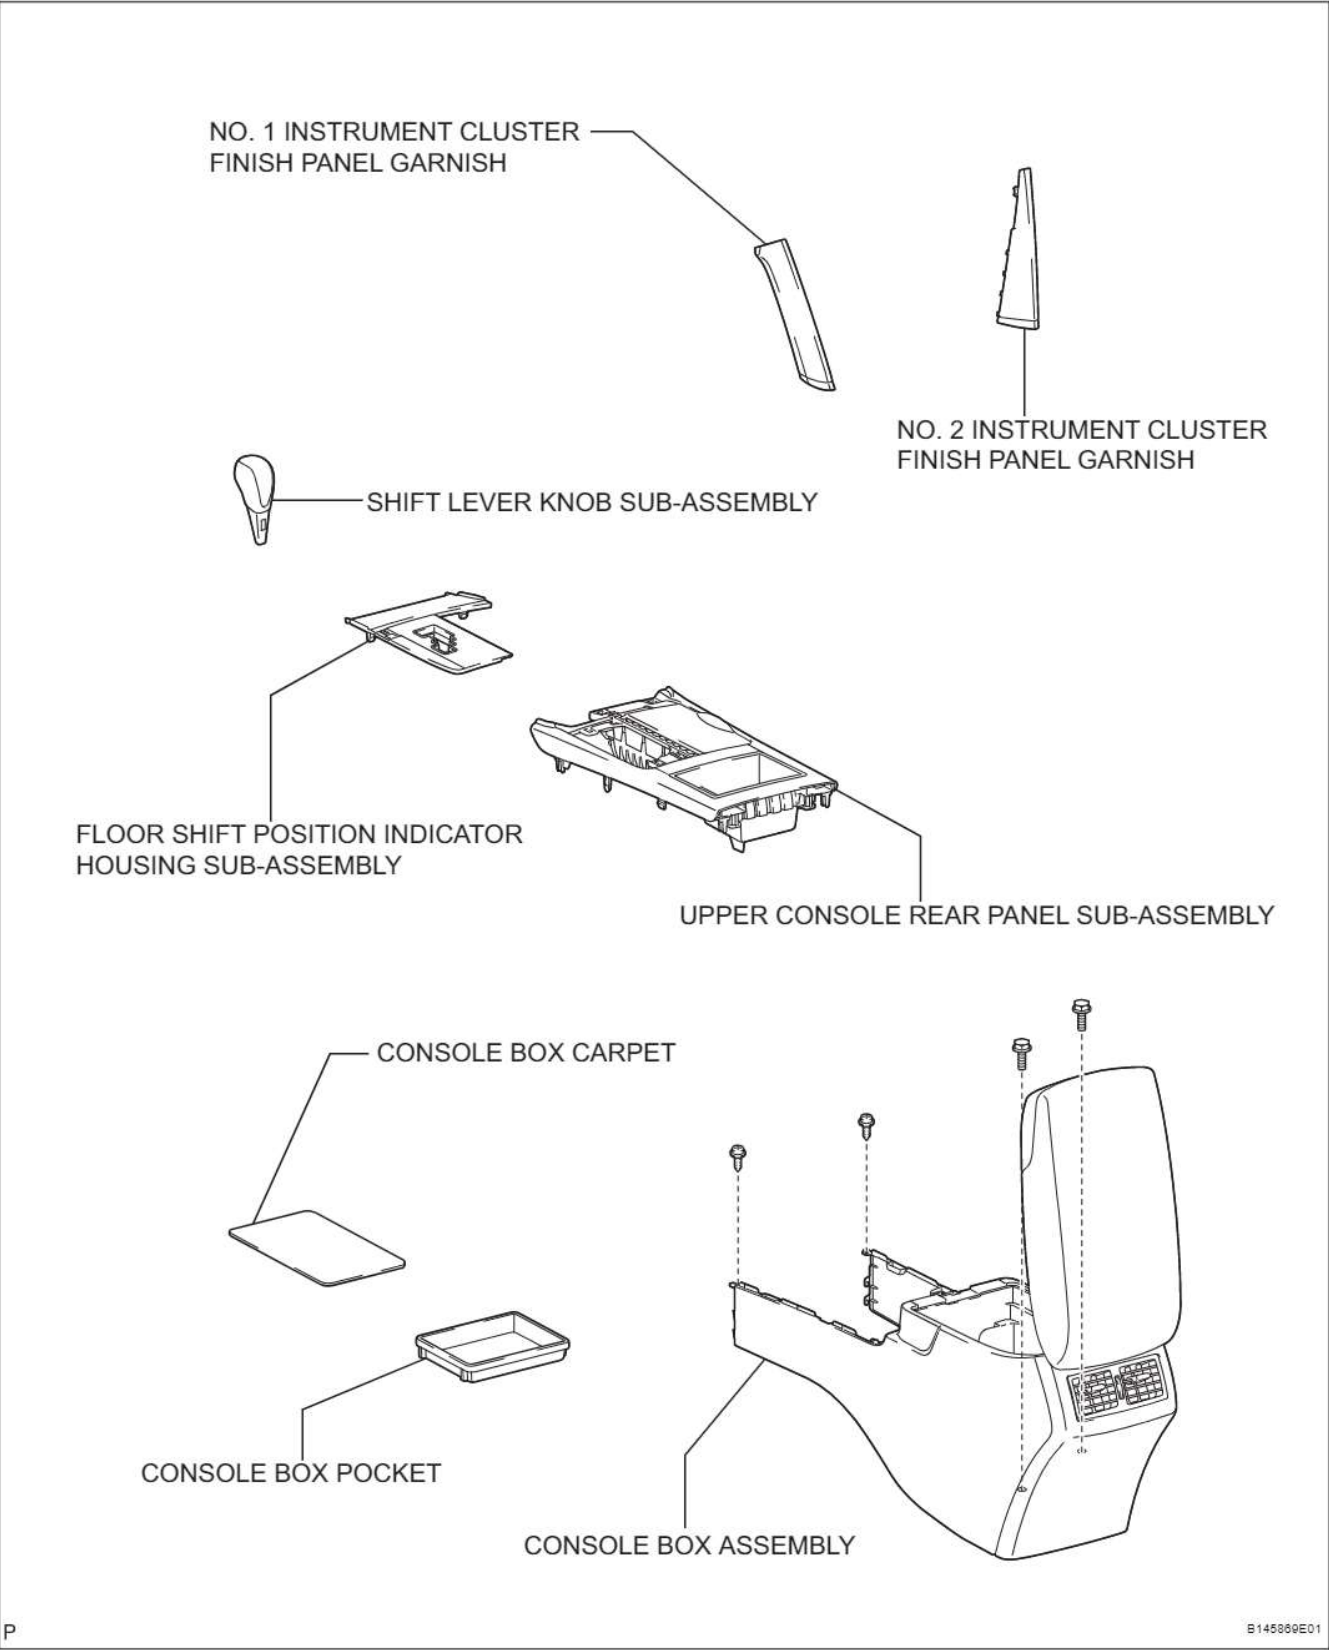
IP-2

INSTRUMENT PANEL – INSTRUMENT PANEL SAFETY PAD

Code	Shape	Size	Parts No.
<H>		$\phi=6$ mm (0.24 in.) Length=18 mm (0.71 in.)	90119-06428
<I>		$\phi=6$ mm (0.24 in.)	90179-06206
<J>		$\phi=6$ mm (0.24 in.) Length=15 mm (0.59 in.)	90119-06915
<K>		$\phi=8$ mm (0.31 in.) Length=20 mm (0.79 in.)	91633-60820
<L>		$\phi=5$ mm (0.20 in.) Length=16 mm (0.63 in.)	90159-50305
<M>		$\phi=5$ mm (0.20 in.) Length=16 mm (0.63 in.)	93565-15016
<N>		$\phi=6$ mm (0.24 in.) Length=20 mm (0.79 in.)	90159-60610

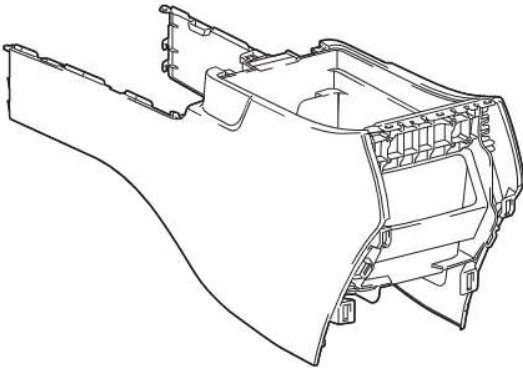
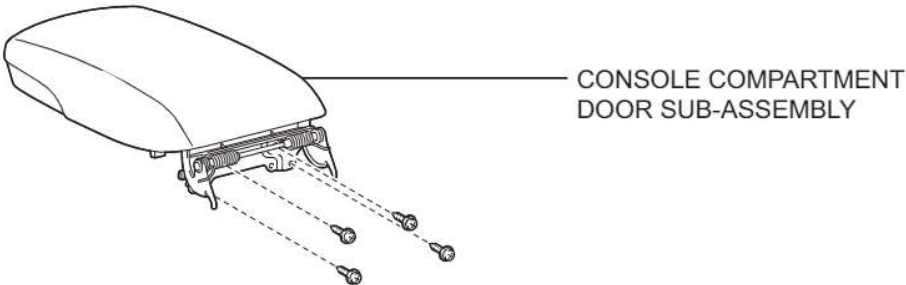
IP

REAR CONSOLE BOX
COMPONENTS



INSTRUMENT PANEL – REAR CONSOLE BOX

IP-37



REAR CONSOLE END PANEL SUB-ASSEMBLY



IP