

SECTION BCS

BODY CONTROL SYSTEM

CONTENTS

WITH INTELLIGENT KEY SYSTEM	TRANSIT MODE CONTROL SYSTEM : System Description15
PRECAUTION 5	DIAGNOSIS SYSTEM (BCM)17
PRECAUTIONS 5	COMMON ITEM17
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"5	COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)17
SYSTEM DESCRIPTION 6	DOOR LOCK18
COMPONENT PARTS 6	DOOR LOCK : CONSULT Function (BCM - DOOR LOCK)18
BODY CONTROL SYSTEM6	REAR DEFOGGER18
BODY CONTROL SYSTEM : Component Parts Location6	REAR DEFOGGER : CONSULT Function (BCM - REAR DEFOGGER)18
POWER CONSUMPTION CONTROL SYSTEM6	BUZZER19
POWER CONSUMPTION CONTROL SYSTEM : Component Parts Location6	BUZZER : CONSULT Function (BCM - BUZZER)....19
SYSTEM 7	INT LAMP19
BODY CONTROL SYSTEM7	INT LAMP : CONSULT Function (BCM - INT LAMP)19
BODY CONTROL SYSTEM : System Description.....7	HEADLAMP20
BODY CONTROL SYSTEM : Fail-safe8	HEADLAMP : CONSULT Function (BCM - HEAD LAMP)20
COMBINATION SWITCH READING SYSTEM9	WIPER21
COMBINATION SWITCH READING SYSTEM : System Description9	WIPER : CONSULT Function (BCM - WIPER)21
SIGNAL BUFFER SYSTEM12	FLASHER22
SIGNAL BUFFER SYSTEM : System Description...13	FLASHER : CONSULT Function (BCM - FLASHER)22
POWER CONSUMPTION CONTROL SYSTEM13	AIR CONDITIONER22
POWER CONSUMPTION CONTROL SYSTEM : System Description13	AIR CONDITIONER : CONSULT Function (BCM - AIR CONDITIONER)22
SHIPPING MODE CONTROL SYSTEM15	INTELLIGENT KEY22
SHIPPING MODE CONTROL SYSTEM : System Description15	INTELLIGENT KEY : CONSULT Function (BCM - INTELLIGENT KEY)22
TRANSIT MODE CONTROL SYSTEM15	COMB SW25

COMB SW : CONSULT Function (BCM - COMB SW)	25
BCM	25
BCM : CONSULT Function (BCM - BCM)	25
IMMU	26
IMMU : CONSULT Function (BCM - IMMU)	26
BATTERY SAVER	26
BATTERY SAVER : CONSULT Function (BCM - BATTERY SAVER)	26
THEFT ALM	27
THEFT ALM : CONSULT Function (BCM - THEFT)	27
RETAINED PWR	28
RETAINED PWR : CONSULT Function (BCM - RETAINED PWR)	28
SIGNAL BUFFER	28
SIGNAL BUFFER : CONSULT Function (BCM - SIGNAL BUFFER)	28
AIR PRESSURE MONITOR	28
AIR PRESSURE MONITOR : CONSULT Function (BCM - AIR PRESSURE MONITOR)	28
PANIC ALARM	29
PANIC ALARM : CONSULT Function (BCM - PANIC ALARM)	29
ECU DIAGNOSIS INFORMATION	30
BCM	30
Reference Value	30
Fail-safe	48
DTC Inspection Priority Chart	49
DTC Index	50
WIRING DIAGRAM	52
BCM	52
Wiring Diagram	52
BASIC INSPECTION	58
ADDITIONAL SERVICE WHEN REPLACING	
BCM	58
Description	58
Work Procedure	58
CONFIGURATION (BCM)	59
Description	59
Work Procedure	59
Configuration List	60
SHIPPING MODE CANCEL OPERATION	61
Work Procedure	61
TRANSIT MODE CANCEL OPERATION	62
Work Procedure	62

DTC/CIRCUIT DIAGNOSIS	63
U1000 CAN COMM CIRCUIT	63
Description	63
DTC Logic	63
Diagnosis Procedure	63
U1010 CONTROL UNIT (CAN)	64
DTC Logic	64
Diagnosis Procedure	64
U0415 VEHICLE SPEED	65
DTC Logic	65
Diagnosis Procedure	65
B2562 LOW VOLTAGE	66
DTC Logic	66
Diagnosis Procedure	66
POWER SUPPLY AND GROUND CIRCUIT	67
Diagnosis Procedure	67
COMBINATION SWITCH INPUT CIRCUIT	68
Diagnosis Procedure	68
COMBINATION SWITCH OUTPUT CIRCUIT ...	70
Diagnosis Procedure	70
SYMPTOM DIAGNOSIS	72
COMBINATION SWITCH SYSTEM SYMPTOMS	72
Symptom Table	72
NORMAL OPERATING CONDITION	73
Description	73
REMOVAL AND INSTALLATION	74
BCM (BODY CONTROL MODULE)	74
Removal and Installation	74
COMBINATION SWITCH	75
Removal and Installation	75
WITHOUT INTELLIGENT KEY SYSTEM	
PRECAUTION	76
PRECAUTIONS	76
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	76
SYSTEM DESCRIPTION	77
COMPONENT PARTS	77
BODY CONTROL SYSTEM	77
BODY CONTROL SYSTEM : Component Parts Location	77
POWER CONSUMPTION CONTROL SYSTEM	77

POWER CONSUMPTION CONTROL SYSTEM : Component Parts Location	77	AIR CONDITIONER : CONSULT Function (BCM - AIR CONDITIONER)	95
SYSTEM	78	COMB SW	96
BODY CONTROL SYSTEM	78	COMB SW : CONSULT Function (BCM - COMB SW)	96
BODY CONTROL SYSTEM : System Description...	78	BCM	96
BODY CONTROL SYSTEM : Fail-safe	79	BCM : CONSULT Function (BCM - BCM)	96
COMBINATION SWITCH READING SYSTEM	79	IMMU	96
COMBINATION SWITCH READING SYSTEM : System Description	79	IMMU : CONSULT Function (BCM - IMMU)	97
SIGNAL BUFFER	84	BATTERY SAVER	97
SIGNAL BUFFER : System Description	85	BATTERY SAVER : CONSULT Function (BCM - BATTERY SAVER)	97
POWER CONSUMPTION CONTROL SYSTEM	85	THEFT ALM	97
POWER CONSUMPTION CONTROL SYSTEM : System Description	85	THEFT ALM : CONSULT Function (BCM - THEFT)	98
SHIPPING MODE CONTROL SYSTEM	87	RETAINED PWR	98
SHIPPING MODE CONTROL SYSTEM : System Description	87	RETAINED PWR : CONSULT Function (BCM - RETAINED PWR)	98
TRANSIT MODE CONTROL SYSTEM	87	SIGNAL BUFFER	98
TRANSIT MODE CONTROL SYSTEM : System Description	88	SIGNAL BUFFER : CONSULT Function (BCM - SIGNAL BUFFER)	98
DIAGNOSIS SYSTEM (BCM)	89	AIR PRESSURE MONITOR	99
COMMON ITEM	89	AIR PRESSURE MONITOR : CONSULT Function (BCM - AIR PRESSURE MONITOR)	99
COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)	89	PANIC ALARM	99
DOOR LOCK	90	PANIC ALARM : CONSULT Function (BCM - PANIC ALARM)	100
DOOR LOCK : CONSULT Function (BCM - DOOR LOCK)	90	ECU DIAGNOSIS INFORMATION	101
REAR DEFOGGER	90	BCM	101
REAR DEFOGGER : CONSULT Function (BCM - REAR DEFOGGER)	91	Reference Value	101
BUZZER	91	Fail-safe	115
BUZZER : CONSULT Function (BCM - BUZZER)...	91	DTC Inspection Priority Chart	115
INT LAMP	91	DTC Index	115
INT LAMP : CONSULT Function (BCM - INT LAMP)	91	WIRING DIAGRAM	117
MULTI REMOTE ENT	92	BCM	117
MULTI REMOTE ENT : CONSULT Function (BCM - MULTI REMOTE ENT)	92	Wiring Diagram	117
HEADLAMP	93	BASIC INSPECTION	121
HEADLAMP : CONSULT Function (BCM - HEAD LAMP)	93	ADDITIONAL SERVICE WHEN REPLACING BCM	121
WIPER	94	Description	121
WIPER : CONSULT Function (BCM - WIPER)	94	Work Procedure	121
FLASHER	95	CONFIGURATION (BCM)	123
FLASHER : CONSULT Function (BCM - FLASH- ER)	95	Description	123
AIR CONDITIONER	95	Work Procedure	123
		Configuration List	124
		SHIPPING MODE CANCEL OPERATION	125

Work Procedure	125	COMBINATION SWITCH OUTPUT CIRCUIT ..	132
TRANSIT MODE CANCEL OPERATION	126	Diagnosis Procedure	132
Work Procedure	126	SYMPTOM DIAGNOSIS	134
DTC/CIRCUIT DIAGNOSIS	127	COMBINATION SWITCH SYSTEM SYMP-	
U1000 CAN COMM	127	TOMS	134
Description	127	Symptom Table	134
DTC Logic	127	NORMAL OPERATING CONDITION	136
Diagnosis Procedure	127	Description	136
U1010 CONTROL UNIT (CAN)	128	REMOVAL AND INSTALLATION	137
DTC Logic	128	BCM (BODY CONTROL MODULE)	137
Diagnosis Procedure	128	Removal and Installation	137
POWER SUPPLY AND GROUND CIRCUIT ..	129	COMBINATION SWITCH	138
Diagnosis Procedure	129	Removal and Installation	138
COMBINATION SWITCH INPUT CIRCUIT	130		
Diagnosis Procedure	130		

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000012432303

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

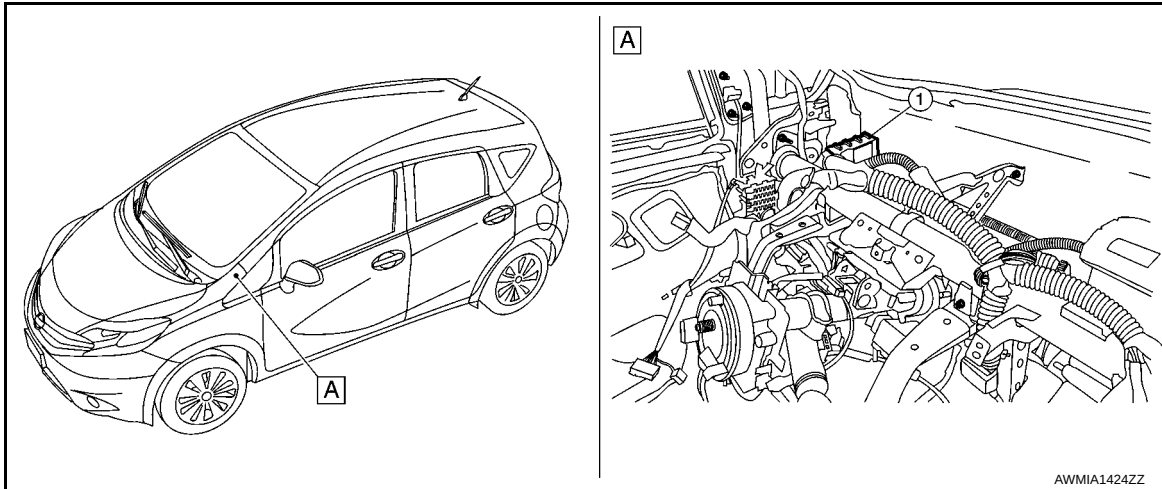
SYSTEM DESCRIPTION

COMPONENT PARTS

BODY CONTROL SYSTEM

BODY CONTROL SYSTEM : Component Parts Location

INFOID:0000000012432304




1. BCM

A. View with instrument panel removed

POWER CONSUMPTION CONTROL SYSTEM

POWER CONSUMPTION CONTROL SYSTEM : Component Parts Location

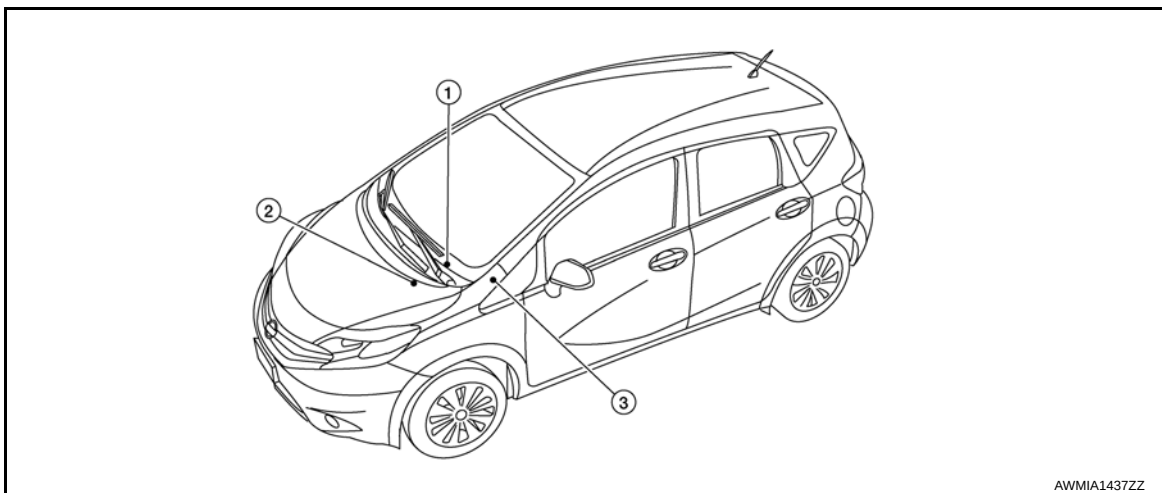INFOID:0000000012432305



1 Combination meter
Refer to [MWI-58, "METER SYSTEM : Component Parts Location"](#).

2 IPDM E/R
Refer to [PCS-4, "Component Parts Location"](#).

3 BCM
Refer to [BCS-6, "BODY CONTROL SYSTEM : Component Parts Location"](#).

SYSTEM

BODY CONTROL SYSTEM

BODY CONTROL SYSTEM : System Description

INFOID:0000000012432306

OUTLINE

- BCM (Body Control Module) controls the various electrical components. It inputs the information required to the control from CAN communication and the signal received from each switch and sensor.
- BCM has combination switch reading function for reading the operation status of combination switches (light, turn signal, wiper and washer) in addition to a function for controlling the operation of various electrical components. It also has the signal transmission function as the passed point of signal and the power saving control function that reduces the power consumption with the ignition switch OFF.
- BCM is equipped with the diagnosis function that performs the diagnosis with CONSULT and various settings.

BCM CONTROL FUNCTION LIST

System	Reference
Combination switch reading system	BCS-9, "COMBINATION SWITCH READING SYSTEM : System Description"
Signal buffer system	BCS-13, "SIGNAL BUFFER SYSTEM : System Description"
Power consumption control system	BCS-13, "POWER CONSUMPTION CONTROL SYSTEM : System Description"
Shipping mode control system	BCS-15, "SHIPPING MODE CONTROL SYSTEM : System Description"
Transit mode control system	BCS-15, "TRANSIT MODE CONTROL SYSTEM : System Description"
Headlamp system	EXL-8, "HEADLAMP SYSTEM : System Description"
Daytime running light system (if equipped)	EXL-9, "DAYTIME RUNNING LIGHT SYSTEM : System Description"
Turn signal and hazard warning lamp system	EXL-10, "TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM : System Description"
Parking, license plate and tail lamps system	EXL-11, "PARKING, LICENSE PLATE AND TAIL LAMP SYSTEM : System Description"
Front fog lamp system	EXL-10, "FRONT FOG LAMP SYSTEM : System Description"
Exterior lamp battery saver system	EXL-8, "HEADLAMP SYSTEM : System Description"
Interior room lamp control system	INL-7, "INTERIOR ROOM LAMP CONTROL SYSTEM : System Description"
Interior room lamp battery saver system	INL-7, "INTERIOR ROOM LAMP CONTROL SYSTEM : System Description"
Front wiper and washer system	WW-8, "FRONT WIPER AND WASHER SYSTEM : System Description"
Rear wiper and washer system	WW-10, "REAR WIPER AND WASHER SYSTEM : System Description"
Rear window defogger system	DEF-6, "System Description"
Manual air conditioning system	HAC-11, "System Description"
Warning chime system	WCS-7, "WARNING CHIME SYSTEM : System Description"
Power door lock system	DLK-20, "System Description"
Nissan vehicle immobilizer system (NVIS)	SEC-15, "NISSAN ANTI-THEFT SYSTEM : System Description"

SYSTEM

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

System		Reference
Intelligent Key system/engine start system	Door lock function	DLK-23, "DOOR LOCK FUNCTION : System Description"
	Warning function	DLK-27, "WARNING FUNCTION : System Description"
	Key reminder function	DLK-27, "KEY REMINDER FUNCTION : System Description"
	Engine start function	SEC-12, "INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION : System Description"
Power window system		PWC-8, "System Description"
RAP (retained accessory power) system		BCS-28, "RETAINED PWR : CONSULT Function (BCM - RETAINED PWR)"
TPMS (tire pressure monitoring system) (if equipped)		WT-8, "TIRE PRESSURE MONITORING SYSTEM : System Description"

BODY CONTROL SYSTEM : Fail-safe

INFOID:0000000012432307

BCM performs fail-safe control when the following DTCs are detected.

CONSULT Display	Fail-safe	Cancellation
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC
B2195: ANTI SCANNING	Inhibit engine cranking	Ignition switch ON → OFF
B2196: DONGLE NG	Inhibit engine cranking	Erase DTC
B2198: NATS ANTENNA AMP	Inhibit engine cranking	Erase DTC
B2557: VEHICLE SPEED	—	When the following CAN signal status (vehicle speed signal) becomes consistent - Vehicle speed signal (ABS) - Vehicle speed signal (Meter)
B2601: SHIFT P SIGNAL	—	500 ms after the following signal reception status becomes consistent - Park position switch signal - P range signal (CAN)
B2602: SHIFT P DIAG	—	5 seconds after the following BCM recognition conditions are fulfilled - Ignition switch is in the ON position - Park position switch signal: P position (push selector button) or except P position (9 – 16 V) - Vehicle speed: 4 km/h (2.5 MPH) or more
B2603: SHIFT POSITION	—	500 ms after any of the following BCM recognition conditions are fulfilled - Status 1 - Ignition switch is in the ON position - Park position switch signal: P position (push selector button) or except P position (9 – 16 V) - P/N position signal: Except P and N positions (0 – 1.5 V) - Status 2 - Ignition switch is in the ON position - Park position switch signal: P position (release selector button) (0 – 1.5 V) - P/N position signal: P or N positions (9 – 16 V)
B2604: SHIFT PN DIAG CAN	—	500 ms after any of the following BCM recognition conditions are fulfilled - Status 1 - Ignition switch is in the ON position - P/N position signal: P or N position (9 – 16 V) - Shift position signal (CAN): P or N position - Status 2 - Ignition switch is in the ON position - P/N position signal: Except P and N positions (0 – 1.5 V) - Shift position signal (CAN): Except P and N position

SYSTEM

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]


CONSULT Display	Fail-safe	Cancellation
B2605: SHIFT PN DIAG IPDM	—	500 ms after any of the following BCM recognition conditions are fulfilled • Status 1 - Ignition switch is in the ON position - P/N position signal: Except P and N positions (0 – 1.5 V) • Status 2 - Ignition switch is in the ON position - P/N position signal: P or N position (9 – 16 V)
B2608: STARTER RELAY	Inhibit engine cranking	500 ms after the following signal communication status becomes consistent • Starter motor relay control signal • Starter relay status signal (CAN)
B260F: ECM CAN COMM	Inhibit engine cranking	When any of the following conditions are fulfilled • Ignition switch changes to ACC • Receives engine status signal (CAN)
B26F1: IGN RELAY OFF	Inhibit engine cranking	When the following conditions are fulfilled • Ignition switch ON signal (CAN: Transmitted from BCM): ON • Ignition switch ON signal (CAN: Transmitted from IPDM E/R): ON
B26F2: IGN RELAY ON	Inhibit engine cranking	When the following conditions are fulfilled • Ignition switch ON signal (CAN: Transmitted from BCM): OFF • Ignition switch ON signal (CAN: Transmitted from IPDM E/R): OFF
B26F3: START CONT RLY ON	Inhibit engine cranking	When the following conditions are fulfilled • Starter control relay signal (CAN: Transmitted from BCM): OFF • Starter control relay signal (CAN: Transmitted from IPDM E/R): OFF
B26F4: START CONT RLY OFF	Inhibit engine cranking	When the following conditions are fulfilled • Starter control relay signal (CAN: Transmitted from BCM): ON • Starter control relay signal (CAN: Transmitted from IPDM E/R): ON
B26F7: BCM	Inhibit engine cranking by Intelligent Key system	When room antenna and luggage room antenna functions normally
U0415: VDC CAN CIR2	—	When vehicle speed signal (Meter) (CAN) is received normally

COMBINATION SWITCH READING SYSTEM

COMBINATION SWITCH READING SYSTEM : System Description

INFOID:000000012432308

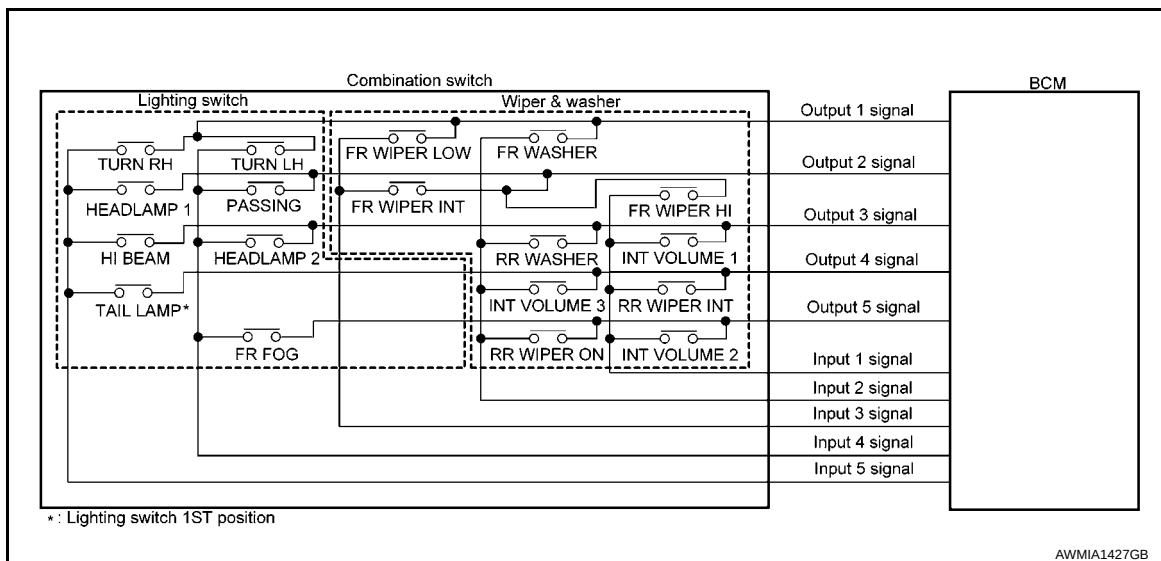SYSTEM DIAGRAM



OUTLINE

- BCM reads the status of the combination switch (light, turn signal, wiper and washer) and recognizes the status of each switch.

A
B
C
D
E
F
G
H
I
J
K
L

cardiagn.com

BCS

N
O
P

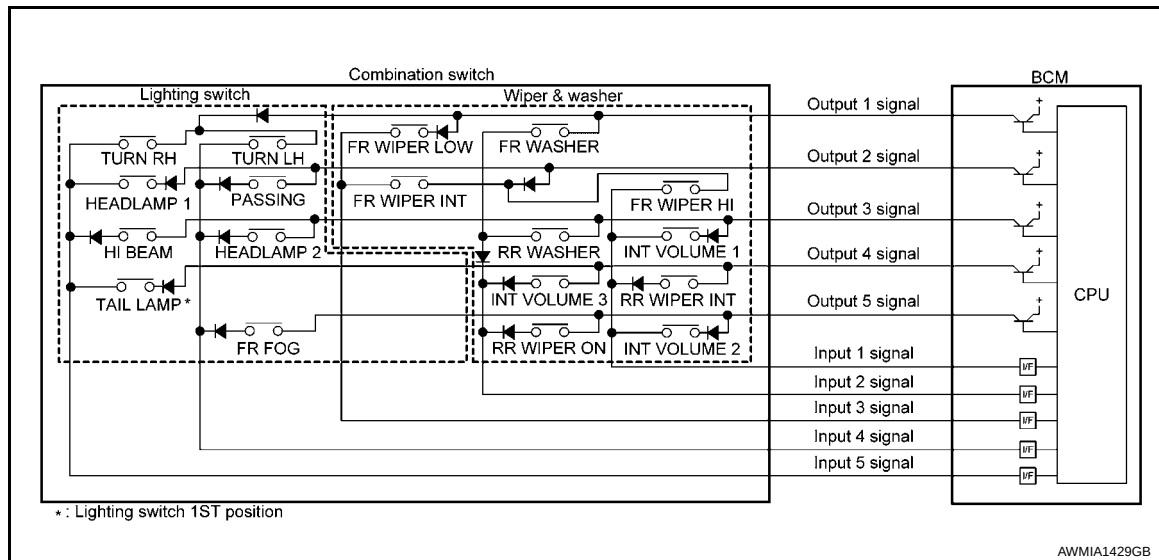
SYSTEM

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

- BCM has a combination of 5 output terminals (OUTPUT 1 - 5) and 5 input terminals (INPUT 1 - 5). It reads a maximum of 20 switch states.

COMBINATION SWITCH MATRIX




Combination switch INPUT-OUTPUT system list

System	INPUT 1	INPUT 2	INPUT 3	INPUT 4	INPUT 5
OUTPUT 1	—	FR WASHER	FR WIPER LOW	TURN LH	TURN RH
OUTPUT 2	FR WIPER HI	—	FR WIPER INT	PASSING	HEADLAMP 1
OUTPUT 3	INT VOLUME 1	RR WASHER	—	HEADLAMP 2	HI BEAM
OUTPUT 4	RR WIPER INT	INT VOLUME 3	—	—	TAIL LAMP
OUTPUT 5	INT VOLUME 2	RR WIPER ON	—	FR FOG	—

COMBINATION SWITCH READING FUNCTION

Description

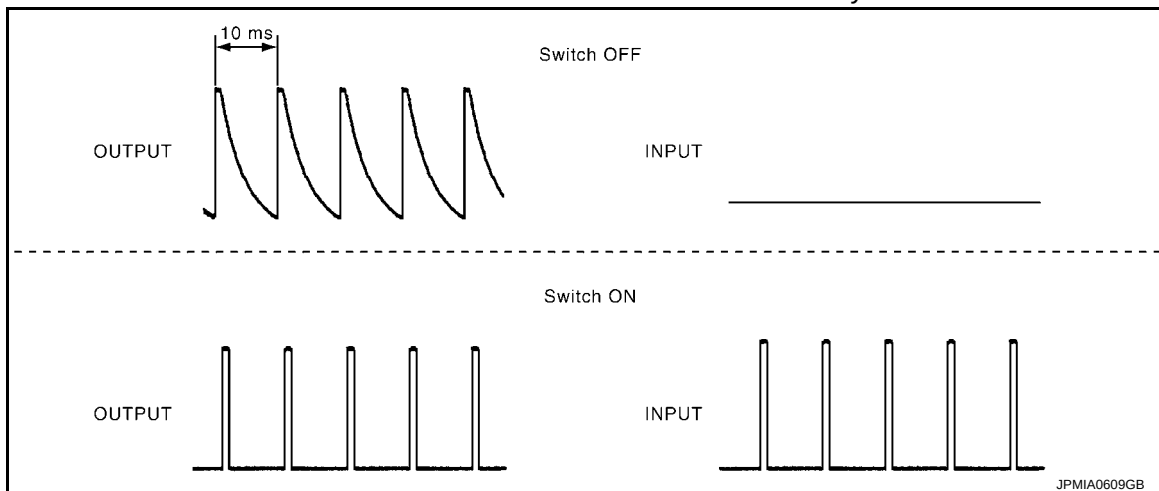- BCM reads the status of the combination switch at 10 ms intervals normally.



NOTE:

BCM reads the status of the combination switch at 60 ms intervals when BCM is controlled at low power consumption control mode.

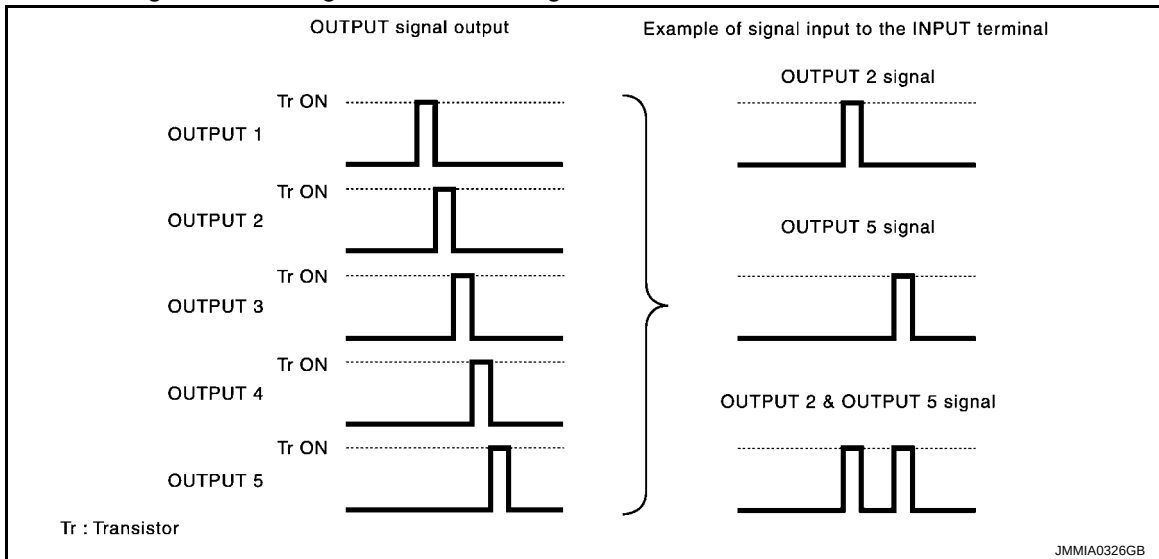
- BCM operates as follows and judges the status of the combination switch.
- It operates the transistor on OUTPUT side in the following order: OUTPUT 1 $\rightarrow$ 2 $\rightarrow$ 3 $\rightarrow$ 4 $\rightarrow$ 5, and outputs voltage waveform.
- The voltage waveform of OUTPUT corresponding to the formed circuit is input into the interface on INPUT side if any (1 or more) switches are ON.

SYSTEM

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

- It reads this change of the voltage as the status signal of the combination switch.




Operation Example

In the following operation example, the combination of the status signals of the combination switch is replaced as follows: INPUT 1 - 5 to "1 - 5" and OUTPUT 1 - 5 to "A - E".

Example 1: When a switch (TAIL LAMP) is turned ON

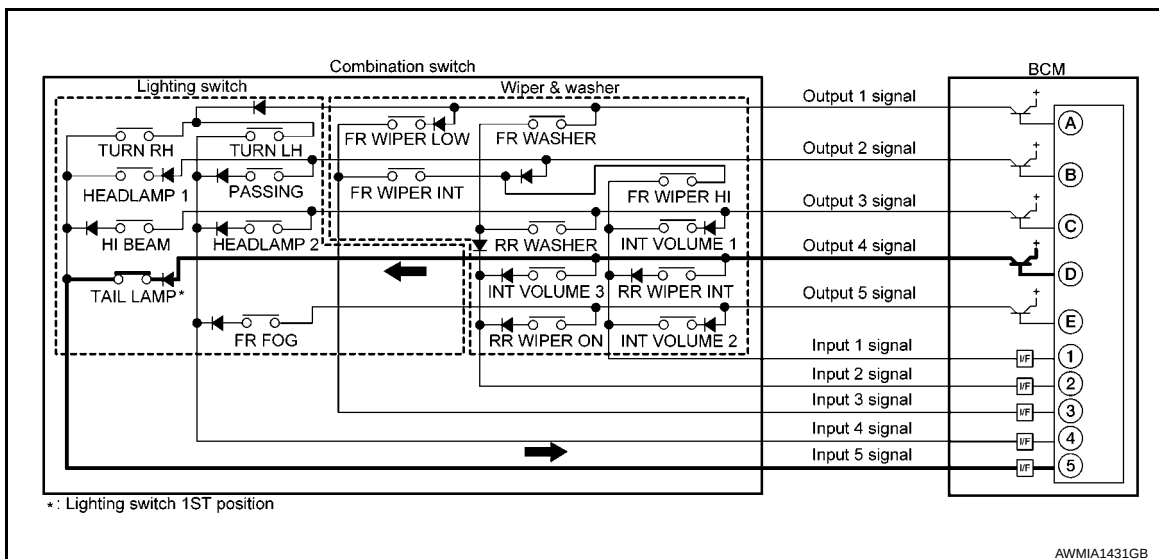- The circuit between OUTPUT 4 and INPUT 5 is formed when the TAIL LAMP switch is turned ON.



- BCM detects the combination switch status signal "5D" when the signal of OUTPUT 4 is input to INPUT 5.
- BCM judges that the TAIL LAMP switch is ON when the signal "5D" is detected.


Example 2: When some switches (TURN RH, TAIL LAMP) are turned ON

SYSTEM

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

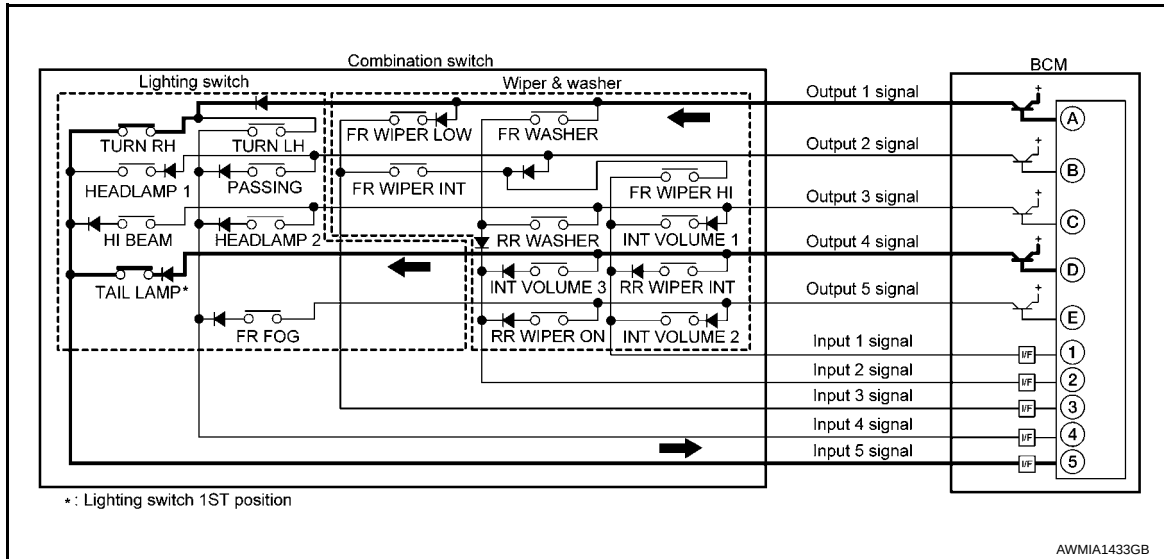- The circuits between OUTPUT 1 and INPUT 5 and between OUTPUT 4 and INPUT 5 are formed when the TURN RH switch and TAIL LAMP switch are turned ON.



- BCM detects the combination switch status signal "5AD" when the signals of OUTPUT 1 and OUTPUT 4 are input to INPUT 5.
- BCM judges that the TURN RH switch and TAIL LAMP switch are ON when the signal "5AD" is detected.

WIPER INTERMITTENT DIAL POSITION

BCM judges the wiper intermittent dial 1 - 7 by the status of INT VOLUME 1, 2 and 3 switches.

Wiper intermittent dial position	Switch status		
	INT VOLUME 1	INT VOLUME 2	INT VOLUME 3
1	ON	ON	ON
2	ON	ON	OFF
3	ON	OFF	OFF
4	OFF	OFF	OFF
5	OFF	OFF	ON
6	OFF	ON	ON
7	OFF	ON	OFF

NOTE:

For details of wiper intermittent dial position, refer to [WW-8. "FRONT WIPER AND WASHER SYSTEM : System Description"](#).

SIGNAL BUFFER SYSTEM

SYSTEM

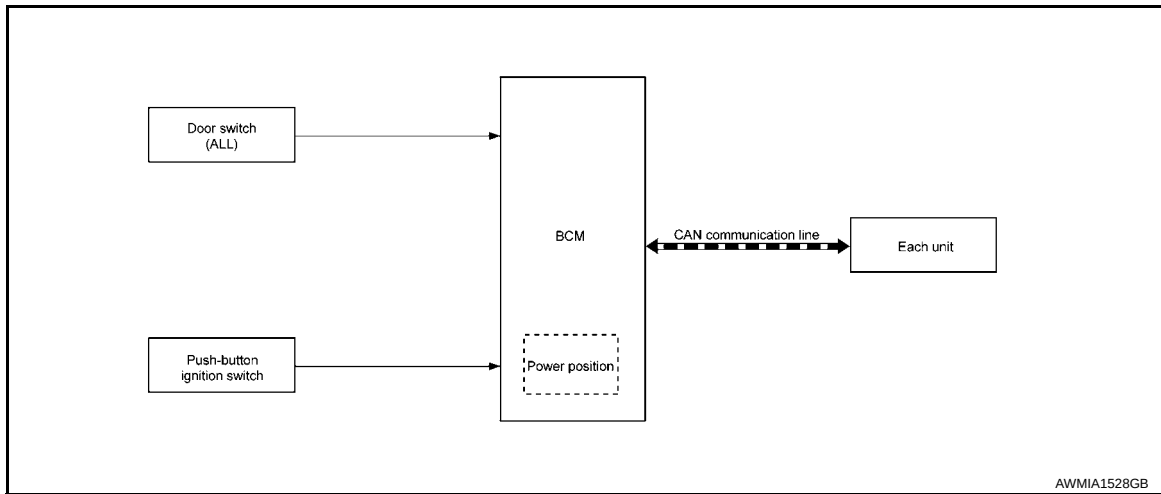
< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

SIGNAL BUFFER SYSTEM : System Description

INFOID:000000012432309

SYSTEM DIAGRAM



OUTLINE

BCM has the signal transmission function that outputs/transmits each input/received signal to each unit.

Signal transmission function list


Signal name	Input	Output	Description
- Ignition switch ON signal - Ignition switch signal	Engine switch (push switch)	IPDM E/R (CAN)	Inputs the push-button ignition switch (push switch) signal and transmits the ignition switch status judged with BCM via CAN communication.
Door switch signal	Any door switch	- Combination meter (CAN) - IPDM E/R (CAN)	Inputs the door switch signal and transmits it via CAN communication.

POWER CONSUMPTION CONTROL SYSTEM

POWER CONSUMPTION CONTROL SYSTEM : System Description

INFOID:000000012432310

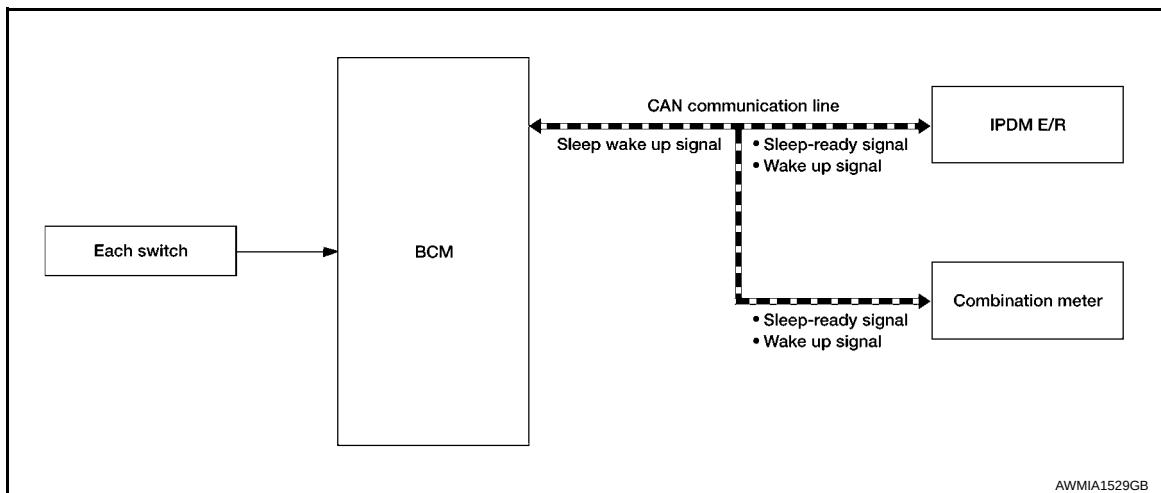SYSTEM DIAGRAM



OUTLINE

- BCM incorporates a power saving control function that reduces the power consumption according to the vehicle status.

A
B
C
D
E
F
G
H
I
J
K
L

BCS

N
O
P

SYSTEM

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

- BCM switches the status (control mode) by itself with the power saving control function. It performs the sleep request to each unit (IPDM E/R and combination meter) that operates with the ignition switch OFF.

Normal mode (wake-up)

- CAN communication is normally performed with other units
- Each control with BCM is operating properly

CAN communication sleep mode (CAN sleep)

- CAN transmission is stopped
- Control with BCM only is operating

Low power consumption mode (BCM sleep)

- Low power consumption control is active
- CAN transmission is stopped

LOW POWER CONSUMPTION CONTROL WITH BCM

BCM reduces the power consumption with the following operation in the low power consumption mode.

- The reading interval of each switch changes from 10 ms interval to 60 ms interval.

Sleep mode activation

- BCM receives the sleep-ready signal (ready) from IPDM E/R and combination meter via CAN communication.
- BCM transmits the sleep wake up signal (sleep) to each unit when all of the CAN sleep conditions are fulfilled.
- Each unit stops the transmission of CAN communication with the sleep wakeup signal. BCM is in CAN communication sleep mode.
- BCM is in the low power consumption mode and performs the low power consumption control when all of the BCM sleep conditions are fulfilled with CAN sleep condition.

Sleep condition

CAN sleep condition	BCM sleep condition
• Receiving the sleep-ready signal (ready) from all units • Ignition switch: OFF • Vehicle security system alarm: No operation • Warning lamp: Not operation • Intelligent Key system buzzer: No operation • Brake switch: OFF • Turn signal indicator lamp: No operation • Exterior lamp: OFF • Door lock status: No change • CONSULT communication status: No communication • Meter display signal: Non-transmission • Door switch status: No change • Rear window defogger: OFF	• Interior room lamp battery saver: Time out • RAP system: OFF • Push-button ignition switch (push switch) illumination: OFF • NATS: No operation • Remote keyless entry receiver communication status: No communication • Tire pressure monitoring system: Stop

Wake-up operation

- BCM transmits the sleep wake up signal (wake up) to each unit when any of the CAN wake-up conditions are fulfilled. It changes from the low power consumption mode or the CAN communication sleep mode to the normal mode.
- Each unit starts the transmission of CAN communication with the sleep wake up signal. In addition, the combination meter transmits the wake up signal to BCM via CAN communication to report the CAN communication start.


BCM wake-up condition	CAN wake-up condition
• Front door lock assembly LH (key cylinder switch): Lock or unlock • Door lock switch: OFF→ON • Door unlock switch: OFF→ON • Remote keyless entry receiver: Receiving valid keyfob	• Receiving the sleep-ready signal (Not-ready) from any units • Push-button ignition switch (push switch): OFF→ON • Hazard switch: OFF→ON • PASSING switch: OFF→ON, ON→OFF • TAIL LAMP switch: OFF→ON • Front door switch LH: OFF→ON, ON→OFF • Front door switch RH: OFF → ON, ON → OFF • Front outside handle LH request switch: OFF→ON • Front outside handle RH request switch: OFF→ON • Stop lamp switch 2 signal: ON • Remote keyless entry receiver: Receiving valid keyfob

SHIPPING MODE CONTROL SYSTEM

SHIPPING MODE CONTROL SYSTEM : System Description

INFOID:0000000012432311

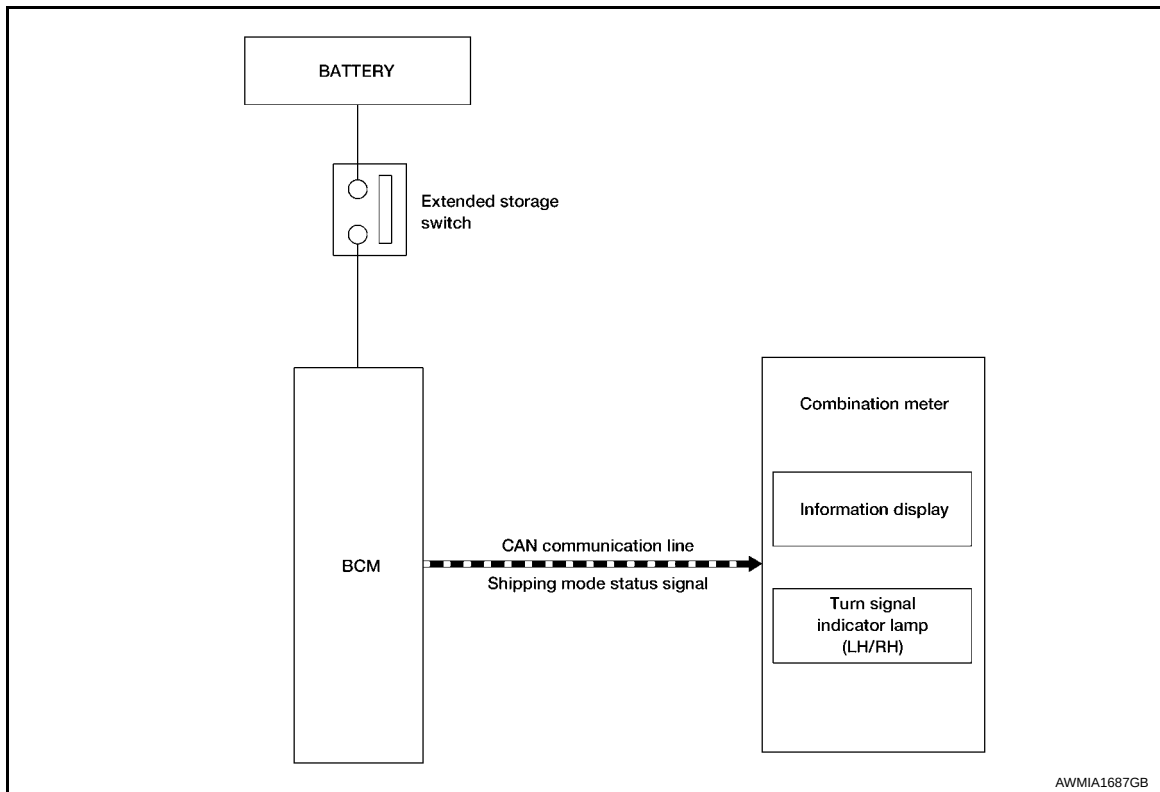SYSTEM DIAGRAM



DESCRIPTION

- The BCM switches the status (shipping mode or normal mode) by itself according to the extended storage switch condition, and transmits the shipping mode status signal to the combination meter and each unit via CAN communication.
- When the shipping mode function is activated, the control units will not detect DTCs.
- BCM control functions are limited in shipping mode. Refer to [BCS-73, "Description"](#).
- When the BCM is in shipping mode, a message may be shown in the combination meter or display.
- For shipping mode cancel operation refer to [BCS-61, "Work Procedure"](#).

TRANSIT MODE CONTROL SYSTEM

TRANSIT MODE CONTROL SYSTEM : System Description

INFOID:0000000012432312

BCS

DESCRIPTION

Transit mode is a BCM function that disables several electrical functions such as door lock/unlock by remote, back door open by remote, panic alarm, anti-theft alarm, etc. Vehicles are shipped with the BCM in transit mode to help prevent the battery from becoming discharged during dealer storage.

DETERMINING TRANSIT MODE STATUS

Use the table below to determine the transit mode status.

Status	Symptom
Transit Mode	When ignition switch is turned from OFF to ON, turn signal indicators will illuminate for 1 minute.
Normal Mode (not in transit mode)	When ignition switch is turned from OFF to ON, turn signal indicators stay OFF (do not illuminate).

CANCELING TRANSIT MODE

NOTE:

Transit mode can only be canceled. Once transit mode has been canceled, it cannot be activated again.

To cancel transit mode, refer to [BCS-62. "Work Procedure"](#).

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:0000000012432313

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Direct Diagnostic Mode	Description
ECU Identification	The BCM part number is displayed.
Self Diagnostic Result	The BCM self diagnostic results are displayed.
Data Monitor	The BCM input/output data is displayed in real time.
Active Test	The BCM activates outputs to test components.
Work support	The settings for BCM functions can be changed.
Configuration	- The vehicle specification can be read and saved. - The vehicle specification can be written when replacing BCM.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication is displayed.

SYSTEM APPLICATION

BCM can perform the following functions.

System	Sub System	Direct Diagnostic Mode						
		ECU Identification	Self Diagnostic Result	Data Monitor	Active Test	Work support	Configuration	CAN DIAG SUPPORT MNTR
Door lock	DOOR LOCK			x	x	x		
Rear window defogger	REAR DEFOGGER			x	x			
Warning chime	BUZZER			x	x			
Interior room lamp timer	INT LAMP			x	x	x		
Exterior lamp	HEAD LAMP			x	x	x		
Wiper and washer	WIPER			x	x	x		
Turn signal and hazard warning lamps	FLASHER			x	x	x		
Air conditioner	AIR CONDITIONER			x				
Intelligent Key system	INTELLIGENT KEY		x	x	x	x		
Combination switch	COMB SW			x				
BCM	BCM	x	x			x	x	x
Immobilizer	IMMU		x	x	x	x		
Interior room lamp battery saver	BATTERY SAVER			x	x	x		
Vehicle security system	THEFT ALM			x	x			
RAP system	RETAINED PWR			x				
Signal buffer system	SIGNAL BUFFER			x				
TPMS	AIR PRESSURE MONITOR		x	x	x	x		
Panic alarm system	PANIC ALARM				x			

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

DOOR LOCK

DOOR LOCK : CONSULT Function (BCM - DOOR LOCK)

INFOID:0000000012432314

DATA MONITOR

Monitor Item [Unit]	Description
REQ SW -DR [On/Off]	Indicates condition of door request switch LH.
REQ SW -AS [On/Off]	Indicates condition of door request switch RH.
REQ SW -BD/TR [On/Off]	Indicates condition of back door request switch.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
DOOR SW-BK [On/Off]	Indicates condition of back door switch.
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.
CDL UNLOCK SW [On/Off]	Indicates condition of unlock signal from door lock and unlock switch.
KEY CYL LK-SW [On/Off]	Indicates condition of lock signal from door key cylinder switch.
KEY CYL UN-SW [On/Off]	Indicates condition of unlock signal from door key cylinder switch.

ACTIVE TEST

Test Item	Description
DOOR LOCK	This test is able to check door lock operation [OTR ULK/AS UNLK/DR UNLK/ALL UNLK/ALL LOCK].

WORK SUPPORT

Support Item	Setting	Description
DOOR LOCK-UNLOCK SET	On*	Automatic door locks function ON.
	Off	Automatic door locks function OFF.
AUTOMATIC LOCK/UNLOCK SELECT	Lock/Unlock*	Automatic door locks function operates in lock and unlock.
	Lock Only	Automatic door locks function operates in lock only.
	Unlock Only	Automatic door locks function operates in unlock only.
	Off	Automatic door locks function OFF.
AUTOMATIC DOOR LOCK SELECT	P RANGE	Doors lock automatically when shifted out of Park (P).
	VH SPD*	Doors lock automatically when vehicle speed reaches 24 km/h (15 mph).
AUTOMATIC DOOR UNLOCK SELECT	MODE6*	Drivers door unlocks automatically when key is removed.
	MODE5	Drivers door unlocks automatically when shifted into Park (P).
	MODE4	Drivers door unlocks automatically when ignition is switched from ON to OFF.
	MODE3	Doors unlock automatically when key is removed.
	MODE2	Doors unlock automatically when shifted into Park (P).
	MODE1	Doors unlock automatically when ignition is switched from ON to OFF.

*: Initial setting

REAR DEFOGGER

REAR DEFOGGER : CONSULT Function (BCM - REAR DEFOGGER)

INFOID:0000000012432315

DATA MONITOR

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

Monitor Item [Unit]	Description
PUSH SW [On/Off]	Indicates condition of push-button ignition switch.
REAR DEF SW [On/Off]	Indicates condition of rear window defogger switch.

ACTIVE TEST

Test Item	Description
REAR DEFOGGER	This test is able to check rear window defogger operation [Off/On].

BUZZER

BUZZER : CONSULT Function (BCM - BUZZER)

INFOID:0000000012432316

DATA MONITOR

Monitor Item [Unit]	Description
PUSH SW [On/Off]	Indicates condition of push-button ignition switch.
UNLK SEN -DR [On/Off]	Indicates condition of door unlock sensor.
VEH SPEED 1 [km/h]	Indicates vehicle speed signal received from ABS on CAN communication line.
TAIL LAMP SW [On/Off]	Indicates condition of combination switch.
FR FOG SW [On/Off]	Indicates condition of front fog lamp switch.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.

ACTIVE TEST

Test Item	Description
ID REGIST WARNING	This test is able to check TPMS transmitter ID regist warning chime operation [On/Off].
SEAT BELT WARN TEST	This test is able to check seat belt warning chime operation [On/Off].
LIGHT WARN ALM	This test is able to check light warning chime operation [On/Off].

INT LAMP

INT LAMP : CONSULT Function (BCM - INT LAMP)

INFOID:0000000012432317

DATA MONITOR

Monitor Item [Unit]	Description
REQ SW -DR [On/Off]	Indicates condition of door request switch LH.
REQ SW -AS [On/Off]	Indicates condition of door request switch RH.
PUSH SW [On/Off]	Indicates condition of push-button ignition switch.
UNLK SEN -DR [On/Off]	Indicates condition of door unlock sensor.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
DOOR SW-BK [On/Off]	Indicates condition of back door switch.
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.
CDL UNLOCK SW [On/Off]	Indicates condition of unlock signal from door lock and unlock switch.
KEY CYL LK-SW [On/Off]	Indicates condition of lock signal from door key cylinder switch.
KEY CYL UN-SW [On/Off]	Indicates condition of unlock signal from door key cylinder switch.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

Monitor Item [Unit]	Description
RKE-LOCK [On/Off]	Indicates condition of lock signal from Intelligent Key.
RKE-UNLOCK [On/Off]	Indicates condition of unlock signal from Intelligent Key.

ACTIVE TEST

Test Item	Description
INT LAMP	This test is able to check interior room lamp operation [On/Off].

WORK SUPPORT

Support Item	Setting	Description
R LAMP TIMER LOGIC SET	MODE 2	Interior room lamp timer activates with all doors.
	MODE 1*	Interior room lamp timer activates with the driver door only.
SET I/L D-UNLCK INTCON	On*	Interior room lamp timer function ON.
	Off	Interior room lamp timer function OFF.
ROOM LAMP TIMER SET	MODE 4	Sets the interior room lamp ON time. (Timer operating time).
	30 sec.	
	MODE 3*	
	15 sec.	
	MODE 2	
	7.5 sec.	

*: Initial setting

HEADLAMP

HEADLAMP : CONSULT Function (BCM - HEAD LAMP)

INFOID:0000000012432318

DATA MONITOR

Monitor Item [Unit]	Description
PUSH SW [On/Off]	Indicates condition of push-button ignition switch.
ENGINE STATE [Stop/Stall/Crank/Run]	Indicates engine status received from ECM on CAN communication line.
VEH SPEED 1 [km/h]	Indicates vehicle speed signal received from ABS on CAN communication line.
TURN SIGNAL R [On/Off]	Indicates condition of combination switch.
TURN SIGNAL L [On/Off]	
TAIL LAMP SW [On/Off]	
HI BEAM SW [On/Off]	
HEAD LAMP SW 1 [On/Off]	
HEAD LAMP SW 2 [On/Off]	
PASSING SW [On/Off]	
FR FOG SW [On/Off]	
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
DOOR SW-BK [On/Off]	Indicates condition of back door switch.

ACTIVE TEST

Test Item	Description
FR FOG LAMP	This test is able to check front fog lamp operation [On/Off].
HEAD LAMP	This test is able to check head lamp operation [Hi/Low/Off].

DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

Test Item	Description
ILL DIM SIGNAL	This test is able to check head lamp illumination dimming operation [On/Off].
TAIL LAMP	This test is able to check tail lamp operation [On/Off].

WORK SUPPORT

Support Item	Setting	Description
BATTERY SAVER SET	On*	Exterior lamp battery saver function ON.
	Off	Exterior lamp battery saver function OFF.
ILL DELAY SET	MODE 8	180 sec.
	MODE 7	150 sec.
	MODE 6	120 sec.
	MODE 4	60 sec.
	MODE 5	90 sec.
	MODE 3	30 sec.
	MODE 2	OFF
	MODE 1*	45 sec.
		Sets delay timer function operation time (All doors closed).

*: Initial setting

WIPER

WIPER : CONSULT Function (BCM - WIPER)

INFOID:0000000012432319

DATA MONITOR

Monitor Item [Unit]	Description
PUSH SW [On/Off]	Indicates condition of push-button ignition switch.
VEH SPEED 1 [km/h]	Indicates vehicle speed signal received from ABS on CAN communication line.
FR WIPER HI [On/Off]	Indicates condition of wiper operation of combination switch.
FR WIPER LOW [On/Off]	
FR WASHER SW [On/Off]	
FR WIPER INT [On/Off]	
FR WIPER STOP [On/Off]	Indicates front wiper auto stop signal received from IPDM E/R on CAN communication line.
INT VOLUME [1 - 7]	Indicates condition of intermittent wiper operation of combination switch.
RR WIPER ON [On/Off]	Indicates condition of rear wiper operation of combination switch.
RR WIPER INT [On/Off]	
RR WASHER SW [On/Off]	
RR WIPER STOP [On/Off]	Indicates rear wiper motor auto stop input from rear wiper motor.

ACTIVE TEST

Test Item	Description
FR WIPER	This test is able to check front wiper operation [INT/Lo/Hi/Off].
RR WIPER	This test is able to check rear wiper operation [On/Off].

WORK SUPPORT

Support Item	Setting	Description
WIPER SPEED SETTING	On	Front wiper intermittent time linked with vehicle speed and wiper dial position.
	Off*	Front wiper intermittent time linked with wiper dial position.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

* : Initial setting

FLASHER

FLASHER : CONSULT Function (BCM - FLASHER)

INFOID:0000000012432320

DATA MONITOR

Monitor Item [Unit]	Description
REQ SW -DR [On/Off]	Indicates condition of door request switch LH.
REQ SW -AS [On/Off]	Indicates condition of door request switch RH.
PUSH SW [On/Off]	Indicates condition of push-button ignition switch.
TURN SIGNAL R [On/Off]	Indicates condition of turn signal function of combination switch.
TURN SIGNAL L [On/Off]	
HAZARD SW [On/Off]	Indicates condition of hazard switch.
RKE-LOCK [On/Off]	Indicates condition of lock signal from Intelligent Key.
RKE-UNLOCK [On/Off]	Indicates condition of unlock signal from Intelligent Key.
RKE-PANIC [On/Off]	Indicates condition of panic alarm signal from Intelligent Key.

ACTIVE TEST

Test Item	Description
FLASHER	This test is able to check turn signal lamp operation [Off/LH/RH].

WORK SUPPORT

Support Item	Setting	Description
HAZARD ANSWER BACK	Lock/Unlock*	Hazard warning lamp activation when doors are locked or unlocked with Intelligent Key.
	Unlock Only	Hazard warning lamp activation when doors are unlocked with Intelligent Key.
	Lock Only	Hazard warning lamp activation when doors are locked with Intelligent Key.
	Off	No hazard warning lamp activation when doors are locked or unlocked with Intelligent Key.

* : Initial setting

AIR CONDITIONER

AIR CONDITIONER : CONSULT Function (BCM - AIR CONDITIONER)

INFOID:0000000012432321

DATA MONITOR

Monitor Item [Unit]	Description
FAN ON SIG [On/Off]	Indicates condition of fan switch.
AIR COND SW [On/Off]	Indicates condition of A/C switch.

INTELLIGENT KEY

INTELLIGENT KEY : CONSULT Function (BCM - INTELLIGENT KEY)

INFOID:0000000012432322

SELF DIAGNOSTIC RESULT

Refer to [BCS-50, "DTC Index"](#).

DATA MONITOR

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

Monitor Item [Unit]	Main	Description
REQ SW -DR [On/Off]	×	Indicates condition of door request switch LH.
REQ SW -AS [On/Off]	×	Indicates condition of door request switch RH.
REQ SW -BD/TR [On/Off]	×	Indicates condition of back door request switch.
PUSH SW [On/Off]		Indicates condition of push-button ignition switch.
CLUCH SW [On/Off]	×	Indicates condition of clutch interlock switch.
BRAKE SW 1 [On/Off]	×	Indicates condition of brake switch.
BRAKE SW 2 [On/Off]		Indicates condition of brake switch.
DETE/CANCL SW [On/Off]	×	Indicates condition of P (park) position.
SFT PN/N SW [On/Off]	×	Indicates condition of P (park) or N (neutral) position.
UNLK SEN -DR [On/Off]	×	Indicates condition of door unlock sensor.
PUSH SW -IPDM [On/Off]		Indicates condition of push-button ignition switch received from IPDM E/R on CAN communication line.
IGN RLY1 -F/B [On/Off]		Indicates condition of ignition relay 1 received from IPDM E/R on CAN communication line.
DETE SW -IPDM [On/Off]		Indicates condition of detent switch received from TCM on CAN communication line.
SFT PN -IPDM [On/Off]		Indicates condition of P (park) or N (neutral) position from TCM on CAN communication line.
SFT P -MET [On/Off]		Indicates condition of P (park) position from TCM on CAN communication line.
SFT N -MET [On/Off]		Indicates condition of N (neutral) position from IPDM E/R on CAN communication line.
ENGINE STATE [Stop/Start/Crank/Run]	×	Indicates condition of engine state from ECM on CAN communication line.
VEH SPEED 1 [mph/km/h]	×	Indicates condition of vehicle speed signal received from ABS on CAN communication line.
VEH SPEED 2 [mph/km/h]	×	Indicates condition of vehicle speed signal received from combination meter on CAN communication line.
DOOR STAT -DR [LOCK/READY/UNLK]	×	Indicates condition of driver side door status.
DOOR STAT -AS [LOCK/READY/UNLK]	×	Indicates condition of passenger side door status.
ID OK FLAG [Set/Reset]		Indicates condition of Intelligent Key ID.
PRMT ENG STRT [Set/Reset]		Indicates condition of engine start possibility.
RKE OPE COUN1 [0-19]	×	When remote keyless entry receiver receives the signal transmitted while operating on Intelligent Key, the numerical value start changing.
RKE OPE COUN2 [0-19]	×	When remote keyless entry receiver receives the signal transmitted while operating on Intelligent Key, the numerical value start changing.
RKE-LOCK [On/Off]		Indicates condition of lock signal from Intelligent Key.
RKE-UNLOCK [On/Off]		Indicates condition of unlock signal from Intelligent Key.
RKE-PANIC [On/Off]		Indicates condition of panic signal from Intelligent Key.
RKE-MODE CHG [On/Off]		Indicates condition of mode change signal from Intelligent Key.

ACTIVE TEST

Test Item	Description
INSIDE BUZZER	This test is able to check combination meter warning chime operation [Take Out/Knob/Key/Off].
LCD	This test is able to check combination meter display information [Off/LK WN/OUTKEY/NO KY/BATT/INSRT/SFT P/ROTAT/ID NG/B&P I/B&P N].
BATTERY SAVER	This test is able to check battery saver operation [On/Off].
ENGINE SW ILLUMI	This test is able to check push-button ignition switch START indicator operation [On/Off].

DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

Test Item	Description
PUSH SWITCH INDICATOR	This test is able to check push-button ignition switch indicator operation [On/Off].
INT LAMP	This test is able to check interior room lamp operation [On/Off].
INDICATOR	This test is able to check combination meter warning lamp operation [KEY ON/KEY IND/Off].
FLASHER	This test is able to check hazard lamp operation [LH/RH/Off].
OUTSIDE BUZZER	This test is able to check Intelligent Key warning buzzer operation [On/Off].
HORN	This test is able to check horn operation [On].
P RANGE	This test is able to check CVT shift selector illumination operation [On/Off].

WORK SUPPORT

Support Item	Setting	Description
LOCK/UNLOCK BY I-KEY	On*	Door lock/unlock function from Intelligent Key ON.
	Off	Door lock/unlock function from Intelligent Key OFF.
ANTI KEY LOCK IN FUNCTI	On*	Anti lock out setting ON.
	Off	Anti lock out setting OFF.
ANS BACK I-KEY UNLOCK	Off	No buzzer reminder when doors are unlocked with request switch.
	On*	Buzzer reminder when doors are unlocked with request switch.
ANS BACK I-KEY LOCK	Horn Chirp	Horn chirp reminder when doors are locked with request switch.
	Buzzer*	Buzzer reminder when doors are locked with request switch.
	Off	No reminder when doors are locked with request switch.
HORN WITH KEYLESS LOCK	Off	Horn chirp reminder when doors are locked with Intelligent Key.
	On*	No horn chirp reminder when doors are locked with Intelligent Key.
HAZARD ANSWER BACK	Lock/Unlock*	Hazard warning lamp activation when doors are locked/unlocked with Intelligent Key or request switch.
	Unlock Only	Hazard warning lamp activation when doors are unlocked with Intelligent Key or request switch.
	Lock Only	Hazard warning lamp activation when doors are locked with Intelligent Key or request switch.
	Off	No hazard warning lamp activation when doors are locked/unlocked with Intelligent Key or request switch.
INSIDE ANT DIAGNOSIS	—	This function allows inside key antenna self-diagnosis.
CONFIRM KEY FOB ID	—	Intelligent Key ID code can be checked.
SHORT CRANKING OUTPUT	Start	70 msec
		100 msec
		200 msec
	End	—
PANIC ALARM SET	MODE 3	1.5 sec
	MODE 2	OFF
	MODE 1*	0.5 sec
LO- BATT OF KEY FOB WARN	On*	Intelligent Key low battery warning ON.
	Off	Intelligent Key low battery warning OFF.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

Support Item	Setting		Description
AUTO LOCK SET	MODE7	5 min	Auto door lock time setting.
	MODE6	4 min	
	MODE5	3 min	
	MODE4	2 min	
	MODE3*	1 min	
	MODE2	30 sec	
	MODE1	Off	

*: Initial Setting

COMB SW

COMB SW : CONSULT Function (BCM - COMB SW)

INFOID:0000000012432323

DATA MONITOR

Monitor Item [Unit]	Description
FR WIPER HI [On/Off]	Indicates condition of wiper operation of combination switch.
FR WIPER LOW [On/Off]	
FR WASHER SW [On/Off]	
FR WIPER INT [On/Off]	
INT VOLUME [1 - 7]	Indicates condition of intermittent wiper operation of combination switch.
RR WIPER ON [On/Off]	Indicates condition of rear wiper operation of combination switch.
RR WIPER INT [On/Off]	
RR WASHER SW [On/Off]	
TURN SIGNAL R [On/Off]	Indicates condition of right turn signal operation of combination switch.
TURN SIGNAL L [On/Off]	Indicates condition of left turn signal operation of combination switch.
TAIL LAMP SW [On/Off]	Indicates condition of tail lamp switch operation of combination switch.
HI BEAM SW [On/Off]	Indicates condition of Hi beam switch operation of combination switch.
HEAD LAMP SW 1 [On/Off]	Indicates condition of head lamp switch 1 operation of combination switch.
HEAD LAMP SW 2 [On/Off]	Indicates condition of head lamp switch 2 operation of combination switch.
PASSING SW [On/Off]	Indicates condition of passing switch operation of combination switch.
FR FOG SW [On/Off]	Indicates condition of front fog lamp switch operation of combination switch.

BCM

BCM : CONSULT Function (BCM - BCM)

INFOID:0000000012432324

ECU IDENTIFICATION

The BCM part number is displayed.

SELF DIAGNOSTIC RESULT

Refer to [BCS-50, "DTC Index"](#).

WORK SUPPORT

Support Item	Setting	Description
RESET SETTING VALUE	Reset	Returns BCM to initial value in factory shipment.
	Cancel	Cancels the reset function.

CONFIGURATION

Refer to [BCS-59, "Description"](#).

DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

CAN DIAG SUPPORT MNTR

Refer to [LAN-13, "CAN Diagnostic Support Monitor"](#).

IMMU

IMMU : CONSULT Function (BCM - IMMU)

INFOID:000000012432325

SELF DIAGNOSTIC RESULT

Refer to [BCS-50, "DTC Index"](#).

DATA MONITOR

Monitor Item [Unit]	Description
CONFIRM ID ALL [Yet/DONE]	Switches to DONE when an Intelligent Key is registered.
CONFIRM ID4 [Yet/DONE]	
CONFIRM ID3 [Yet/DONE]	
CONFIRM ID2 [Yet/DONE]	
CONFIRM ID1 [Yet/DONE]	
TP 4 [Yet/DONE]	DONE indicates the number of Intelligent Key ID which has been registered.
TP 3 [Yet/DONE]	
TP 2 [Yet/DONE]	
TP 1 [Yet/DONE]	
PUSH SW [On/Off]	Indicates condition of push-button ignition switch.

ACTIVE TEST

Test Item	Description
THEFT IND	This test is able to check security indicator operation [On/Off].

WORK SUPPORT

Support Item	Setting	Description
CONFIRM DONGLE ID	—	Dongle ID code can be read.

BATTERY SAVER

BATTERY SAVER : CONSULT Function (BCM - BATTERY SAVER)

INFOID:000000012432326

DATA MONITOR

Monitor Item [Unit]	Description
REQ SW -DR [On/Off]	Indicates condition of door request switch LH.
REQ SW -AS [On/Off]	Indicates condition of door request switch RH.
PUSH SW [On/Off]	Indicates condition push-button ignition switch.
UNLK SEN -DR [On/Off]	Indicates condition of door unlock sensor.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
DOOR SW-BK [On/Off]	Indicates condition of back door switch.
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.
CDL UNLOCK SW [On/Off]	Indicates condition of unlock signal from door lock and unlock switch.
KEY CYL LK-SW [On/Off]	Indicates condition of lock signal from door key cylinder switch.

DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

Monitor Item [Unit]	Description
KEY CYL UN-SW [On/Off]	Indicates condition of unlock signal from door key cylinder switch.
RKE-LOCK [On/Off]	Indicates condition of lock signal from Intelligent Key.
RKE-UNLOCK [On/Off]	Indicates condition of unlock signal from Intelligent Key.

ACTIVE TEST

Test item	Description
BATTERY SAVER	This test is able to check battery saver operation [On/Off].

WORK SUPPORT

Support Item	Setting		Description
BATTERY SAVER SET	ON*		Exterior lamp battery saver function ON.
	OFF		Exterior lamp battery saver function OFF.
ROOM LAMP TIMER SET	MODE 3*	10 min.	Sets interior room lamp battery saver timer operating time.
	MODE 2	60 min.	
	MODE 1	15 min.	

*: Initial setting

THEFT ALM

THEFT ALM : CONSULT Function (BCM - THEFT)

INFOID:0000000012432327

DATA MONITOR

Monitored Item	Description
REQ SW -DR [On/Off]	Indicates condition of door request switch LH.
REQ SW -AS [On/Off]	Indicates condition of door request switch RH.
REQ SW -BD/TR [On/Off]	Indicates condition of back door request switch.
PUSH SW [On/Off]	Indicates condition of push-button ignition switch.
UNLK SEN -DR [On/Off]	Indicates condition of door unlock sensor.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
DOOR SW-BK [On/Off]	Indicates condition of back door switch.
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.
CDL UNLOCK SW [On/Off]	Indicates condition of unlock signal from door lock and unlock switch.
KEY CYL LK-SW [On/Off]	Indicates condition of lock signal from door key cylinder switch.
KEY CYL UN-SW [On/Off]	Indicates condition of unlock signal from door key cylinder switch.
RKE-LOCK [On/Off]	Indicates condition of lock signal from Intelligent Key.
RKE-UNLOCK [On/Off]	Indicates condition of unlock signal from Intelligent Key.

ACTIVE TEST

Test Item	Description
VEHICLE SECURITY HORN	This test is able to check vehicle security horn operation [On].
FLASHER	This test is able to check turn signal lamp operation [LH/RH/Off].
THEFT IND	This test is able to check security indicator lamp operation [On/Off].
HEAD LAMP(HI)	This test is able to check vehicle security lamp operation [On].

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

RETAINED PWR

RETAINED PWR : CONSULT Function (BCM - RETAINED PWR)

INFOID:0000000012432328

DATA MONITOR

Monitor Item [Unit]	Description
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.

SIGNAL BUFFER

SIGNAL BUFFER : CONSULT Function (BCM - SIGNAL BUFFER)

INFOID:0000000012432329

DATA MONITOR

Monitor Item [Unit]	Description
PUSH SW [On/Off]	Indicates condition of the push-button ignition switch.

AIR PRESSURE MONITOR

AIR PRESSURE MONITOR : CONSULT Function (BCM - AIR PRESSURE MONITOR)

INFOID:0000000012432330

NOTE:

The Signal Tech II Tool [– (J-50190)] can be used to perform the following functions. Refer to the Signal Tech II User Guide for additional information.

- Activate and display TPMS transmitter IDs
- Display tire pressure reported by the TPMS transmitter
- Read TPMS DTCs
- Register TPMS transmitter IDs
- Check Intelligent Key relative signal strength
- Confirm vehicle Intelligent Key antenna signal strength

SELF DIAGNOSTIC RESULT

NOTE:

Before performing self diagnostic result, be sure to register the ID, or else the actual malfunction may be different from that displayed on CONSULT.

Refer to [BCS-50, "DTC Index"](#).

DATA MONITOR

Monitor Item [Unit]	Description
AIR PRESS FL [kPa, kg/cm ² or Psi]	Indicates air pressure of front LH tire.
AIR PRESS FR [kPa, kg/cm ² or Psi]	Indicates air pressure of front RH tire.
AIR PRESS RR [kPa, kg/cm ² or Psi]	Indicates air pressure of rear RH tire.
AIR PRESS RL [kPa, kg/cm ² or Psi]	Indicates air pressure of rear LH tire.
ID REGST FL1 [Done/Yet]	Indicates ID registration status of front LH transmitter.
ID REGST FR1 [Done/Yet]	Indicates ID registration status of front RH transmitter.
ID REGST RR1 [Done/Yet]	Indicates ID registration status of rear RH transmitter.
ID REGST RL1 [Done/Yet]	Indicates ID registration status of rear LH transmitter.
WARNING LAMP [Off/On]	Indicates condition of low tire pressure warning lamp in combination meter.
BUZZER [Off/On]	Indicates condition of buzzer in combination meter.

ACTIVE TEST

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

Test Item	Description
HORN	This test is able to check horn operation [On].
FLASHER	This test is able to check turn signal lamp operation [Off/LH/RH].
ID REGIST WARNING	This test is able to check ID registration warning chime operation [On/Off].
WARNING LAMP	This test is able to check tire pressure warning lamp operation [On/Off].

WORK SUPPORT

Support Item	Description
ID READ	The registered ID number is displayed.
ID REGIST	Refer to WT-22. "Description" .

PANIC ALARM

PANIC ALARM : CONSULT Function (BCM - PANIC ALARM)

INFOID:0000000012432331

ACTIVE TEST

Test Item	Description
VEHICLE SECURITY HORN	This test is able to check panic alarm operation [On].
HEAD LAMP (HI)	This test is able to check head lamp HI operation [On].

ECU DIAGNOSIS INFORMATION

BCM

Reference Value

INFOID:000000012432332

NOTE:

The Signal Tech II Tool [– (J-50190)] can be used to perform the following functions. Refer to the Signal Tech II User Guide for additional information.

- Activate and display TPMS transmitter IDs
- Display tire pressure reported by the TPMS transmitter
- Read TPMS DTCs
- Register TPMS transmitter IDs
- Check Intelligent Key relative signal strength
- Confirm vehicle Intelligent Key antenna signal strength

VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition	Value/Status
AIR COND SW	A/C switch OFF	Off
	A/C switch ON	On
AIR PRESS FL	Front left tire air pressure value	kPa, kg/cm ² , psi
AIR PRESS FR	Front right tire air pressure value	kPa, kg/cm ² , psi
AIR PRESS RL	Rear left tire air pressure value	kPa, kg/cm ² , psi
AIR PRESS RR	Rear right tire air pressure value	kPa, kg/cm ² , psi
BRAKE SW 1	When the brake pedal is released	On
	When the brake pedal is depressed	Off
BRAKE SW2	Brake pedal released	Off
	Brake pedal depressed	On
BUZZER	Buzzer in combination meter OFF	Off
	Buzzer in combination meter ON	On
CDL LOCK SW	Door lock/unlock switch does not operate	Off
	Press door lock/unlock switch to the LOCK side	On
CDL UNLOCK SW	Door lock/unlock switch does not operate	Off
	Press door lock/unlock switch to the UNLOCK side	On
CLUCH SW	Clutch pedal depressed	On
	Clutch pedal released	Off
CONFIRM ID ALL	The key ID does not match any key ID registered to BCM.	Yet
	The key ID matches any key ID registered to BCM.	DONE
CONFIRM ID4	The key ID does not match the fourth key ID registered to BCM.	Yet
	The key ID matches the fourth key ID registered to BCM.	DONE
CONFIRM ID3	The key ID does not match the third key ID registered to BCM.	Yet
	The key ID matches the third key ID registered to BCM.	DONE
CONFIRM ID2	The key ID does not match the second key ID registered to BCM.	Yet
	The key ID matches the second key ID registered to BCM.	DONE
CONFIRM ID1	The key ID does not match the first key ID registered to BCM.	Yet
	The key ID matches the first key ID registered to BCM.	DONE
DETE SW -IPDM	When selector lever is in P position	Off
	When selector lever is in any position other than P	On

BCM

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

Monitor Item	Condition	Value/Status
DETE/CANCL SW	When selector lever is in P position	Off
	When selector lever is in any position other than P	On
DOOR STAT-AS	Passenger door LOCK status	LOCK
	Passenger door UNLOCK status	UNLK
	Wait with selective UNLOCK operation (5 seconds)	READY
DOOR STAT-DR	Driver door LOCK status	LOCK
	Driver door UNLOCK status	UNLK
	Wait with selective UNLOCK operation (5 seconds)	READY
DOOR SW-AS	Front door RH closed	Off
	Front door RH opened	On
DOOR SW-BK	Back door closed	Off
	Back door opened	On
DOOR SW-DR	Front door LH closed	Off
	Front door LH opened	On
DOOR SW-RL	Rear door LH closed	Off
	Rear door LH opened	On
DOOR SW-RR	Rear door RH closed	Off
	Rear door RH opened	On
ENGINE STATE	Engine stopped	Stop
	While the engine stalls	Stall
	At engine cranking	Crank
	Engine running	Run
FAN ON SIG	Blower motor fan switch OFF	Off
	Blower motor fan switch ON	On
FR FOG SW	Front fog lamp switch OFF	Off
	Front fog lamp switch ON	On
FR WASHER SW	Front washer switch OFF	Off
	Front washer switch ON	On
FR WIPER LOW	Front wiper switch OFF	Off
	Front wiper switch LO	On
FR WIPER HI	Front wiper switch OFF	Off
	Front wiper switch HI	On
FR WIPER INT	Front wiper switch OFF	Off
	Front wiper switch INT	On
FR WIPER STOP	Any position other than front wiper stop position	Off
	Front wiper stop position	On
HAZARD SW	When hazard switch is not pressed	Off
	When hazard switch is pressed	On
HEAD LAMP SW 1	Headlamp switch OFF	Off
	Headlamp switch 1st	On
HEAD LAMP SW 2	Headlamp switch OFF	Off
	Headlamp switch 1st	On
HI BEAM SW	High beam switch OFF	Off
	High beam switch HI	On

BCM

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

Monitor Item	Condition	Value/Status
ID OK FLAG	Ignition switch ACC or ON	Reset
	Ignition switch OFF	Set
ID REGST FL1	ID registration of front left tire incomplete	YET
	ID registration of front left tire complete	DONE
ID REGST FR1	ID registration of front right tire incomplete	YET
	ID registration of front right tire complete	DONE
ID REGST RL1	ID registration of rear left tire incomplete	YET
	ID registration of rear left tire complete	DONE
ID REGST RR1	ID registration of rear right tire incomplete	YET
	ID registration of rear right tire complete	DONE
IGN RLY1 F/B	Ignition switch OFF or ACC	Off
	Ignition switch ON	On
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	1 - 7
KEY CYL LK-SW	Door key cylinder LOCK position	On
	Door key cylinder other than LOCK position	Off
KEY CYL UN-SW	Door key cylinder UNLOCK position	On
	Door key cylinder other than UNLOCK position	Off
PASSING SW	Other than lighting switch PASS	Off
	Lighting switch PASS	On
PRMT ENG STRT	When the engine start is prohibited	Reset
	When the engine start is permitted	Set
PUSH SW	Return ignition switch to LOCK position	Off
	Press ignition switch	On
PUSH SW-IPDM	When engine switch (push switch) is not pressed	Off
	When engine switch (push switch) is pressed	On
REAR DEF SW	Rear window defogger switch OFF	Off
	Rear window defogger switch ON	On
REQ SW -AS	When passenger door request switch is not pressed	Off
	When passenger door request switch is pressed	On
REQ SW -BD/TR	When back door request switch is not pressed	Off
	When back door request switch is pressed	On
REQ SW -DR	When driver door request switch is not pressed	Off
	When driver door request switch is pressed	On
RKE-LOCK	When LOCK button of Intelligent Key is not pressed	Off
	When LOCK button of Intelligent Key is pressed	On
RKE-MODE CHG	When LOCK/UNLOCK button of Intelligent Key is not pressed and held simultaneously	Off
	When LOCK/UNLOCK button of Intelligent Key is pressed and held simultaneously	On
RKE OPE COUN1	Operation frequency of Intelligent Key	0-19
RKE OPE COUN2	Operation frequency of Intelligent Key	0-19
RKE-PANIC	When PANIC button of Intelligent Key is not pressed	Off
	When PANIC button of Intelligent Key is pressed	On
RKE-UNLOCK	When UNLOCK button of Intelligent Key is not pressed	Off
	When UNLOCK button of Intelligent Key is pressed	On


BCM

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

Monitor Item	Condition	Value/Status
RR WASHER SW	Rear washer switch OFF	Off
	Rear washer switch ON	On
RR WIPER INT	Rear wiper switch OFF	Off
	Rear wiper switch INT	On
RR WIPER ON	Rear wiper switch OFF	Off
	Rear wiper switch ON	On
RR WIPER STOP	Any position other than rear wiper stop position	Off
	Rear wiper stop position	On
SFT N-MET	When selector lever is in any position other than N	Off
	When selector lever is in N position	On
SFT P-MET	When selector lever is in any position other than P	Off
	When selector lever is in P position	On
SFT PN -IPDM	When selector lever is in any position other than P or N	Off
	When selector lever is in P or N position	On
SFT PN/N SW	When selector lever is in any position other than P or N	Off
	When selector lever is in P or N position	On
TAIL LAMP SW	Other than lighting switch 1ST and 2ND	Off
	Lighting switch 1ST or 2ND	On
TP 4	The ID of fourth key is not registered to BCM	Yet
	The ID of fourth key is registered to BCM	DONE
TP 3	The ID of third key is not registered to BCM	Yet
	The ID of third key is registered to BCM	DONE
TP 2	The ID of second key is not registered to BCM	Yet
	The ID of second key is registered to BCM	DONE
TP 1	The ID of first key is not registered to BCM	Yet
	The ID of first key is registered to BCM	DONE
TURN SIGNAL L	Turn signal switch OFF	Off
	Turn signal switch LH	On
TURN SIGNAL R	Turn signal switch OFF	Off
	Turn signal switch RH	On
UNLK SEN-DR	Driver door UNLOCK status	Off
	Driver door LOCK status	On
VEH SPEED 1	While driving, equivalent to speedometer reading	mph, km/h
VEH SPEED 2	While driving, equivalent to speedometer reading	mph, km/h
WARNING LAMP	Low tire pressure warning lamp in combination meter OFF	Off
	Low tire pressure warning lamp in combination meter ON	On

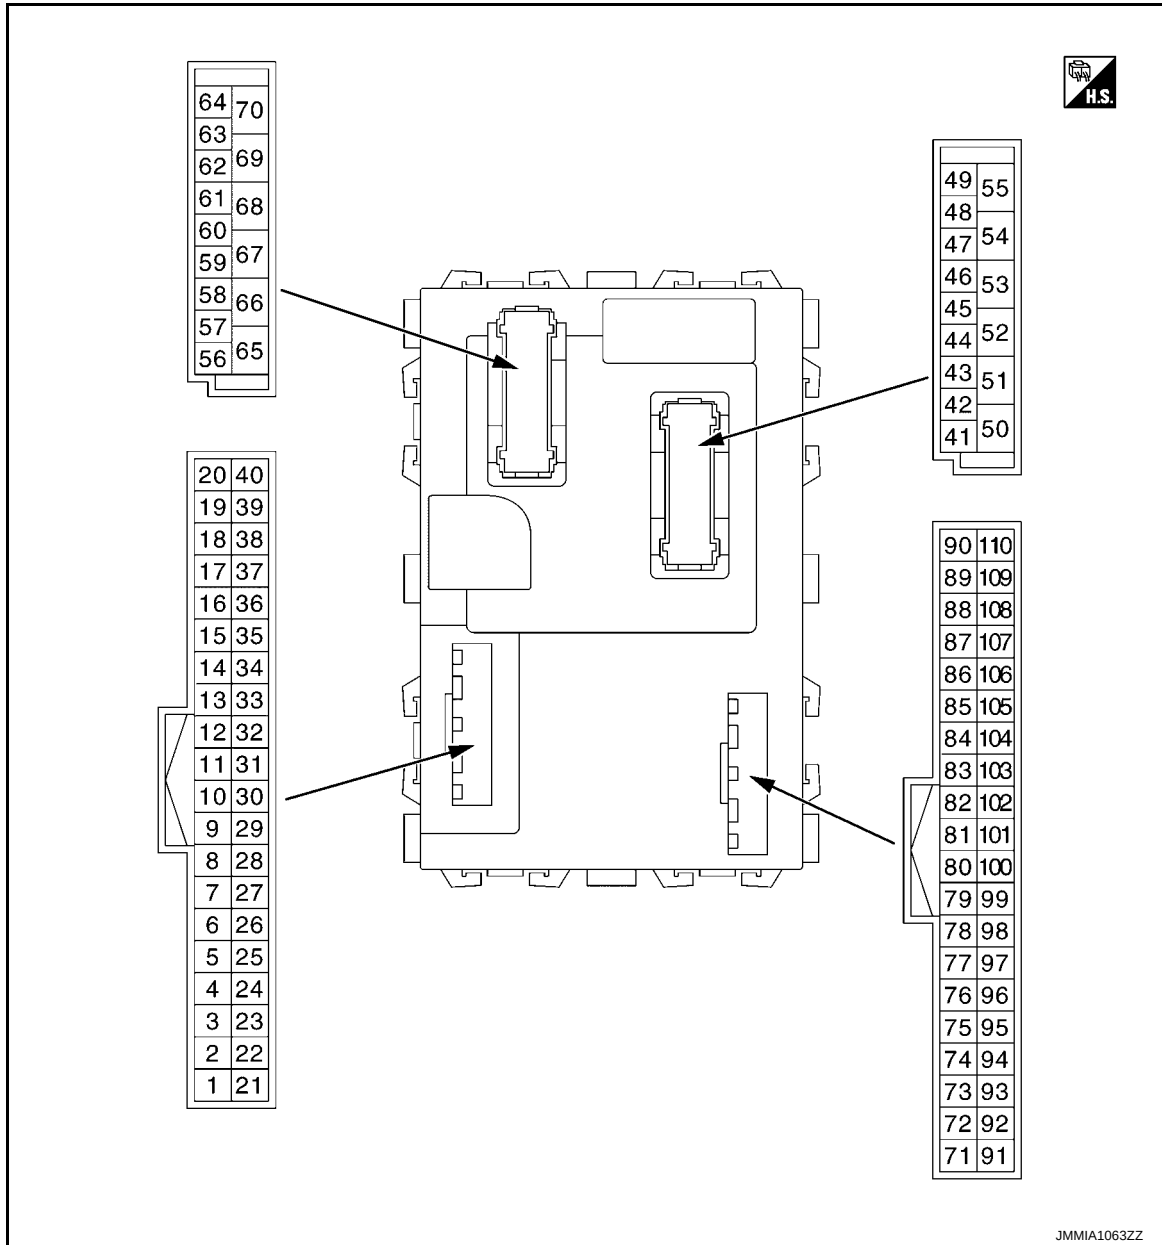TERMINAL LAYOUT








PHYSICAL VALUES

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
1 (GR)	Ground	Rear window defogger relay control	Input	Rear window defogger switch	OFF	Battery voltage
					ON	0 – 0.5 V
2 (BR)	Ground	INPUT 5 signal	Input	Combination switch	OFF	0 V
					TURN RH	
					HEADLAMP 1	
					HI BEAM	
					TAIL LAMP	
						1.0 V

BCM

< ECU DIAGNOSIS INFORMATION >

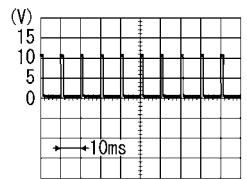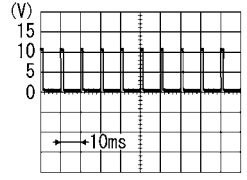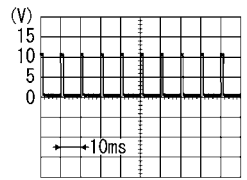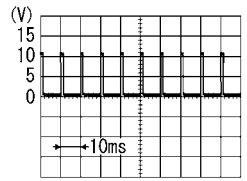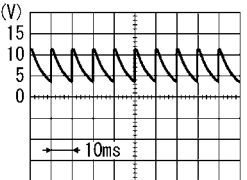[WITH INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
3 (Y)	Ground	INPUT 4 signal	Input	Combination switch	OFF	0 V
					TURN LH	
					PASSING	
					HEADLAMP 2	
					FR FOG	
						1.0 V
4 (L)	Ground	INPUT 3 signal	Input	Combination switch	OFF	0 V
					FR WIPER LO	
					FR WIPER INT (any intermittent position)	
						1.0 V
5 (G)	Ground	INPUT 2 signal	Input	Combination switch	OFF	0 V
					FR WASHER	
					RR WASHER	
					Wiper intermittent dial 1	
					Wiper intermittent dial 5	
					Wiper intermittent dial 6	
					RR WIPER ON	
						1.0 V
6 (R)	Ground	INPUT 1 signal	Input	Combination switch	OFF	0 V
					FR WIPER HI	
					Wiper intermittent dial 1	
					Wiper intermittent dial 2	
					Wiper intermittent dial 3	
					Wiper intermittent dial 6	
					Wiper intermittent dial 7	
					RR WIPER INT	
						1.0 V
7 (W)	Ground	Key cylinder unlock sw signal	Input	Key cylinder switch	N position	 7.0 - 8.0 V
					UNLOCK position	0 V

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

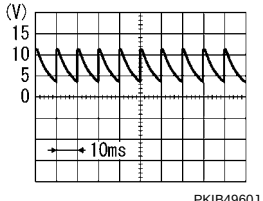
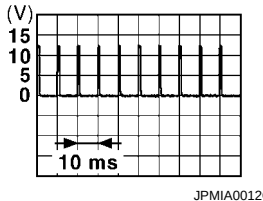
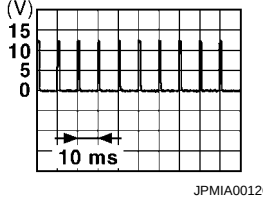
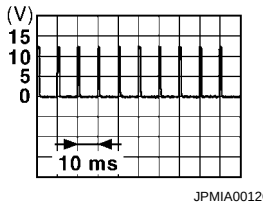
cardiagn.com

BCS

BCM

< ECU DIAGNOSIS INFORMATION >







[WITH INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
8 (GR)	Ground	Key cylinder lock sw signal	Input	Key cylinder switch	N position	 7.0 - 8.0 V
					LOCK position	0 V
9 (LG)	Ground	Stop lamp switch 1	Input	Stop lamp switch	OFF (Brake pedal released)	0 V
					ON (Brake pedal depressed)	Battery voltage
12 (GR)	Ground	Central door lock sw signal	Input	Door lock and unlock switch	NEUTRAL position	 1.0 - 1.5 V
					LOCK position	0 V
13 (BR)	Ground	Central door unlock sw signal	Input	Door lock and unlock switch	NEUTRAL position	 1.0 - 1.5 V
					UNLOCK position	0 V
15 (G)	Ground	Rear defogger switch signal	Input	Rear window defogger switch	Not pressed	 1.0 - 1.5 V
					Pressed	0 V
18 (V)	Ground	Keyless tuner ground	Input	Push-button ignition switch ON		0 V

BCM

< ECU DIAGNOSIS INFORMATION >

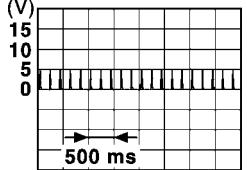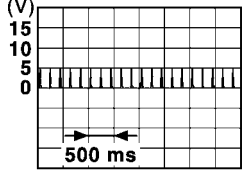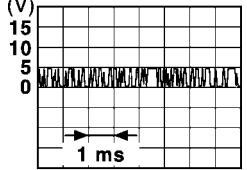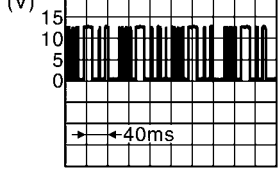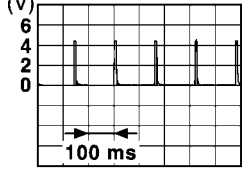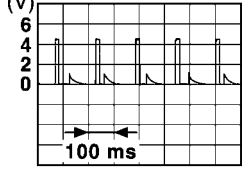[WITH INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
19 (LG)	Ground	Keyless tuner power supply	Output	Push-button ignition switch OFF		 JMKIA3838GB
				Push-button ignition switch ACC or ON		5 V
20 (G)	Ground	Keyless tuner signal	Input	Push-button ignition switch OFF	Waiting	 JMKIA3838GB
					When operating either button on Intelligent Key	 JMKIA3841GB
21 (P)	Ground	Immobilizer one way communication (CLOCK) signal	Input/ Output	Intelligent Key battery is removed	Brake pedal depressed NOTE: Waveform varies each time when brake pedal is depressed	 JMKIA6232JP
					Brake pedal released	Battery voltage
22 (W)	Ground	Keyless tuner RSSI signal	Input	Push-button ignition switch OFF	Waiting	 JMKIA5952GB
					When pressing and holding either button on Intelligent Key	 JMKIA5953GB

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

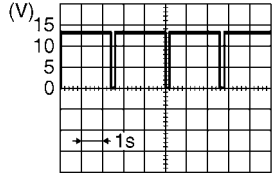
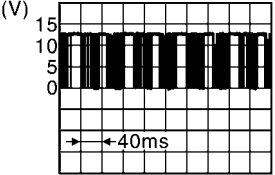
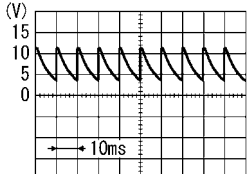
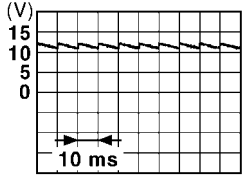
BCS

cardiagn.com

BCM

< ECU DIAGNOSIS INFORMATION >







[WITH INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
23 (GR)	Ground	Security indicator output	Output	Security indica- tor lamp	ON	0 – 0.5 V
					Blinking (push-button igni- tion switch OFF)	 12.0 V JPMIA0590GB
					OFF	Battery voltage
24 (SB)	Ground	Audio dongle link (SERIAL)	Input/ Output	Push-button ignition switch OFF		5 V
25 (LG)	Ground	Immobilizer two way communication sig- nal	Input/ Output	During waiting	Brake pedal depressed NOTE: Waveform varies each time when brake pedal is depressed	 JMKIA6233JP
					Brake pedal released	Battery voltage
26 (O)	Ground	THERMO amp. sig- nal	Input	Push-button igni- tion switch ON and blower fan switch ON	A/C switch OFF	Battery voltage
					A/C switch ON	0 V
27 (V)	Ground	Air con sw signal	Input	Push-button igni- tion switch ON and blower fan switch ON	A/C switch OFF	Battery voltage
					A/C switch ON	0 V
28 (SB)	Ground	Blower fan sw signal	Input	Fan switch	OFF	0 V
					ON	 7.0 - 8.0 V PKIB4960J
29 (BG)	Ground	Hazard sw signal	Input	Hazard switch	OFF	Battery voltage
					ON	0 – 1.5 V
31 (Y)	Ground	Driver door lock sta- tus	Input	Front door LH	LOCK status	 11.8V JPMIA0011GB
					UNLOCK status	0V

BCM

< ECU DIAGNOSIS INFORMATION >

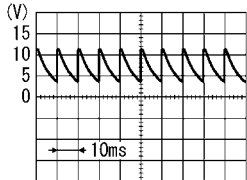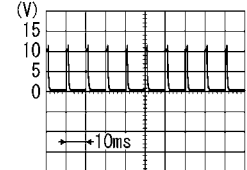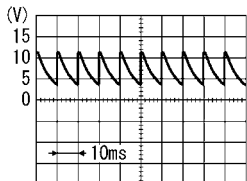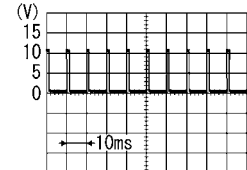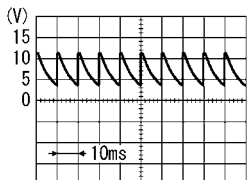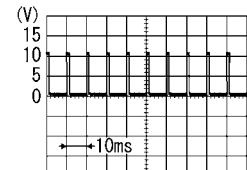[WITH INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
32 (P)	Ground	OUTPUT 5	Output	Combination switch	OFF	 7.0 - 8.0 V
					FR FOG	 1.0 V
					RR WIPER ON	
					Wiper intermittent dial 1	
					Wiper intermittent dial 2	
					Wiper intermittent dial 6	
33 (V)	Ground	OUTPUT 4	Output	Combination switch	OFF	 7.0 - 8.0 V
					TAIL LAMP	 1.2 V
					Wiper intermittent dial 1	
					Wiper intermittent dial 5	
					Wiper intermittent dial 6	
					RR WIPER INT	
34 (W)	Ground	OUTPUT 3	Output	Combination switch	OFF	 7.0 - 8.0 V
					HI BEAM	 1.2 V
					HEADLAMP 2	
					RR WASHER	
					Wiper intermittent dial 1	
					Wiper intermittent dial 2	
					Wiper intermittent dial 3	

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

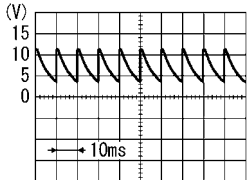
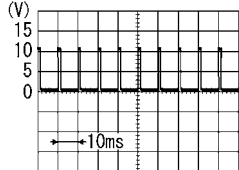
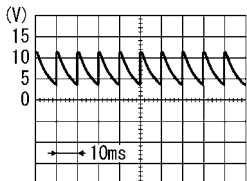
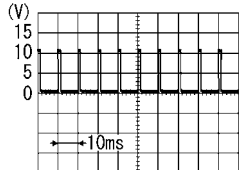
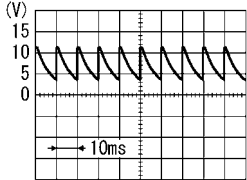
BCS

cardiagn.com

BCM

< ECU DIAGNOSIS INFORMATION >





[WITH INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
35 (GR)	Ground	OUTPUT 2	Output	Combination switch	OFF	 PKIB4960J 7.0 - 8.0 V
					HEADLAMP 1	 PKIB4958J 1.2 V
					PASSING	
					FR WIPER HI	
36 (LG)	Ground	OUTPUT 1	Output	Combination switch	FR WIPER INT (any intermittent position)	 PKIB4960J 7.0 - 8.0 V
					TURN RH	 PKIB4958J 1.2 V
					TURN LH	
					FR WIPER LO	
37 ¹ (R)	Ground	Park position switch signal	Input	Selector lever	P (Park) position	0 - 1.5 V
					Any position other than P (PARK)	Battery voltage
38 (G)	Ground	Keyless intelligent tuner signal	Input	Push-button ig- nition switch	OFF or ACC	0 - 0.5 V
					ON	Battery voltage
39 (L)	Ground	CAN-high	Input/ Output	—	—	—
40 (P)	Ground	CAN-low	Input/ Output	—	—	—
43 (P)	Ground	Door switch (Back) signal	Input	Back door switch	OFF (back door closed)	 PKIB4960J 7.0 - 8.0 V
					ON (back door open)	0 V

BCM

< ECU DIAGNOSIS INFORMATION >

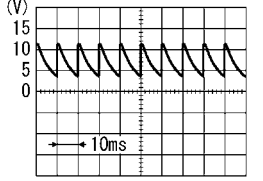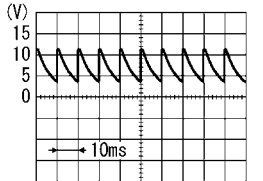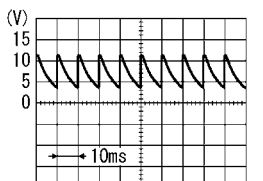
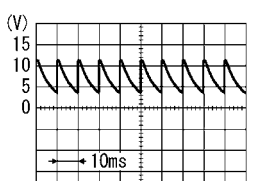
[WITH INTELLIGENT KEY SYSTEM]







Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
44 (LG)	Ground	Rear wiper autostop switch	Input	Push-button ig- nition switch ON	Rear wiper stop position	Battery voltage
					Any position other than rear wiper stop position	0V
45 (BG)	Ground	Door switch (AS) signal	Input	Front door switch RH	OFF (front RH door closed)	 7.0 - 8.0 V
					ON (front RH door open)	0 V
46 (BR)	Ground	Door switch (RR) signal	Input	Rear door switch RH	OFF (rear RH door closed)	 7.0 - 8.0 V
					ON (rear RH door open)	0 V
47 (SB)	Ground	Door switch (DR) signal	Input	Front door switch LH	OFF (front LH door closed)	 7.0 - 8.0 V
					ON (front LH door open)	0 V
48 (W)	Ground	Door switch (RL) signal	Input	Rear door switch LH	OFF (rear LH door closed)	 7.0 - 8.0 V
					ON (rear LH door open)	0 V
49 (L)	Ground	Cargo lamp control	Output	Back door is closed (cargo lamp turns OFF)		Battery voltage
				Back door is opened (cargo lamp turns ON)		0 - 1 V
50 (G)	Ground	Door unlock output (back)	Output	Back door	UNLOCK (Actuator is acti- vated)	0 V
					Actuator is not activated	Battery voltage
51 (W)	Ground	Request sw (back door) signal	Input	Back door re- quest switch	ON (Pressed)	0 - 1.5 V
					OFF (Not pressed)	Battery voltage
54 (R)	Ground	Rear wiper output	Output	Rear wiper	OFF (stopped)	0V
					ON (activated)	Battery voltage

BCM

< ECU DIAGNOSIS INFORMATION >

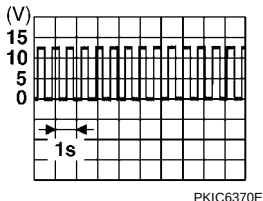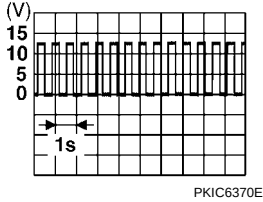[WITH INTELLIGENT KEY SYSTEM]







Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
55 (G)	Ground	Door unlock output (RR, RL)	Output	Rear doors	UNLOCK (Actuator is activated)	Battery voltage
					Actuator is not activated	0 V
56 (W)	Ground	Battery saver output	Output	Interior room lamp battery saver timed out		0 V
				Except when interior room lamp battery saver timed out		Battery voltage
57 (Y)	Ground	Battery power supply	Input	Push-button ignition switch OFF		Battery voltage
59 (G)	Ground	Door unlock output (AS)	Output	Front RH door	UNLOCK (Actuator is activated)	Battery voltage
					Actuator is not activated	0 V
60 (V)	Ground	Flasher output (LEFT)	Output	Push-button ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch LH	 6.5 V
61 (W)	Ground	Flasher output (RIGHT)	Output	Push-button ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch RH	 6.5 V
63 (R)	Ground	Room lamp control	Output	Interior room lamp	OFF	Battery voltage
					ON	0 – 1.0 V
65 (SB)	Ground	Door lock output	Output	All doors	LOCK (Actuator is activated)	Battery voltage
					Actuator is not activated	0 V
66 (G)	Ground	Door unlock output (DR)	Output	Front LH door	UNLOCK (Actuator is activated)	Battery voltage
					Actuator is not activated	0 V
67 (B)	Ground	Ground	Output	Push-button ignition switch ON		0 V
68 (L)	Ground	Power window power supply (RAP)	Output	Push-button ignition switch ON		Battery voltage
70 (G)	Ground	Battery power supply	Input	Push-button ignition switch OFF		Battery voltage
72 (L)	Ground	A/C indicator	Input	—		—
75 (GR)	Ground	Request sw (DR) signal	Input	Driver door request switch	ON (Pressed)	0 – 1.5 V
					OFF (Not pressed)	Battery voltage

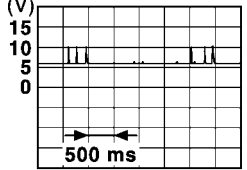
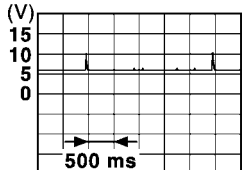
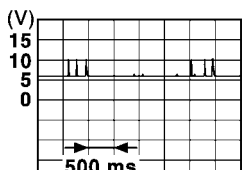
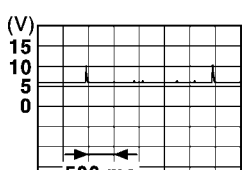
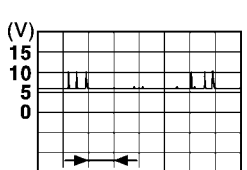
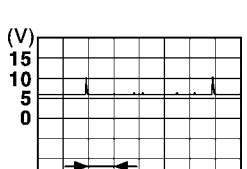
Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
76 (L)	Ground	Engine start sw	Input	Push-button ignition switch	START pressed	0 – 1.5 V
					Not pressed	Battery voltage
78 (P)	Ground	Door antenna (DR) +	Output	Push-button ignition switch ON Driver door request switch pressed	Intelligent Key not in antenna detection area (Approx. 2 m)	
					Intelligent Key in antenna detection area (80 cm or less)	
79 (V)	Ground	Door antenna (DR) -	Output	Push-button ignition switch ON Driver door request switch pressed	Intelligent Key not in antenna detection area (Approx. 2 m)	
					Intelligent Key in antenna detection area (80 cm or less)	
80 (LG)	Ground	Door antenna (AS) +	Output	Push-button ignition switch ON Passenger door request switch pressed	Intelligent Key not in antenna detection area (Approx. 2 m)	
					Intelligent Key in antenna detection area (80 cm or less)	

BCM

< ECU DIAGNOSIS INFORMATION >

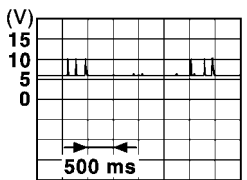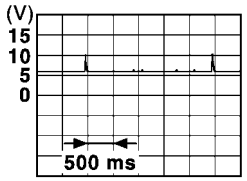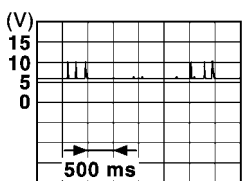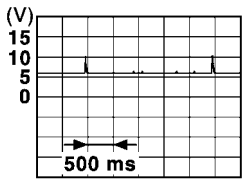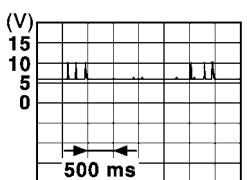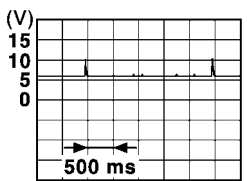[WITH INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
81 (Y)	Ground	Door antenna (AS) -	Output	Push-button ignition switch ON Passenger door request switch pressed	Intelligent Key not in antenna detection area (Approx. 2 m)	 JMKIA5954GB
					Intelligent Key in antenna detection area (80 cm or less)	 JMKIA5955GB
82 (W)	Ground	Outside key antenna (rear bumper) +	Output	Push-button ignition switch ON Back door request switch pressed	Intelligent Key not in antenna detection area (Approx. 2 m)	 JMKIA5954GB
					Intelligent Key in antenna detection area (80 cm or less)	 JMKIA5955GB
83 (B)	Ground	Outside key antenna (rear bumper) -	Output	Push-button ignition switch ON Back door request switch pressed	Intelligent Key not in antenna detection area (Approx. 2 m)	 JMKIA5954GB
					Intelligent Key in antenna detection area (80 cm or less)	 JMKIA5955GB

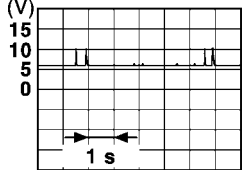
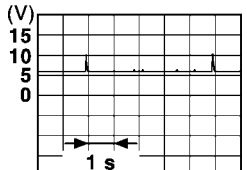
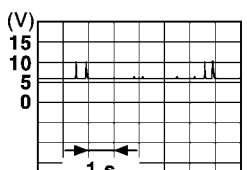
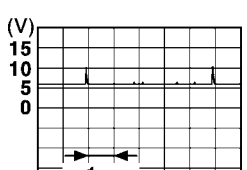
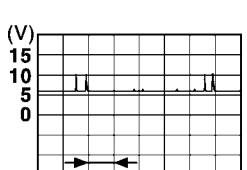
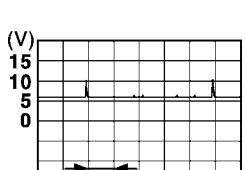
Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
84 (P)	Ground	Inside key antenna (instrument center) +	Output	Push-button ig- nition switch ON	Intelligent Key not in an- tenna detection area (Approx. 2 m)	 JMKIA5951GB
					Intelligent Key in antenna detection area (80 cm or less)	 JMKIA3839GB
85 (L)	Ground	Inside key antenna (instrument center) -	Output	Push-button ig- nition switch ON	Intelligent Key not in an- tenna detection area (Approx. 2 m)	 JMKIA5951GB
					Intelligent Key in antenna detection area (80 cm or less)	 JMKIA3839GB
86 (G)	Ground	Inside key antenna (console) +	Output	Push-button ig- nition switch ON	Intelligent Key not in an- tenna detection area (Approx. 2 m)	 JMKIA5951GB
					Intelligent Key in antenna detection area (80 cm or less)	 JMKIA3839GB

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCM

< ECU DIAGNOSIS INFORMATION >

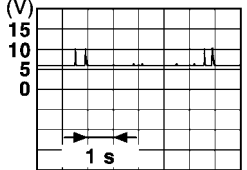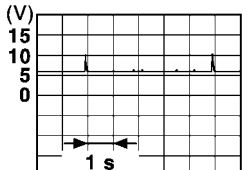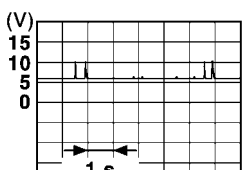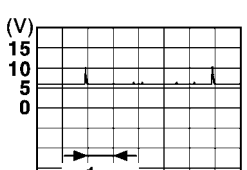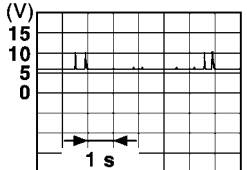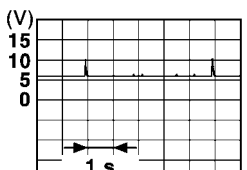[WITH INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
87 (R)	Ground	Inside key antenna (console) -	Output	Push-button ig- nition switch ON	Intelligent Key not in an- tenna detection area (Approx. 2 m)	 JMKIA5951GB
					Intelligent Key in antenna detection area (80 cm or less)	 JMKIA3839GB
88 (V)	Ground	Inside key antenna (trunk room) +	Output	Push-button ig- nition switch ON	Intelligent Key not in an- tenna detection area (Approx. 2 m)	 JMKIA5951GB
					Intelligent Key in antenna detection area (80 cm or less)	 JMKIA3839GB
89 (LG)	Ground	Inside key antenna (trunk room) -	Output	Push-button ig- nition switch ON	Intelligent Key not in an- tenna detection area (Approx. 2 m)	 JMKIA5951GB
					Intelligent Key in antenna detection area (80 cm or less)	 JMKIA3839GB

BCM

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
		Signal name	Input/ Output			
+	–					
90 (W)	Ground	Push-button ignition switch illumination power supply	Output	Push-button ignition switch illumination	ON	Battery voltage
					OFF	0 – 1.5 V
91 (V)	Ground	ACC/ON indicator lamp	Output	Push-button ignition switch	OFF	Battery voltage
					ACC or ON	0 – 1.5 V
92 (B)	Ground	Push-button ignition switch illumination lamp	Output	Push-button ignition switch illumination	ON	5.5 V
					OFF	0 – 1.5 V
93 (R)	Ground	Intelligent Key warning buzzer	Output	Intelligent Key warning buzzer	Sounding	0 – 1.5 V
					Not sounding	Battery voltage
96 (SB)	Ground	Accessory relay control	Output	Ignition Push-button switch	OFF	0 – 0.5 V
					ACC or ON	Battery voltage
97 (R)	Ground	Starter relay control	Output	Push-button ignition switch ON	Selector lever in P (Park) or N (Neutral) position	Battery voltage
					Selector lever not in P (Park) or N (Neutral) position	0 – 0.5 V
98 (BG)	Ground	Ignition relay (IPDM E/R) control	Output	Push-button ignition switch	OFF or ACC	Battery voltage
					ON	0 – 0.5 V
99 (GR)	Ground	Ignition relay (F/B) control	Output	Push-button ignition switch	OFF or ACC	0 – 0.5 V
					ON	Battery voltage
100 (L)	Ground	Request sw (AS) signal	Input	Passenger door request switch	ON (Pressed)	0 – 1.5 V
					OFF (Not pressed)	Battery voltage
101 (V)	Ground	Clutch interlock switch	Input	Clutch interlock switch	OFF (clutch pedal is not depressed)	0V
					ON (clutch pedal is depressed)	Battery voltage
102 ¹ (BR)	Ground	P/N position	Input	Selector lever	Selector lever in P (Park) or N (Neutral) position	Battery voltage
					Selector lever not in P (Park) or N (Neutral) position	0 – 1.5 V
102 ² (BR)	Ground	Neutral sw	Input	Selector lever	Selector lever in N (Neutral) position	Battery voltage
					Selector lever not in N (Neutral) position	0 – 1.5 V
103 (LG)	Ground	Front defrost switch	Input	—		—
104 (V)	Ground	CVT shift selector (park position switch) power supply	Output	Push-button ignition switch ON		Battery voltage
105 (SB)	Ground	Stop lamp switch 2	Input	Push-button ignition switch OFF		Battery voltage
106 (Y)	Ground	Blower relay control	Output	Push-button ignition switch	OFF or ACC	0 – 0.5 V
					ON	Battery voltage

¹: With CVT

²: With M/T

Fail-safe

INFOID:000000012432333

BCM performs fail-safe control when the following DTCs are detected.

CONSULT Display	Fail-safe	Cancellation
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC
B2195: ANTI SCANNING	Inhibit engine cranking	Ignition switch ON → OFF
B2196: DONGLE NG	Inhibit engine cranking	Erase DTC
B2198: NATS ANTENNA AMP	Inhibit engine cranking	Erase DTC
B2557: VEHICLE SPEED	—	When the following CAN signal status (vehicle speed signal) becomes consistent • Vehicle speed signal (ABS) • Vehicle speed signal (Meter)
B2601: SHIFT P SIGNAL	—	500 ms after the following signal reception status becomes consistent • Park position switch signal • P range signal (CAN)
B2602: SHIFT P DIAG	—	5 seconds after the following BCM recognition conditions are fulfilled • Ignition switch is in the ON position • Park position switch signal: P position (push selector button) or except P position (9 – 16 V) • Vehicle speed: 4 km/h (2.5 MPH) or more
B2603: SHIFT POSITION	—	500 ms after any of the following BCM recognition conditions are fulfilled • Status 1 - Ignition switch is in the ON position - Park position switch signal: P position (push selector button) or except P position (9 – 16 V) - P/N position signal: Except P and N positions (0 – 1.5 V) • Status 2 - Ignition switch is in the ON position - Park position switch signal: P position (release selector button) (0 – 1.5 V) - P/N position signal: P or N positions (9 – 16 V)
B2604: SHIFT PN DIAG CAN	—	500 ms after any of the following BCM recognition conditions are fulfilled • Status 1 - Ignition switch is in the ON position - P/N position signal: P or N position (9 – 16 V) - Shift position signal (CAN): P or N position • Status 2 - Ignition switch is in the ON position - P/N position signal: Except P and N positions (0 – 1.5 V) - Shift position signal (CAN): Except P and N position
B2605: SHIFT PN DIAG IPDM	—	500 ms after any of the following BCM recognition conditions are fulfilled • Status 1 - Ignition switch is in the ON position - P/N position signal: Except P and N positions (0 – 1.5 V) • Status 2 - Ignition switch is in the ON position - P/N position signal: P or N position (9 – 16 V)
B2608: STARTER RELAY	Inhibit engine cranking	500 ms after the following signal communication status becomes consistent • Starter motor relay control signal • Starter relay status signal (CAN)
B260F: ECM CAN COMM	Inhibit engine cranking	When any of the following conditions are fulfilled • Ignition switch changes to ACC • Receives engine status signal (CAN)

CONSULT Display	Fail-safe	Cancellation
B26F1: IGN RELAY OFF	Inhibit engine cranking	When the following conditions are fulfilled • Ignition switch ON signal (CAN: Transmitted from BCM): ON • Ignition switch ON signal (CAN: Transmitted from IPDM E/R): ON
B26F2: IGN RELAY ON	Inhibit engine cranking	When the following conditions are fulfilled • Ignition switch ON signal (CAN: Transmitted from BCM): OFF • Ignition switch ON signal (CAN: Transmitted from IPDM E/R): OFF
B26F3: START CONT RLY ON	Inhibit engine cranking	When the following conditions are fulfilled • Starter control relay signal (CAN: Transmitted from BCM): OFF • Starter control relay signal (CAN: Transmitted from IPDM E/R): OFF
B26F4: START CONT RLY OFF	Inhibit engine cranking	When the following conditions are fulfilled • Starter control relay signal (CAN: Transmitted from BCM): ON • Starter control relay signal (CAN: Transmitted from IPDM E/R): ON
B26F7: BCM	Inhibit engine cranking by Intelligent Key system	When room antenna and luggage room antenna functions normally
U0415: VDC CAN CIR2	—	When vehicle speed signal (Meter) (CAN) is received normally

DTC Inspection Priority Chart

INFOID:0000000012432334

If more than one DTC is displayed at the same time, perform inspections based on the following priority chart.

Priority	DTC
1	B2562: LOW VOLTAGE
2	- U1000: CAN COMM CIRCUIT - U1010: CONTROL UNIT (CAN)
3	- B2192: ID DISCORD BCM-ECM - B2193: CHAIN OF BCM-ECM - B2195: ANTI SCANNING - B2196: DONGLE NG - B2198: NATS ANTENNA AMP
4	- B2555: STOP LAMP CIRCUIT - B2556: ENG START SW - B2557: VEHICLE SPEED - B2562: LOW VOLTAGE - B2601: SHIFT P SIGNAL - B2602: SHIFT P DIAG - B2603: SHIFT POSITION - B2604: SHIFT PN DIAG CAN - B2605: SHIFT PN DIAG IPDM - B2608: STARTER RELAY - B260F: ECM CAN COMM - B2614: ACC RELAY REQ FB - B2615: IGN RELAY3 REQ FB - B2616: IGN RELAY2 REQ FB - B2618: IGN RELAY1 REQ FB - B261A: ENGINE SW - B261F: ASCD CANCEL SW - B2620: NEUTRAL SW - B26E8: CLUTCH SW - B26F1: IGN RELAY OFF - B26F2: IGN RELAY ON - B26F3: START CONT RLY ON - B26F4: START CONT RLY OFF - B26F6: BCM - B26F7: BCM - B26FB: CLUTCH SWITCH - B26FC: KEY REGISTRATION - U0415: VDC CAN CIR2

Priority	DTC
5	• B2621: INSIDE ANTENNA 1 • B2622: INSIDE ANTENNA 2 • B2623: INSIDE ANTENNA 3
6	• B2626: OUTSIDE 1 ANTENNA • B2627: OUTSIDE 2 ANTENNA • B2628: OUTSIDE 3 ANTENNA
7	• C1704: LOW PRESSURE FL • C1705: LOW PRESSURE FR • C1706: LOW PRESSURE RR • C1707: LOW PRESSURE RL • C1708: [NO DATA] FL • C1709: [NO DATA] FR • C1710: [NO DATA] RR • C1711: [NO DATA] RL • C1716: [PRESS DATA ERR] FL • C1717: [PRESS DATA ERR] FR • C1718: [PRESS DATA ERR] RR • C1719: [PRESS DATA ERR] RL • C1729: VHCL SPEED SIG ERR

DTC Index

INFOID:0000000012432335

NOTE:

The details of time display are as follows.

- CRNT: A malfunction is detected now.
 - PAST: A malfunction was detected in the past.
- IGN counter is displayed on Freeze Frame Data.

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
No DTC is detected. further testing may be required.	—	—	—	—	—
U1000: CAN COMM CIRCUIT	—	—	—	—	BCS-63
U1010: CONTROL UNIT (CAN)	—	—	—	—	BCS-64
U0415: VDC CAN CIR2	x	—	x	—	BCS-65
B2192: ID DISCORD BCM-ECM	x	—	—	—	SEC-54
B2193: CHAIN OF BCM-ECM	x	—	—	—	SEC-55
B2195: ANTI SCANNING	x	—	—	—	SEC-56
B2196: DONGLE NG	x	—	—	—	SEC-57
B2198: NATS ANTENNA AMP	x	—	—	—	SEC-59
B2555: STOP LAMP CIRCUIT	—	x	x	—	SEC-62
B2556: ENG START SW	—	x	x	—	SEC-65
B2557: VEHICLE SPEED	x	x	x	—	SEC-67
B2562: LOW VOLTAGE	—	x	—	—	BCS-66
B2601: SHIFT P SIGNAL	x	x	x	—	SEC-68
B2602: SHIFT P DIAG	x	x	x	—	SEC-70
B2603: SHIFT POSITION	x	x	x	—	SEC-73
B2604: SHIFT PN DIAG CAN	x	x	x	—	SEC-77
B2605: SHIFT PN DIAG IPDM	x	x	x	—	SEC-80
B2608: STARTER RELAY	x	x	x	—	SEC-82
B260F: ECM CAN COMM	x	x	x	—	SEC-84

BCM

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
B2614: ACC RELAY REQ FB	—	x	x	—	PCS-56
B2615: IGN RELAY3 REQ FB	—	x	x	—	PCS-58
B2616: IGN RELAY2 REQ FB	—	x	x	—	PCS-60
B2618: IGN RELAY1 REQ FB	—	x	x	—	PCS-62
B261A: ENGINE SW	—	x	x	—	PCS-63
B261F: ASCD CANCEL SW	—	x	x	—	SEC-85
B2620: NEUTRAL SW	—	x	x	—	SEC-88
B2621: INSIDE ANTENNA 1	—	x	—	—	DLK-65
B2622: INSIDE ANTENNA 2	—	x	—	—	DLK-67
B2623: INSIDE ANTENNA 3	—	x	—	—	DLK-69
B2626: OUTSIDE 1 ANTENNA	—	x	—	—	DLK-73
B2627: OUTSIDE 2 ANTENNA	—	x	—	—	DLK-71
B2628: OUTSIDE 3 ANTENNA	—	x	—	—	DLK-75
B26E8: CLUTCH SW	x	x	x	—	SEC-91
B26F1: IGN RELAY OFF	x	x	x	—	PCS-65
B26F2: IGN RELAY ON	x	x	x	—	PCS-66
B26F3: START CONT RLY ON	x	x	x	—	SEC-94
B26F4: START CONT RLY OFF	x	x	x	—	SEC-95
B26F6: BCM	—	x	x	—	PCS-68
B26F7: BCM	x	x	x	—	SEC-96
B26FB: CLUTCH SWITCH	—	x	x	—	SEC-97
B26FC: KEY REGISTRATION	—	x	x	—	SEC-98
C1704: LOW PRESSURE FL	—	—	—	x	WT-25
C1705: LOW PRESSURE FR	—	—	—	x	
C1706: LOW PRESSURE RR	—	—	—	x	
C1707: LOW PRESSURE RL	—	—	—	x	
C1708: [NO DATA] FL	—	—	—	x	WT-27
C1709: [NO DATA] FR	—	—	—	x	
C1710: [NO DATA] RR	—	—	—	x	
C1711: [NO DATA] RL	—	—	—	x	
C1716: [PRESS DATA ERR] FL	—	—	—	x	WT-30
C1717: [PRESS DATA ERR] FR	—	—	—	x	
C1718: [PRESS DATA ERR] RR	—	—	—	x	
C1719: [PRESS DATA ERR] RL	—	—	—	x	
C1729: VHCL SPEED SIG ERR	—	—	—	x	WT-32

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

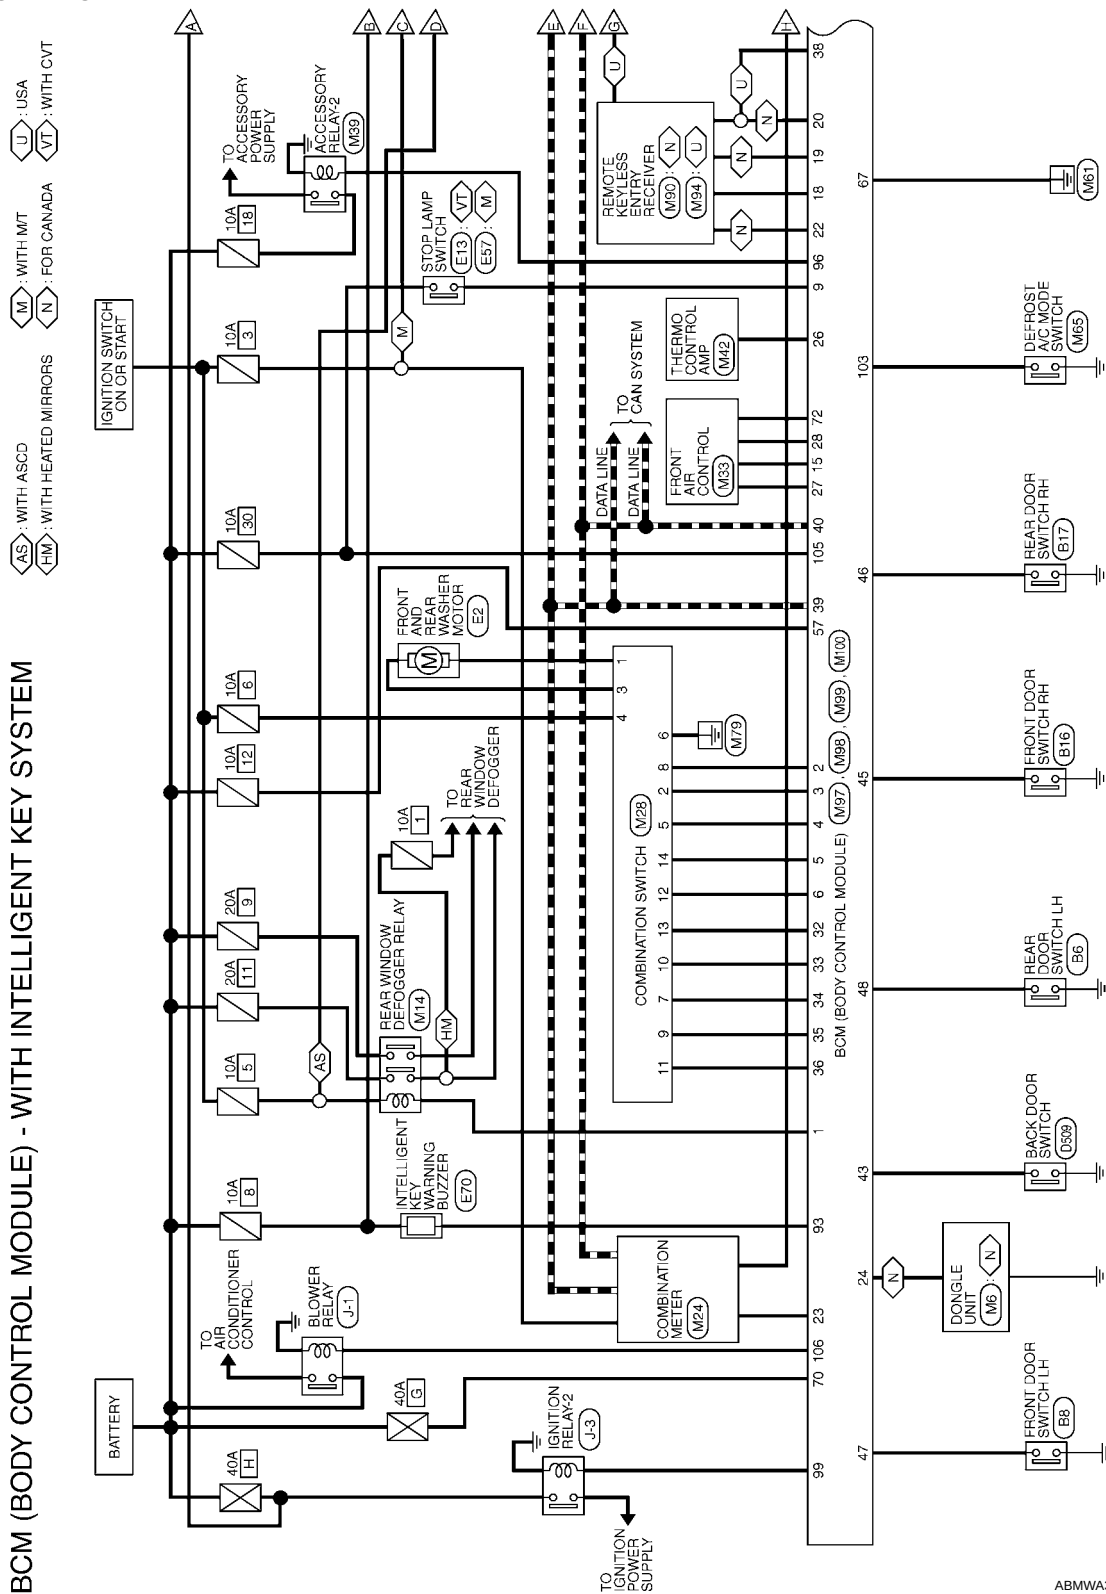
cardiagn.com

WIRING DIAGRAM


BCM

Wiring Diagram


INFOID:000000012432336



ABMWA3493GB

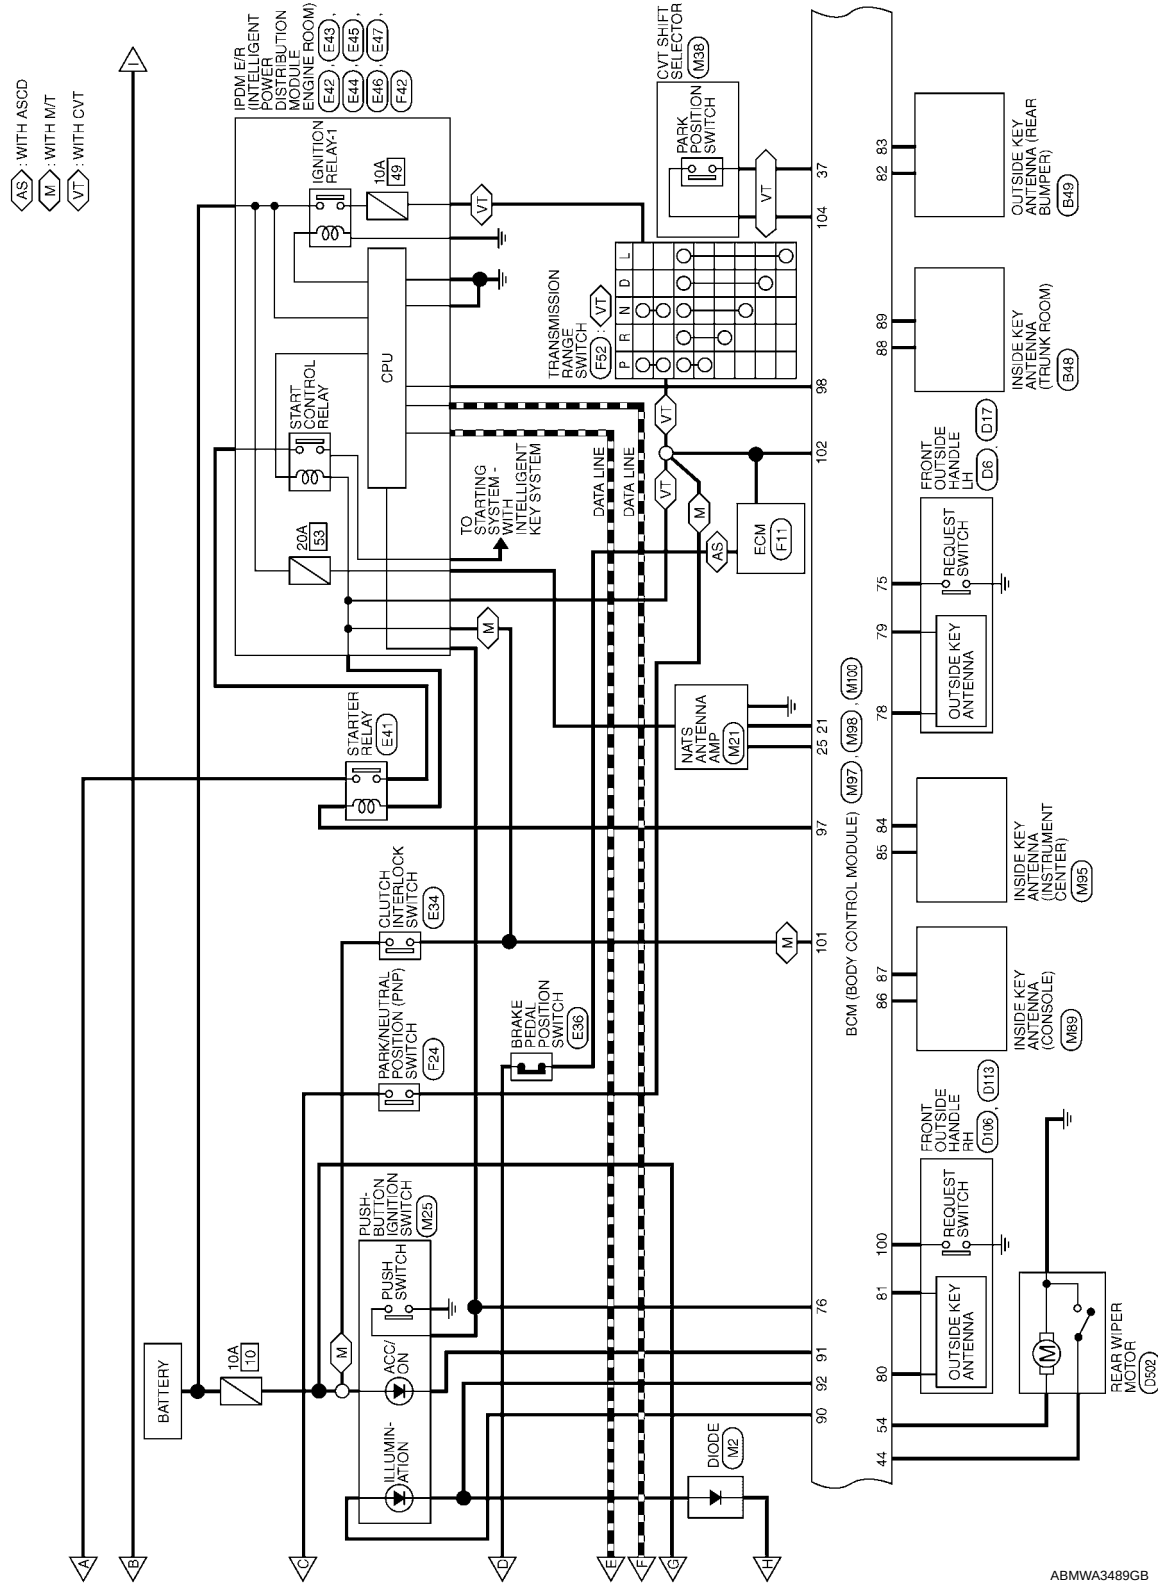


ABMWA3489GB

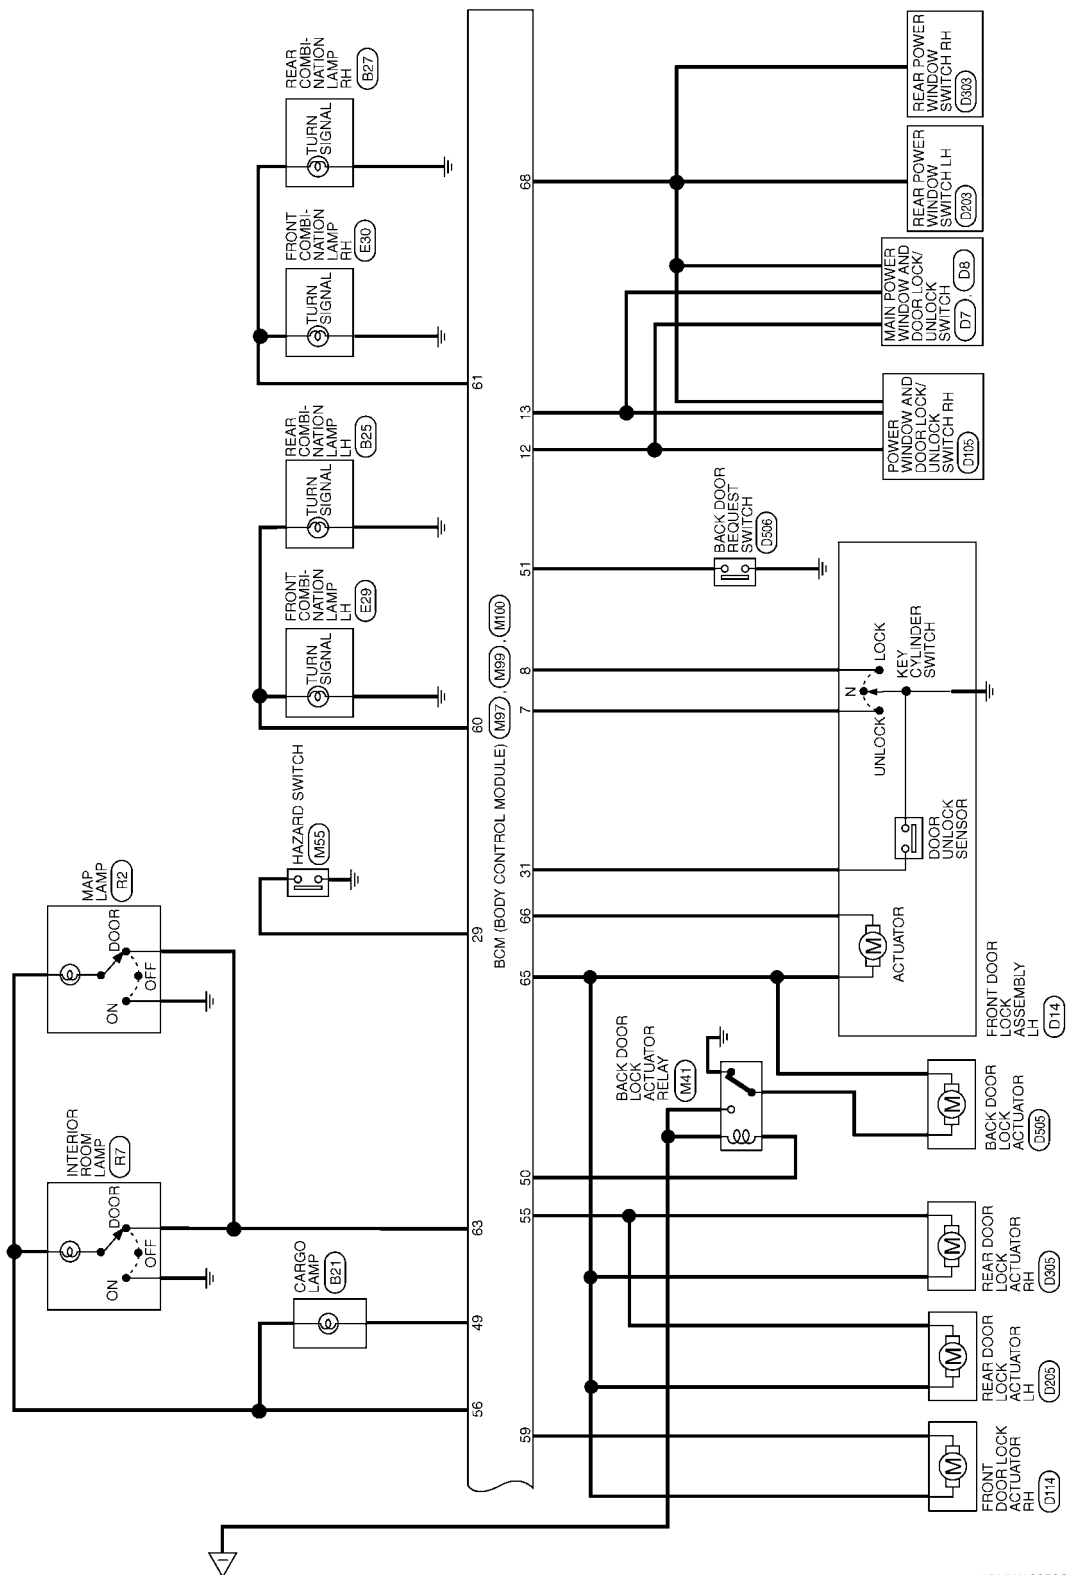


ABMWA3272GB

BCM (BODY CONTROL MODULE) CONNECTORS - WITH INTELLIGENT KEY SYSTEM

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE

 

Connector No.	M97
Connector Name	BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY SYSTEM)
Connector Color	BLACK

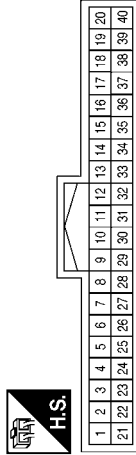

Terminal No.	Color of Wire	Signal Name
1	BG	-
2	Y	-
3	SB	-
4	W	-
5	L	-
6	B	-
7	W	-
8	BR	-
9	GR	-
10	V	-
11	LG	-
12	R	-
13	P	-
14	G	-

Terminal No.	Color of Wire	Signal Name
1	GR	REAR DEFOGGER RELAY OUTPUT
2	BR	COMBINATION SW INPUT 5
3	Y	COMBINATION SW INPUT 4
4	L	COMBINATION SW INPUT 3
5	G	COMBINATION SW INPUT 2
6	R	COMBINATION SW INPUT 1
7	W	KEY CYLINDER UNLOCK SW
8	GR	KEY CYLINDER LOCK SW
9	LG	BRAKE SW1
10	-	-
11	-	-
12	GR	CENTRAL DOOR LOCK SW
13	BR	CENTRAL DOOR UNLOCK SW
14	-	-
15	G	REAR DEFOGGER SW
16	-	-
17	-	-

Terminal No.	Color of Wire	Signal Name
18	V	KEYLESS TUNER GND
19	LG	KEYLESS TUNER POWER SUPPLY
20	G	KEYLESS TUNER SIGNAL
21	P	IMMOBILIZER ONE WAY COMMUNICATION (CLOCK)
22	W	KEYLESS TUNER RSSI
23	GR	SECURITY INDICATOR OUTPUT
24	SB	AUDIO DONGLE LINK (SERIAL)
25	LG	IMMOBILIZER TWO WAY COMMUNICATION
26	O	THERMO AMP
27	V	AIR CON SW
28	SB	BLOWER FAN SW
29	BG	HAZARD SW
30	-	-
31	Y	DOOR LOCK STATUS SW (DR)
32	P	COMBINATION SW OUTPUT 5
33	V	COMBINATION SW OUTPUT 4
34	W	COMBINATION SW OUTPUT 3
35	GR	COMBINATION SW OUTPUT 2
36	LG	COMBINATION SW OUTPUT 1
37	R	SHIFT P POSITION, PARKING POSITION SW
38	G	INTELLIGENT TUNER
39	L	CAN-H
40	P	CAN-L

ABMIA7841GB

Connector No.	M99
Connector Name	BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY SYSTEM)
Connector Color	WHITE

56	57	58	59	60	61	62	63	64
65	66	67	68	69	70			



Terminal No.	Color of Wire	Signal Name
56	W	BATTERY SAVER OUTPUT
57	Y	BATTERY (FUSE)
58	-	-
59	G	DOOR UNLOCK OUTPUT (AS)
60	V	FLASHER OUTPUT (LEFT)
61	W	FLASHER OUTPUT (RIGHT)
62	-	-
63	R	ROOM LAMP OUTPUT
64	-	-
65	SB	DOOR LOCK OUTPUT
66	G	DOOR UNLOCK COMMON (DR)
67	B	GND
68	L	POWER WINDOW POWER SUPPLY (RAP)
69	-	-
70	G	BATTERY (F/L)

Terminal No.	Color of Wire	Signal Name
92	B	LOW SIDE ENGINE START SW ILLUMINATION LED OUTPUT
93	R	SMART KEYLESS BUZZER OUTPUT
94	-	-
95	-	-
96	SB	ACC RELAY OUTPUT
97	R	STARTER RELAY OUTPUT
98	BG	IGN RELAY OUTPUT1 (JSM)
99	GR	IGN RELAY OUTPUT2 (ELEC)
100	L	REQUEST SW (AS)
101	V	CLUTCH SW
102	BR	NEUTRAL SW (WITH M/T)
102	BR	SHIFT N, P (WITH CVT)
103	LG	FR DEFROST SW
104	V	AT DEVICE OUTPUT
105	SB	BRAKE SW2
106	Y	BLOWER FAN MOTOR RELAY OUTPUT
107	-	-
108	-	-
109	-	-
110	-	-

Connector No.	M98
Connector Name	BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY SYSTEM)
Connector Color	WHITE



71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90
91	92	93	94	95	96	97	98	99	100	101	102	103	104	105	106	107	108	109	110

Terminal No.	Color of Wire	Signal Name
71	-	-
72	L	AIRCON INDICATOR OUTPUT
73	-	-
74	-	-
75	GR	REQUEST SW (DR)
76	L	ENGINE START SW
77	-	-
78	P	DOOR ANTENNA (DR) +
79	V	DOOR ANTENNA (DR) -
80	LG	DOOR ANTENNA (AS) +
81	Y	DOOR ANTENNA (AS) -
82	W	BACK DOOR ANTENNA +
83	B	BACK DOOR ANTENNA -
84	P	ROOM ANTENNA 1 +
85	L	ROOM ANTENNA 1 -
86	G	ROOM ANTENNA 2 +
87	R	ROOM ANTENNA 2 -
88	V	ROOM ANTENNA 3 +
89	LG	ROOM ANTENNA 3 -
90	W	HIGH SIDE ENGINE START SW ILLUMINATION LED
91	V	POWER POSITION LED (LOCK POSITION LED)

ABMIA7842GB

Connector No.	M100
Connector Name	BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY SYSTEM)
Connector Color	BLACK

41	42	43	44	45	46	47	48	49
50	51	52	53	54	55			



Terminal No.	Color of Wire	Signal Name
41	-	-
42	-	-
43	P	DOOR SW (BACK)
44	LG	REAR WIPER AUTO STOP SW
45	BG	DOOR SW (AS)
46	BR	DOOR SW (RR)
47	SB	DOOR SW (DR)
48	W	DOOR SW (RL)
49	L	LUGGAGE LAMP OUTPUT
50	G	DOOR UNLOCK OUTPUT (BACK)
51	W	REQUEST SW (TRUNK/BACK DOOR)
52	-	-
53	-	-
54	R	REAR WIPER MOTOR OUTPUT
55	G	DOOR UNLOCK OUTPUT (RR,RL)

ABMIA7843GB

BCS

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

cardiagn.com

BASIC INSPECTION

ADDITIONAL SERVICE WHEN REPLACING BCM

Description

INFOID:0000000012432337

BEFORE REPLACEMENT

When replacing BCM, save or print current vehicle specification with CONSULT configuration before replacement.

NOTE:

If "READ CONFIGURATION" can not be used, use the "WRITE CONFIGURATION - Manual selection" after replacing BCM.

AFTER REPLACEMENT

CAUTION:

When replacing BCM, always perform "WRITE CONFIGURATION" with CONSULT. Or not doing so, BCM control function does not operate normally.

- Complete the procedure of "WRITE CONFIGURATION" in order.
- Configuration is different for each vehicle model. Confirm configuration of each vehicle model.
- If you set incorrect "WRITE CONFIGURATION", incidents might occur.

NOTE:

When replacing BCM, perform the system initialization (NATS) (if equipped).

Work Procedure

INFOID:0000000012432338

1.SAVING VEHICLE SPECIFICATION

ⓈCONSULT Configuration

Perform "READ CONFIGURATION" to save or print current vehicle specification. Refer to [BCS-59, "Description"](#).

NOTE:

If "READ CONFIGURATION" can not be used, use the "WRITE CONFIGURATION - Manual selection" after replacing BCM.

>> GO TO 2.

2.REPLACE BCM

Replace BCM. Refer to [BCS-74, "Removal and Installation"](#).

>> GO TO 3.

3.WRITING VEHICLE SPECIFICATION

ⓈCONSULT Configuration

Perform "WRITE CONFIGURATION - Config file" or "WRITE CONFIGURATION - Manual selection" to write vehicle specification. Refer to [BCS-59, "Work Procedure"](#).

>> GO TO 4.

4.REGISTER INTELLIGENT KEYS

For initialization and registration of Intelligent Keys, refer to CONSULT immobilizer mode and follow the on-screen instructions.

>> WORK END

CONFIGURATION (BCM)

Description

INFOID:0000000012432339

Vehicle specification needs to be written with CONSULT because it is not written after replacing BCM. Configuration has three functions as follows.

Function	Description
READ CONFIGURATION	- Reads the vehicle configuration of current BCM. - Saves the read vehicle configuration.
WRITE CONFIGURATION - Manual selection	Writes the vehicle configuration with manual selection.
WRITE CONFIGURATION - Config file	Writes the vehicle configuration with saved data.

NOTE:

Manual setting item: Items which need selection by vehicle specifications

Automatic setting item: Items which are written in automatically (Setting can not be changed)

For some models and specifications, the automatic setting item may not be displayed.

CAUTION:

When replacing BCM, always perform "WRITE CONFIGURATION" with CONSULT. Or not doing so, BCM control function does not operate normally.

- Complete the procedure of "WRITE CONFIGURATION" in order.
- Configuration is different for each vehicle model. Confirm configuration of each vehicle model.
- Never perform "WRITE CONFIGURATION" except for new BCM.
- If you set incorrect "WRITE CONFIGURATION", incidents might occur.

Work Procedure

INFOID:0000000012432340

1. WRITING MODE SELECTION

 CONSULT Configuration
Select "CONFIGURATION" of "BCM".

When writing saved data>>GO TO 2.

When writing manually>>GO TO 3.

2. PERFORM "WRITE CONFIGURATION - CONFIG FILE"

 CONSULT Configuration
Perform "WRITE CONFIGURATION - Config file".

>> WORK END

3. PERFORM "WRITE CONFIGURATION - MANUAL SELECTION"

-  CONSULT Configuration
1. Select "WRITE CONFIGURATION - Manual selection".
 2. Identify the correct model and configuration list. Refer to [BCS-60, "Configuration List"](#).
 3. Confirm and/or change setting value for each item.

CAUTION:

Thoroughly read and understand the vehicle specification. ECU control may not operate normally if the setting is not correct.

NOTE:

If items are not displayed, touch "SETTING". Refer to [BCS-60, "Configuration List"](#) for written items and setting value.

4. Select "SETTING".

CAUTION:

Make sure to select "SETTING" even if the indicated configuration of brand new BCM is same as the desirable configuration. If not, configuration which is set automatically by selecting vehicle model can not be memorized.

5. When "COMMAND FINISHED", select "END".

CONFIGURATION (BCM)

< BASIC INSPECTION >

[WITH INTELLIGENT KEY SYSTEM]

>> GO TO 4.

4. OPERATION CHECK

Confirm that each function controlled by BCM operates normally.

>> WORK END

Configuration List

INFOID:0000000012432341

CAUTION:

- Thoroughly read and understand the vehicle specification. ECU control may not operate normally if the setting is not correct.
- The “setting value” of this vehicle is as follows: Never select any other value than the setting value shown below. (If there is only 1 item in “setting value” that means that item is the only choice for this certain vehicle.)

SETTING ITEM		NOTE
Items	Setting value	
I-KEY SYS FREQUENCY TYPE	MODE2 ⇔ MODE3	• MODE2: 315 MHz • MODE3: 433.92 MHz
TRANSMISSION	AT with ABS ⇔ MT with ABS	• AT with ABS: CVT models • MT with ABS: M/T models
THEFT ALM AREA	MODE2 ⇔ WITHOUT	• MODE2: With vehicle security system • WITHOUT: Without vehicle security system
ASCD CANCEL SW TYPE	MODE1 ⇔ MODE2	• MODE1: With ASCD and CVT • MODE2: With ASCD and M/T
AUTO DOOR LOCK SELECT	WITH ⇔ WITHOUT	• WITH: With automatic door lock function • WITHOUT: Without automatic door lock function
I-KEY TUNING	MODE2	—
DTRL	MODE2 ⇔ WITHOUT	• MODE2: With daytime running lamps • WITHOUT: Without daytime running lamps

⇔: Items which confirm vehicle specifications

SHIPPING MODE CANCEL OPERATION

< BASIC INSPECTION >

[WITH INTELLIGENT KEY SYSTEM]

SHIPPING MODE CANCEL OPERATION

Work Procedure

INFOID:0000000012432342

1.SHIPPING MODE CANCEL OPERATION

1. Turn ignition switch OFF.
2. Press in (turn on) the extended storage switch. Refer to [PG-65. "How To Check"](#).
3. Turn ignition switch ON.
4. Turn ignition switch OFF and wait at least 2 seconds.

>> GO TO 2.

2.SHIPPING MODE CANCEL CHECK

1. Turn ignition switch ON.
2. Check that extended storage warning message is not displayed in combination meter or display.

>> WORK END

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

TRANSIT MODE CANCEL OPERATION

< BASIC INSPECTION >

[WITH INTELLIGENT KEY SYSTEM]

TRANSIT MODE CANCEL OPERATION

Work Procedure

INFOID:0000000012432343

1. TRANSIT MODE CANCEL OPERATION

1. Turn ignition switch OFF.
2. Do the following at the same time for 2 seconds:
 - Move front wiper switch to HI position (all the way down)
 - Move turn signal switch to left position (all the way down)

>> GO TO 2.

2. TRANSIT MODE CANCEL CHECK

1. Turn front wiper switch and turn signal switch OFF.
2. Turn ignition switch ON.
3. Check that turn signal indicators in combination meter do not turn ON.

>> Work End.

U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

DTC/CIRCUIT DIAGNOSIS

U1000 CAN COMM CIRCUIT

Description

INFOID:0000000012432344

Refer to [LAN-25, "CAN COMMUNICATION SYSTEM : System Description"](#).

DTC Logic

INFOID:0000000012432345

DTC DETECTION LOGIC

NOTE:

U1000 can be set if a module harness was disconnected and reconnected, perhaps during a repair. Confirm that there are actual CAN diagnostic symptoms and a present DTC by performing the Self Diagnostic Result procedure.

CONSULT Display	DTC Detection Condition	Possible Cause
CAN COMM CIRCUIT [U1000]	When any listed module cannot communicate with CAN communication signal continuously for 2 seconds or more with ignition switch ON	In CAN communication system, any item (or items) of the following listed below is malfunctioning. • Transmission • Receiving (ECM) • Receiving (VDC/TCS/ABS) • Receiving (METER/M&A) • Receiving (TCM) • Receiving (IPDM E/R)

Diagnosis Procedure

INFOID:0000000012432346

1. PERFORM SELF DIAGNOSTIC RESULT

1. Turn ignition switch ON and wait for 2 second or more.
2. Perform "Self Diagnostic Result" of "BCM" using CONSULT.

Is "CAN COMM CIRCUIT" displayed?

- YES >> Perform CAN Diagnosis as described in DIAGNOSIS section of CONSULT Operation manual.
NO >> Refer to [GI-42, "Intermittent Incident"](#).

U1010 CONTROL UNIT (CAN)

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

U1010 CONTROL UNIT (CAN)

DTC Logic

INFOID:0000000012432347

DTC DETECTION LOGIC

CONSULT Display	DTC Detection Condition	Possible Cause
CONTROL UNIT (CAN) [U1010]	BCM detected internal CAN communication circuit malfunction.	BCM

Diagnosis Procedure

INFOID:0000000012432348

1.REPLACE BCM

When DTC "U1010" is detected, replace BCM.

>> Replace BCM. Refer to [BCS-74, "Removal and Installation"](#).

U0415 VEHICLE SPEED

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

U0415 VEHICLE SPEED

DTC Logic

INFOID:0000000012432349

DTC DETECTION LOGIC

NOTE:

- If DTC U0415 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-63, "DTC Logic"](#).
- If DTC U0415 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-64, "DTC Logic"](#).

CONSULT Display	DTC Detection Condition	Probable Cause
VDC CAN CIR2 [U0415]	When the vehicle speed signal received from the ABS actuator and electric unit (control unit) remains abnormal for 2 seconds or more.	• ABS system • Combination meter system • CAN bus harness

DTC CONFIRMATION PROCEDURE

1. DTC CONFIRMATION

1. Erase the DTC.
2. Turn ignition switch OFF.
3. Perform Self Diagnostic Result of BCM with CONSULT, after the ignition switch has been turned ON for 2 seconds or more.

Is any DTC detected?

- YES >> Refer to [BCS-65, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000012432350

1. ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF DIAGNOSTIC RESULT

Perform "Self Diagnostic Result" of "ABS" with CONSULT. Refer to [BRC-31, "CONSULT Function \(ABS\)"](#).

Is any DTC detected?

- YES >> Perform the trouble diagnosis related to the detected DTC. Refer to [BRC-43, "DTC Index"](#).
NO >> GO TO 2.

2. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT

Check ABS actuator and electric unit (control unit) power and ground. Refer to [BRC-121, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace harness or connectors.

3. COMBINATION METER SELF DIAGNOSTIC RESULT

Perform "Self Diagnostic Result" of "METER M&A" with CONSULT. Refer to [MWI-71, "CONSULT Function \(METER/M&A\)"](#).

Is any DTC detected?

- YES >> Perform the trouble diagnosis related to the detected DTC. Refer to [MWI-77, "DTC Index"](#).
NO >> Refer to [GI-42, "Intermittent Incident"](#).

B2562 LOW VOLTAGE

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2562 LOW VOLTAGE

DTC Logic

INFOID:0000000012432351

DTC DETECTION LOGIC

CONSULT Display	DTC Detection Condition	Possible Cause
LOW VOLTAGE [B2562]	When the power supply voltage to BCM remains less than 8.8 V for 120 seconds or more	• Harness or connector (power supply circuit) • Vehicle battery

DTC CONFIRMATION PROCEDURE

1. DTC CONFIRMATION

1. Erase DTC.
2. Turn ignition switch OFF.
3. Perform the "Self Diagnostic Result" of "BCM" with CONSULT, after the ignition switch has been turned ON for 120 seconds or more.

Is any DTC detected?

- YES >> Refer to [BCS-66, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000012432352

1. CHECK BATTERY VOLTAGE

Check battery voltage.

Is battery voltage less than 8.8V?

- YES >> Charge battery and retest. Refer to [PG-61, "Work Flow"](#).
NO >> GO TO 2.

2. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check BCM power supply and ground circuit. Refer to [BCS-67, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace harness or connectors.

3. BCM SELF DIAGNOSTIC RESULT

Perform "Self Diagnostic Result" of "BCM" with CONSULT. Refer to [BCS-25, "BCM : CONSULT Function \(BCM - BCM\)"](#).

Is DTC B2562 CRNT?

- YES >> Replace BCM. Refer to [BCS-74, "Removal and Installation"](#).
NO >> Refer to [GI-42, "Intermittent Incident"](#).

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

POWER SUPPLY AND GROUND CIRCUIT

Diagnosis Procedure

INFOID:0000000012432353

Regarding Wiring Diagram information, refer to [BCS-52. "Wiring Diagram"](#).

1.CHECK FUSES AND FUSIBLE LINK

Check that the following fuses and fusible link are not blown.

Terminal No.	Signal name	Fuses and fusible link No.
57	Battery power supply	12 (10A)
70		G (40A)

Is the fuse blown?

- YES >> Replace the blown fuse or fusible link after repairing the affected circuit.
NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT

1. Disconnect BCM connector M99.
2. Check voltage between BCM connector M99 and ground.

BCM		Ground	Voltage
Connector	Terminal		
M99	57	—	Battery voltage
	70		

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair harness or connector.

3.CHECK GROUND CIRCUIT

Check continuity between BCM connector M99 and ground.

BCM		Ground	Continuity
Connector	Terminal		
M99	67	—	Yes

Is the inspection result normal?

- YES >> Inspection End.
NO >> Repair harness or connector.

COMBINATION SWITCH INPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

COMBINATION SWITCH INPUT CIRCUIT

Diagnosis Procedure

INFOID:000000012432354

Regarding Wiring Diagram information, refer to [BCS-52. "Wiring Diagram"](#).

1.CHECK INPUT 1 - 5 CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect BCM and combination switch connectors.
3. Check continuity between BCM connector and combination switch connector.

Combination switch signal	BCM		Combination switch		Continuity
	Connector	Terminal	Connector	Terminal	
INPUT 1	M97	36	M28	11	Yes
INPUT 2		35		9	
INPUT 3		34		7	
INPUT 4		33		10	
INPUT 5		32		13	

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair harness or connectors.

2.CHECK INPUT 1 - 5 CIRCUIT FOR SHORT

Check for continuity between BCM connector and ground.

Combination switch signal	BCM			Continuity
	Connector	Terminal		
INPUT 1	M97	36	Ground	No
INPUT 2		35		
INPUT 3		34		
INPUT 4		33		
INPUT 5		32		

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connectors.

3.CHECK BCM OUTPUT VOLTAGE

1. Connect BCM connector.
2. Check voltage between BCM connector and ground.

COMBINATION SWITCH INPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

BCM signal	Terminals		Voltage	
	(+) (−)			
	BCM			Ground
	Connector	Terminal		
OUTPUT 1	M97	36		
OUTPUT 2		35		
OUTPUT 3		34		
OUTPUT 4		33		
OUTPUT 5		32		

Refer to [BCS-30, "Reference Value"](#).

Is the inspection result normal?

- YES >> Replace combination switch. Refer to [BCS-75, "Removal and Installation"](#).
 NO >> Replace BCM. Refer to [BCS-74, "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

COMBINATION SWITCH OUTPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

COMBINATION SWITCH OUTPUT CIRCUIT

Diagnosis Procedure

INFOID:0000000012432355

Regarding Wiring Diagram information, refer to [BCS-52. "Wiring Diagram"](#).

1. CHECK OUTPUT 1 - 5 CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect BCM and combination switch connectors.
3. Check continuity between BCM connector and combination switch connector.

Combination switch signal	BCM		Combination switch		Continuity
	Connector	Terminal	Connector	Terminal	
OUTPUT 1	M97	6	M28	12	Yes
OUTPUT 2		5		14	
OUTPUT 3		4		5	
OUTPUT 4		3		2	
OUTPUT 5		2		8	

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair harness or connectors.

2. CHECK OUTPUT 1 - 5 CIRCUIT FOR SHORT

Check for continuity between BCM connector and ground.

Combination switch signal	BCM			Continuity
	Connector	Terminal		
OUTPUT 1	M97	6	Ground	No
OUTPUT 2		5		
OUTPUT 3		4		
OUTPUT 4		3		
OUTPUT 5		2		

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connectors.

3. CHECK BCM INPUT SIGNAL

1. Connect BCM and combination switch connectors.
2. Turn ON any switch in the system that is malfunctioning.
3. Check voltage between BCM connector and ground.

COMBINATION SWITCH OUTPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

BCM signal	Terminals			Voltage
	(+)		(-)	
	BCM		Ground	
	Connector	Terminal		
INPUT 1	M97	6		Refer to BCS-30. "Reference Value" .
INPUT 2		5		
INPUT 3		4		
INPUT 4		3		
INPUT 5		2		

Is the inspection result normal?

- Yes >> Replace BCM. Refer to [BCS-74, "Removal and Installation"](#).
 No >> Replace combination switch. Refer to [BCS-75, "Removal and Installation"](#).

COMBINATION SWITCH SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

SYMPTOM DIAGNOSIS

COMBINATION SWITCH SYSTEM SYMPTOMS

Symptom Table

INFOID:000000012432356

1. Perform the data monitor of CONSULT to check for any malfunctioning item.
2. Check the malfunction combinations.

Malfunction item: x

Malfunction combination	Data monitor item															
	FR WIPER HI	FR WIPER LOW	FR WASHER SW	FR WIPER INT	INT VOLUME	RR WIPER ON	RR WIPER INT	RR WASHER SW	TURN SIGNAL R	TURN SIGNAL L	TAIL LAMP SW	HI BEAM SW	HEAD LAMP SW 1	HEAD LAMP SW 2	PASSING SW	FR FOG SW
A		x	x						x	x						
B	x			x									x		x	
C					x			x				x		x		
D					x		x				x					
E					x	x										x
F	x				x		x									
G			x		x	x		x								
H		x		x												
I										x				x	x	x
J									x		x	x	x			
K	All Items															
L	If only one item is detected or the item is not applicable to the combinations A to K															

3. Identify the malfunctioning part from the agreed combination and repair or replace the part.

Malfunction combination	Malfunctioning part	Repair or replace
A	Combination switch INPUT 1 circuit	Inspect the combination switch input circuit applicable to the malfunctioning part. Refer to BCS-68, "Diagnosis Procedure" .
B	Combination switch INPUT 2 circuit	
C	Combination switch INPUT 3 circuit	
D	Combination switch INPUT 4 circuit	
E	Combination switch INPUT 5 circuit	
F	Combination switch OUTPUT 1 circuit	Inspect the combination switch output circuit applicable to the malfunctioning part. Refer to BCS-70, "Diagnosis Procedure" .
G	Combination switch OUTPUT 2 circuit	
H	Combination switch OUTPUT 3 circuit	
I	Combination switch OUTPUT 4 circuit	
J	Combination switch OUTPUT 5 circuit	
K	BCM	Replace BCM. Refer to BCS-74, "Removal and Installation" .
L	Combination switch	Replace the combination switch. Refer to BCS-75, "Removal and Installation" .

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

NORMAL OPERATING CONDITION

Description

INFOID:0000000012432357

SHIPPING MODE

- Shipping mode inhibits battery power consumption during transportation or storage of the vehicle. Vehicle is set to shipping mode before being shipped from the factory.
- When ignition switch is OFF, BCM operates shipping mode.
- BCM control function is limited in shipping mode. Remote keyless entry function does not operate in shipping mode.
- For shipping mode cancel operation, refer to [BCS-61, "Work Procedure"](#).

NOTE:

Do not cancel shipping mode during storage of the vehicle. Shipping mode should not be canceled until just prior to customer delivery.

TRANSIT MODE

- BCM is in transit mode if turn signal indicators in combination meter illuminate for 1 minute when ignition switch is turned from OFF to ON.
- In this case, cancel operation must be performed.
- For transit mode cancel operation, refer to [BCS-62, "Work Procedure"](#).

NOTE:

Do not cancel transit mode during storage of the vehicle. Transit mode should not be canceled until just prior to customer delivery.

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

REMOVAL AND INSTALLATION

BCM (BODY CONTROL MODULE)

Removal and Installation

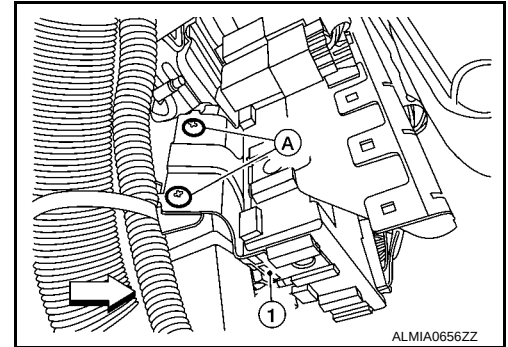
INFOID:000000012432358

REMOVAL

CAUTION:

Before replacing BCM, perform "READ CONFIGURATION" to save or print current vehicle specification. Refer to [BCS-59, "Description"](#).

1. Disconnect negative and positive battery terminals, then wait at least three minutes. Refer to [PG-70, "Removal and Installation \(Battery\)"](#).
2. Remove instrument lower panel LH. Refer to [IP-24, "Removal and Installation"](#).
3. Remove screws (A) and remove the BCM (1) from the steering member and position aside.
⇐: Front
4. Disconnect the harness connectors from the BCM.
5. Remove relays from relay bracket.
6. Remove relay bracket from BCM to transfer to new BCM.



INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

- Perform "CONFIGURATION (BCM)" when replacing BCM. Refer to [BCS-59, "Description"](#).
- Make sure to perform the system initialization (NATS) (if equipped) when replacing BCM. Refer to [BCS-58, "Description"](#).
- When replacing BCM, if new BCM does not come with keyfobs attached, all existing keyfobs must be re-registered.
- For initialization and registration of Intelligent Key, refer to CONSULT Immobilizer mode and follow the on-screen instructions.

COMBINATION SWITCH

< REMOVAL AND INSTALLATION >

[WITH INTELLIGENT KEY SYSTEM]

COMBINATION SWITCH

Removal and Installation

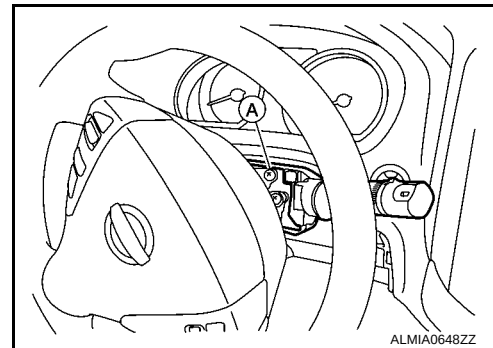
INFOID:000000012432359

CAUTION:


- Before servicing, turn the ignition switch OFF, disconnect both battery terminals and wait at least three minutes.
- Do not use air or electric tools when removing or installing the combination switch.

REMOVAL

1. Disconnect the negative and positive battery terminals, then wait at least three minutes. Refer to [PG-70, "Removal and Installation \(Battery\)"](#).
2. Remove the steering column covers. Refer to [IP-17, "Removal and Installation"](#).
3. Rotate steering wheel clockwise to access first combination switch screw (A) and remove.



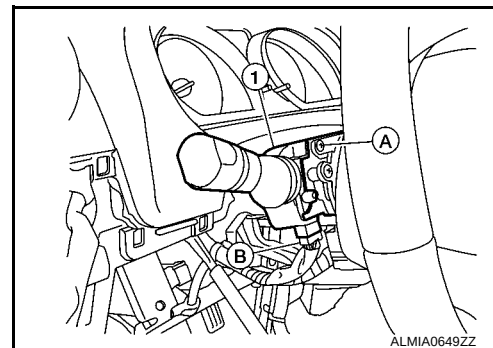4. Rotate steering wheel counter-clockwise to access second combination switch screw (A) and remove.
5. Disconnect the harness connector (B) from the combination switch (1) and remove.



INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

- After the work is completed, make sure no system malfunction is detected by air bag warning lamp.
- In case a malfunction is detected by the air bag warning lamp, reset with the self-diagnosis function and delete the memory with CONSULT.
- If a malfunction is still detected after the above operation, perform self-diagnosis to repair malfunctions. Refer to [BCS-58, "Description"](#).

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000012432360

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

COMPONENT PARTS

< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

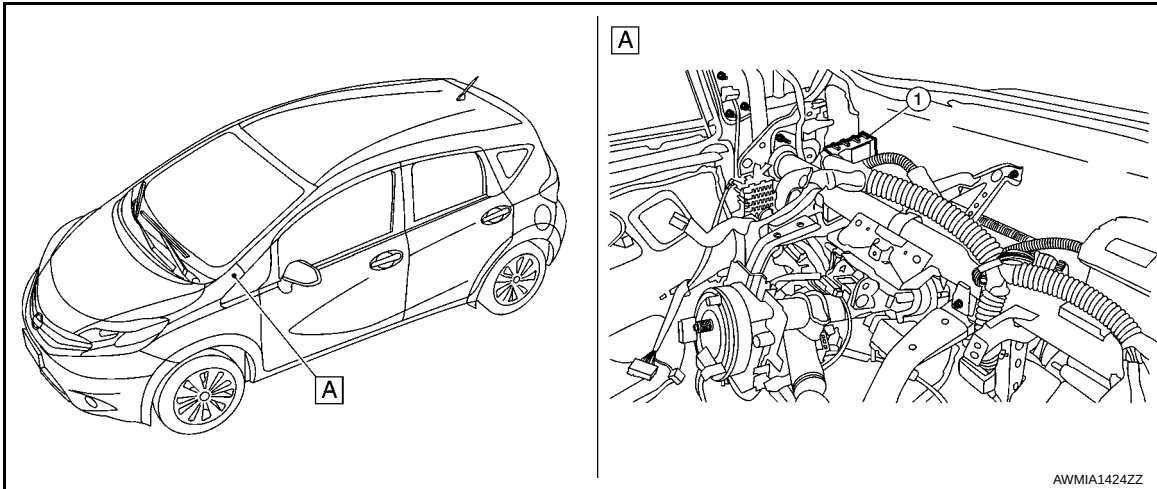
SYSTEM DESCRIPTION

COMPONENT PARTS

BODY CONTROL SYSTEM

BODY CONTROL SYSTEM : Component Parts Location

INFOID:0000000012432361




1. BCM

A. View with instrument panel removed

POWER CONSUMPTION CONTROL SYSTEM

POWER CONSUMPTION CONTROL SYSTEM : Component Parts Location

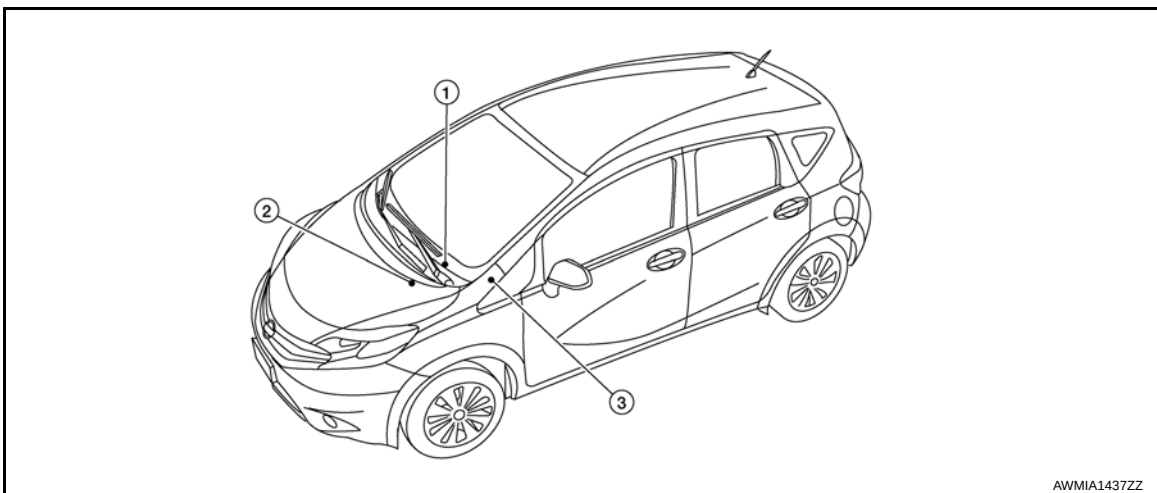INFOID:0000000012432362



1 Combination meter
Refer to [MWI-8, "METER SYSTEM : Component Parts Location"](#) (Type A) or [MWI-58, "METER SYSTEM : Component Parts Location"](#) (Type B).

2 IPDM E/R
Refer to [PCS-4, "Component Parts Location"](#).

3 BCM
Refer to [BCS-77, "BODY CONTROL SYSTEM : Component Parts Location"](#).

SYSTEM

BODY CONTROL SYSTEM

BODY CONTROL SYSTEM : System Description

INFOID:000000012432363

OUTLINE

- BCM (Body Control Module) controls the various electrical components. It inputs the information required to the control from CAN communication and the signal received from each switch and sensor.
- BCM has combination switch reading function for reading the operation status of combination switches (light, turn signal, wiper and washer) in addition to a function for controlling the operation of various electrical components. It also has the signal transmission function as the passed point of signal and the power saving control function that reduces the power consumption with the ignition switch OFF.
- BCM is equipped with the diagnosis function that performs the diagnosis with CONSULT and various settings.

BCM CONTROL FUNCTION LIST

System	Reference
Combination switch reading system	BCS-79, "COMBINATION SWITCH READING SYSTEM : System Description"
Signal buffer system	BCS-85, "SIGNAL BUFFER : System Description"
Power consumption control system	BCS-85, "POWER CONSUMPTION CONTROL SYSTEM : System Description"
Shipping mode control system	BCS-87, "SHIPPING MODE CONTROL SYSTEM : System Description"
Transit mode control system	BCS-88, "TRANSIT MODE CONTROL SYSTEM : System Description"
Headlamp system	EXL-8, "HEADLAMP SYSTEM : System Description"
Daytime running light system (if equipped)	EXL-9, "DAYTIME RUNNING LIGHT SYSTEM : System Description"
Turn signal and hazard warning lamp system	EXL-10, "TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM : System Description"
Parking, license plate and tail lamps system	EXL-11, "PARKING, LICENSE PLATE AND TAIL LAMP SYSTEM : System Description"
Front fog lamp system (if equipped)	EXL-10, "FRONT FOG LAMP SYSTEM : System Description"
Exterior lamp battery saver system	EXL-8, "HEADLAMP SYSTEM : System Description"
Interior room lamp control system	INL-7, "INTERIOR ROOM LAMP CONTROL SYSTEM : System Description"
Interior room lamp battery saver system	INL-7, "INTERIOR ROOM LAMP CONTROL SYSTEM : System Description"
Front wiper and washer system	WW-8, "FRONT WIPER AND WASHER SYSTEM : System Description"
Rear wiper and washer system	WW-10, "REAR WIPER AND WASHER SYSTEM : System Description"
Rear window defogger system	DEF-6, "System Description"
Manual air conditioning system	HAC-11, "System Description"
Warning chime system	WCS-7, "WARNING CHIME SYSTEM : System Description"
Power door lock system	DLK-198, "POWER DOOR LOCK SYSTEM : System Description"
Nissan vehicle immobilizer system (NVIS)	SEC-123, "NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS : System Description"
Power window system	PWC-8, "System Description"

SYSTEM

< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

System	Reference
RAP (retained accessory power) system	BCS-98, "RETAINED PWR : CONSULT Function (BCM - RETAINED PWR)"
Tire pressure monitoring system (if equipped)	WT-8, "TIRE PRESSURE MONITORING SYSTEM : System Description"

BODY CONTROL SYSTEM : Fail-safe

INFOID:0000000012432364

FAIL-SAFE CONTROL BY DTC

BCM performs fail-safe control when any DTC are detected.

Display contents of CONSULT	Fail-safe	Cancellation
B2190: NATS ANTENNA AMP	Inhibit engine cranking	Erase DTC
B2191: DIFFERENCE OF KEY	Inhibit engine cranking	Erase DTC
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC
B2195: ANTI SCANNING	Inhibit engine cranking	Ignition switch ON → OFF
B2196: DONGLE NG	Inhibit engine cranking	Erase DTC

FAIL-SAFE CONTROL OF COMBINATION SWITCH READING FUNCTION CAUSED BY LOW POWER SUPPLY VOLTAGE

If voltage of battery power supply lower, BCM maintains combination switch reading to the status when input voltage is less than approximately 9 V.

NOTE:

When voltage of battery power supply is approximately 9 V or more, combination switch reading function returns to normal operation.

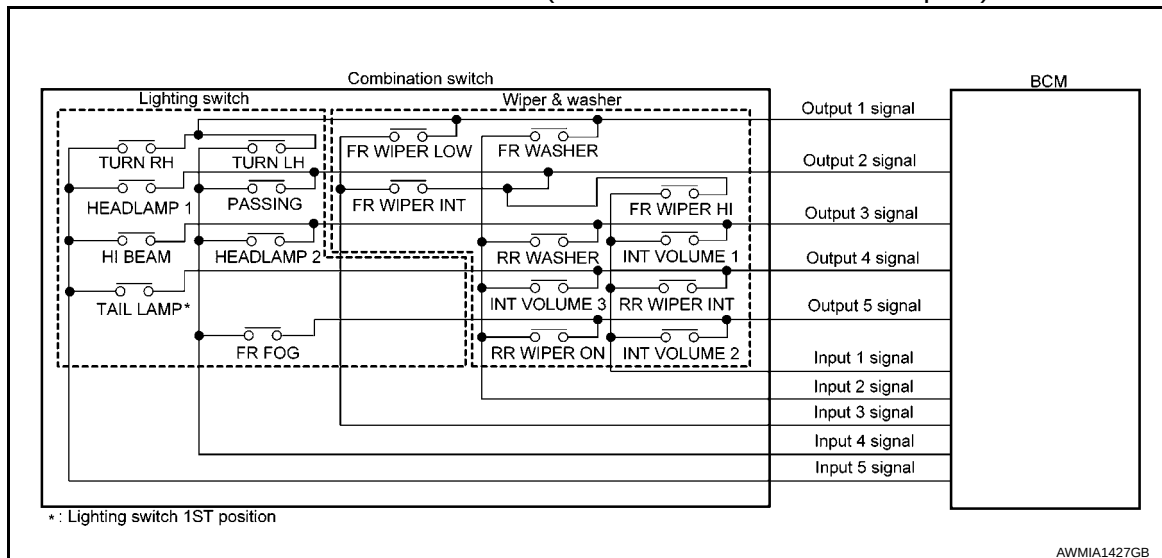
COMBINATION SWITCH READING SYSTEM

COMBINATION SWITCH READING SYSTEM : System Description

INFOID:0000000012432365

SYSTEM DIAGRAM

Combination Switch Circuit (With Variable Intermittent Wipers)




SYSTEM

< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

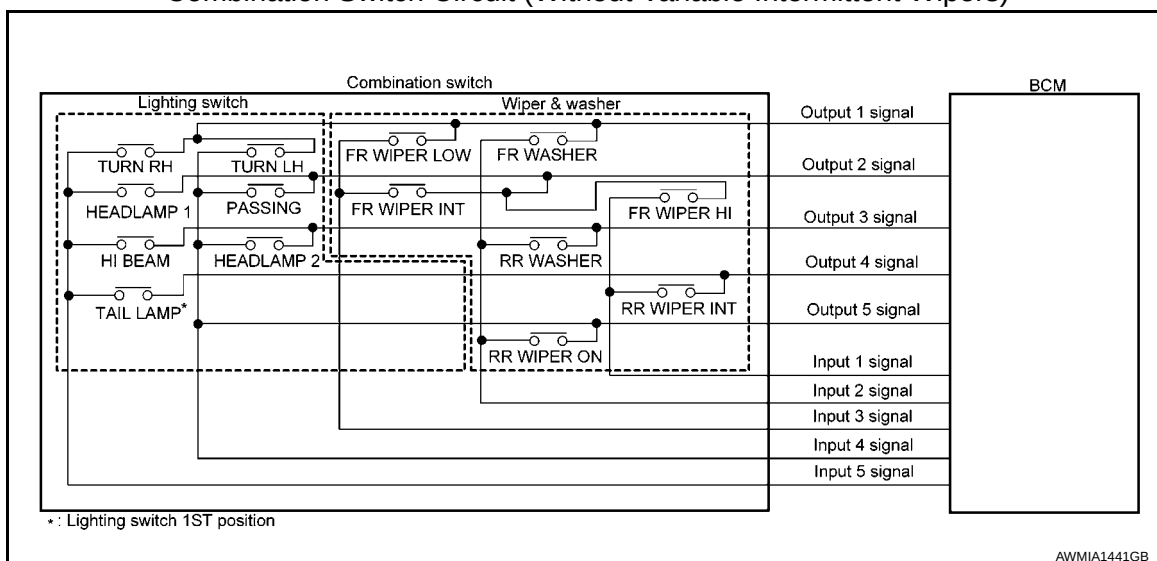Combination Switch Circuit (Without Variable Intermittent Wipers)




OUTLINE

- BCM reads the status of the combination switch (light, turn signal, wiper and washer) and recognizes the status of each switch.
- BCM has a combination of 5 output terminals (OUTPUT 1 - 5) and 5 input terminals (INPUT 1 - 5). It reads a maximum of 20 switch states.

COMBINATION SWITCH MATRIX (WITH VARIABLE INTERMITTENT WIPERS)

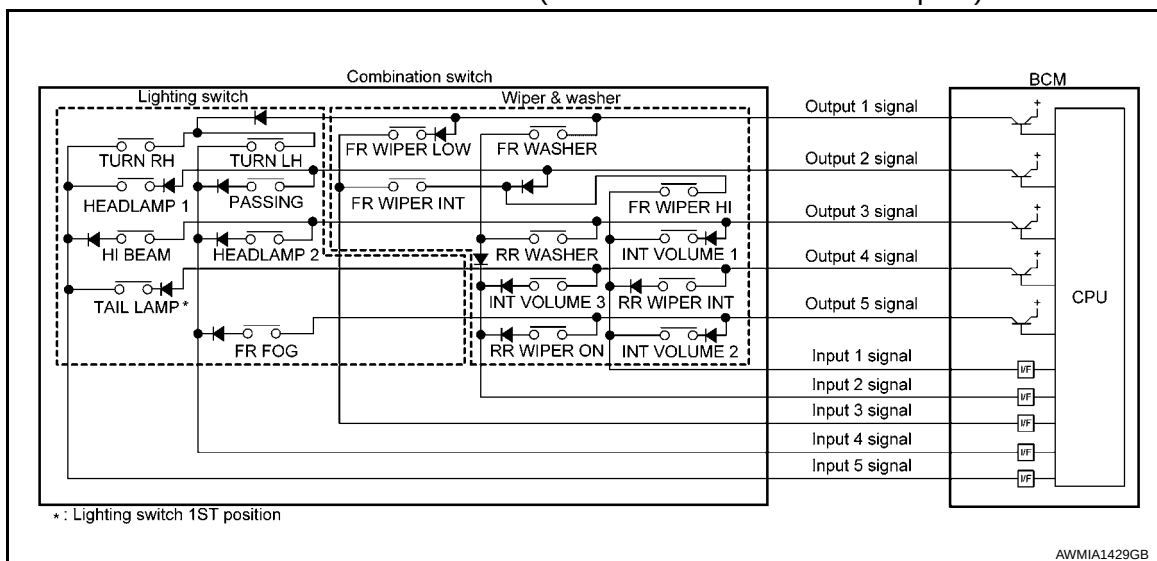Combination switch circuit (With Variable Intermittent Wipers)



Combination switch INPUT-OUTPUT system list

System	INPUT 1	INPUT 2	INPUT 3	INPUT 4	INPUT 5
OUTPUT 1	—	FR WASHER	FR WIPER LOW	TURN LH	TURN RH
OUTPUT 2	FR WIPER HI	—	FR WIPER INT	PASSING	HEADLAMP 1
OUTPUT 3	INT VOLUME 1	RR WASHER	—	HEADLAMP 2	HI BEAM
OUTPUT 4	RR WIPER INT	INT VOLUME 3	—	—	TAIL LAMP
OUTPUT 5	INT VOLUME 2	RR WIPER ON	—	FR FOG	—

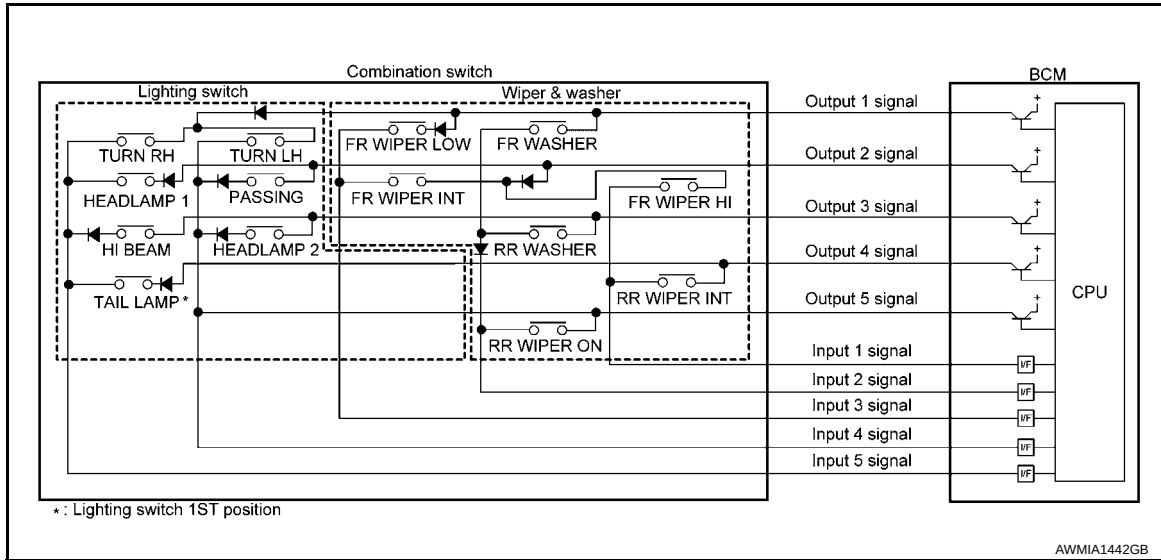
COMBINATION SWITCH MATRIX (WITHOUT VARIABLE INTERMITTENT WIPERS)

SYSTEM

< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

Combination Switch Circuit (Without Variable Intermittent Wipers)




Combination switch INPUT-OUTPUT system list

System	INPUT 1	INPUT 2	INPUT 3	INPUT 4	INPUT 5
OUTPUT 1	—	FR WASHER	FR WIPER LOW	TURN LH	TURN RH
OUTPUT 2	FR WIPER HI	—	FR WIPER INT	PASSING	HEADLAMP 1
OUTPUT 3	—	RR WASHER	—	HEADLAMP 2	HI BEAM
OUTPUT 4	RR WIPER INT	—	—	—	TAIL LAMP
OUTPUT 5	—	RR WIPER ON	—	—	—

COMBINATION SWITCH READING FUNCTION

Description

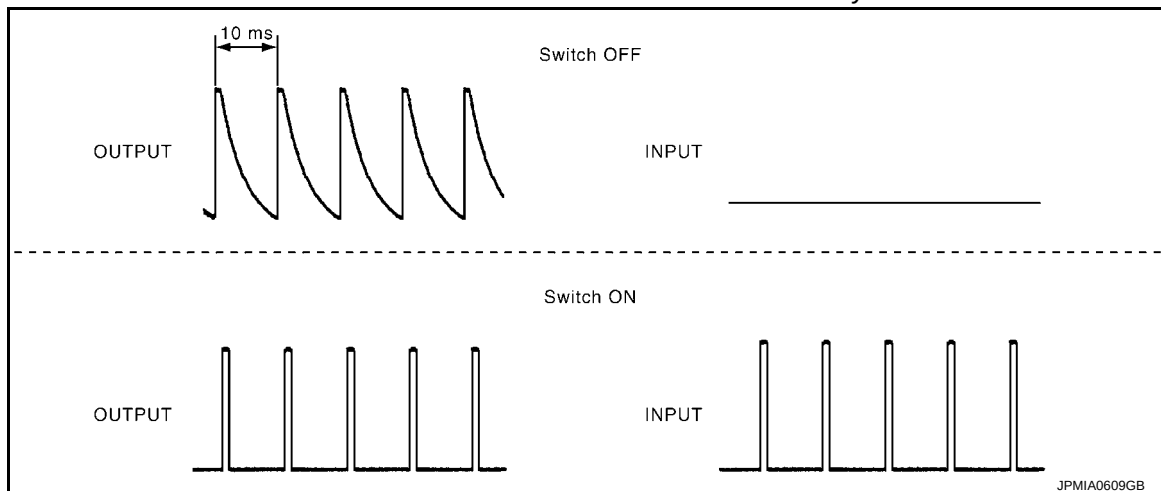- BCM reads the status of the combination switch at 10 ms intervals normally.



NOTE:

BCM reads the status of the combination switch at 60 ms intervals when BCM is controlled at low power consumption control mode.

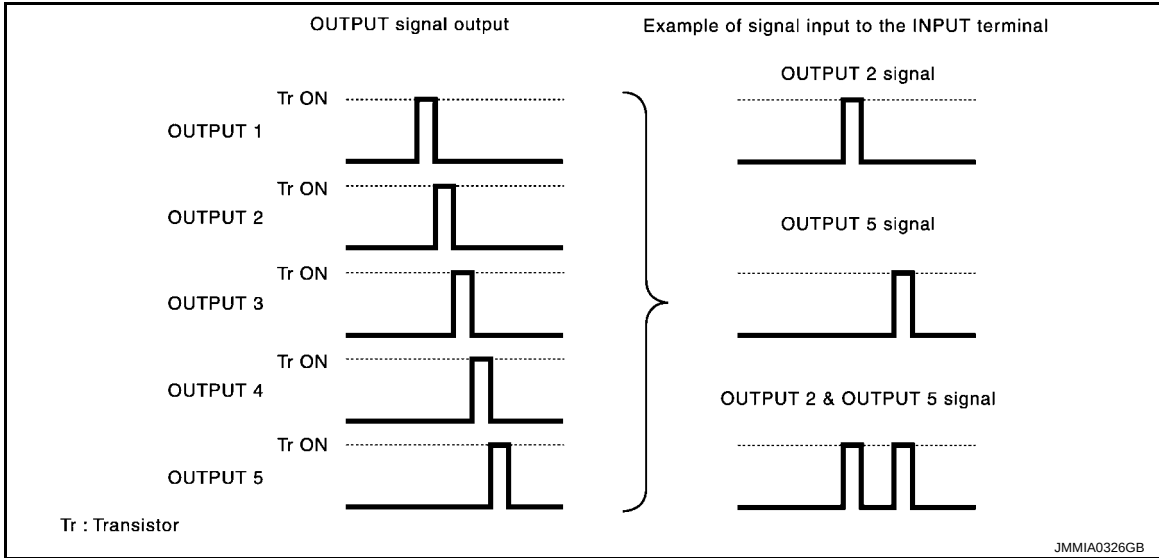
- BCM operates as follows and judges the status of the combination switch.
 - It operates the transistor on OUTPUT side in the following order: OUTPUT 1 → 2 → 3 → 4 → 5, and outputs voltage waveform.
 - The voltage waveform of OUTPUT corresponding to the formed circuit is input into the interface on INPUT side if any (1 or more) switches are ON.

SYSTEM

< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

- It reads this change of the voltage as the status signal of the combination switch.




Operation Example

In the following operation example, the combination of the status signals of the combination switch is replaced as follows: INPUT 1 - 5 to "1 - 5" and OUTPUT 1 - 5 to "A - E".

Example 1: When a switch (TAIL LAMP) is turned ON

- The circuit between OUTPUT 4 and INPUT 5 is formed when the TAIL LAMP switch is turned ON.

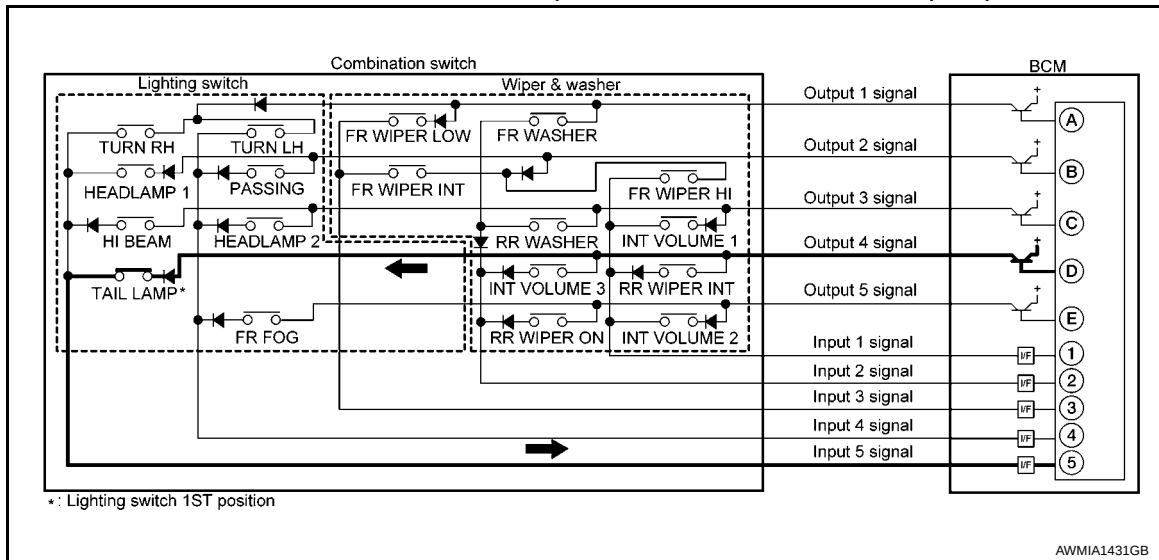Combination switch circuit (With Variable Intermittent Wipers)




SYSTEM

< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

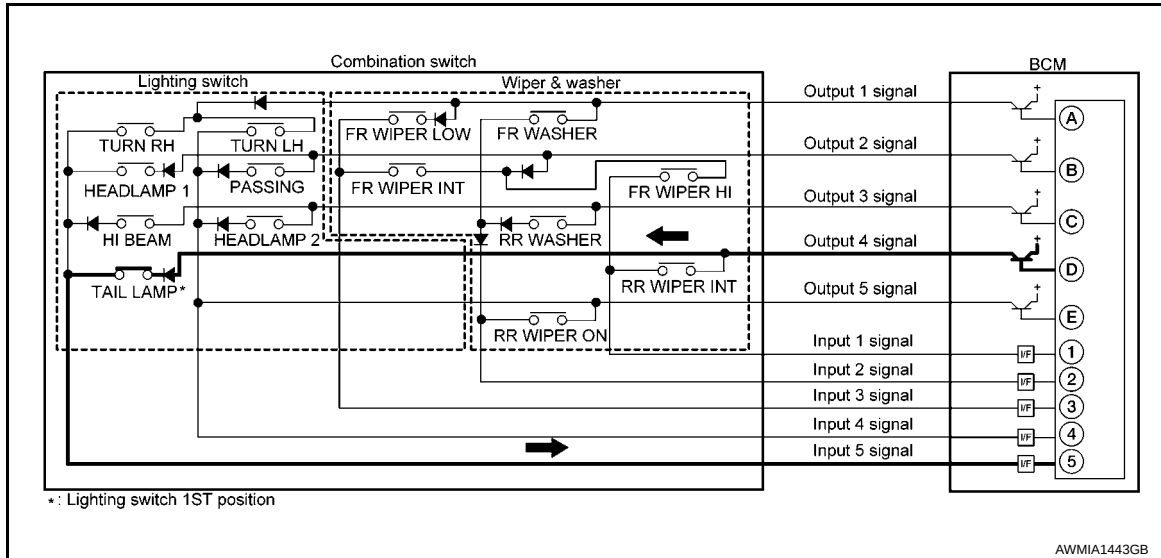Combination switch circuit (Without Variable Intermittent Wipers)




- BCM detects the combination switch status signal “5D” when the signal of OUTPUT 4 is input to INPUT 5.
- BCM judges that the TAIL LAMP switch is ON when the signal “5D” is detected.

Example 2: When some switches (TURN RH, TAIL LAMP) are turned ON

- The circuits between OUTPUT 1 and INPUT 5 and between OUTPUT 4 and INPUT 5 are formed when the TURN RH switch and TAIL LAMP switch are turned ON.

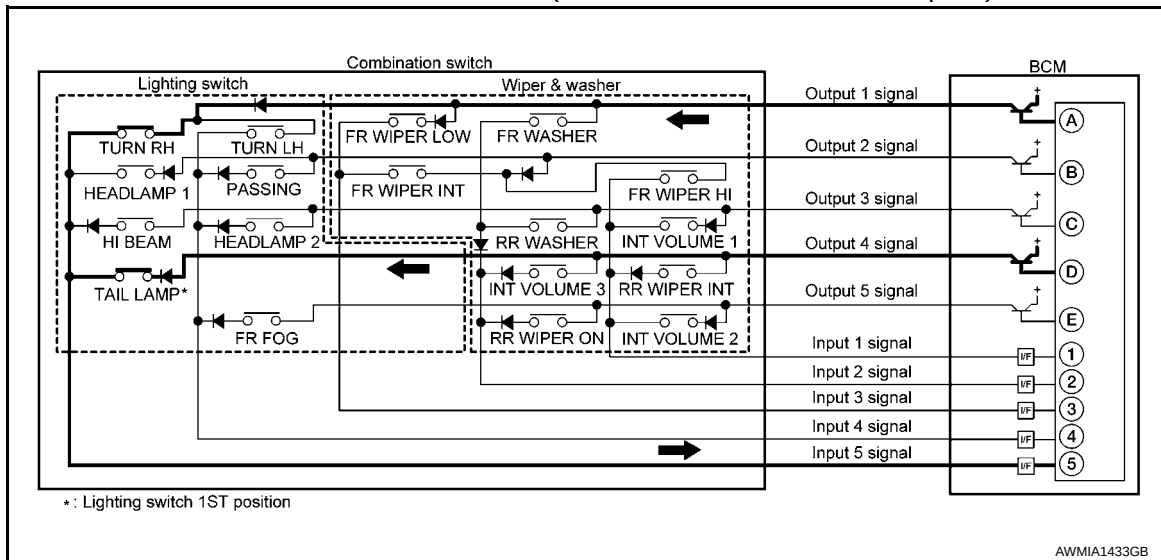Combination switch circuit (With Variable Intermittent Wipers)




SYSTEM

< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

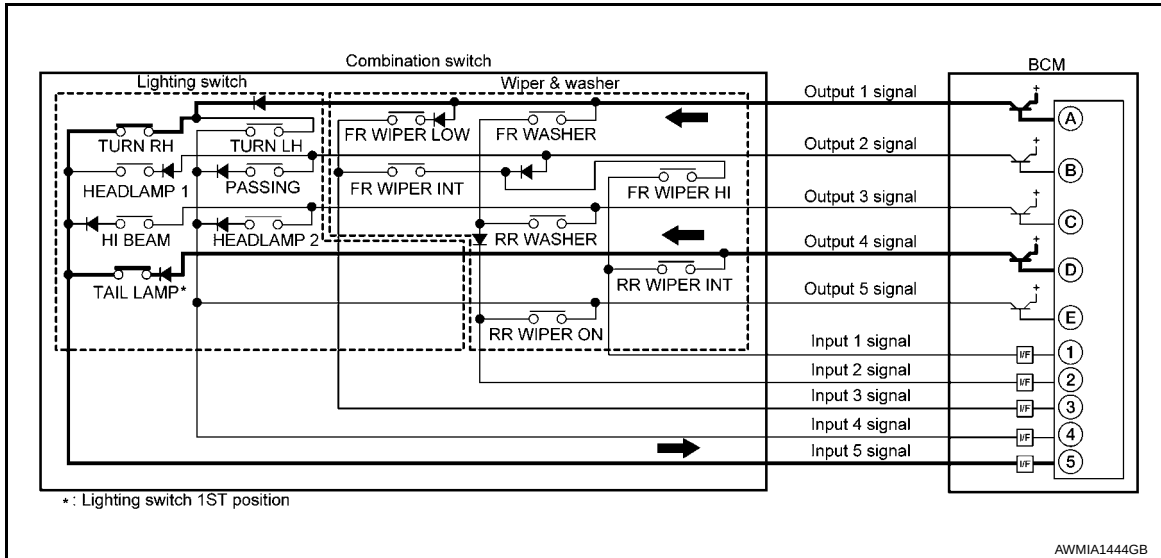Combination switch circuit (Without Variable Intermittent Wipers)



- BCM detects the combination switch status signal "5AD" when the signals of OUTPUT 1 and OUTPUT 4 are input to INPUT 5.
- BCM judges that the TURN RH switch and TAIL LAMP switch are ON when the signal "5AD" is detected.

WIPER INTERMITTENT DIAL POSITION (WITH VARIABLE INTERMITTENT WIPERS)

BCM judges the wiper intermittent dial 1 - 7 by the status of INT VOLUME 1, 2 and 3 switches.

Wiper intermittent dial position	Switch status		
	INT VOLUME 1	INT VOLUME 2	INT VOLUME 3
1	ON	ON	ON
2	ON	ON	OFF
3	ON	OFF	OFF
4	OFF	OFF	OFF
5	OFF	OFF	ON
6	OFF	ON	ON
7	OFF	ON	OFF

NOTE:

For details of wiper intermittent dial position, refer to [WW-8, "FRONT WIPER AND WASHER SYSTEM : System Description"](#).

SIGNAL BUFFER

SYSTEM

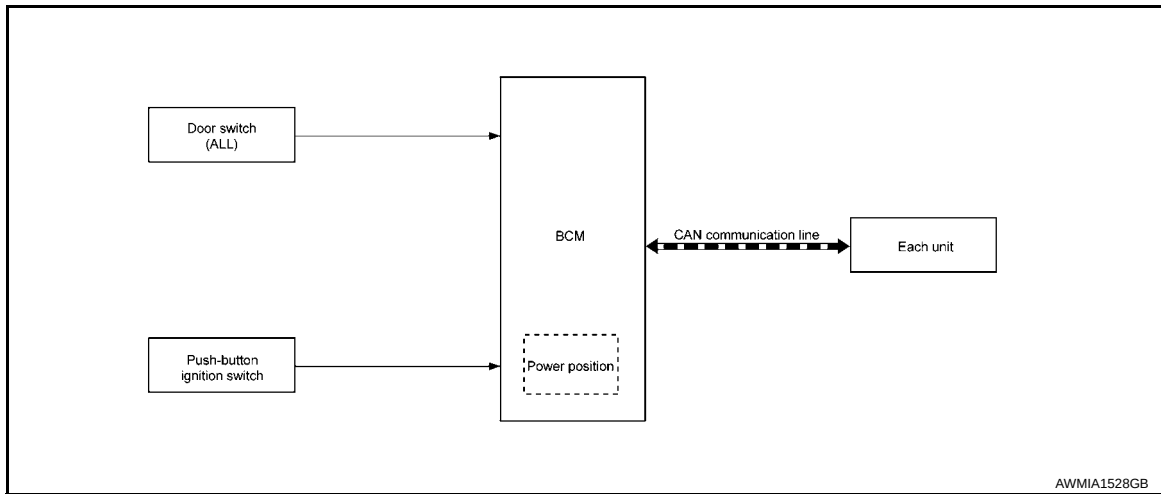
< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

SIGNAL BUFFER : System Description

INFOID:000000012432366

SYSTEM DIAGRAM



OUTLINE

BCM has the signal transmission function that outputs/transmits each input/received signal to each unit.

SIGNAL TRANSMISSION FUNCTION LIST


Signal name	Input	Output	Description
Ignition switch ON signal	Ignition switch	IPDM E/R (CAN)	Inputs the ignition switch signal and transmits it via CAN communication.
Brake switch signal	Stop lamp switch	IPDM E/R (CAN)	Inputs the brake switch signal and transmits it via CAN communication.
Door switch signal	Any door switch	- Combination meter (CAN) - IPDM E/R (CAN)	Inputs the door switch signal and transmits it via CAN communication.
Blower fan ON signal	Front air control	ECM (CAN)	Inputs each signal and transmits them via CAN communication.
A/C ON signal			

POWER CONSUMPTION CONTROL SYSTEM

POWER CONSUMPTION CONTROL SYSTEM : System Description

INFOID:000000012432367

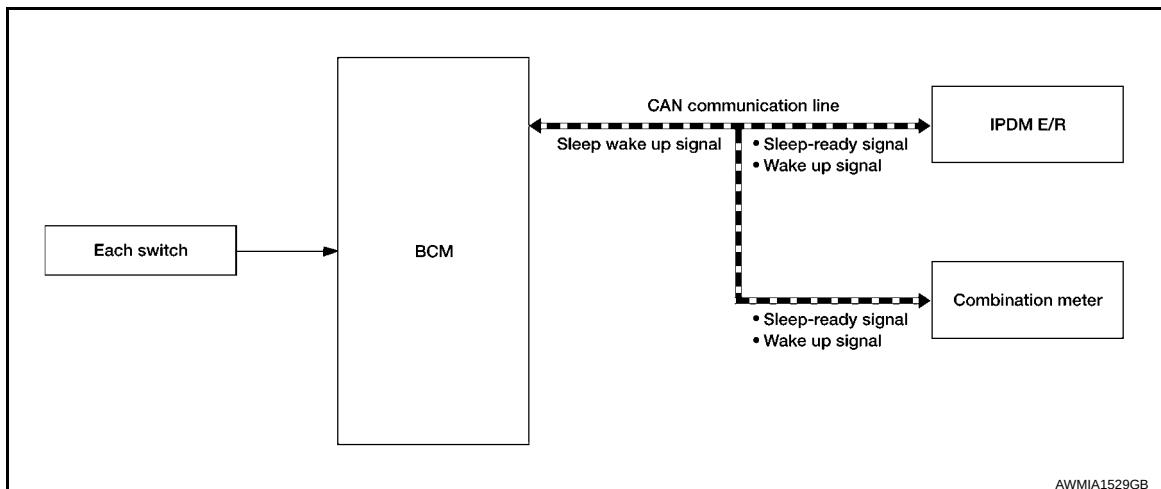SYSTEM DIAGRAM



< SYSTEM DESCRIPTION >

OUTLINE

- BCM incorporates a power saving control function that reduces the power consumption according to the vehicle status.
- BCM switches the status (control mode) by itself with the power saving control function. It performs the sleep request to each unit (IPDM E/R and combination meter) that operates with the ignition switch OFF.

Normal mode (wake-up)

- CAN communication is normally performed with other units
- Each control with BCM is operating properly

CAN communication sleep mode (CAN sleep)

- CAN transmission is stopped
- Control with BCM only is operating

Low power consumption mode (BCM sleep)

- Low power consumption control is active
- CAN transmission is stopped

LOW POWER CONSUMPTION CONTROL WITH BCM

BCM reduces the power consumption with the following operation in the low power consumption mode.

- The reading interval of each switch changes from 10 ms interval to 60 ms interval.

SLEEP MODE ACTIVATION

- BCM receives the sleep-ready signal (ready) from IPDM E/R and combination meter via CAN communication.
- BCM transmits the sleep wake up signal (sleep) to each unit when all of the CAN sleep conditions are fulfilled.
- Each unit stops the transmission of CAN communication with the sleep wake-up signal. BCM is in CAN communication sleep mode.
- BCM is in the low power consumption mode and performs the low power consumption control when all of the BCM sleep conditions are fulfilled with CAN sleep condition.

Sleep condition

CAN sleep condition	BCM sleep condition
• Receiving the sleep-ready signal (ready) from all units • Ignition switch: OFF • Vehicle security system alarm: No operation • Warning lamp: Not operation • Stop lamp switch: OFF • Turn signal indicator lamp: No operation • Exterior lamp: OFF • Door lock status: No change • CONSULT communication status: No communication • Door switch status: No change • Rear window defogger: OFF • Driver door lock status: No change • Key switch status: No change	• Interior room lamp battery saver: Time out • RAP system: OFF • Nissan Vehicle Immobilizer System (NVIS) - NATS: No operation • Remote keyless entry receiver communication status: No communication

WAKE-UP OPERATION

- BCM transmits the sleep wake up signal (wake up) to each unit when any of the wake-up conditions are fulfilled. It changes from the low power consumption mode to the normal mode.
- Each unit starts the transmission of CAN communication with the sleep wake up signal. Each unit transmits the wake up signal to BCM via CAN communication to report the CAN communication start.

SYSTEM

< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

Wake-up condition

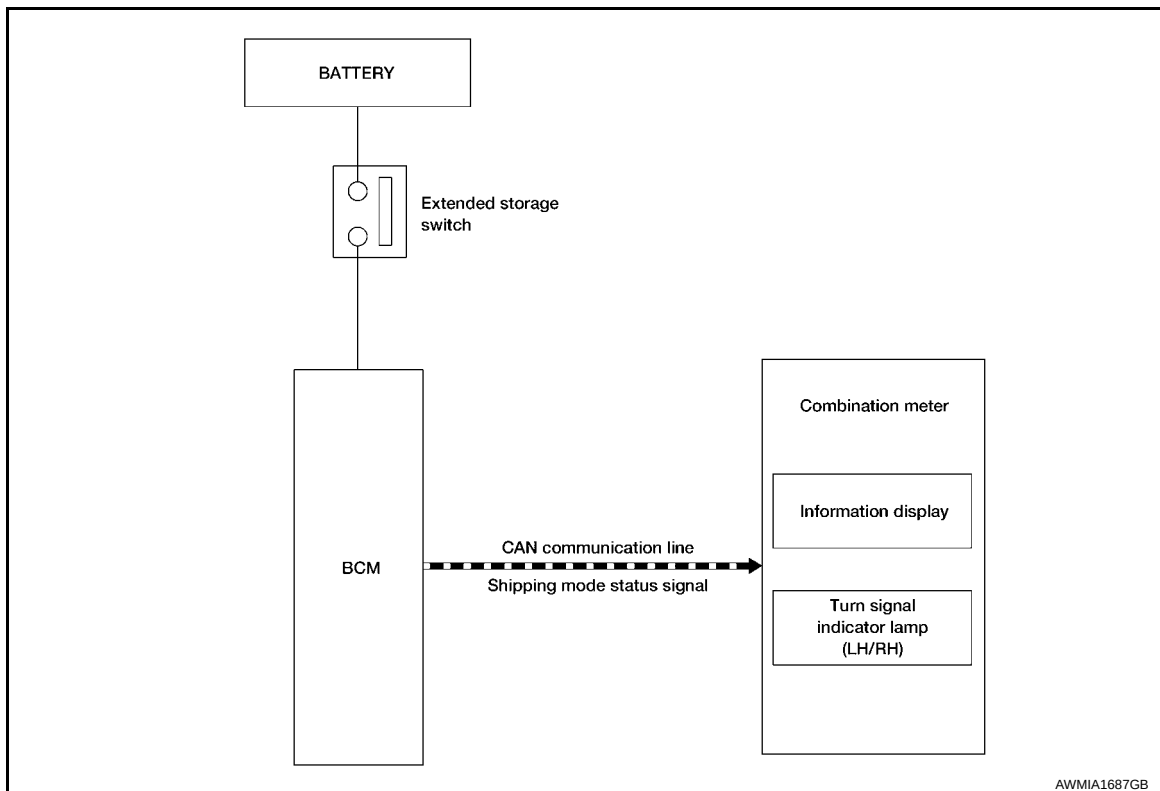
- Receiving the sleep-ready signal (Not-ready) from any unit
- Hazard switch: OFF→ON
- HI BEAM switch: OFF→ON, ON→OFF
- PASSING switch: OFF→ON, ON→OFF
- HEADLAMP 1 switch: OFF→ON, ON→OFF
- HEADLAMP 2 switch: OFF→ON, ON→OFF
- TAIL LAMP switch: OFF→ON
- TURN LH: OFF→ON, ON→OFF
- TURN RH: OFF→ON, ON→OFF
- Front door switch LH: OFF→ON, ON→OFF
- Front door switch RH: OFF → ON, ON → OFF
- Rear door switch LH: OFF→ON, ON→OFF
- Rear door switch RH: OFF → ON, ON → OFF
- Stop lamp switch: ON
- Door lock and unlock switch: NEUTRAL → LOCK, NEUTRAL → UNLOCK
- Front door lock assembly LH (key cylinder switch): NEUTRAL → LOCK, NEUTRAL → UNLOCK
- Remote keyless entry receiver: Receiving valid keyfob

SHIPPING MODE CONTROL SYSTEM

SHIPPING MODE CONTROL SYSTEM : System Description

INFOID:000000012432368

SYSTEM DIAGRAM



DESCRIPTION

- The BCM switches the status (shipping mode or normal mode) by itself according to the extended storage switch condition, and transmits the shipping mode status signal to the combination meter and each unit via CAN communication.
- When the shipping mode function is activated, the control units will not detect DTCs.
- BCM control functions are limited in shipping mode. Refer to [BCS-136, "Description"](#).
- When the BCM is in shipping mode, a message may be shown in the combination meter or display.
- For shipping mode cancel operation refer to [BCS-125, "Work Procedure"](#).

TRANSIT MODE CONTROL SYSTEM

TRANSIT MODE CONTROL SYSTEM : System Description

INFOID:000000012432369

DESCRIPTION

Transit mode is a BCM function that disables several electrical functions such as door lock/unlock by remote, back door open by remote, panic alarm, anti-theft alarm, etc. Vehicles are shipped with the BCM in transit mode to help prevent the battery from becoming discharged during dealer storage.

DETERMINING TRANSIT MODE STATUS

Use the table below to determine the transit mode status.

Status	Symptom
Transit Mode	When ignition switch is turned from OFF to ON, turn signal indicators will illuminate for 1 minute.
Normal Mode (not in transit mode)	When ignition switch is turned from OFF to ON, turn signal indicators stay OFF (do not illuminate).

CANCELING TRANSIT MODE

NOTE:

Transit mode can only be canceled. Once transit mode has been canceled, it cannot be activated again. To cancel transit mode, refer to [BCS-126, "Work Procedure"](#).

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:0000000012432370

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Direct Diagnostic Mode	Description
ECU Identification	The BCM part number is displayed.
Self Diagnostic Result	The BCM self diagnostic results are displayed.
Data Monitor	The BCM input/output data is displayed in real time.
Active Test	The BCM activates outputs to test components.
Work support	The settings for BCM functions can be changed.
Configuration	- The vehicle specification can be read and saved. - The vehicle specification can be written when replacing BCM.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication is displayed.

SYSTEM APPLICATION

BCM can perform the following functions.

System	Sub System	Direct Diagnostic Mode						
		ECU Identification	Self Diagnostic Result	Data Monitor	Active Test	Work support	Configuration	CAN DIAG SUPPORT MNTR
Door lock	DOOR LOCK			x	x	x		
Rear window defogger	REAR DEFOGGER			x	x			
Warning chime	BUZZER			x	x			
Interior room lamp timer	INT LAMP			x	x	x		
Remote keyless entry system	MULTI REMOTE ENT			x	x	x		
Exterior lamp	HEAD LAMP			x	x	x		
Wiper and washer	WIPER			x	x	x		
Turn signal and hazard warning lamps	FLASHER			x	x			
Air conditioner	AIR CONDITIONER			x				
Combination switch	COMB SW			x				
BCM	BCM	x	x			x	x	x
Immobilizer	IMMU		x		x	x		
Interior room lamp battery saver	BATTERY SAVER			x	x	x		
Vehicle security system	THEFT ALM			x		x		
RAP system	RETAINED PWR			x		x		
Signal buffer system	SIGNAL BUFFER			x				
TPMS	AIR PRESSURE MONITOR		x	x	x	x		
Panic alarm system	PANIC ALARM				x			

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

DOOR LOCK

DOOR LOCK : CONSULT Function (BCM - DOOR LOCK)

INFOID:000000012432371

DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [On/Off]	Indicates condition of ignition switch ON position.
KEY ON SW [On/Off]	Indicates condition of key switch.
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.
CDL UNLOCK SW [On/Off]	Indicates condition of unlock signal from door lock and unlock switch.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
DOOR SW-BK [On/Off]	Indicates condition of back door switch.
ACC ON SW [On/Off]	Indicates condition of ignition switch ACC position.
KEYLESS LOCK [On/Off]	Indicates condition of lock signal from keyfob.
KEYLESS UNLOCK [On/Off]	Indicates condition of unlock signal from keyfob.
KEY CYL LK-SW [On/Off]	Indicates condition of lock signal from door key cylinder switch.
KEY CYL UN-SW [On/Off]	Indicates condition of unlock signal from door key cylinder switch.
VEHICLE SPEED [km/h/mph]	Indicates vehicle speed signal received from combination meter on CAN communication line.

ACTIVE TEST

Test Item	Description
DOOR LOCK	This test is able to check door lock operation [OTR ULK/DR UNLK/ALL UNLK/ALL LCK].

WORK SUPPORT

Support Item	Setting	Description
DOOR LOCK-UNLOCK SET	ON*	Automatic door locks function ON.
	OFF	Automatic door locks function OFF.
AUTOMATIC DOOR LOCK SELECT	P RANGE	Doors lock automatically when shifted out of Park (P).
	VH SPD*	Doors lock automatically when vehicle speed reaches 24 km/h (15 mph).
AUTOMATIC DOOR UNLOCK SELECT	MODE6*	Drivers door unlocks automatically when key is removed.
	MODE5	Drivers door unlocks automatically when shifted into Park (P).
	MODE4	Drivers door unlocks automatically when ignition is switched from ON to OFF.
	MODE3	Doors unlock automatically when key is removed.
	MODE2	Doors unlock automatically when shifted into Park (P).
	MODE1	Doors unlock automatically when ignition is switched from ON to OFF.
AUTOMATIC LOCK/UNLOCK SELECT	Lock/Unlock*	Automatic door locks function operates in lock and unlock.
	Lock Only	Automatic door locks function operates in lock only.
	Unlock Only	Automatic door locks function operates in unlock only.
	Off	Automatic door locks function OFF.

* : Initial setting

REAR DEFOGGER

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

REAR DEFOGGER : CONSULT Function (BCM - REAR DEFOGGER)

INFOID:0000000012432372

DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [On/Off]	Indicates condition of ignition switch ON position.
ACC ON SW [On/Off]	Indicates condition of ignition switch ACC position.
REAR DEF SW [On/Off]	Indicates condition of rear window defogger switch.
RR DEF TIME [On/Off]	Indicates condition of rear window defogger switch timer.

ACTIVE TEST

Test Item	Description
REAR DEFOGGER	This test is able to check rear window defogger operation [Off/On].

BUZZER

BUZZER : CONSULT Function (BCM - BUZZER)

INFOID:0000000012432373

DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [On/Off]	Indicates condition of ignition switch ON position.
KEY ON SW [On/Off]	Indicates condition of key switch.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
REVERSE SW CAN [On/Off]	Indicates reverse switch signal received from TCM on CAN communication line.
TAIL LAMP SW [On/Off]	Indicates condition of combination switch.
FR FOG SW [On/Off]	Indicates condition of front fog lamp switch.
VEHICLE SPEED [km/h/mph]	Indicates vehicle speed signal received from combination meter on CAN communication line.

ACTIVE TEST

Test Item	Description
IGN KEY WARN ALM	This test is able to check key warning chime operation [On/Off].
SEAT BELT WARN TEST	This test is able to check seat belt warning chime operation [On/Off].
LIGHT WARN ALM	This test is able to check light warning chime operation [On/Off].

INT LAMP

INT LAMP : CONSULT Function (BCM - INT LAMP)

INFOID:0000000012432374

DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [On/Off]	Indicates condition of ignition switch ON position.
KEY ON SW [On/Off]	Indicates condition of key switch.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
DOOR SW-BK [On/Off]	Indicates condition of back door switch.
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

Monitor Item [Unit]	Description
CDL UNLOCK SW [On/Off]	Indicates condition of unlock signal from door lock and unlock switch.
KEYLESS LOCK [On/Off]	Indicates condition of lock signal from keyfob.
KEYLESS UNLOCK [On/Off]	Indicates condition of unlock signal from keyfob.
KEY CYL LK-SW [On/Off]	Indicates condition of lock signal from door key cylinder switch.
KEY CYL UN-SW [On/Off]	Indicates condition of unlock signal from door key cylinder switch.
ACC SW [On/Off]	Indicates condition of ignition switch ACC position.

ACTIVE TEST

Test Item	Description
INT LAMP	This test is able to check interior room lamp operation [On/Off].

WORK SUPPORT

Support Item	Setting	Description
SET I/L D-UNLCK INTCON	On*	Interior room lamp timer function ON.
	Off	Interior room lamp timer function OFF.
ROOM LAMP TIMER SET	MODE 4 30 sec.	Sets the interior room lamp ON time. (Timer operating time).
	MODE 3* 15 sec.	
	MODE 2 7.5 sec.	
	MODE 1 OFF	
ROOM LAMP ON TIME SET	MODE7 0 sec.	Sets the interior room lamp gradual brightening time.
	MODE6 5 sec.	
	MODE5 4 sec.	
	MODE4 3 sec.	
	MODE3 2 sec.	
	MODE2* 1 sec.	
	MODE1 0.5 sec.	
ROOM LAMP OFF TIME SET	MODE7 0 sec.	Sets the interior room lamp gradual dimming time.
	MODE6 5 sec.	
	MODE5 4 sec.	
	MODE4 3 sec.	
	MODE3 2 sec.	
	MODE2* 1 sec.	
	MODE1 0.5 sec.	
R LAMP TIMER LOGIC SET	MODE 2	Interior room lamp timer activates with all doors.
	MODE 1*	Interior room lamp timer activates with the driver door only.

* : Initial setting

MULTI REMOTE ENT

MULTI REMOTE ENT : CONSULT Function (BCM - MULTI REMOTE ENT)

INFOID:0000000012432375

DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [On/Off]	Indicates condition of ignition switch ON position.
KEY ON SW [On/Off]	Indicates condition of key switch.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

Monitor Item [Unit]	Description
ACC ON SW [On/Off]	Indicates condition of ignition switch ACC position.
KEYLESS LOCK [On/Off]	Indicates condition of lock signal from keyfob.
KEYLESS UNLOCK [On/Off]	Indicates condition of unlock signal from keyfob.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
DOOR SW-BK [On/Off]	Indicates condition of back door switch.
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.
CDL UNLOCK SW [On/Off]	Indicates condition of unlock signal from door lock and unlock switch.
KEYLESS PANIC [On/Off]	Indicates condition of panic signal from keyfob.

ACTIVE TEST

Test Item	Description
HORN	This test is able to check the door lock tone.
INT LAMP	This test is able to check interior room lamp operation [On/Off].
FLASHER	This test is able to check hazard reminder operation [Off/LH/RH].

WORK SUPPORT

Support Item	Setting		Description
REMO CONT ID REGIST	—		Keyfob ID code can be registered.
REMO CONT ID ERASUR	—		Keyfob ID code can be erased.
REMO CONT ID CONFIR	—		Keyfob ID code registration is displayed.
HORN CHIRP SET	Off		Horn chirp function can be changed in this mode.
	On*		
HAZARD LAMP SET	MODE4*	Lock and Unlock	Hazard warning lamp function can be changed in this mode.
	MODE3	Lock Only	
	MODE2	Unlock Only	
	MODE1	OFF	
PANIC ALRM SET	MODE3	1.5 sec	Panic alarm operation can be changed in this mode.
	MODE2	OFF	
	MODE1*	0.5 sec	
AUTO LOCK SET	MODE7	5 min	Auto locking function can be changed in this mode.
	MODE6	4 min	
	MODE5	3 min	
	MODE4	2 min	
	MODE3*	1 min	
	MODE2	30 sec	
	MODE1	OFF	

*: Initial setting

HEADLAMP

HEADLAMP : CONSULT Function (BCM - HEAD LAMP)

INFOID:000000012432376

DATA MONITOR

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

Monitor Item [Unit]	Description
IGN ON SW [On/Off]	Indicates condition of ignition switch ON position.
ACC ON SW [On/Off]	Indicates condition of ignition switch ACC position.
HI BEAM SW [On/Off]	Indicates condition of combination switch.
HEAD LAMP SW 1 [On/Off]	
HEAD LAMP SW 2 [On/Off]	
TAIL LAMP SW [On/Off]	
PASSING SW [On/Off]	
FR FOG SW [On/Off]	
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
DOOR SW-BK [On/Off]	Indicates condition of back door switch.
TURN SIGNAL R [On/Off]	Indicates condition of combination switch.
TURN SIGNAL L [On/Off]	
KEY ON SW [On/Off]	Indicates condition of key switch.
KEYLESS LOCK [On/Off]	Indicates condition of lock signal from keyfob.
PKB SW [On/Off]	Indicates park brake switch signal received from combination meter on CAN communication line.
ENGINE RUN [On/Off]	Indicates engine run signal received from ECM on CAN communication line.
VEHICLE SPEED [km/h/mph]	Indicates vehicle speed signal received from combination meter on CAN communication line.

ACTIVE TEST

Test Item	Description
TAIL LAMP	This test is able to check tail lamp operation [On/Off].
HEAD LAMP	This test is able to check head lamp operation [Hi/Low/Off].
FR FOG LAMP	This test is able to check front fog lamp operation [On/Off].
ILL DIM SIGNAL	This test is able to check head lamp illumination dimming operation [On/Off].

WORK SUPPORT

Support Item	Setting	Description
BATTERY SAVER SET	On*	Exterior lamp battery saver function ON.
	Off	Exterior lamp battery saver function OFF.

* : Initial setting

WIPER

WIPER : CONSULT Function (BCM - WIPER)

INFOID:0000000012432377

DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [On/Off]	Indicates condition of ignition switch ON position.
IGN SW CAN [On/Off]	Indicates ignition switch ON signal received from IPDM E/R on CAN communication line.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

Monitor Item [Unit]	Description
FR WIPER HI [On/Off]	Indicates condition of wiper operation of combination switch.
FR WIPER LOW [On/Off]	
FR WIPER INT [On/Off]	
FR WASHER SW [On/Off]	
FR WIPER STOP [On/Off]	Indicates front wiper auto stop signal received from IPDM E/R on CAN communication line.
INT VOLUME [1 – 7]	Indicates condition of intermittent wiper operation of combination switch.
RR WIPER ON [On/Off]	Indicates condition of rear wiper operation of combination switch.
RR WIPER INT [On/Off]	
RR WASHER SW [On/Off]	
RR WIPER STOP [On/Off]	Indicates rear wiper motor auto stop input from rear wiper motor.
REVERSE SW CAN [On/Off]	Indicates reverse switch signal received from TCM on CAN communication line.
VEHICLE SPEED [km/h/mph]	Indicates vehicle speed signal received from combination meter on CAN communication line.

ACTIVE TEST

Test Item	Description
FR WIPER	This test is able to check front wiper operation [INT/Lo/Hi/Off].
RR WIPER	This test is able to check rear wiper operation [On/Off].

WORK SUPPORT

Support Item	Setting	Description
WIPER SPEED SETTING	On	Front wiper intermittent time linked with vehicle speed and wiper dial position.
	Off*	Front wiper intermittent time linked with wiper dial position.

* : Initial setting

FLASHER

FLASHER : CONSULT Function (BCM - FLASHER)

INFOID:0000000012432378

DATA MONITOR

Monitor Item [Unit]	Description
HAZARD SW [On/Off]	Indicates condition of hazard switch.
TURN SIGNAL R [On/Off]	Indicates condition of turn signal function of combination switch.
TURN SIGNAL L [On/Off]	

ACTIVE TEST

Test Item	Description
FLASHER	This test is able to check turn signal lamp operation [Off/LH/RH].

AIR CONDITIONER

AIR CONDITIONER : CONSULT Function (BCM - AIR CONDITIONER)

INFOID:0000000012432379

DATA MONITOR

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

Monitor Item [Unit]	Description
IGN ON SW [On/Off]	Indicates condition of ignition switch ON position.
FAN ON SIG [On/Off]	Indicates condition of fan switch.
AIR COND SW [On/Off]	Indicates condition of A/C switch.
THERMO AMP [On/Off]	Indicates condition of thermo amp.
FR DEF SW [On/Off]	Indicates condition of front defrost switch.

COMB SW

COMB SW : CONSULT Function (BCM - COMB SW)

INFOID:0000000012432380

DATA MONITOR

Monitor Item [Unit]	Description
TURN SIGNAL R [On/Off]	Indicates condition of right turn signal operation of combination switch.
TURN SIGNAL L [On/Off]	Indicates condition of left turn signal operation of combination switch.
HI BEAM SW [On/Off]	Indicates condition of Hi beam switch operation of combination switch.
HEAD LAMP SW 1 [On/Off]	Indicates condition of head lamp switch 1 operation of combination switch.
HEAD LAMP SW 2 [On/Off]	Indicates condition of head lamp switch 2 operation of combination switch.
TAIL LAMP SW [On/Off]	Indicates condition of tail lamp switch operation of combination switch.
PASSING SW [On/Off]	Indicates condition of passing switch operation of combination switch.
FR FOG SW [On/Off]	Indicates condition of front fog lamp switch operation of combination switch.
FR WIPER HI [On/Off]	Indicates condition of front wiper operation of combination switch.
FR WIPER LOW [On/Off]	
FR WIPER INT [On/Off]	
FR WASHER SW [On/Off]	
INT VOLUME [1 - 7]	Indicates condition of intermittent front wiper operation of combination switch.
RR WIPER ON [On/Off]	Indicates condition of rear wiper operation of combination switch.
RR WIPER INT [On/Off]	
RR WASHER SW [On/Off]	

BCM

BCM : CONSULT Function (BCM - BCM)

INFOID:0000000012432381

ECU IDENTIFICATION

The BCM part number is displayed.

SELF DIAGNOSTIC RESULT

Refer to [BCS-115, "DTC Index"](#).

WORK SUPPORT

Support Item	Setting	Description
RESET SETTING VALUE	Reset	Returns BCM to initial value in factory shipment.
	Cancel	Cancels the reset function.

CONFIGURATION

Refer to [BCS-123, "Description"](#).

CAN DIAG SUPPORT MNTR

Refer to [LAN-13, "CAN Diagnostic Support Monitor"](#).

IMMU

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

IMMU : CONSULT Function (BCM - IMMU)

INFOID:000000012432382

SELF DIAGNOSTIC RESULT

Refer to [BCS-115, "DTC Index"](#).

ACTIVE TEST

Test Item	Description
THEFT IND	This test is able to check security indicator operation [On/Off].

WORK SUPPORT

Support Item	Setting	Description
CONFIRM DONGLE ID	—	Dongle ID code can be read.

BATTERY SAVER

BATTERY SAVER : CONSULT Function (BCM - BATTERY SAVER)

INFOID:000000012432383

DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [On/Off]	Indicates condition of ignition switch ON position.
KEY ON SW [On/Off]	Indicates condition of key switch.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
DOOR SW-BK [On/Off]	Indicates condition of back door switch.
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.
CDL UNLOCK SW [On/Off]	Indicates condition of unlock signal from door lock and unlock switch.
KEYLESS LOCK [On/Off]	Indicates condition of lock signal from keyfob.
KEYLESS UNLOCK [On/Off]	Indicates condition of unlock signal from keyfob.
KEY CYL LK-SW [On/Off]	Indicates condition of lock signal from door key cylinder switch.
KEY CYL UN-SW [On/Off]	Indicates condition of unlock signal from door key cylinder switch.
ACC SW [On/Off]	Indicates condition of ignition switch ACC position.

ACTIVE TEST

Test item	Description
BATTERY SAVER	This test is able to check battery saver operation [On/Off].

WORK SUPPORT

Support Item	Setting	Description
ROOM LAMP TIMER SET	MODE 3*	10 min.
	MODE 2	60 min.
	MODE 1	15 min.
Sets interior room lamp battery saver timer operating time.		

* : Initial setting

THEFT ALM

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

THEFT ALM : CONSULT Function (BCM - THEFT)

INFOID:000000012432384

DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [On/Off]	Indicates condition of ignition switch ON position.
ACC ON SW [On/Off]	Indicates condition of ignition switch ACC position.
KEY ON SW [On/Off]	Indicates condition of key switch.
KEYLESS LOCK [On/Off]	Indicates condition of lock signal from keyfob.
KEYLESS UNLOCK [On/Off]	Indicates condition of unlock signal from keyfob.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
DOOR SW-BK [On/Off]	Indicates condition of back door switch.
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.
CDL UNLOCK SW [On/Off]	Indicates condition of unlock signal from door lock and unlock switch.
TRANSPONDER [On/Off]	Indicates condition of transponder.
AUTO RELOCK [On/Off]	Indicates condition of auto relock function.

WORK SUPPORT

Support Item	Setting	Description
SECURITY ALARM SET (Siren)	Off	Security alarm OFF.
	On*	Security alarm ON.

*: Initial setting

RETAINED PWR

RETAINED PWR : CONSULT Function (BCM - RETAINED PWR)

INFOID:000000012432385

DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [On/Off]	Indicates condition of ignition ON switch.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.

WORK SUPPORT

Monitor Item [Unit]	Setting	Description
RETAINED PWR SET	MODE 3	2 Min.
	MODE 2	OFF
	MODE 1*	45 Sec.
Sets the retained accessory power operating time.		

SIGNAL BUFFER

SIGNAL BUFFER : CONSULT Function (BCM - SIGNAL BUFFER)

INFOID:000000012432386

DATA MONITOR

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

Monitor Item [Unit]	Description
BRAKE SW [On/Off]	Indicates condition of stop lamp switch signal received from ABS actuator and electric unit (control unit) on CAN communication line.

AIR PRESSURE MONITOR

AIR PRESSURE MONITOR : CONSULT Function (BCM - AIR PRESSURE MONITOR)

INFOID:0000000012432387

NOTE:

The Signal Tech II Tool [– (J-50190)] can be used to perform the following functions. Refer to the Signal Tech II User Guide for additional information.

- Activate and display TPMS transmitter IDs
- Display tire pressure reported by the TPMS transmitter
- Read TPMS DTCs
- Register TPMS transmitter IDs
- Test remote keyless entry keyfob relative signal strength

SELF DIAGNOSTIC RESULT

NOTE:

Before performing self diagnostic result, be sure to register the ID, or else the actual malfunction may be different from that displayed on CONSULT.

Refer to [BCS-115, "DTC Index"](#).

DATA MONITOR

Monitor Item [Unit]	Description
AIR PRESS FL [kPa, kg/cm ² or Psi]	Indicates air pressure of front LH tire.
AIR PRESS FR [kPa, kg/cm ² or Psi]	Indicates air pressure of front RH tire.
AIR PRESS RR [kPa, kg/cm ² or Psi]	Indicates air pressure of rear RH tire.
AIR PRESS RL [kPa, kg/cm ² or Psi]	Indicates air pressure of rear LH tire.
ID REGST FL1 [Done/Yet]	Indicates ID registration status of front LH transmitter.
ID REGST FR1 [Done/Yet]	Indicates ID registration status of front RH transmitter.
ID REGST RR1 [Done/Yet]	Indicates ID registration status of rear RH transmitter.
ID REGST RL1 [Done/Yet]	Indicates ID registration status of rear LH transmitter.
WARNING LAMP [Off/On]	Indicates condition of low tire pressure warning lamp in combination meter.
BUZZER [Off/On]	Indicates condition of buzzer in combination meter.

ACTIVE TEST

Test Item	Description
HORN	This test is able to check horn operation [On].
WARNING LAMP	This test is able to check tire pressure warning lamp operation [On/Off].
ID REGIST WARNING	This test is able to check ID registration warning chime operation [On/Off].
FLASHER	This test is able to check turn signal lamp operation [Off/LH/RH].

WORK SUPPORT

Support Item	Description
ID READ	The registered ID number is displayed.
ID REGIST	Refer to WT-22, "Description" .

PANIC ALARM

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

PANIC ALARM : CONSULT Function (BCM - PANIC ALARM)

INFOID:000000012432388

ACTIVE TEST

Test Item	Description
VEHICLE SECURITY HORN	This test is able to check panic alarm operation [On].
HEAD LAMP (HI)	This test is able to check head lamp HI operation [On].

ECU DIAGNOSIS INFORMATION

BCM

Reference Value

INFOID:0000000012432389

NOTE:

The Signal Tech II Tool [– (J-50190)] can be used to perform the following functions. Refer to the Signal Tech II User Guide for additional information.

- Activate and display TPMS transmitter IDs
- Display tire pressure reported by the TPMS transmitter
- Read TPMS DTCs
- Register TPMS transmitter IDs
- Test remote keyless entry keyfob relative signal strength

VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition	Value/Status
ACC SW	Ignition switch OFF	Off
	Ignition switch ACC or ON	On
ACC ON SW	Ignition switch OFF	Off
	Ignition switch ACC or ON	On
AIR COND SW	A/C switch OFF	Off
	A/C switch ON	On
AIR PRESS FL	Front left tire air pressure value	kPa, kg/cm ² , psi
AIR PRESS FR	Front right tire air pressure value	kPa, kg/cm ² , psi
AIR PRESS RL	Rear left tire air pressure value	kPa, kg/cm ² , psi
AIR PRESS RR	Rear right tire air pressure value	kPa, kg/cm ² , psi
BRAKE SW	Brake pedal released	Off
	Brake pedal depressed	On
BUZZER	Buzzer in combination meter OFF	Off
	Buzzer in combination meter ON	On
CDL LOCK SW	Door lock/unlock switch neutral	Off
	Door lock/unlock switch LOCK	On
CDL UNLOCK SW	Door lock/unlock switch neutral	Off
	Door lock/unlock switch UNLOCK	On
DOOR SW-AS	Passenger door closed	Off
	Passenger door open	On
DOOR SW-BK	Back door closed	Off
	Back door open	On
DOOR SW-DR	Driver's door closed	Off
	Driver's door open	On
DOOR SW-RL	Rear LH door closed	Off
	Rear LH door open	On
DOOR SW-RR	Rear RH door closed	Off
	Rear RH door open	On
ENGINE RUN	Engine stopped	Off
	Engine running	On

BCM

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

Monitor Item	Condition	Value/Status
FAN ON SIG	Blower fan OFF	Off
	Blower fan ON	On
FR FOG SW	Front fog lamp switch OFF	Off
	Front fog lamp switch ON	On
FR WASHER SW	Front washer switch OFF	Off
	Front washer switch ON	On
FR WIPER LOW	Front wiper switch OFF	Off
	Front wiper switch LO	On
FR WIPER HI	Front wiper switch OFF	Off
	Front wiper switch HI	On
FR WIPER INT	Front wiper switch OFF	Off
	Front wiper switch INT	On
FR WIPER STOP	Any position other than front wiper stop position	Off
	Front wiper stop position	On
HAZARD SW	Hazard switch OFF	Off
	Hazard switch ON	On
HEAD LAMP SW 1	Lighting switch OFF	Off
	Lighting switch 1ST	On
HEAD LAMP SW 2	Lighting switch OFF	Off
	Lighting switch 2ND	On
HI BEAM SW	Lighting switch OFF	Off
	Lighting switch HI	On
ID REGST FL1	ID registration of front left tire incomplete	Yet
	ID registration of front left tire complete	Done
ID REGST FR1	ID registration of front right tire incomplete	Yet
	ID registration of front right tire complete	Done
ID REGST RL1	ID registration of rear left tire incomplete	Yet
	ID registration of rear left tire complete	Done
ID REGST RR1	ID registration of rear right tire incomplete	Yet
	ID registration of rear right tire complete	Done
IGN ON SW	Ignition switch OFF or ACC	Off
	Ignition switch ON	On
IGN SW CAN	Ignition switch OFF or ACC	Off
	Ignition switch ON	On
INT VOLUME	Intermittent front wiper position	1 - 7
KEY CYL LK-SW	Key cylinder switch in N position	Off
	Key cylinder switch in LOCK position	On
KEY CYL UN-SW	Key cylinder switch in N position	Off
	Key cylinder switch in UNLOCK position	On
KEY ON SW	Key removed from ignition key cylinder	Off
	Key inserted into ignition key cylinder	On
KEYLESS LOCK	LOCK button of keyfob not pressed	Off
	LOCK button of keyfob pressed	On

BCM

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

Monitor Item	Condition	Value/Status
KEYLESS PANIC	PANIC button of keyfob not pressed	Off
	PANIC button of keyfob pressed	On
KEYLESS UNLOCK	UNLOCK button of keyfob not pressed	Off
	UNLOCK button of keyfob pressed	On
PASSING SW	Other than lighting switch PASS	Off
	Lighting switch PASS	On
PKB SW	Parking brake released	Off
	Parking brake engaged	On
REAR DEF SW	Rear window defogger switch OFF	Off
	Rear window defogger switch ON	On
REVERSE SW CAN	Reverse switch OFF	Off
	Reverse switch ON	On
RR WASHER SW	Rear washer switch OFF	Off
	Rear washer switch ON	On
RR WIPER INT	Rear wiper switch OFF	Off
	Rear wiper switch INT	On
RR WIPER ON	Rear wiper switch OFF	Off
	Rear wiper switch ON	On
RR WIPER STOP	Any position other than rear wiper stop position	Off
	Rear wiper stop position	On
TAIL LAMP SW	Lighting switch OFF	Off
	Lighting switch 1ST	On
THERMO AMP	A/C and fan ON switch OFF	Off
	A/C and fan ON switch ON	On
TURN SIGNAL L	Turn signal switch OFF	Off
	Turn signal switch LH	On
TURN SIGNAL R	Turn signal switch OFF	Off
	Turn signal switch RH	On
VEHICLE SPEED	While driving, equivalent to speedometer reading	mph, km/h
WARNING LAMP	Low tire pressure warning lamp in combination meter OFF	Off
	Low tire pressure warning lamp in combination meter ON	On

A

B

C

D

E

F

G

H

I

J

K

L

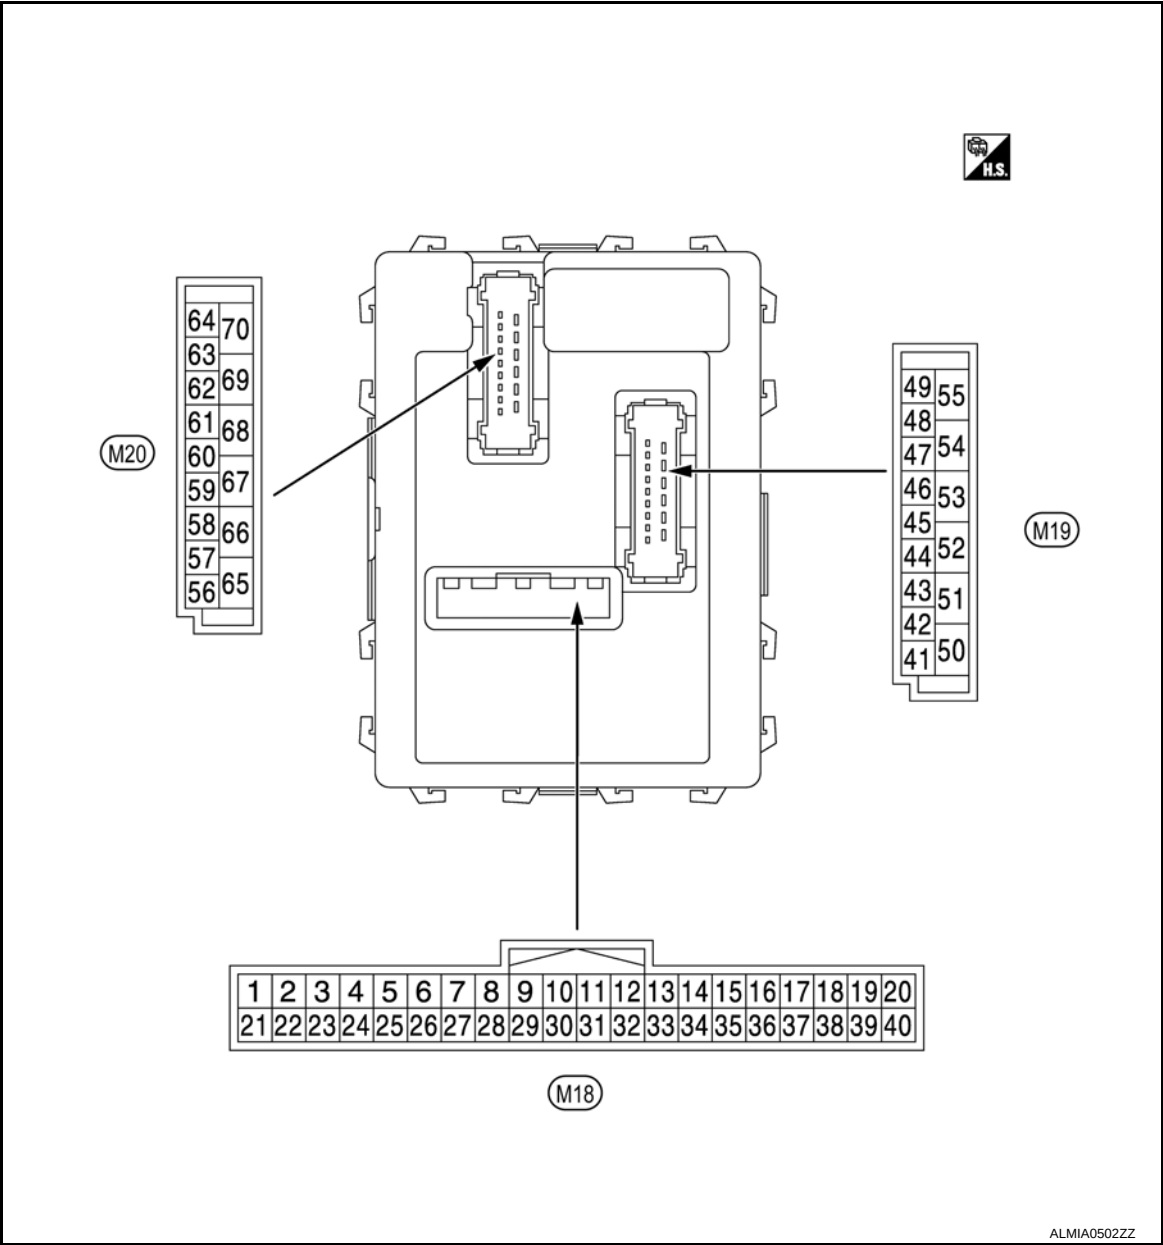
BCS

N


O

P

TERMINAL LAYOUT








PHYSICAL VALUES

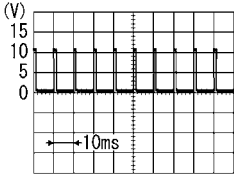Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
2 (BR)	Ground	Input 5 signal	Input	Combination switch	OFF	 1.0 V
					TURN RH	
					HEADLAMP 1	
					HI BEAM	
					TAIL LAMP	

BCM

< ECU DIAGNOSIS INFORMATION >

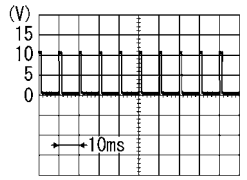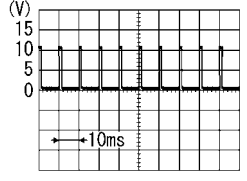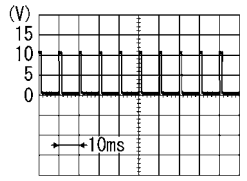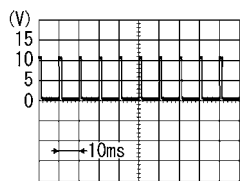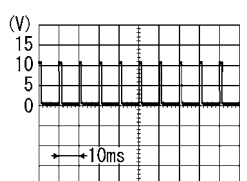[WITHOUT INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
3 ¹ (Y)	Ground	Input 4 signal	Input	Combination switch	OFF	0 V
					TURN LH	
					PASSING	
					HEADLAMP 2	
					FR FOG	
3 ² (Y)	Ground	Input 4 signal	Input	Combination switch	OFF	0 V
					TURN LH	
					PASSING	
					HEADLAMP 2	
4 ¹ (L)	Ground	Input 3 signal	Input	Combination switch	OFF	0 V
					FR WIPER LOW	
					FR WIPER INT (any intermittent position)	
4 ² (L)	Ground	Input 3 signal	Input	Combination switch	OFF	0 V
					FR WIPER LOW	
					FR WIPER INT	
5 ¹ (G)	Ground	Input 2 signal	Input	Combination switch	OFF	0 V
					FR WASHER	
					RR WASHER	
					Wiper intermittent dial 1	
					Wiper intermittent dial 5	
					Wiper intermittent dial 6	
					RR WIPER ON	1.0 V

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

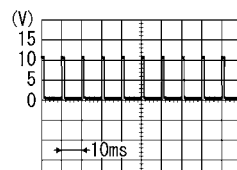
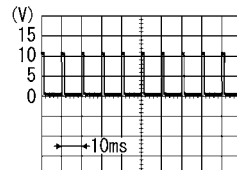
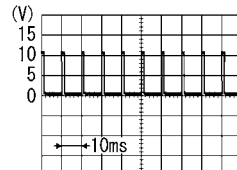
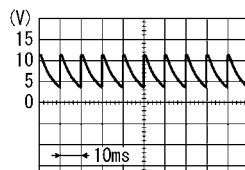
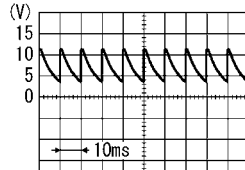
cardiagn.com

BCS

BCM

< ECU DIAGNOSIS INFORMATION >




[WITHOUT INTELLIGENT KEY SYSTEM]





Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	−	Signal name	Input/ Output			
5 ² (G)	Ground	Input 2 signal	Input	Combination switch	OFF	0 V
					FR WASHER	
					RR WASHER	
					RR WIPER ON	
						1.0 V
6 ¹ (R)	Ground	Input 1 signal	Input	Combination switch	OFF	0 V
					FR WIPER HI	
					Wiper intermittent dial 1	
					Wiper intermittent dial 2	
					Wiper intermittent dial 3	
					Wiper intermittent dial 6	
					Wiper intermittent dial 7	
					RR WIPER INT	
						1.0 V
6 ² (R)	Ground	Input 1 signal	Input	Combination switch	OFF	0 V
					FR WIPER HI	
					RR WIPER INT	
						1.0 V
7 (W)	Ground	Key cylinder unlock sw signal	Input	Key cylinder switch	N position	
					UNLOCK position	7.0 - 8.0 V
						0 V
8 (GR)	Ground	Key cylinder lock sw signal	Input	Key cylinder switch	N position	
					LOCK position	7.0 - 8.0 V
						0 V
9 (LG)	Ground	Brake sw 1 signal	Input	Stop lamp switch	OFF (brake pedal re- leased)	0 V
					ON (brake pedal de- pressed)	Battery voltage

BCM

< ECU DIAGNOSIS INFORMATION >

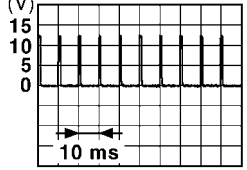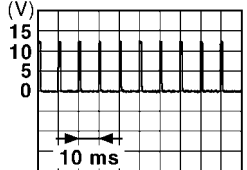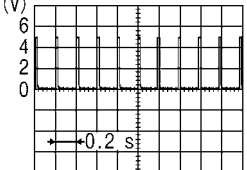[WITHOUT INTELLIGENT KEY SYSTEM]





Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
10 (G)	Ground	Rear defogger sw signal	Input	Rear window defogger switch	OFF	Battery voltage
					ON	0 V
11 (L)	Ground	ACC switch signal	Input	Ignition switch	OFF	0 V
					ACC or ON	Battery voltage
12 (GR)	Ground	Central door lock sw signal	Input	Door lock and unlock switch	N position	 1.0 - 1.5 V
					LOCK position	0 V
13 (BR)	Ground	Central door unlock sw signal	Input	Door lock and unlock switch	N position	 1.0 - 1.5 V
					UNLOCK position	0 V
18 (V)	Ground	Keyless gnd signal	Input	Ignition switch ON		0 V
19 (LG)	Ground	Keyless tuner power supply	Input	Ignition switch OFF	Key inserted into ignition key cylinder	0 V
					Key removed from ignition key cylinder (Any door open)	5 V
					Key removed from ignition key cylinder (Any door closed)	

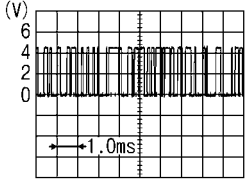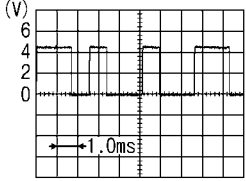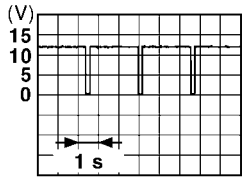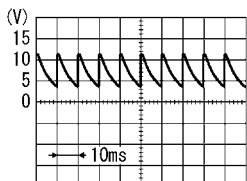Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
20 (G)	Ground	Keyless tuner signal	Input	Ignition switch OFF	Key inserted into ignition key cylinder	0 V
					Waiting	 PIIB7728J
					Signal receiving	 PIIB7729J
21 (P)	Ground	Immobilizer one way communication (clock) signal	Input/ Output	While waiting	Turn ignition switch ON.	Turn ignition switch ON: Pointer of tester should move.
23 (GR)	Ground	Security indicator output signal	Input	Security indica- tor	ON	0 V
					Blinking (Ignition switch OFF)	 JPMIA0014GB 11.3 V
					OFF	Battery voltage
24 (SB)	Ground	Audio/dongle link (serial) signal	Input/ Output	Ignition switch OFF.		5 V
25 (LG)	Ground	Immobilizer two way communication sig- nal	Input/ Output	While waiting	Turn ignition switch ON.	Turn ignition switch ON: Pointer of tester should move.
26 (O)	Ground	THERMO amp. sig- nal	Input	Push-button ig- nition switch ON and blower fan switch ON	A/C switch OFF	Battery voltage
					A/C switch ON	0 V
27 (V)	Ground	Air conditioner switch signal	Input	A/C switch	OFF	Battery voltage
					ON	0 V
28 (SB)	Ground	Blower fan sw signal	Input	Fan switch	OFF	0 V
					I, II, III or IIII	 PKIB4960J 7.0 - 8.0 V

BCM

< ECU DIAGNOSIS INFORMATION >



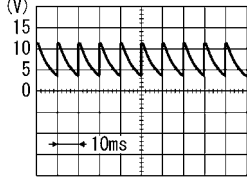
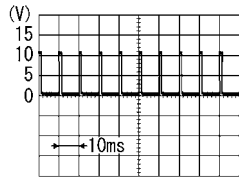
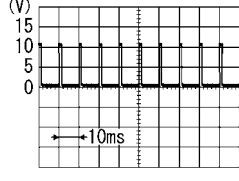
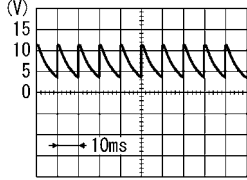
[WITHOUT INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
29 (BG)	Ground	Hazard sw signal	Input	Hazard switch	OFF	Battery voltage
					ON	0 - 1.5 V
31 (LG)	Ground	Front defrost switch	Input	—		—
32 ¹ (P)	Ground	Output 5 signal	Output	Combination switch	OFF	 PKIB4960J 7.0 - 8.0 V
					FR FOG	 PKIB4958J 1.2 V
					RR WIPER ON	
					Wiper intermittent dial 1	
					Wiper intermittent dial 2	
					Wiper intermittent dial 6	
32 ² (P)	Ground	Output 5 signal	Output	Combination switch	RR WIPER ON	 PKIB4958J 1.2 V
					OFF	 PKIB4960J 7.0 - 8.0 V

BCM

< ECU DIAGNOSIS INFORMATION >


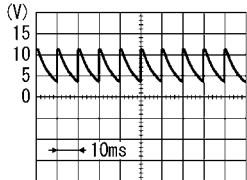
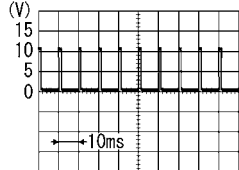
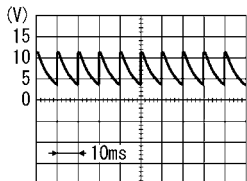
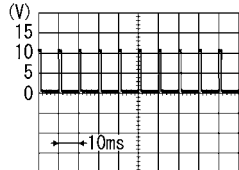
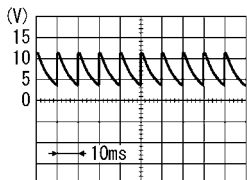
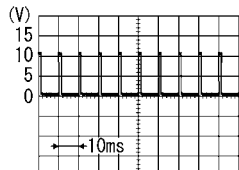
[WITHOUT INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
33 ¹ (V)	Ground	Output 4 signal	Output	Combination switch	OFF	 PKIB4960J 7.0 - 8.0 V
					TAIL LAMP	 PKIB4958J 1.2 V
					Wiper intermittent dial 1	
					Wiper intermittent dial 5	
					Wiper intermittent dial 6	
					RR WIPER INT	
33 ² (V)	Ground	Output 4 signal	Output	Combination switch	OFF	 PKIB4960J 7.0 - 8.0 V
					TAIL LAMP	 PKIB4958J 1.2 V
					RR WIPER INT	
34 ¹ (V)	Ground	Output 3 signal	Output	Combination switch	OFF	 PKIB4960J 7.0 - 8.0 V
					HI BEAM	 PKIB4958J 1.2 V
					HEADLAMP 2	
					RR WASHER	
					Wiper intermittent dial 1	
					Wiper intermittent dial 2	
					Wiper intermittent dial 3	

BCM

< ECU DIAGNOSIS INFORMATION >

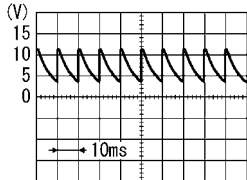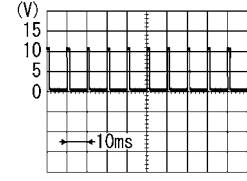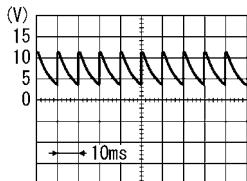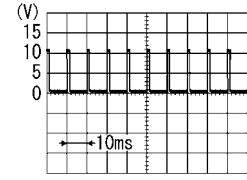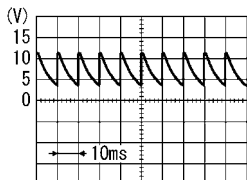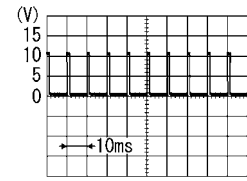
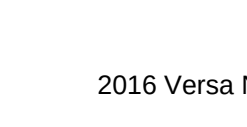
[WITHOUT INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
34 ² (W)	Ground	Output 3 signal	Output	Combination switch	OFF	 PKIB4960J 7.0 - 8.0 V
					HI BEAM	 PKIB4958J 1.2 V
					HEADLAMP 2	
35 ¹ (GR)	Ground	Output 2 signal	Output	Combination switch	RR WASHER	 PKIB4960J 7.0 - 8.0 V
					OFF	 PKIB4958J 1.2 V
					FR WIPER HI	
					FR WIPER INT (any intermittent position)	
35 ² (GR)	Ground	Output 2 signal	Output	Combination switch	PASSING	 PKIB4960J 7.0 - 8.0 V
					HEADLAMP 1	
					OFF	
					FR WIPER HI	 PKIB4958J 1.2 V
					FR WIPER INT	
					PASSING	 PKIB4960J 7.0 - 8.0 V
					HEADLAMP 1	

BCM

< ECU DIAGNOSIS INFORMATION >


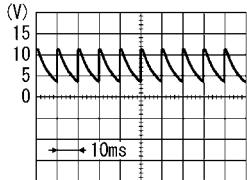
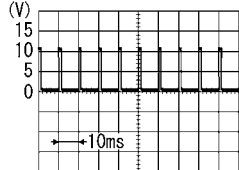
[WITHOUT INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
36 (LG)	Ground	Output 1 signal	Output	Combination switch	OFF	 PKIB4960J 7.0 - 8.0 V
					FR WASHER	 PKIB4958J 1.2 V
					FR WIPER LOW	
					TURN LH	
					TURN RH	
37 (Y)	Ground	Key sw signal	Input	Ignition switch	Ignition key inserted into ignition key cylinder	Battery voltage
					Ignition key removed from ignition key cylinder	0 V
38 (O)	Ground	Ign sw signal	Input	Ignition switch	OFF or ACC	0 V
					ON or START	Battery voltage
39 (L)	Ground	CAN high	Input/ Output	—	—	—
40 (P)	Ground	CAN low	Input/ Output	—	—	—
41 (G)	Ground	Door unlock output (DR) signal	Output	Front door lock actuator LH	Actuated to UNLOCK po- sition	Battery voltage
					Other than actuated to UNLOCK position	0 V
42 (Y)	Ground	Battery (FUSE)	Input	Ignition switch OFF		Battery voltage
43 (W)	Ground	Battery saver output signal	Output	Interior room lamp battery saver activated		0 V
				Interior room lamp battery saver not activat- ed		Battery voltage
44 (GR)	Ground	Rear defogger relay output signal	Input	Rear window defogger switch	OFF	Battery voltage
					ON	0 - 0.5 V
45 (R)	Ground	Room lamp output signal	Output	Interior room lamp or map lamp	OFF	Battery voltage
					ON	Battery voltage
					DOOR	0 - 1 V
48 (L)	Ground	A/C indicator	Input	—	—	—
50 (G)	Ground	Battery (F/L)	Input	Ignition switch OFF		Battery voltage
52 (L)	Ground	Power window pow- er supply (RAP) sig- nal	Output	Ignition switch ON		Battery voltage

BCM

< ECU DIAGNOSIS INFORMATION >


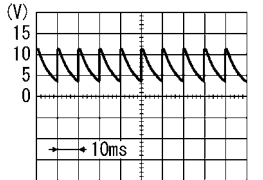
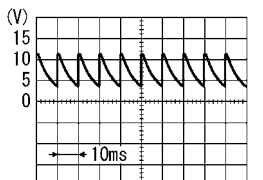
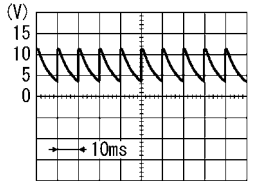
[WITHOUT INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
53 (G)	Ground	Door unlock output signal	Output	Front door lock actuator RH, rear door lock actuator RH, rear door lock actuator LH and back door lock actuator	Actuated to UNLOCK po- sition	Battery voltage
					Other than actuated to UNLOCK position	0 V
54 (SB)	Ground	Door lock output sig- nal	Output	All door lock ac- tuators	Actuated to LOCK posi- tion	Battery voltage
					Other than actuated to LOCK position	0 V
55 (B)	Ground	Gnd	Output	Ignition switch ON		0 V
56 (LG)	Ground	Rear wiper auto stop switch	Input	Rear wiper	OFF (stopped)	0V
					ON (activated)	Battery voltage
57 (BR)	Ground	Door sw (RR) signal	Input	Rear door switch RH	OFF (rear door RH closed)	 7.0 - 8.0 V
					ON (rear door RH open)	0 V
58 (W)	Ground	Door sw (RL) signal	Input	Rear door switch LH	OFF (rear door LH closed)	 7.0 - 8.0 V
					ON (rear door LH open)	0 V
59 (SB)	Ground	Door sw (DR) signal	Input	Front door switch LH	OFF (front door LH closed)	 7.0 - 8.0 V
					ON (front door LH open)	0 V

BCM

< ECU DIAGNOSIS INFORMATION >

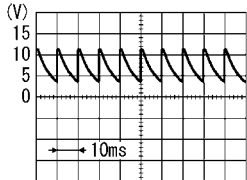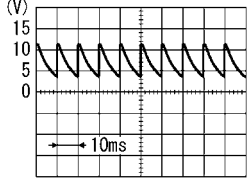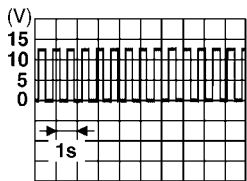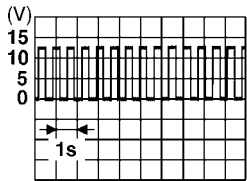[WITHOUT INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
60 (BG)	Ground	Door sw (AS) signal	Input	Front door switch RH	OFF (front door RH closed)	 7.0 - 8.0 V
					ON (front door RH open)	0 V
62 (P)	Ground	Door switch (Back) signal	Input	Back door switch	OFF (back door closed)	 7.0 - 8.0 V
					ON (back door open)	0 V
63 (W)	Ground	Flasher output (RIGHT) signal	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch RH	 6.5 V (Turn signal lamp turn on: 9 - 16 V)
64 (V)	Ground	Flasher output (LEFT) signal	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch LH	 6.5 V (Turn signal lamp turn on: 9 - 16 V)
68 (R)	Ground	Rear wiper motor output 1	Output	Push-button ig- nition switch ON	Rear wiper stop position	Battery voltage
					Any position other than rear wiper stop position	0V
70 (L)	Ground	Cargo lamp output signal	Output	Back door	Closed (cargo lamp OFF)	Battery voltage
					Open (cargo lamp ON)	0 - 1 V

¹: With variable intermittent wipers

²: Without variable intermittent wipers

Fail-safe

INFOID:0000000012432390

FAIL-SAFE CONTROL BY DTC

BCM performs fail-safe control when any DTC are detected.

Display contents of CONSULT	Fail-safe	Cancellation
B2190: NATS ANTENNA AMP	Inhibit engine cranking	Erase DTC
B2191: DIFFERENCE OF KEY	Inhibit engine cranking	Erase DTC
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC
B2195: ANTI SCANNING	Inhibit engine cranking	Ignition switch ON → OFF
B2196: DONGLE NG	Inhibit engine cranking	Erase DTC

FAIL-SAFE CONTROL OF COMBINATION SWITCH READING FUNCTION CAUSED BY LOW POWER SUPPLY VOLTAGE

If voltage of battery power supply lower, BCM maintains combination switch reading to the status when input voltage is less than approximately 9 V.

NOTE:

When voltage of battery power supply is approximately 9 V or more, combination switch reading function returns to normal operation.

DTC Inspection Priority Chart

INFOID:0000000012432391

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	• U1000: CAN COMM • U1010: CONTROL UNIT (CAN)
2	• B2190: NATS ANTENNA AMP • B2191: DIFFERENCE OF KEY • B2192: ID DISCORD BCM-ECM • B2193: CHAIN OF BCM-ECM • B2195: ANTI SCANNING • B2196: DONGLE NG
3	• C1704: LOW PRESSURE FL • C1705: LOW PRESSURE FR • C1706: LOW PRESSURE RR • C1707: LOW PRESSURE RL • C1708: [NO DATA] FL • C1709: [NO DATA] FR • C1710: [NO DATA] RR • C1711: [NO DATA] RL • C1716: [PRESS DATA ERR] FL • C1717: [PRESS DATA ERR] FR • C1718: [PRESS DATA ERR] RR • C1719: [PRESS DATA ERR] RL • C1729: VHCL SPEED SIG ERR

DTC Index

INFOID:0000000012432392

NOTE:

Details of time display

- CRNT: Displays when there is a malfunction now or after returning to the normal condition until turning ignition switch OFF → ON again.
- 1 - 39: Displayed if any previous malfunction is present when current condition is normal. It increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. The counter remains at 39 even if the number of cycles exceeds it. It is counted from 1 again when turning ignition switch OFF → ON after returning to the normal condition if the malfunction is detected again.

BCM

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

CONSULT display	Fail-safe	Tire pressure monitor warning lamp ON	Reference
U1000: CAN COMM	—	—	BCS-127
U1010: CONTROL UNIT (CAN)	—	—	BCS-128
B2190: NATS ANTENNA AMP	×	—	SEC-144
B2191: DIFFERENCE OF KEY	×	—	SEC-147
B2192: ID DISCORD BCM-ECM	×	—	SEC-148
B2193: CHAIN OF BCM-ECM	×	—	SEC-150
B2195: ANTI SCANNING	×	—	SEC-151
B2196: DONGLE NG	×	—	SEC-152
C1704: LOW PRESSURE FL	—	×	WT-25
C1705: LOW PRESSURE FR	—	×	
C1706: LOW PRESSURE RR	—	×	
C1707: LOW PRESSURE RL	—	×	
C1708: [NO DATA] FL	—	×	WT-27
C1709: [NO DATA] FR	—	×	
C1710: [NO DATA] RR	—	×	
C1711: [NO DATA] RL	—	×	
C1716: [PRESS DATA ERR] FL	—	×	WT-30
C1717: [PRESS DATA ERR] FR	—	×	
C1718: [PRESS DATA ERR] RR	—	×	
C1719: [PRESS DATA ERR] RL	—	×	
C1729: VHCL SPEED SIG ERR	—	×	WT-32

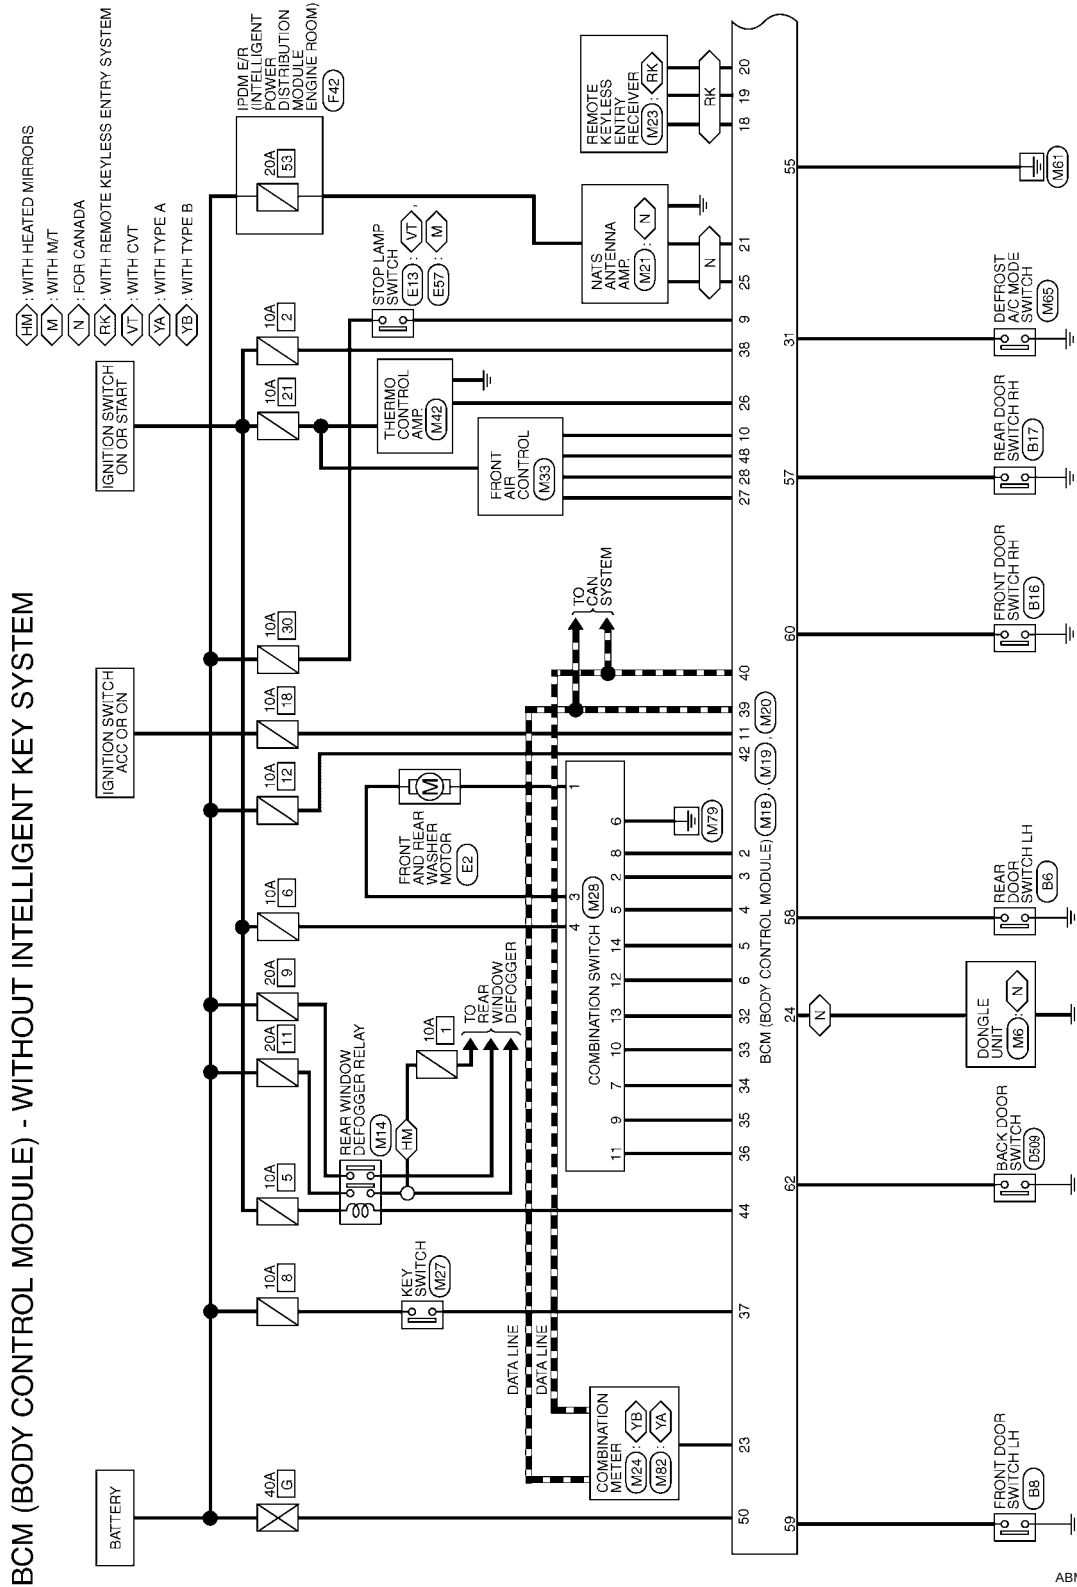
< WIRING DIAGRAM >

WIRING DIAGRAM

BCM

Wiring Diagram

INFOID:0000000012432393





BCM (BODY CONTROL MODULE) CONNECTORS - WITHOUT INTELLIGENT KEY SYSTEM

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE) (WITHOUT INTELLIGENT KEY SYSTEM)
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

Terminal No.	Color of Wire	Signal Name
1	-	-
2	BR	COMBINATION SW INPUT 5
3	Y	COMBINATION SW INPUT 4
4	L	COMBINATION SW INPUT 3
5	G	COMBINATION SW INPUT 2
6	R	COMBINATION SW INPUT 1
7	W	KEY CYLINDER UNLOCK SW
8	GR	KEY CYLINDER LOCK SW
9	LG	BRAKE SW 1
10	G	REAR DEFOGGER SW
11	L	ACC SW
12	GR	CENTRAL DOOR LOCK SW
13	BR	CENTRAL DOOR UNLOCK SW
14	-	-
15	-	-

Terminal No.	Color of Wire	Signal Name
16	-	-
17	-	-
18	V	KEYLESS & AUTO LIGHT SENSOR GND
19	LG	KEYLESS TUNER POWER SUPPLY
20	G	KEYLESS TUNER SIGNAL
21	P	IMMOBILIZER ONE WAY COMMUNICATION (CLOCK)
22	-	-
23	GR	SECURITY INDICATOR OUTPUT
24	SB	AUDIO/DONGLE LINK (SERIAL)
25	LG	IMMOBILIZER TWO WAY COMMUNICATION
26	O	THERMO AMP
27	V	AIR CON SW
28	SB	BLOWER FAN SW
29	BG	HAZARD SW
30	-	-
31	LG	FRONT DEF SW
32	P	COMBINATION SW OUTPUT 5
33	V	COMBINATION SW OUTPUT 4
34	W	COMBINATION SW OUTPUT 3
35	GR	COMBINATION SW OUTPUT 2
36	LG	COMBINATION SW OUTPUT 1
37	Y	KEY SW
38	O	IGN SW
39	L	CAN-H
40	P	CAN-L

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE) (WITHOUT INTELLIGENT KEY SYSTEM)
Connector Color	WHITE



41	42	43	44	45	46	47	48	49
50	51	52	53	54	55			

Terminal No.	Color of Wire	Signal Name
41	G	DOOR UNLOCK OUTPUT (DR)
42	Y	BATTERY (FUSE)
43	W	BATTERY SAVER OUTPUT
44	GR	REAR DEFOGGER RELAY OUTPUT
45	R	ROOM LAMP OUTPUT
46	-	-
47	-	-
48	L	AIR CON INDICATOR OUTPUT
49	-	-
50	G	BATTERY (F/L)
51	-	-
52	L	POWER WINDOW POWER SUPPLY (RAP)
53	G	DOOR UNLOCK OUTPUT (AS, RR, RL)
54	SB	DOOR LOCK OUTPUT
55	B	GND

ABMIA7844GB

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE



1	2	3	4	5	6
7	8	9	10	11	12
13	14				

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE) (WITHOUT INTELLIGENT KEY SYSTEM)
Connector Color	BLACK



56	57	58	59	60	61	62	63	64
65	66	67	68	69	70			

Terminal No.	Color of Wire	Signal Name
1	BG	-
2	Y	-
3	SB	-
4	W	-
5	L	-
6	B	-
7	W	-
8	BR	-
9	GR	-
10	V	-
11	LG	-
12	R	-
13	P	-
14	G	-

Terminal No.	Color of Wire	Signal Name
56	LG	REAR WIPER AUTO STOP SW
57	BR	DOOR SW (RR)
58	W	DOOR SW (RL)
59	SB	DOOR SW (DR)
60	BG	DOOR SW (AS)
61	-	-
62	P	DOOR SW (BACK)
63	W	FLASHER OUTPUT (RIGHT)
64	V	FLASHER OUTPUT (LEFT)
65	-	-
66	-	-
67	-	-
68	R	REAR WIPER MOTOR OUTPUT 1
69	-	-
70	L	LUGGAGE LAMP OUTPUT

ABMIA7845GB

BASIC INSPECTION

ADDITIONAL SERVICE WHEN REPLACING BCM

Description

INFOID:0000000012432394

BEFORE REPLACEMENT

When replacing BCM, save or print current vehicle specification with CONSULT configuration before replacement.

NOTE:

If "READ CONFIGURATION" can not be used, use the "WRITE CONFIGURATION - Manual selection" after replacing BCM.

AFTER REPLACEMENT

CAUTION:

When replacing BCM, always perform "WRITE CONFIGURATION" with CONSULT. Or not doing so, BCM control function does not operate normally.

- Complete the procedure of "WRITE CONFIGURATION" in order.
- Configuration is different for each vehicle model. Confirm configuration of each vehicle model.
- If you set incorrect "WRITE CONFIGURATION", incidents might occur.

NOTE:

When replacing BCM, perform the system initialization (NATS) (if equipped).

Work Procedure

INFOID:0000000012432395

1.SAVING VEHICLE SPECIFICATION

CONSULT Configuration

Perform "READ CONFIGURATION" to save or print current vehicle specification. Refer to [BCS-123, "Description"](#).

NOTE:

If "READ CONFIGURATION" can not be used, use the "WRITE CONFIGURATION - Manual selection" after replacing BCM.

>> GO TO 2.

2.REPLACE BCM

Replace BCM. Refer to [BCS-137, "Removal and Installation"](#).

>> GO TO 3.

3.WRITING VEHICLE SPECIFICATION

CONSULT Configuration

Perform "WRITE CONFIGURATION - Config file" or "WRITE CONFIGURATION - Manual selection" to write vehicle specification. Refer to [BCS-123, "Work Procedure"](#).

>> GO TO 4 (with remote keyless entry system).

>> GO TO 6 (without remote keyless entry system).

4.REGISTER IGNITION KEYS

For initialization and registration of ignition keys, refer to CONSULT Immobilizer mode and follow the on-screen instructions.

>> GO TO 5.

5.REGISTER KEYFOB ID

For registration of keyfob ID, refer to [DLK-257, "ID Code Entry Procedure"](#).

>> Work End.

ADDITIONAL SERVICE WHEN REPLACING BCM

< BASIC INSPECTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

6. REGISTER MECHANICAL KEYS

For initialization and registration of mechanical keys, refer to CONSULT Immobilizer mode and follow the on-screen instructions.

>> Work End.

CONFIGURATION (BCM)

Description

INFOID:0000000012432396

Vehicle specification needs to be written with CONSULT because it is not written after replacing BCM. Configuration has three functions as follows.

Function	Description
READ CONFIGURATION	- Reads the vehicle configuration of current BCM. - Saves the read vehicle configuration.
WRITE CONFIGURATION - Manual selection	Writes the vehicle configuration with manual selection.
WRITE CONFIGURATION - Config file	Writes the vehicle configuration with saved data.

NOTE:

Manual setting item: Items which need selection by vehicle specifications

Automatic setting item: Items which are written in automatically (Setting can not be changed)

For some models and specifications, the automatic setting item may not be displayed.

CAUTION:

When replacing BCM, always perform "WRITE CONFIGURATION" with CONSULT. Or not doing so, BCM control function does not operate normally.

- Complete the procedure of "WRITE CONFIGURATION" in order.
- Configuration is different for each vehicle model. Confirm configuration of each vehicle model.
- Never perform "WRITE CONFIGURATION" except for new BCM.
- If you set incorrect "WRITE CONFIGURATION", incidents might occur.

Work Procedure

INFOID:0000000012432397

1. WRITING MODE SELECTION

 CONSULT Configuration
Select "CONFIGURATION" of "BCM".

When writing saved data>>GO TO 2.

When writing manually>>GO TO 3.

2. PERFORM "WRITE CONFIGURATION - CONFIG FILE"

 CONSULT Configuration
Perform "WRITE CONFIGURATION - Config file".

>> WORK END

3. PERFORM "WRITE CONFIGURATION - MANUAL SELECTION"

-  CONSULT Configuration
1. Select "WRITE CONFIGURATION - Manual selection".
 2. Identify the correct model and configuration list. Refer to [BCS-124, "Configuration List"](#).
 3. Confirm and/or change setting value for each item.

CAUTION:

Thoroughly read and understand the vehicle specification. ECU control may not operate normally if the setting is not correct.

NOTE:

If items are not displayed, touch "SETTING". Refer to [BCS-124, "Configuration List"](#) for written items and setting value.

4. Select "SETTING".

CAUTION:

Make sure to select "SETTING" even if the indicated configuration of brand new BCM is same as the desirable configuration. If not, configuration which is set automatically by selecting vehicle model can not be memorized.

5. When "COMMAND FINISHED", select "END".

CONFIGURATION (BCM)

< BASIC INSPECTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

>> GO TO 4.

4. OPERATION CHECK

Confirm that each function controlled by BCM operates normally.

>> WORK END

Configuration List

INFOID:0000000012432398

CAUTION:

- Thoroughly read and understand the vehicle specification. ECU control may not operate normally if the setting is not correct.
- The “setting value” of this vehicle is as follows: Never select any other value than the setting value shown below. (If there is only 1 item in “setting value” that means that item is the only choice for this certain vehicle.)

SETTING ITEM		NOTE
Items	Setting value	
CAN CONNECTION UNIT	MODE4 ⇔ WITHOUT	• MODE4: With CVT • WITHOUT: Without CVT
KEYLESS ENTRY	WITH ⇔ WITHOUT	• WITH: With remote keyless entry • WITHOUT: Without remote keyless entry
AUTO LOCK & UNLOCK FUNC	WITH ⇔ WITHOUT	• WITH: With auto door lock function • WITHOUT: With auto door lock function

⇔: Items which confirm vehicle specifications

SHIPPING MODE CANCEL OPERATION

< BASIC INSPECTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

SHIPPING MODE CANCEL OPERATION

Work Procedure

INFOID:0000000012432399

1.SHIPPING MODE CANCEL OPERATION

1. Turn ignition switch OFF.
2. Press in (turn on) the extended storage switch. Refer to [PG-65. "How To Check"](#).
3. Turn ignition switch ON.
4. Turn ignition switch OFF and wait at least 2 seconds.

>> GO TO 2.

2.SHIPPING MODE CANCEL CHECK

1. Turn ignition switch ON.
2. Check that extended storage warning message is not displayed in combination meter or display.

>> WORK END

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

TRANSIT MODE CANCEL OPERATION

< BASIC INSPECTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

TRANSIT MODE CANCEL OPERATION

Work Procedure

INFOID:0000000012432400

1. TRANSIT MODE CANCEL OPERATION

1. Turn ignition switch OFF.
2. Do the following at the same time for 2 seconds:
 - Move front wiper switch to HI position (all the way down)
 - Move turn signal switch to left position (all the way down)

>> GO TO 2.

2. TRANSIT MODE CANCEL CHECK

1. Turn front wiper switch and turn signal switch OFF.
2. Turn ignition switch ON.
3. Check that turn signal indicators in combination meter do not turn ON.

>> Work End.

DTC/CIRCUIT DIAGNOSIS

U1000 CAN COMM

Description

INFOID:0000000012432401

Refer to [LAN-7, "CAN COMMUNICATION SYSTEM : System Description"](#).

DTC Logic

INFOID:0000000012432402

DTC DETECTION LOGIC

NOTE:

U1000 can be set if a module harness was disconnected and reconnected, perhaps during a repair. Confirm that there are actual CAN diagnostic symptoms and a present DTC by performing the Self Diagnostic Result procedure.

CONSULT Display	DTC Detection Condition	Possible Cause
CAN COMM CIRCUIT [U1000]	When any listed module cannot communicate with CAN communication signal continuously for 2 seconds or more with ignition switch ON	In CAN communication system, any item (or items) of the following listed below is malfunctioning. • Transmission • Receiving (ECM) • Receiving (VDC/TCS/ABS) • Receiving (METER/M&A) • Receiving (TCM) • Receiving (IPDM E/R)

Diagnosis Procedure

INFOID:0000000012432403

1. PERFORM SELF DIAGNOSTIC RESULT

1. Turn ignition switch ON and wait for 2 second or more.
2. Check "Self Diagnostic Result" of "BCM" using CONSULT.

Is "CAN COMM CIRCUIT" displayed?

- YES >> Perform CAN Diagnosis as described in DIAGNOSIS section of CONSULT Operation Manual.
- NO >> Refer to [GI-42, "Intermittent Incident"](#).

U1010 CONTROL UNIT (CAN)

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

U1010 CONTROL UNIT (CAN)

DTC Logic

INFOID:0000000012432404

DTC DETECTION LOGIC

CONSULT Display	DTC Detection Condition	Possible Cause
CONTROL UNIT (CAN) [U1010]	BCM detected internal CAN communication circuit malfunction.	BCM

Diagnosis Procedure

INFOID:0000000012432405

1.REPLACE BCM

When DTC "U1010" is detected, replace BCM.

>> Replace BCM. Refer to [BCS-137. "Removal and Installation"](#).

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

POWER SUPPLY AND GROUND CIRCUIT

Diagnosis Procedure

INFOID:000000012432406

Regarding Wiring Diagram information, refer to [BCS-117, "Wiring Diagram"](#).

1.CHECK FUSES AND FUSIBLE LINK

Check that the following fuses and fusible link are not blown.

Terminal No.	Signal name	Fuses and fusible link No.
37	Battery power supply	8 (10A)
42		12 (10A)
50		G (40A)
11	Ignition switch ACC or ON	18 (10A)
38	Ignition switch ON or START	2 (10A)

Is the fuse blown?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit.

NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connectors.
3. Check voltage between BCM connector and ground.

BCM		Ground	Ignition switch position		
Connector	Terminal		OFF	ACC	ON
M18	11	—	0 V	Battery voltage	Battery voltage
	37		Battery voltage		
	38		0 V		
M19	42		Battery voltage	Battery voltage	
	50				

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3.CHECK GROUND CIRCUIT

Check continuity between BCM connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M19	55	—	Yes

Is the inspection result normal?

YES >> Inspection End.

NO >> Repair harness or connector.

COMBINATION SWITCH INPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

COMBINATION SWITCH INPUT CIRCUIT

Diagnosis Procedure

INFOID:0000000012432407

Regarding Wiring Diagram information, refer to [BCS-117, "Wiring Diagram"](#).

1.CHECK INPUT 1 - 5 CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect BCM and combination switch connectors.
3. Check continuity between BCM connector and combination switch connector.

Combination switch signal	BCM		Combination switch		Continuity
	Connector	Terminal	Connector	Terminal	
INPUT 1	M18	36	M28	11	Yes
INPUT 2		35		9	
INPUT 3		34		7	
INPUT 4		33		10	
INPUT 5		32		13	

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair harness or connectors.

2.CHECK INPUT 1 - 5 CIRCUIT FOR SHORT

Check for continuity between BCM connector and ground.

Combination switch signal	BCM			Continuity
	Connector	Terminal		
INPUT 1	M18	36	Ground	No
INPUT 2		35		
INPUT 3		34		
INPUT 4		33		
INPUT 5		32		

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connectors.

3.CHECK BCM OUTPUT VOLTAGE

1. Connect BCM connector.
2. Check voltage between BCM connector and ground.

COMBINATION SWITCH INPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

BCM signal	Terminals		Voltage	
	(+) (−)			
	BCM			Ground
	Connector	Terminal		
OUTPUT 1	M18	36		
OUTPUT 2		35		
OUTPUT 3		34		
OUTPUT 4		33		
OUTPUT 5		32		

Refer to [BCS-101, "Reference Value"](#).

Refer to [BCS-101, "Reference Value"](#).

Is the inspection result normal?

- YES >> Replace combination switch. Refer to [BCS-138, "Removal and Installation"](#).
 NO >> Replace BCM. Refer to [BCS-137, "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

COMBINATION SWITCH OUTPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

COMBINATION SWITCH OUTPUT CIRCUIT

Diagnosis Procedure

INFOID:0000000012432408

Regarding Wiring Diagram information, refer to [BCS-117, "Wiring Diagram"](#).

1. CHECK OUTPUT 1 - 5 CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect BCM and combination switch connectors.
3. Check continuity between BCM connector and combination switch connector.

Combination switch signal	BCM		Combination switch		Continuity
	Connector	Terminal	Connector	Terminal	
OUTPUT 1	M18	6	M28	12	Yes
OUTPUT 2		5		14	
OUTPUT 3		4		5	
OUTPUT 4		3		2	
OUTPUT 5		2		8	

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair harness or connectors.

2. CHECK OUTPUT 1 - 5 CIRCUIT FOR SHORT

Check for continuity between BCM connector and ground.

Combination switch signal	BCM			Continuity
	Connector	Terminal		
OUTPUT 1	M18	6	Ground	No
OUTPUT 2		5		
OUTPUT 3		4		
OUTPUT 4		3		
OUTPUT 5		2		

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connectors.

3. CHECK BCM INPUT SIGNAL

1. Connect BCM and combination switch connectors.
2. Turn ON any switch in the system that is malfunctioning.
3. Check voltage between BCM connector and ground.

COMBINATION SWITCH OUTPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

BCM signal	Terminals		Voltage
	(+) (−)		
	BCM		
	Connector	Terminal	
INPUT 1	M18	6	Ground
INPUT 2		5	
INPUT 3		4	
INPUT 4		3	
INPUT 5		2	

Refer to [BCS-101. "Reference Value".](#)

Is the inspection result normal?

Yes >> Replace BCM. Refer to [BCS-137, "Removal and Installation"](#).

No >> Replace combination switch. Refer to [BCS-138, "Removal and Installation"](#).

COMBINATION SWITCH SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

SYMPTOM DIAGNOSIS

COMBINATION SWITCH SYSTEM SYMPTOMS

Symptom Table

INFOID:000000012432409

WITH VARIABLE INTERMITTENT FRONT WIPERS

1. Perform the data monitor of CONSULT to check for any malfunctioning item.
2. Check the malfunction combinations.

Malfunction item: ×

Malfunction combination	Data monitor item															
	FR WIPER HI	FR WIPER LOW	FR WASHER SW	FR WIPER INT	INT VOLUME	RR WIPER ON	RR WIPER INT	RR WASHER SW	TURN SIGNAL R	TURN SIGNAL L	TAIL LAMP SW	HI BEAM SW	HEAD LAMP SW 1	HEAD LAMP SW 2	PASSING SW	FR FOG SW
A		×	×						×	×						
B	×			×									×		×	
C					×			×				×		×		
D					×		×				×					
E					×	×										×
F	×				×		×									
G			×		×	×		×								
H		×		×												
I										×				×	×	×
J									×		×	×	×			
K	All Items															
L	If only one item is detected or the item is not applicable to the combinations A to K															

3. Identify the malfunctioning part from the agreed combination and repair or replace the part.

Malfunction combination	Malfunctioning part	Repair or replace
A	Combination switch INPUT 1 circuit	Inspect the combination switch input circuit applicable to the malfunctioning part. Refer to BCS-130, "Diagnosis Procedure" .
B	Combination switch INPUT 2 circuit	
C	Combination switch INPUT 3 circuit	
D	Combination switch INPUT 4 circuit	
E	Combination switch INPUT 5 circuit	
F	Combination switch OUTPUT 1 circuit	Inspect the combination switch output circuit applicable to the malfunctioning part. Refer to BCS-132, "Diagnosis Procedure" .
G	Combination switch OUTPUT 2 circuit	
H	Combination switch OUTPUT 3 circuit	
I	Combination switch OUTPUT 4 circuit	
J	Combination switch OUTPUT 5 circuit	
K	BCM	Replace BCM. Refer to BCS-137, "Removal and Installation" .
L	Combination switch	Replace the combination switch. Refer to BCS-138, "Removal and Installation" .

WITHOUT VARIABLE INTERMITTENT FRONT WIPERS

1. Perform the data monitor of CONSULT to check for any malfunctioning item.

COMBINATION SWITCH SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

2. Check the malfunction combinations.

Malfunction item: ×

Malfunction combination	Data monitor item													
	FR WIPER HI	FR WIPER LOW	FR WASHER SW	FR WIPER INT	RR WIPER ON	RR WIPER INT	RR WASHER SW	TURN SIGNAL R	TURN SIGNAL L	TAIL LAMP SW	HI BEAM SW	HEAD LAMP SW 1	HEAD LAMP SW 2	PASSING SW
A		×	×					×	×					
B	×			×								×		×
C							×				×		×	
D						×				×				
E					×									
F	×					×								
G			×		×		×							
H		×		×										
I									×				×	×
J								×		×	×	×		
K	All Items													
L	If only one item is detected or the item is not applicable to the combinations A to K													

3. Identify the malfunctioning part from the agreed combination and repair or replace the part.

Malfunction combination	Malfunctioning part	Repair or replace
A	Combination switch INPUT 1 circuit	Inspect the combination switch input circuit applicable to the malfunctioning part. Refer to BCS-130, "Diagnosis Procedure" .
B	Combination switch INPUT 2 circuit	
C	Combination switch INPUT 3 circuit	
D	Combination switch INPUT 4 circuit	
E	Combination switch INPUT 5 circuit	
F	Combination switch OUTPUT 1 circuit	Inspect the combination switch output circuit applicable to the malfunctioning part. Refer to BCS-132, "Diagnosis Procedure" .
G	Combination switch OUTPUT 2 circuit	
H	Combination switch OUTPUT 3 circuit	
I	Combination switch OUTPUT 4 circuit	
J	Combination switch OUTPUT 5 circuit	
K	BCM	Replace BCM. Refer to BCS-137, "Removal and Installation" .
L	Combination switch	Replace the combination switch. Refer to BCS-138, "Removal and Installation" .

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

NORMAL OPERATING CONDITION

Description

INFOID:0000000012432410

SHIPPING MODE

- Shipping mode inhibits battery power consumption during transportation or storage of the vehicle. Vehicle is set to shipping mode before being shipped from the factory.
- When ignition switch is OFF, BCM operates shipping mode.
- BCM control function is limited in shipping mode. Remote keyless entry function does not operate in shipping mode.
- For shipping mode cancel operation, refer to [BCS-125, "Work Procedure"](#).

NOTE:

Do not cancel shipping mode during storage of the vehicle. Shipping mode should not be canceled until just prior to customer delivery.

TRANSIT MODE

- BCM is in transit mode if turn signal indicators in combination meter illuminate for 1 minute when ignition switch is turned from OFF to ON.
- In this case, cancel operation must be performed.
- For transit mode cancel operation, refer to [BCS-126, "Work Procedure"](#).

NOTE:

Do not cancel transit mode during storage of the vehicle. Transit mode should not be canceled until just prior to customer delivery.

REMOVAL AND INSTALLATION

BCM (BODY CONTROL MODULE)

Removal and Installation

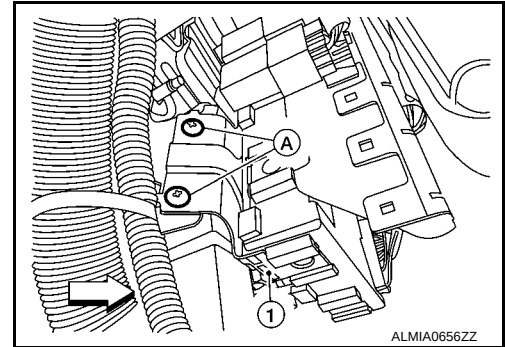
INFOID:0000000012432411

REMOVAL

CAUTION:

Before replacing BCM, perform "READ CONFIGURATION" to save or print current vehicle specification. Refer to [BCS-123, "Description"](#).

1. Disconnect negative and positive battery terminals, then wait at least three minutes. Refer to [PG-70, "Removal and Installation \(Battery\)"](#).
2. Remove instrument lower panel LH. Refer to [IP-24, "Removal and Installation"](#).
3. Remove screws (A) and remove the BCM (1) from the steering member and position aside.
⇐: Front
4. Disconnect the harness connectors from the BCM.
5. Remove relays from relay bracket.
6. Remove relay bracket from BCM to transfer to new BCM.



INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

- Perform "CONFIGURATION (BCM)" when replacing BCM. Refer to [BCS-123, "Description"](#).
- Make sure to perform the system initialization (NATS) (if equipped) when replacing BCM. Refer to [BCS-121, "Description"](#).
- When replacing BCM, if new BCM does not come with keyfobs attached, all existing keyfobs must be re-registered.
- For initialization and registration of Intelligent Key, refer to CONSULT Immobilizer mode and follow the on-screen instructions.

COMBINATION SWITCH

< REMOVAL AND INSTALLATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

COMBINATION SWITCH

Removal and Installation

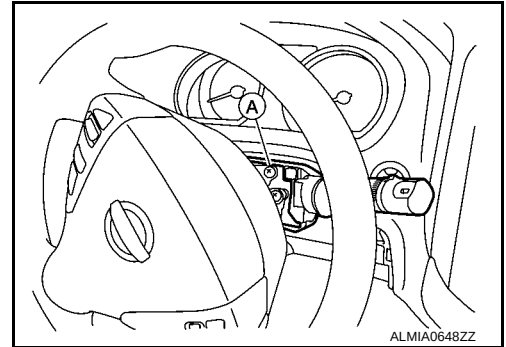
INFOID:000000012432412

CAUTION:


- Before servicing, turn the ignition switch OFF, disconnect both battery terminals and wait at least three minutes.
- Do not use air or electric tools when removing or installing the combination switch.

REMOVAL

1. Disconnect the negative and positive battery terminals, then wait at least three minutes. Refer to [PG-70, "Removal and Installation \(Battery\)"](#).
2. Remove the steering column covers. Refer to [IP-17, "Removal and Installation"](#).
3. Rotate steering wheel clockwise to access first combination switch screw (A) and remove.



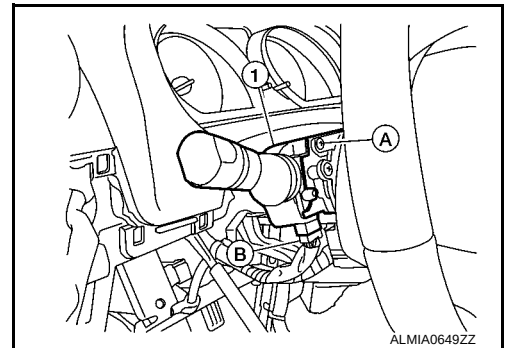4. Rotate steering wheel counter-clockwise to access second combination switch screw (A) and remove.
5. Disconnect the harness connector (B) from the combination switch (1) and remove.



INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

- After the work is completed, make sure no system malfunction is detected by air bag warning lamp.
- In case a malfunction is detected by the air bag warning lamp, reset with the self-diagnosis function and delete the memory with CONSULT.
- If a malfunction is still detected after the above operation, perform self-diagnosis to repair malfunctions. Refer to [BCS-121, "Description"](#).