

SECTION PWC

POWER WINDOW CONTROL SYSTEM

CONTENTS

PRECAUTION	4	RETAINED PWR	12
PRECAUTIONS	4	RETAINED PWR : CONSULT Function (BCM -	
Precaution for Supplemental Restraint System		RETAINED PWR)	12
(SRS) "AIR BAG" and "SEAT BELT PRE-TEN-		ECU DIAGNOSIS INFORMATION	13
SIONER"	4	BCM	13
Precaution for Work	4	List of ECU Reference	13
PREPARATION	5	POWER WINDOW MAIN SWITCH	14
PREPARATION	5	Reference Value	14
Special Service Tool	5	Fail Safe	15
SYSTEM DESCRIPTION	6	WIRING DIAGRAM	16
COMPONENT PARTS	6	POWER WINDOW SYSTEM	16
Component Parts Location	6	Wiring Diagram	16
Main Power Window And Door Lock/Unlock		BASIC INSPECTION	23
Switch	7	DIAGNOSIS AND REPAIR WORK FLOW	23
Power Window Switch	7	Work Flow	23
Power Window Motor	7	DTC/CIRCUIT DIAGNOSIS	25
SYSTEM	8	POWER SUPPLY AND GROUND CIRCUIT	25
System Description	8	BCM (BODY CONTROL SYSTEM) (WITH INTEL-	
DIAGNOSIS SYSTEM (BCM) (WITH INTELLI-		LIGENT KEY SYSTEM)	25
GENENT KEY SYSTEM)	9	BCM (BODY CONTROL SYSTEM) (WITH INTEL-	
COMMON ITEM	9	LIGENT KEY SYSTEM) : Diagnosis Procedure	25
COMMON ITEM : CONSULT Function (BCM -		BCM (BODY CONTROL SYSTEM) (WITHOUT IN-	
COMMON ITEM)	9	TELLIGENT KEY SYSTEM)	25
RETAINED PWR	10	BCM (BODY CONTROL SYSTEM) (WITHOUT	
RETAINED PWR : CONSULT Function (BCM -		INTELLIGENT KEY SYSTEM) : Diagnosis Proce-	
RETAINED PWR)	10	dure	25
DIAGNOSIS SYSTEM (BCM) (WITHOUT IN-		POWER WINDOW MAIN SWITCH	26
TELLIGENT KEY SYSTEM)	11	POWER WINDOW MAIN SWITCH : Diagnosis	
COMMON ITEM	11	Procedure	26
COMMON ITEM : CONSULT Function (BCM -		FRONT POWER WINDOW SWITCH (PASSEN-	
COMMON ITEM)	11	GER SIDE)	27

FRONT POWER WINDOW SWITCH (PASSENGER SIDE) : Diagnosis Procedure	27
REAR POWER WINDOW SWITCH	28
REAR POWER WINDOW SWITCH : Diagnosis Procedure	28
FRONT POWER WINDOW SWITCH (PASSENGER SIDE)	30
Component Function Check	30
Diagnosis Procedure	30
Component Inspection	31
REAR POWER WINDOW SWITCH	32
Component Function Check	32
Diagnosis Procedure	32
Component Inspection	33
POWER WINDOW MOTOR	34
DRIVER SIDE	34
DRIVER SIDE : Component Function Check	34
DRIVER SIDE : Diagnosis Procedure	34
PASSENGER SIDE	35
PASSENGER SIDE : Component Function Check	35
PASSENGER SIDE : Diagnosis Procedure	35
REAR LH	36
REAR LH : Component Function Check	36
REAR LH : Diagnosis Procedure	36
REAR RH	37
REAR RH : Component Function Check	37
REAR RH : Diagnosis Procedure	37
DOOR SWITCH	39
WITH INTELLIGENT KEY SYSTEM	39
WITH INTELLIGENT KEY SYSTEM : Component Function Check	39
WITH INTELLIGENT KEY SYSTEM : Diagnosis Procedure	39
WITH INTELLIGENT KEY SYSTEM : Component Inspection	40
WITHOUT INTELLIGENT KEY SYSTEM	40
WITHOUT INTELLIGENT KEY SYSTEM : Description	40
WITHOUT INTELLIGENT KEY SYSTEM : Component Function Check	40
WITHOUT INTELLIGENT KEY SYSTEM : Diagnosis Procedure	41
WITHOUT INTELLIGENT KEY SYSTEM : Component Inspection	42
SYMPTOM DIAGNOSIS	43
POWER WINDOW CONTROL SYSTEM SYMPTOMS	43
Symptom Table	43

NONE OF THE POWER WINDOWS CAN BE OPERATED USING ANY SWITCH	44
Diagnosis Procedure	44
DRIVER SIDE POWER WINDOW DOES NOT OPERATE	45
Diagnosis Procedure	45
FRONT PASSENGER SIDE POWER WINDOW DOES NOT OPERATE	46
WHEN BOTH POWER WINDOW MAIN SWITCH AND FRONT POWER WINDOW SWITCH ARE OPERATED	46
WHEN BOTH POWER WINDOW MAIN SWITCH AND FRONT POWER WINDOW SWITCH ARE OPERATED : Diagnosis Procedure	46
WHEN FRONT POWER WINDOW SWITCH (PASSENGER SIDE) IS OPERATED	46
WHEN FRONT POWER WINDOW SWITCH (PASSENGER SIDE) IS OPERATED : Diagnosis Procedure	46
WHEN POWER WINDOW MAIN SWITCH IS OPERATED	46
WHEN POWER WINDOW MAIN SWITCH IS OPERATED : Diagnosis Procedure	47
REAR LH SIDE POWER WINDOW DOES NOT OPERATE	48
WHEN BOTH POWER WINDOW MAIN SWITCH AND REAR POWER WINDOW SWITCH LH ARE OPERATED	48
WHEN BOTH POWER WINDOW MAIN SWITCH AND REAR POWER WINDOW SWITCH LH ARE OPERATED : Diagnosis Procedure	48
WHEN REAR POWER WINDOW SWITCH LH IS OPERATED	48
WHEN REAR POWER WINDOW SWITCH LH IS OPERATED : Diagnosis Procedure	48
WHEN POWER WINDOW MAIN SWITCH IS OPERATED	48
WHEN POWER WINDOW MAIN SWITCH IS OPERATED : Diagnosis Procedure	49
REAR RH SIDE POWER WINDOW DOES NOT OPERATE	50
WHEN BOTH POWER WINDOW MAIN SWITCH AND REAR POWER WINDOW SWITCH RH ARE OPERATED	50
WHEN BOTH POWER WINDOW MAIN SWITCH AND REAR POWER WINDOW SWITCH RH ARE OPERATED : Diagnosis Procedure	50
WHEN REAR POWER WINDOW SWITCH RH IS OPERATED	50

WHEN REAR POWER WINDOW SWITCH RH IS OPERATED : Diagnosis Procedure	50	
WHEN POWER WINDOW MAIN SWITCH IS OPERATED	50	
WHEN POWER WINDOW MAIN SWITCH IS OPERATED : Diagnosis Procedure	51	
AUTO OPERATION DOES NOT OPERATE BUT MANUAL OPERATE NORMALLY (DRIVER SIDE)	52	
Diagnosis Procedure	52	
POWER WINDOW RETAINED POWER OPERATION DOES NOT OPERATE PROPERLY	53	
Diagnosis Procedure	53	
POWER WINDOW LOCK SWITCH DOES NOT FUNCTION	54	A
Diagnosis Procedure	54	
REMOVAL AND INSTALLATION	55	B
MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH	55	
Removal and Installation	55	C
POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH	56	D
Removal and Installation	56	
REAR POWER WINDOW SWITCH	57	E
Removal and Installation	57	

F

G

H

I

J

PWC

L

M

N

O

P

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000012431791

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

Precaution for Work

INFOID:0000000012431792

- When removing or disassembling each component, be careful not to damage or deform it. If a component may be subject to interference, be sure to protect it with a shop cloth.
- When removing (disengaging) components with a screwdriver or similar tool, be sure to wrap the component with a shop cloth or vinyl tape to protect it.
- Protect the removed parts with a shop cloth and prevent them from being dropped.
- Replace a deformed or damaged clip.
- If a part is specified as a non-reusable part, always replace it with a new one.
- Be sure to tighten bolts and nuts securely to the specified torque.
- After installation is complete, be sure to check that each part works properly.
- Follow the steps below to clean components:
 - Water soluble dirt:
 - Dip a soft cloth into lukewarm water, wring the water out of the cloth and wipe the dirty area.
 - Then rub with a soft, dry cloth.
 - Oily dirt:
 - Dip a soft cloth into lukewarm water with mild detergent (concentration: within 2 to 3%) and wipe the dirty area.
 - Then dip a cloth into fresh water, wring the water out of the cloth and wipe the detergent off.
 - Then rub with a soft, dry cloth.
 - Do not use organic solvent such as thinner, benzene, alcohol or gasoline.
 - For genuine leather seats, use a genuine leather seat cleaner.

PREPARATION

< PREPARATION >

PREPARATION


PREPARATION

Special Service Tool

INFOID:0000000012431793

The actual shape of the tools may differ from those illustrated here.

Tool number (TechMate No.) Tool name	Description
— (J-46534) Trim Tool Set	Removing trim components

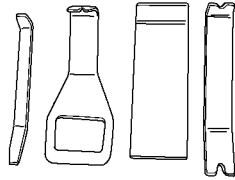

AW3IA0483ZZ

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC

COMPONENT PARTS


< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:000000012431794

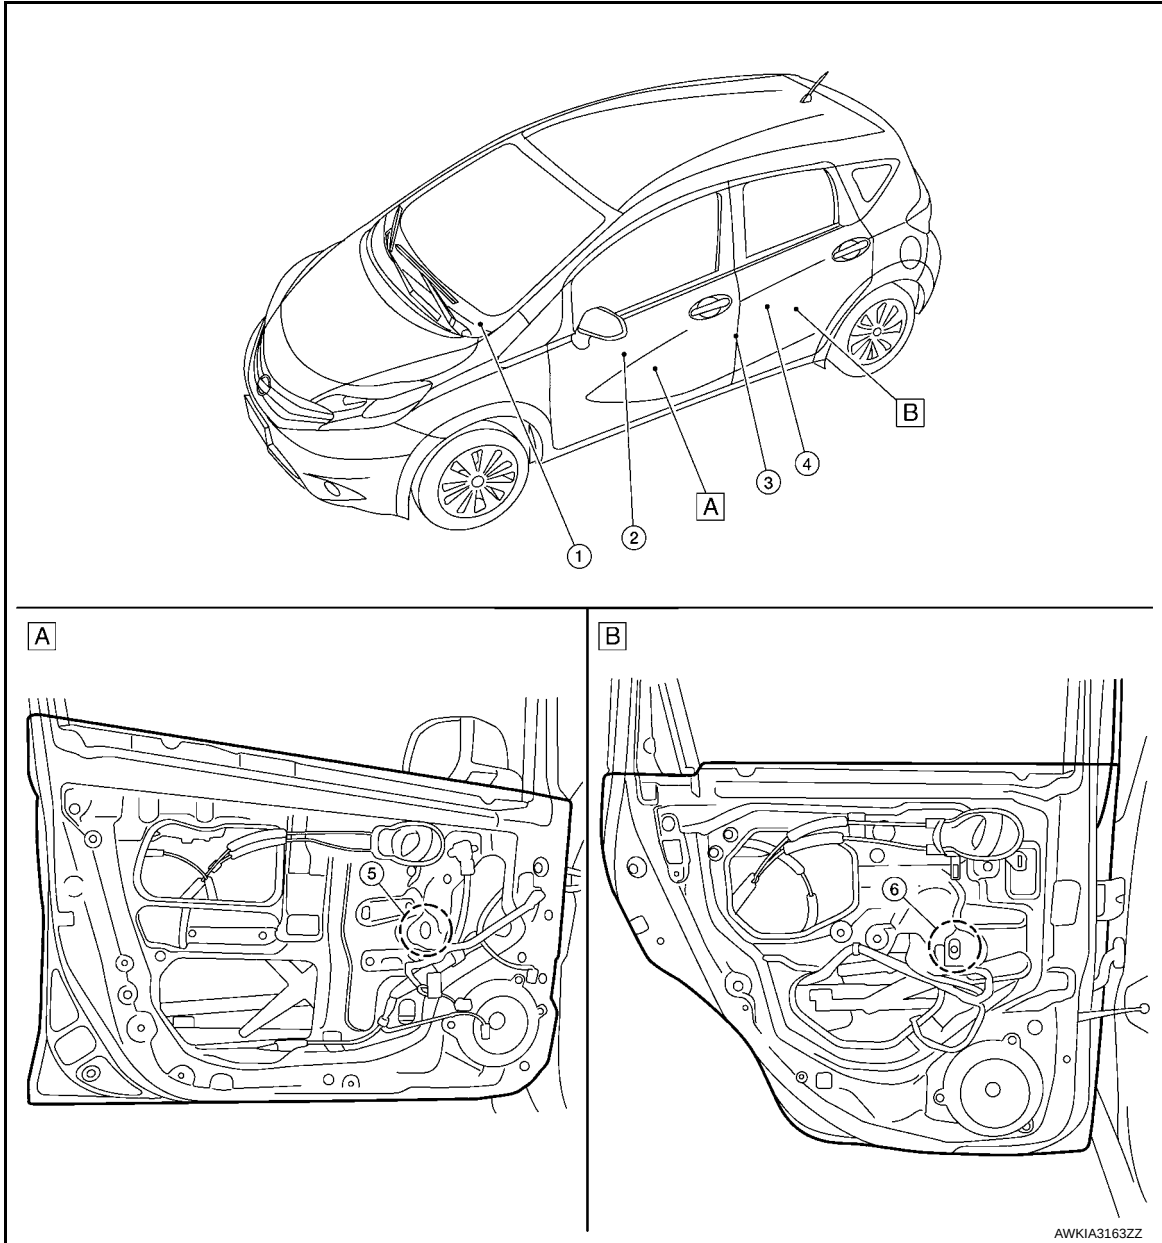

A. View with LH front door finisher removed B. View with LH rear door finisher removed

No.	Component parts	Function
1.	BCM	- Supplies power supply to power window switch. - Controls retained power. - Refer to BCS-6, "BODY CONTROL SYSTEM : Component Parts Location" for detailed installation location.
2.	Main power window and door lock/unlock switch	Refer to PWC-7, "Main Power Window And Door Lock/Unlock Switch" .

COMPONENT PARTS


< SYSTEM DESCRIPTION >

No.	Component parts	Function
3.	Front door switch LH	- Inputs door open/close condition to BCM. - Refer to DLK-19, "INTELLIGENT KEY SYSTEM : Door Switch" for detailed installation location.
4.	Rear power window switch LH	Refer to PWC-7, "Power Window Switch" .
5.	Front power window motor LH	Refer to PWC-7, "Power Window Motor" .
6.	Rear power window motor LH	Refer to PWC-7, "Power Window Motor" .

Main Power Window And Door Lock/Unlock Switch

INFOID:0000000012431795


- Main power window and door lock/unlock switch controls all power windows.
- Main power window and door lock/unlock switch integrates UP/DOWN switch, power window lock switch, and door lock/unlock switch.
- Main power window and door lock/unlock switch controls the power window lock function.

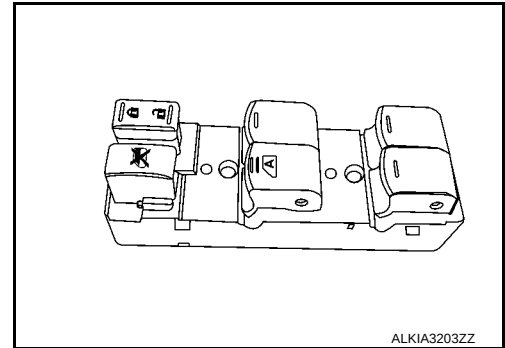

Power Window Switch

INFOID:0000000012431796


- Each power window switch transmits UP/DOWN signal to each motor.
- Each power window switch transmits UP/DOWN signal from main power window and door lock/unlock switch to each motor.

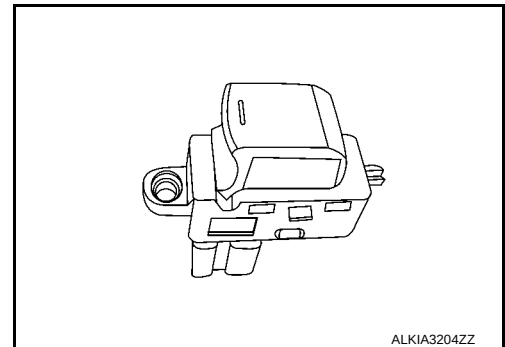

Power Window Motor

INFOID:0000000012431797

- Starts operation according to signals from main power window and door lock/unlock switch.
- Transmits front power window motor LH rotation as a pulse signal to main power window and door lock/unlock switch.
- Excepting power window motor for driver door, starts operation according to signals from main power window and door lock/unlock switch or each power window switches.

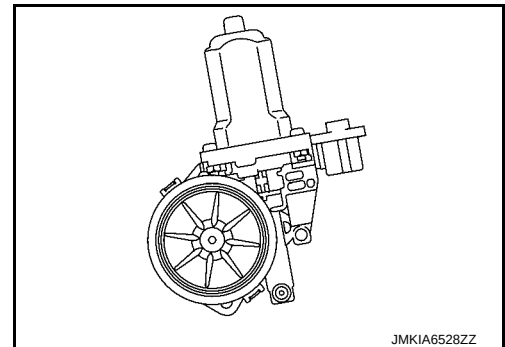

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

diagn.com
PWC

SYSTEM


< SYSTEM DESCRIPTION >

SYSTEM

System Description

INFOID:000000012431798

SYSTEM DIAGRAM

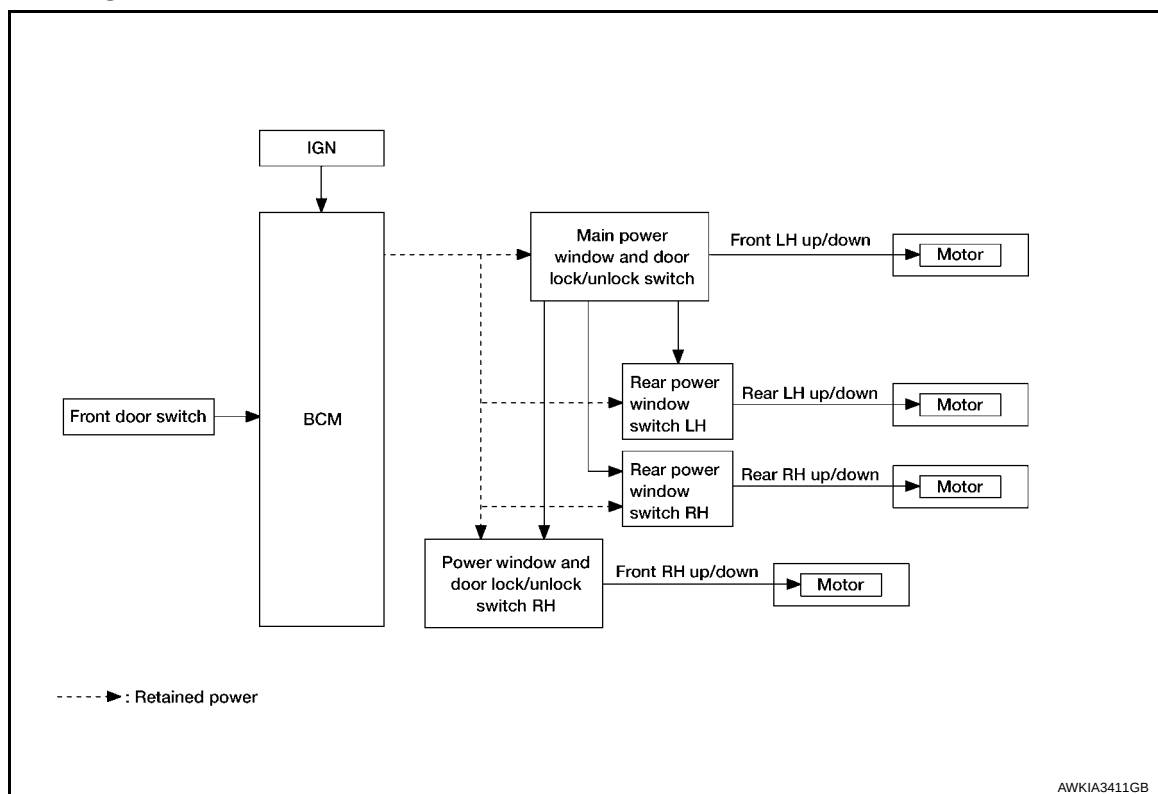

BASIC OPERATION

- Power window system is activated by power window switch when ignition switch turns ON.
- Main power window and door lock/unlock switch opens/closes all door glass.
- Front and rear power window switch opens/closes the corresponding door glass.
- AUTO DOWN operation can be performed when main power window and door lock/unlock switch is depressed to the second detent.
- Power window lock switch can lock all power windows other than driver seat.

POWER WINDOW AUTO-OPERATION

AUTO DOWN operation can be performed when main power window and door lock/unlock switch is depressed to the second detent.

POWER WINDOW LOCK

Ground circuit inside main power window and door lock/unlock switch shuts off when power window lock switch is ON. This inhibits each power window switch operation except the main power window and door lock/unlock switch.

RETAINED POWER OPERATION

- Retained power operation is an additional power supply function that enables power window system to operate for an additional 45 seconds after the ignition switch is turned OFF.

RETAINED ACCESSORY POWER CANCEL CONDITIONS:

- Front door CLOSE (door switch OFF)→OPEN (door switch ON).
- When ignition switch is ON again.
- When timer expires. (45 seconds)

DIAGNOSIS SYSTEM (BCM) (WITH INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (BCM) (WITH INTELLIGENT KEY SYSTEM) COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:0000000012542484

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Direct Diagnostic Mode	Description
ECU Identification	The BCM part number is displayed.
Self Diagnostic Result	The BCM self diagnostic results are displayed.
Data Monitor	The BCM input/output data is displayed in real time.
Active Test	The BCM activates outputs to test components.
Work support	The settings for BCM functions can be changed.
Configuration	- The vehicle specification can be read and saved. - The vehicle specification can be written when replacing BCM.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication is displayed.

SYSTEM APPLICATION

BCM can perform the following functions.

System	Sub System	Direct Diagnostic Mode						
		ECU Identification	Self Diagnostic Result	Data Monitor	Active Test	Work support	Configuration	CAN DIAG SUPPORT MNTR
Door lock	DOOR LOCK			x	x	x		
Rear window defogger	REAR DEFOGGER			x	x			
Warning chime	BUZZER			x	x			
Interior room lamp timer	INT LAMP			x	x	x		
Exterior lamp	HEAD LAMP			x	x	x		
Wiper and washer	WIPER			x	x	x		
Turn signal and hazard warning lamps	FLASHER			x	x	x		
Air conditioner	AIR CONDITIONER			x				
Intelligent Key system	INTELLIGENT KEY		x	x	x	x		
Combination switch	COMB SW			x				
BCM	BCM	x	x			x	x	x
Immobilizer	IMMU		x	x	x	x		
Interior room lamp battery saver	BATTERY SAVER			x	x	x		
Vehicle security system	THEFT ALM			x	x			
RAP system	RETAINED PWR			x				
Signal buffer system	SIGNAL BUFFER			x				
TPMS	AIR PRESSURE MONITOR		x	x	x	x		
Panic alarm system	PANIC ALARM				x			

DIAGNOSIS SYSTEM (BCM) (WITH INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

RETAINED PWR

RETAINED PWR : CONSULT Function (BCM - RETAINED PWR)

INFOID:0000000012542485

DATA MONITOR

Monitor Item [Unit]	Description
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.

DIAGNOSIS SYSTEM (BCM) (WITHOUT INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (BCM) (WITHOUT INTELLIGENT KEY SYSTEM) COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:0000000012542486

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Direct Diagnostic Mode	Description
ECU Identification	The BCM part number is displayed.
Self Diagnostic Result	The BCM self diagnostic results are displayed.
Data Monitor	The BCM input/output data is displayed in real time.
Active Test	The BCM activates outputs to test components.
Work support	The settings for BCM functions can be changed.
Configuration	- The vehicle specification can be read and saved. - The vehicle specification can be written when replacing BCM.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication is displayed.

SYSTEM APPLICATION

BCM can perform the following functions.

System	Sub System	Direct Diagnostic Mode						
		ECU Identification	Self Diagnostic Result	Data Monitor	Active Test	Work support	Configuration	CAN DIAG SUPPORT MNTR
Door lock	DOOR LOCK			x	x	x		
Rear window defogger	REAR DEFOGGER			x	x			
Warning chime	BUZZER			x	x			
Interior room lamp timer	INT LAMP			x	x	x		
Remote keyless entry system	MULTI REMOTE ENT			x	x	x		
Exterior lamp	HEAD LAMP			x	x	x		
Wiper and washer	WIPER			x	x	x		
Turn signal and hazard warning lamps	FLASHER			x	x			
Air conditioner	AIR CONDITIONER			x				
Combination switch	COMB SW			x				
BCM	BCM	x	x			x	x	x
Immobilizer	IMMU		x		x	x		
Interior room lamp battery saver	BATTERY SAVER			x	x	x		
Vehicle security system	THEFT ALM			x		x		
RAP system	RETAINED PWR			x		x		
Signal buffer system	SIGNAL BUFFER			x				
TPMS	AIR PRESSURE MONITOR		x	x	x	x		
Panic alarm system	PANIC ALARM				x			

DIAGNOSIS SYSTEM (BCM) (WITHOUT INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

RETAINED PWR

RETAINED PWR : CONSULT Function (BCM - RETAINED PWR)

INFOID:0000000012542487

DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [On/Off]	Indicates condition of ignition ON switch.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.

WORK SUPPORT

Monitor Item [Unit]	Setting		Description
RETAINED PWR SET	MODE 3	2 Min.	Sets the retained accessory power operating time.
	MODE 2	OFF	
	MODE 1*	45 Sec.	

BCM

< ECU DIAGNOSIS INFORMATION >

ECU DIAGNOSIS INFORMATION

BCM

List of ECU Reference

INFOID:0000000012431803

ECU	Reference
BCM (with Intelligent Key system)	BCS-30, "Reference Value"
	BCS-48, "Fail-safe"
	BCS-49, "DTC Inspection Priority Chart"
	BCS-50, "DTC Index"
BCM (without Intelligent Key system)	BCS-101, "Reference Value"
	BCS-115, "Fail-safe"
	BCS-115, "DTC Inspection Priority Chart"
	BCS-115, "DTC Index"

POWER WINDOW MAIN SWITCH


< ECU DIAGNOSIS INFORMATION >

POWER WINDOW MAIN SWITCH

Reference Value

INFOID:0000000012431804

TERMINAL LAYOUT

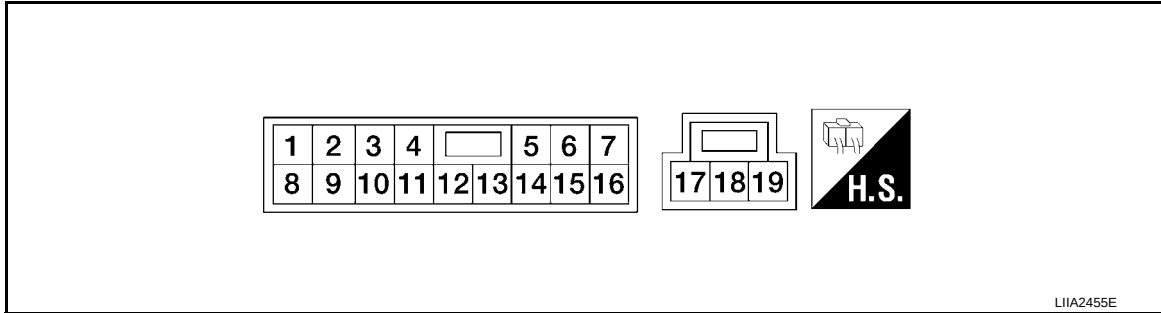

PHYSICAL VALUES

Terminal No. (Wire color)		Description		Condition	Voltage (Approx.)
+	-	Signal name	Input/ Output		
1 (BR)	Ground	Rear power window motor LH UP signal	Output	When the rear LH switch on the main power window and door lock/unlock switch is operated in the UP position.	Battery voltage
3 (G)	Ground	Rear power window motor LH DOWN signal	Output	When the rear LH switch on the main power window and door lock/unlock switch is operated in the DOWN position.	Battery voltage
5 (Y)	Ground	Rear power window motor RH DOWN signal	Output	When the rear RH switch on the main power window and door lock/unlock switch is operated in the DOWN position.	Battery voltage
7 (V)	Ground	Rear power window motor RH UP signal	Output	When the rear RH switch on the main power window and door lock/unlock switch is operated in the UP position.	Battery voltage
8 (R)	Ground	Front power window motor LH UP signal	Output	When the front LH switch on the main power window and door lock/unlock switch is operated in the UP position.	Battery voltage
10 (L)	Ground	Ignition switch power supply	Input	Ignition switch ON	Battery voltage
				Other than above	0
11 (LG)	Ground	Front power window motor LH DOWN signal	Output	When the front LH switch on the main power window and door lock/unlock switch is operated in the DOWN position.	Battery voltage
12 (SB)	Ground	Front power window motor RH DOWN signal	Output	When the front RH switch on the main power window and door lock/unlock switch is operated in the DOWN position.	Battery voltage
16 (W)	Ground	Front power window motor RH UP signal	Output	When the front RH switch on the main power window and door lock/unlock switch is operated in the UP position.	Battery voltage
17 (B)	Ground	Ground	—	—	0

POWER WINDOW MAIN SWITCH

< ECU DIAGNOSIS INFORMATION >

Fail Safe

INFOID:000000012431805

FAIL-SAFE CONTROL

Switches to fail-safe control when malfunction is detected in the CPU signal that detects up/down speed and direction of door glass. Switches to fail-safe control when error beyond regulation value is detected between the fully closed position and the actual position of the glass.

Error	Error condition
Pulse sensor malfunction	When only one side of pulse signal is being detected for more than the specified value.
Both pulse sensors malfunction	When both pulse signals have not been detected for more than the specified value during glass open/close operation.
Pulse direction malfunction	When the pulse signal that is detected during glass open/close operation detects the opposite condition of power window motor operating direction.
Glass recognition position malfunction 1	When it detects the error between glass fully closed position in power window switch memory and actual fully closed position during glass open/close operation is more than the specified value.
Glass recognition position malfunction 2	When it detects pulse count more than the value of glass full stroke during glass open/close operation.

It changes to condition before initialization and the following functions do not operate when switched to fail-safe control.

- Auto operation
- Retained power function

Perform initial operation to recover when switched to fail-safe mode. However, it switches back to fail-safe control when malfunction is found in main power window and door lock/unlock switch or front power window motor LH.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P


PWC

< WIRING DIAGRAM >

POWER WINDOW SYSTEM

Wiring Diagram


cardiagn.com

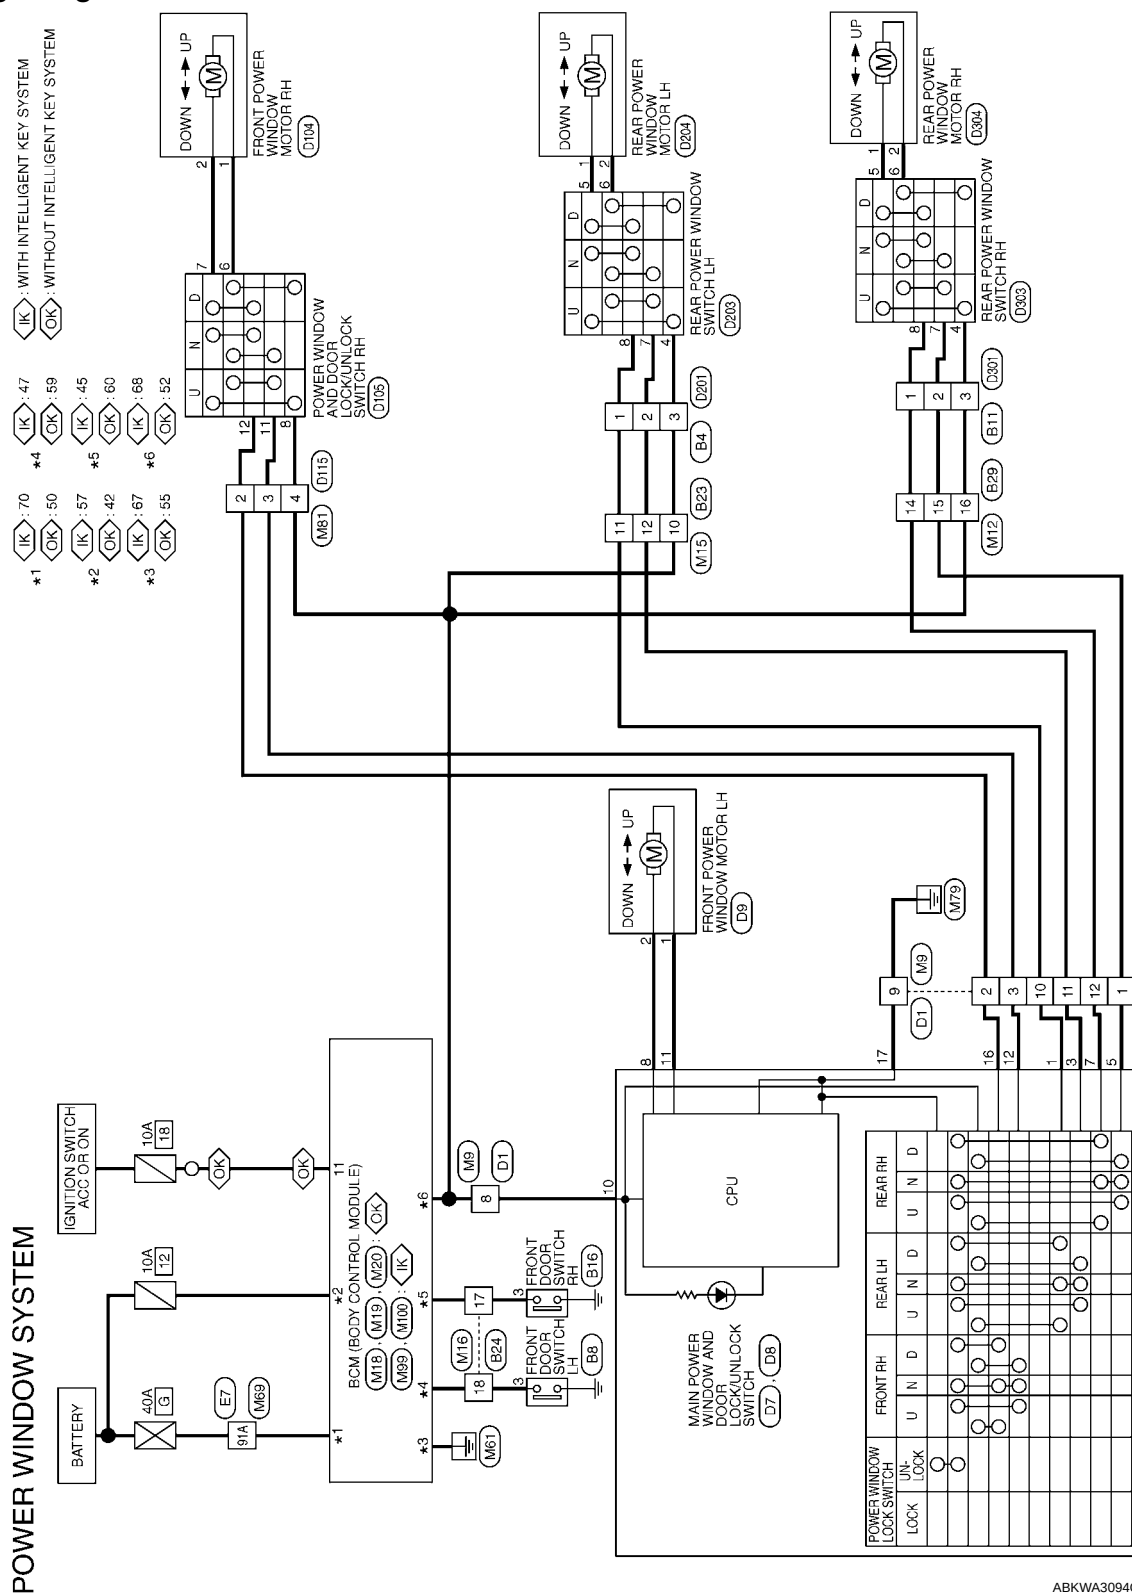

ABKWA3094GB


POWER WINDOW SYSTEM CONNECTORS

Connector No.	M9
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
1	R	-
2	W	-
3	V	-
8	L	-
9	B	-
10	GR	-
11	O	-
12	LG	-

Connector No.	M12
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
14	LG	-
15	R	-
16	L	-

Connector No.	M15
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
10	L	-
11	GR	-
12	O	-

Connector No.	M16
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
17	BG	-
18	SB	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE) (WITHOUT INTELLIGENT KEY SYSTEM)
Connector Color	WHITE

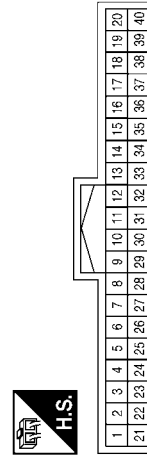

Terminal No.	Color of Wire	Signal Name
11	L	ACC SW

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE) (WITHOUT INTELLIGENT KEY SYSTEM)
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
42	Y	BATTERY (FUSE)
50	G	BATTERY (F/L)
52	L	POWER WINDOW POWER SUPPLY (RAP)
55	B	GND


ABKIA7092GB

POWER WINDOW SYSTEM

< WIRING DIAGRAM >

Terminal No.	Color of Wire	Signal Name
91A	G	—

Connector No.	M69
Connector Name	WIRE TO WIRE
Connector Color	WHITE

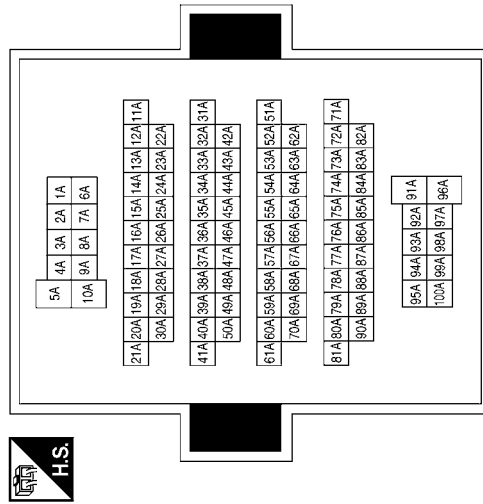

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE) (WITHOUT INTELLIGENT KEY SYSTEM)
Connector Color	BLACK

56	57	58	59	60	61	62	63	64
65	66	67	68	69	70			



Terminal No.	Color of Wire	Signal Name
59	SB	DOOR SW (DR)
60	BG	DOOR SW (AS)

Connector No.	M100
Connector Name	BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY SYSTEM)
Connector Color	BLACK

41	42	43	44	45	46	47	48	49
50	51	52	53	54	55			



Terminal No.	Color of Wire	Signal Name
45	BG	DOOR SW (AS)
47	SB	DOOR SW (DR)

Connector No.	M99
Connector Name	BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY SYSTEM)
Connector Color	WHITE

56	57	58	59	60	61	62	63	64
65	66	67	68	69	70			



Terminal No.	Color of Wire	Signal Name
57	Y	BATTERY (FUSE)
67	B	GND
68	L	POWER WINDOW POWER SUPPLY (RAP)
70	G	BATTERY (F/L)

Connector No.	M81
Connector Name	WIRE TO WIRE
Connector Color	WHITE

1	2	3	4	5		
6	7	8	9	10	11	12



Terminal No.	Color of Wire	Signal Name
2	W	—
3	V	—
4	L	—

ABKIA7093GB

POWER WINDOW SYSTEM

< WIRING DIAGRAM >

Connector No.	B4
Connector Name	WIRE TO WIRE
Connector Color	WHITE




4	3	2	1
10	9	8	7
6	5		

Terminal No.	Color of Wire	Signal Name
1	V	-
2	O	-
3	L	-

Terminal No.	Color of Wire	Signal Name
91A	Y	-

Connector No.	E7
Connector Name	WIRE TO WIRE
Connector Color	WHITE

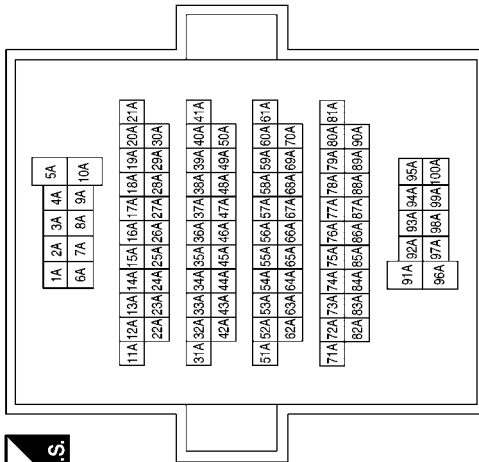

Connector No.	B16
Connector Name	FRONT DOOR SWITCH RH
Connector Color	WHITE



1	2	3	4
---	---	---	---

Connector No.	B11
Connector Name	WIRE TO WIRE
Connector Color	WHITE



4	3	2	1
10	9	8	7
6	5		

Terminal No.	Color of Wire	Signal Name
3	L	-

Terminal No.	Color of Wire	Signal Name
1	R	-
2	R/L	-
3	L	-

Terminal No.	Color of Wire	Signal Name
3	LG	-



1	2	3	4
---	---	---	---

AAKIA1303GB

POWER WINDOW SYSTEM

< WIRING DIAGRAM >

Connector No.	B29
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					

Terminal No.	Color of Wire	Signal Name
14	R	-
15	R/L	-
16	L	-

Connector No.	B24
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10	11	12
13	14	15	16	17	18	19	20	21	22	23	24

Terminal No.	Color of Wire	Signal Name
17	L	-
18	LG	-

Connector No.	B23
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					

Terminal No.	Color of Wire	Signal Name
10	L	-
11	V	-
12	O	-

Connector No.	D8
Connector Name	MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH
Connector Color	WHITE



17	18	19
----	----	----

Connector No.	D7
Connector Name	MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH
Connector Color	WHITE



1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					

Connector No.	D1
Connector Name	WIRE TO WIRE
Connector Color	WHITE



5	4	3	2	1
12	11	10	9	8
7	6			

Terminal No.	Color of Wire	Signal Name
17	B	GND

Terminal No.	Color of Wire	Signal Name
1	BR	MOTOR UP RL
3	G	MOTOR DN RL
5	Y	MOTOR DN RR
7	V	MOTOR UP RR
8	R	MOTOR UP DR
10	L	IGN
11	LG	MOTOR DN DR
12	SB	MOTOR DN AS
16	W	MOTOR UP AS


Terminal No.	Color of Wire	Signal Name
1	Y	-
2	W	-
3	SB	-
8	L	-
9	B	-
10	BR	-
11	G	-
12	V	-

AAKIA1304GB

POWER WINDOW SYSTEM

< WIRING DIAGRAM >

Connector No.	D105
Connector Name	POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
6	Y	-
7	R	-
8	L	-
11	SB	-
12	W	-

Connector No.	D104
Connector Name	FRONT POWER WINDOW MOTOR RH
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	Y	-
2	R	-

Connector No.	D9
Connector Name	FRONT POWER WINDOW MOTOR LH
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	LG	-
2	R	-

Connector No.	D203
Connector Name	REAR POWER WINDOW SWITCH LH
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
4	L	-
5	R	-
6	G	-
7	Y	-
8	BR	-

Connector No.	D201
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
1	BR	-
2	Y	-
3	L	-

Connector No.	D115
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
2	W	-
3	SB	-
4	L	-

ABKIA7094GB

POWER WINDOW SYSTEM

< WIRING DIAGRAM >

Connector No.	D303
Connector Name	REAR POWER WINDOW SWITCH RH
Connector Color	WHITE



3	2	1
8	7	6
5	4	

Terminal No.	Color of Wire	Signal Name
4	L	-
5	R	-
6	G	-
7	Y	-
8	BR	-

Connector No.	D301
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4
5	6	7	8
9	10		

Terminal No.	Color of Wire	Signal Name
1	BR	-
2	Y	-
3	L	-

Connector No.	D204
Connector Name	REAR POWER WINDOW MOTOR LH
Connector Color	BLACK



1	2
---	---

Terminal No.	Color of Wire	Signal Name
1	R	-
2	G	-

Connector No.	D304
Connector Name	REAR POWER WINDOW MOTOR RH
Connector Color	BLACK



1	2
---	---

Terminal No.	Color of Wire	Signal Name
1	R	-
2	G	-

AAKIA2296GB

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:0000000012431807

OVERALL SEQUENCE

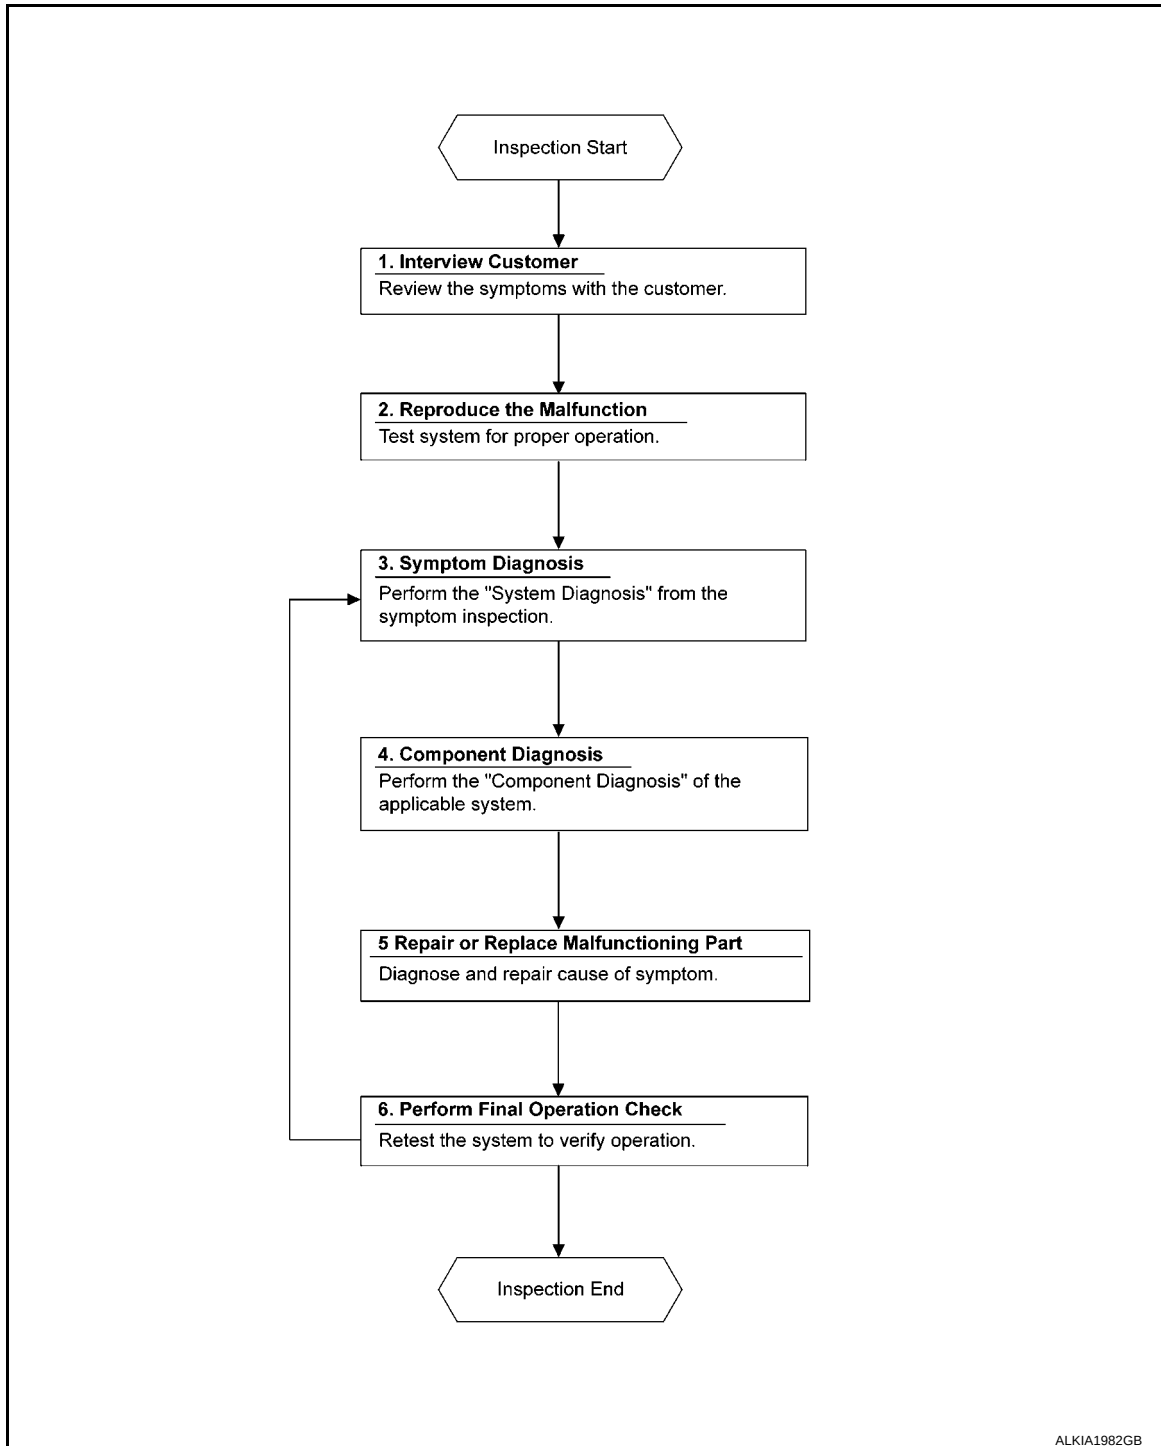

DETAILED FLOW

1. OBTAIN INFORMATION ABOUT SYMPTOM

Interview the customer to obtain as much information as possible about the conditions and environment under which the malfunction occurred.

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

>> GO TO 2.

2. CONFIRM THE SYMPTOM

Check the malfunction on the vehicle that the customer describes.
Inspect the relation of the symptoms and the condition when the symptoms occur.

>> GO TO 3.

3. IDENTIFY THE MALFUNCTIONING SYSTEM WITH SYMPTOM DIAGNOSIS

Use Symptom diagnosis from the symptom inspection result in step 2 and then identify where to start performing the diagnosis based on possible causes and symptoms.

>> GO TO 4.

4. PERFORM THE COMPONENT DIAGNOSIS OF THE OF THE APPLICABLE SYSTEM

Perform the diagnosis with Component diagnosis of the applicable system.

>> GO TO 5.

5. REPAIR OR REPLACE THE MALFUNCTIONING PARTS

Repair or replace the specified malfunctioning parts.

>> GO TO 6.

6. FINAL CHECK

Check that malfunctions are not reproduced when obtaining the malfunction information from the customer, referring to the symptom inspection result in step 2.

Are the malfunctions corrected?

YES >> Inspection End.

NO >> GO TO 3.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

POWER SUPPLY AND GROUND CIRCUIT

BCM (BODY CONTROL SYSTEM) (WITH INTELLIGENT KEY SYSTEM)

BCM (BODY CONTROL SYSTEM) (WITH INTELLIGENT KEY SYSTEM) : Diagnosis Procedure

INFOID:0000000012542488

Regarding Wiring Diagram information, refer to [BCS-52, "Wiring Diagram"](#).

1.CHECK FUSES AND FUSIBLE LINK

Check that the following fuses and fusible link are not blown.

Terminal No.	Signal name	Fuses and fusible link No.
57	Battery power supply	12 (10A)
70		G (40A)

Is the fuse blown?

- YES >> Replace the blown fuse or fusible link after repairing the affected circuit.
NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT

1. Disconnect BCM connector M99.
2. Check voltage between BCM connector M99 and ground.

BCM		Ground	Voltage
Connector	Terminal		
M99	57	—	Battery voltage
	70		

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair harness or connector.

3.CHECK GROUND CIRCUIT

Check continuity between BCM connector M99 and ground.

BCM		Ground	Continuity
Connector	Terminal		
M99	67	—	Yes

Is the inspection result normal?

- YES >> Inspection End.
NO >> Repair harness or connector.

BCM (BODY CONTROL SYSTEM) (WITHOUT INTELLIGENT KEY SYSTEM)

BCM (BODY CONTROL SYSTEM) (WITHOUT INTELLIGENT KEY SYSTEM) : Diagnosis Procedure

INFOID:0000000012542489

Regarding Wiring Diagram information, refer to [BCS-117, "Wiring Diagram"](#).

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

1.CHECK FUSES AND FUSIBLE LINK

Check that the following fuses and fusible link are not blown.

Terminal No.	Signal name	Fuses and fusible link No.
37	Battery power supply	8 (10A)
42		12 (10A)
50		G (40A)
11	Ignition switch ACC or ON	18 (10A)
38	Ignition switch ON or START	2 (10A)

Is the fuse blown?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit.

NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connectors.
3. Check voltage between BCM connector and ground.

BCM		Ground	Ignition switch position		
Connector	Terminal	—	OFF	ACC	ON
M18	11		0 V	Battery voltage	Battery voltage
	37		Battery voltage		
	38		0 V		
M19	42		Battery voltage	Battery voltage	
	50				

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3.CHECK GROUND CIRCUIT

Check continuity between BCM connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M19	55	—	Yes

Is the inspection result normal?

YES >> Inspection End.

NO >> Repair harness or connector.

POWER WINDOW MAIN SWITCH

POWER WINDOW MAIN SWITCH : Diagnosis Procedure

INFOID:0000000012431810

Regarding Wiring Diagram information, refer to [PWC-16, "Wiring Diagram"](#).

1.CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect main power window and door lock/unlock switch connector.
3. Check voltage between main power window and door lock/unlock switch harness connector and ground.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

(+)		(-)	Condition		Voltage (Approx.)
Main power window and door lock/unlock switch					
Connector	Terminal				
D7	10	Ground	Ignition switch	ON	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between BCM harness connector and main power window and door lock/unlock switch harness connector.

BCM		Main power window and door lock/unlock switch		Continuity
Connector	Terminal	Connector	Terminal	
M99 (with Intelligent Key system)	68	D7	10	Yes
M19 (without Intelligent Key system)	52			

4. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M99 (with Intelligent Key system)	68		No
M19 (without Intelligent Key system)	52		

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-74, "Removal and Installation"](#) (with Intelligent Key system) or [BCS-137, "Removal and Installation"](#) (without Intelligent Key system).

NO >> Repair or replace harness.

3.CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between main power window and door lock/unlock switch harness connector and ground.

Main power window and door lock/unlock switch		Ground	Continuity
Connector	Terminal		
D8	17		Yes

Is the inspection result normal?

YES >> Inspection End.

NO >> Repair or replace harness.

FRONT POWER WINDOW SWITCH (PASSENGER SIDE)

FRONT POWER WINDOW SWITCH (PASSENGER SIDE) : Diagnosis Procedure

INFOID:0000000012431811

Regarding Wiring Diagram information, refer to [PWC-16, "Wiring Diagram"](#).

1.CHECK POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect power window and door lock/unlock switch RH connector.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

- Turn ignition switch ON.
- Check voltage between power window and door lock/unlock switch RH harness connector and ground.

(+)		(-)	Voltage (Approx.)
Power window and door lock/unlock switch RH			
Connector	Terminal		
D105	8	Ground	Battery voltage

Is the inspection result normal?

YES >> Inspection End.

NO >> GO TO 2.

2.CHECK POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- Disconnect BCM connector.
- Check continuity between BCM harness connector and power window and door lock/unlock switch RH harness connector.

BCM		Power window and door lock/unlock switch RH		Continuity
Connector	Terminal	Connector	Terminal	
M99 (with Intelligent Key system)	68	D105	8	Yes
M19 (without Intelligent Key system)	52			

- Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M99 (with Intelligent Key system)	68		No
M19 (without Intelligent Key system)	52		

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-74, "Removal and Installation"](#) (with Intelligent Key system) or [BCS-137, "Removal and Installation"](#) (without Intelligent Key system).

NO >> Repair or replace harness.

REAR POWER WINDOW SWITCH

REAR POWER WINDOW SWITCH : Diagnosis Procedure

INFOID:0000000012431812

Regarding Wiring Diagram information, refer to [PWC-16, "Wiring Diagram"](#).

1.CHECK REAR POWER WINDOW SWITCH POWER SUPPLY

- Turn ignition switch OFF.
- Disconnect rear power window switch connector.
- Turn ignition switch ON.
- Check voltage between rear power window switch harness connector and ground.

(+)			(-)	Voltage (V) (Approx.)
Rear power window switch				
Connector		Terminal		
LH	D203	4	Ground	Battery voltage
RH	D303			

Is the inspection result normal?

YES >> Inspection End.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

NO >> GO TO 2.

2. CHECK REAR POWER WINDOW SWITCH POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between BCM harness connector and rear power window switch harness connector.

BCM		Rear power window switch		Continuity
Connector	Terminal	Connector	Terminal	
M99 (with Intelligent Key system)	68	LH	D203	Yes
		RH	D303	
M19 (without Intelligent Key system)	52	LH	D203	
		RH	D303	

4. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M99 (with Intelligent Key system)	68		No
M19 (without Intelligent Key system)	52		

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-74, "Removal and Installation"](#) (with Intelligent Key system) or [BCS-137, "Removal and Installation"](#) (without Intelligent Key system).
- NO >> Repair or replace harness.

FRONT POWER WINDOW SWITCH (PASSENGER SIDE)

< DTC/CIRCUIT DIAGNOSIS >

FRONT POWER WINDOW SWITCH (PASSENGER SIDE)

Component Function Check

INFOID:0000000012431813

1. CHECK FUNCTION

Check front power window motor RH operation with power window and door lock/unlock switch RH.

Is the inspection result normal?

YES >> Inspection End.

NO >> Refer to [PWC-30, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000012431814

Regarding Wiring Diagram information, refer to [PWC-16, "Wiring Diagram"](#).

1. CHECK POWER WINDOW DOOR LOCK/UNLOCK SWITCH RH INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect power window and door lock/unlock switch RH connector.
3. Turn ignition switch ON.
4. Check voltage between power window and door lock/unlock switch RH harness connector and ground.

(+)		(-)	Condition		Voltage (V) (Approx.)
Power window and door lock/unlock switch RH					
Connector	Terminal				
D105	12	Ground	Power window main switch (front RH)	NEUTRAL	0
				UP	Battery voltage
	11			NEUTRAL	0
				DOWN	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2. CHECK POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect main power window and door lock/unlock switch connector.
3. Check continuity between main power window and door lock/unlock switch harness connector and power window and door lock/unlock switch RH harness connector.

Main power window and door lock/unlock switch		Power window and door lock/unlock switch RH		Continuity
Connector	Terminal	Connector	Terminal	
D7	12	D105	11	Yes
	16		12	

4. Check continuity between main power window and door lock/unlock switch harness connector and ground.

Main power window and door lock/unlock switch		Ground	Continuity
Connector	Terminal		
D7	12		No
	16		

Is the inspection result normal?

YES >> Replace main power window and door lock/unlock switch. Refer to [PWC-55, "Removal and Installation"](#).

FRONT POWER WINDOW SWITCH (PASSENGER SIDE)

< DTC/CIRCUIT DIAGNOSIS >

NO >> Repair or replace harness.

3. CHECK POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH

Check power window and door lock/unlock switch RH.

Refer to [PWC-31, "Component Inspection"](#).

Is the inspection result normal?

YES >> Check Intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).

NO >> Replace power window and door lock/unlock switch RH. Refer to [PWC-56, "Removal and Installation"](#).

Component Inspection

INFOID:0000000012431815

1. CHECK POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH

1. Turn ignition switch OFF.
2. Disconnect power window and door lock/unlock switch RH connector.
3. Check power window and door lock/unlock switch RH terminals under the following conditions.

Power window and door lock/unlock switch RH		Condition	Continuity
Terminal			
8	7	UP	Yes
11	6		
12	7	NEUTRAL	
11	6		
12	7	DOWN	
8	6		

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace power window and door lock/unlock switch RH. Refer to [PWC-56, "Removal and Installation"](#).

PWC

REAR POWER WINDOW SWITCH

< DTC/CIRCUIT DIAGNOSIS >

REAR POWER WINDOW SWITCH

Component Function Check

INFOID:0000000012431816

1. CHECK FUNCTION

Check rear power window motor operation with rear power window switch.

Is the inspection result normal?

YES >> Inspection End.

NO >> Refer to [PWC-32, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000012431817

Regarding Wiring Diagram information, refer to [PWC-16, "Wiring Diagram"](#).

1. CHECK REAR POWER WINDOW SWITCH INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect rear power window switch connector.
3. Turn ignition switch ON.
4. Check voltage between rear power window switch harness connector and ground.

(+)Rear power window switch			(-)	Condition		Voltage (Approx.)
Connector		Terminal				
LH	D203	7	Ground	Power window main switch (rear LH)	NEUTRAL	0
		8			DOWN	Battery voltage
					NEUTRAL	0
					UP	Battery voltage
RH	D303	7		Power window main switch (rear RH)	NEUTRAL	0
		8			DOWN	Battery voltage
					NEUTRAL	0
					UP	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2. CHECK REAR POWER WINDOW SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect main power window and door lock/unlock switch connector.
3. Check continuity between main power window and door lock/unlock switch harness connector and rear power window switch harness connector.

Main power window and door lock/unlock switch		Rear power window switch		Continuity
Connector	Terminal	Connector	Terminal	
D7	1	LH	D203	8
	3			7
	5	RH	D303	7
	7			8

4. Check continuity between main power window and door lock/unlock switch harness connector and ground.

REAR POWER WINDOW SWITCH

< DTC/CIRCUIT DIAGNOSIS >

Main power window and door lock/unlock switch		Ground	Continuity
Connector	Terminal		
D7	1	Ground	No
	3		
	5		
	7		

Is the inspection result normal?

YES >> Replace main power window and door lock/unlock switch. Refer to [PWC-55, "Removal and Installation"](#).

NO >> Repair or replace harness.

3.CHECK REAR POWER WINDOW SWITCH

Check rear power window switch.

Refer to [PWC-33, "Component Inspection"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).

NO >> Replace rear power window switch. Refer to [PWC-57, "Removal and Installation"](#).

Component Inspection

INFOID:0000000012431818

1.CHECK REAR POWER WINDOW SWITCH

1. Turn ignition switch OFF.
2. Disconnect rear power window switch connector.
3. Check rear power window switch terminals under the following conditions.

Rear power window switch		Condition	Continuity
Terminal			
4	5	UP	Yes
7	6		
7	6	NEUTRAL	
8	5		
4	6	DOWN	
8	5		

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace rear power window switch. Refer to [PWC-57, "Removal and Installation"](#).

POWER WINDOW MOTOR

< DTC/CIRCUIT DIAGNOSIS >

POWER WINDOW MOTOR DRIVER SIDE

DRIVER SIDE : Component Function Check

INFOID:0000000012431819

1. CHECK FUNCTION

Check front power window motor LH operation with main power window and door lock/unlock switch.

Is the inspection result normal?

YES >> Inspection End.

NO >> Refer to [PWC-34, "DRIVER SIDE : Diagnosis Procedure"](#).

DRIVER SIDE : Diagnosis Procedure

INFOID:0000000012431820

Regarding Wiring Diagram information, refer to [PWC-16, "Wiring Diagram"](#).

1. CHECK FRONT POWER WINDOW MOTOR LH INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect front power window motor LH connector.
3. Turn ignition switch ON.
4. Check voltage between front power window motor LH harness connector and ground.

(+)		(-)	Condition		Voltage (V) (Approx.)
Front power window motor LH					
Connector	Terminal				
D9	1	Ground	Main power window and door lock/un- lock switch	NEUTRAL	0
				DOWN	Battery voltage
	2			NEUTRAL	0
				UP	Battery voltage

Is the inspection result normal?

YES >> Replace front power window motor LH.

NO >> GO TO 2.

2. CHECK FRONT POWER WINDOW MOTOR LH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect main power window and door lock/unlock switch connector.
3. Check continuity between main power window and door lock/unlock switch harness connector and front power window motor LH harness connector.

Main power window and door lock/unlock switch		Front power window motor LH		Continuity
Connector	Terminal	Connector	Terminal	
D7	8	D9	2	Yes
	11		1	

4. Check continuity between main power window and door lock/unlock switch harness connector and ground.

Main power window and door lock/unlock switch		Ground	Continuity
Connector	Terminal		
D7	8		No
	11		

Is the inspection result normal?

POWER WINDOW MOTOR

< DTC/CIRCUIT DIAGNOSIS >

- YES >> Replace main power window and door lock/unlock switch. Refer to [PWC-55, "Removal and Installation"](#).
- NO >> Repair or replace harness.

PASSENGER SIDE

PASSENGER SIDE : Component Function Check

INFOID:0000000012431821

1. CHECK FUNCTION

Check front power window motor RH operation with main power window and door lock/unlock switch or power window and door lock/unlock switch RH.

Is the inspection result normal?

- YES >> Inspection End.
- NO >> Refer to [PWC-35, "PASSENGER SIDE : Diagnosis Procedure"](#).

PASSENGER SIDE : Diagnosis Procedure

INFOID:0000000012431822

Regarding Wiring Diagram information, refer to [PWC-16, "Wiring Diagram"](#).

1.CHECK FRONT POWER WINDOW MOTOR RH INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect front power window motor RH connector.
3. Turn ignition switch ON.
4. Check voltage between front power window motor RH harness connector and ground.

(+)		(-)	Condition		Voltage (V) (Approx.)
Front power window motor RH					
Connector	Terminal				
D104	2	Ground	Front power window switch RH	NEUTRAL	0
				UP	Battery voltage
	1			NEUTRAL	0
				DOWN	Battery voltage

Is the inspection result normal?

- YES >> Replace front power window motor RH.
- NO >> GO TO 2.

2.CHECK FRONT POWER WINDOW MOTOR RH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect power window and door lock/unlock switch RH connector.
3. Check continuity between power window and door lock/unlock switch RH harness connector and front power window motor RH harness connector.

Power window and door lock/unlock switch RH		Front power window motor RH		Continuity
Connector	Terminal	Connector	Terminal	
D105	6	D104	1	Yes
	7		2	

4. Check continuity between power window and door lock/unlock switch RH harness connector and ground.

Power window and door lock/unlock switch RH		Ground	Continuity
Connector	Terminal		
D105	6		No
	7		

POWER WINDOW MOTOR

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> Replace power window and door lock/unlock switch RH. Refer to [PWC-56, "Removal and Installation"](#).

NO >> Repair or replace harness.

REAR LH

REAR LH : Component Function Check

INFOID:0000000012431823

1.CHECK FUNCTION

Check rear power window motor LH operation with main power window and door lock/unlock switch or rear power window switch LH.

Is the inspection result normal?

YES >> Inspection End.

NO >> Refer to [PWC-36, "REAR LH : Diagnosis Procedure"](#).

REAR LH : Diagnosis Procedure

INFOID:0000000012431824

Regarding Wiring Diagram information, refer to [PWC-16, "Wiring Diagram"](#).

1.CHECK REAR POWER WINDOW MOTOR LH INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect rear power window motor LH connector.
3. Turn ignition switch ON.
4. Check voltage between rear power window motor LH harness connector and ground.

(+)Rear power window motor LH		(-)	Condition		Voltage (V) (Approx.)
Connector	Terminal				
D204	1	Ground	Rear power window switch LH	NEUTRAL	0
				UP	Battery voltage
	2			NEUTRAL	0
				DOWN	Battery voltage

Is the inspection result normal?

YES >> Replace rear power window motor LH.

NO >> GO TO 2.

2.CHECK REAR POWER WINDOW MOTOR LH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect rear power window switch LH connector.
3. Check continuity between rear power window switch LH harness connector and rear power window motor LH harness connector.

Rear power window switch LH		Rear power window motor LH		Continuity
Connector	Terminal	Connector	Terminal	
D203	6	D204	2	Yes
	5		1	

4. Check continuity between rear power window switch LH connector and ground.

POWER WINDOW MOTOR

< DTC/CIRCUIT DIAGNOSIS >

Rear power window switch LH		Ground	Continuity
Connector	Terminal		
D203	6		No
	5		

Is the inspection result normal?

YES >> Replace rear power window switch LH. Refer to [PWC-57, "Removal and Installation"](#).

NO >> Repair or replace harness.

REAR RH

REAR RH : Component Function Check

INFOID:0000000012431825

1. CHECK FUNCTION

Check rear power window motor RH operation with main power window and door lock/unlock switch or rear power window switch RH.

Is the inspection result normal?

YES >> Inspection End.

NO >> Refer to [PWC-37, "REAR RH : Diagnosis Procedure"](#).

REAR RH : Diagnosis Procedure

INFOID:0000000012431826

Regarding Wiring Diagram information, refer to [PWC-16, "Wiring Diagram"](#).

1. CHECK REAR POWER WINDOW MOTOR RH INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect rear power window motor RH connector.
3. Turn ignition switch ON.
4. Check voltage between rear power window motor RH harness connector and ground.

(+)Rear power window motor RH		(-)	Condition		Voltage (V) (Approx.)
Connector	Terminal				
D304	1	Ground	Rear power window switch RH	NEUTRAL	0
				UP	Battery voltage
	2			NEUTRAL	0
				DOWN	Battery voltage

Is the inspection result normal?

YES >> Replace rear power window motor RH.

NO >> GO TO 2.

2. CHECK REAR POWER WINDOW MOTOR RH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect rear power window switch RH connector.
3. Check continuity between rear power window switch RH harness connector and rear power window motor RH harness connector.

Rear power window switch RH		Rear power window motor RH		Continuity
Connector	Terminal	Connector	Terminal	
D303	6	D304	2	Yes
	5		1	

4. Check continuity between rear power window switch RH harness connector and ground.

POWER WINDOW MOTOR

< DTC/CIRCUIT DIAGNOSIS >

Rear power window switch RH		Ground	Continuity
Connector	Terminal		
D303	6		No
	5		

Is the inspection result normal?

- YES >> Replace rear power window switch RH. Refer to [PWC-57, "Removal and Installation"](#).
NO >> Repair or replace harness.

DOOR SWITCH

< DTC/CIRCUIT DIAGNOSIS >

DOOR SWITCH

WITH INTELLIGENT KEY SYSTEM

WITH INTELLIGENT KEY SYSTEM : Component Function Check

INFOID:0000000012431827

1.CHECK FUNCTION

1. Select "DOOR LOCK" of "BCM" using CONSULT.
2. Select "DOOR SW-DR" and "DOOR SW-AS" in "Data Monitor".
3. Check that the function operates normally according to the following conditions:

Monitor item	Condition		Status
DOOR SW-DR	Front door LH	Open	ON
		Closed	OFF
DOOR SW-AS	Front door RH	Open	ON
		Closed	OFF

Is the inspection result normal?

YES >> Door switch is OK.

NO >> Refer to [PWC-39, "WITH INTELLIGENT KEY SYSTEM : Diagnosis Procedure"](#).


WITH INTELLIGENT KEY SYSTEM : Diagnosis Procedure

INFOID:0000000012431828

Regarding Wiring Diagram information, refer to [PWC-16, "Wiring Diagram"](#).

1.CHECK DOOR SWITCH INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect malfunctioning door switch connector.
3. Check signal between malfunctioning door switch harness connector and ground using oscilloscope.

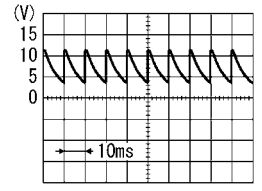(+)Door switch			(-)	Signal (Reference value)
Connector		Terminal		
Front door switch LH	B8	3	Ground	 7.0 - 8.0 V
Front door switch RH	B16	3		

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK DOOR SWITCH CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between door switch harness connector and BCM harness connector.

DOOR SWITCH

< DTC/CIRCUIT DIAGNOSIS >

Door switch			BCM		Continuity
Connector		Terminal	Connector	Terminal	
Front door switch LH	B8	3	M100	47	Yes
Front door switch RH	B16			45	

3. Check continuity between door switch harness connector and ground.

Door switch			Ground	Continuity
Connector		Terminal		No
Front door switch LH	B8	3		
Front door switch RH	B16			

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-74, "Removal and Installation"](#).

NO >> Repair or replace harness.

3.CHECK DOOR SWITCH

Refer to [PWC-40, "WITH INTELLIGENT KEY SYSTEM : Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace malfunctioning door switch. Refer to [DLK-181, "Removal and Installation"](#).

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

>> Inspection End.

WITH INTELLIGENT KEY SYSTEM : Component Inspection

INFOID:0000000012431829

1.CHECK DOOR SWITCH

1. Turn ignition switch OFF.
2. Disconnect malfunctioning door switch connector.
3. Check continuity between door switch terminals.

Door switch			Condition		Continuity
Terminal					
Front door switch LH	3	Ground part of door switch	Door switch	Pressed	No
				Released	Yes
Front door switch RH				Pressed	No
				Released	Yes

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace malfunction door switch. Refer to [DLK-181, "Removal and Installation"](#).

WITHOUT INTELLIGENT KEY SYSTEM

WITHOUT INTELLIGENT KEY SYSTEM : Description

INFOID:0000000012431830

Detects door open/close condition.

WITHOUT INTELLIGENT KEY SYSTEM : Component Function Check

INFOID:0000000012431831

1.CHECK FUNCTION

DOOR SWITCH

< DTC/CIRCUIT DIAGNOSIS >

With CONSULT

Check door switches "DOOR SW-DR" and "DOOR SW-AS" in "Data Monitor".

Monitor item	Condition
DOOR SW-DR	CLOSE → OPEN: OFF → ON
DOOR SW-AS	

Is the inspection result normal?

YES >> Door switch is OK.

NO >> Refer to [PWC-41, "WITHOUT INTELLIGENT KEY SYSTEM : Diagnosis Procedure"](#).



WITHOUT INTELLIGENT KEY SYSTEM : Diagnosis Procedure

INFOID:0000000012431832

Regarding Wiring Diagram information, refer to [PWC-16, "Wiring Diagram"](#).

1. CHECK DOOR SWITCH INPUT SIGNAL

- Turn ignition switch OFF.
- Check signal between BCM connector and ground with oscilloscope.

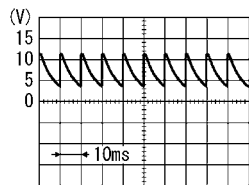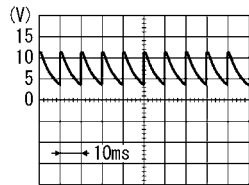Terminals			Door condition		Voltage (V) (Approx.)
(+)		(-)			
BCM connector	Terminal				
M20	60	Ground	Front RH	OPEN	0
				CLOSE	 PKIB4960J
	59		Front LH	OPEN	0
				CLOSE	 PKIB4960J

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 2.

2. CHECK DOOR SWITCH CIRCUIT

- Disconnect BCM connector.
- Check continuity between BCM connector and door switch connector.

DOOR SWITCH

< DTC/CIRCUIT DIAGNOSIS >

BCM connector	Terminal	Door switch connector	Terminal	Continuity
M20	60	B16 (Front RH)	3	Yes
	59	B8 (Front LH)		

3. Check continuity between BCM connector and ground.

BCM connector	Terminal	Ground	Continuity
M20	60		No
	59		

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness between BCM and door switch.

3.CHECK DOOR SWITCH

Refer to [PWC-42, "WITHOUT INTELLIGENT KEY SYSTEM : Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace malfunctioning door switch. Refer to [DLK-308, "Removal and Installation"](#).

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

>> Inspection End.

WITHOUT INTELLIGENT KEY SYSTEM : Component Inspection

INFOID:0000000012431833

1.CHECK DOOR SWITCH

1. Turn ignition switch OFF.
2. Disconnect door switch connector.
3. Check door switch.

Terminal		Door switch condition	Continuity
Door switch			
3	Ground part of door switch	Pressed	No
		Released	Yes

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace malfunctioning door switch. Refer to [DLK-308, "Removal and Installation"](#).

POWER WINDOW CONTROL SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

POWER WINDOW CONTROL SYSTEM SYMPTOMS

Symptom Table

INFOID:0000000012431834

Symptom	Reference page
None of the power windows can be operated using any switch.	Refer to PWC-44, "Diagnosis Procedure" .
Driver side power window does not operate.	Refer to PWC-45, "Diagnosis Procedure" .
Front passenger side power window does not operate (When both main power window and door lock/unlock switch and power window and door lock/unlock switch RH are operated).	Refer to PWC-46, "WHEN BOTH POWER WINDOW MAIN SWITCH AND FRONT POWER WINDOW SWITCH ARE OPERATED : Diagnosis Procedure" .
Front passenger side power window does not operate (when power window and door lock/unlock switch RH is operated).	Refer to PWC-46, "WHEN FRONT POWER WINDOW SWITCH (PASSENGER SIDE) IS OPERATED : Diagnosis Procedure" .
Front passenger side power window does not operate (when power window main switch is operated).	Refer to PWC-47, "WHEN POWER WINDOW MAIN SWITCH IS OPERATED : Diagnosis Procedure" .
Rear (LH) side power window does not operate (when both main power window and door lock/unlock switch and rear power window switch LH are operated).	Refer to PWC-48, "WHEN BOTH POWER WINDOW MAIN SWITCH AND REAR POWER WINDOW SWITCH LH ARE OPERATED : Diagnosis Procedure" .
Rear (LH) side power window does not operate (when rear power window switch LH is operated).	Refer to PWC-48, "WHEN REAR POWER WINDOW SWITCH LH IS OPERATED : Diagnosis Procedure" .
Rear (LH) side power window does not operate (when main power window and door lock/unlock switch is operated).	Refer to PWC-49, "WHEN POWER WINDOW MAIN SWITCH IS OPERATED : Diagnosis Procedure" .
Rear (RH) side power window does not operate (when both main power window and door lock/unlock switch and rear power window switch RH are operated).	Refer to PWC-50, "WHEN BOTH POWER WINDOW MAIN SWITCH AND REAR POWER WINDOW SWITCH RH ARE OPERATED : Diagnosis Procedure" .
Rear (RH) side power window does not operate (when rear power window switch RH is operated).	Refer to PWC-50, "WHEN REAR POWER WINDOW SWITCH RH IS OPERATED : Diagnosis Procedure" .
Rear (RH) side power window does not operate (when main power window and door lock/unlock switch is operated)	Refer to PWC-51, "WHEN POWER WINDOW MAIN SWITCH IS OPERATED : Diagnosis Procedure" .
Power window lock switch does not function.	Refer to PWC-54, "Diagnosis Procedure" .

NONE OF THE POWER WINDOWS CAN BE OPERATED USING ANY SWITCH

< SYMPTOM DIAGNOSIS >

NONE OF THE POWER WINDOWS CAN BE OPERATED USING ANY SWITCH

Diagnosis Procedure

INFOID:0000000012431835

1.CHECK BCM POWER SUPPLY AND GROUND CIRCUIT

Check BCM power supply and ground circuit. Refer to [PWC-25. "BCM \(BODY CONTROL SYSTEM\) \(WITH INTELLIGENT KEY SYSTEM\) : Diagnosis Procedure"](#) (with Intelligent Key system) or [PWC-25. "BCM \(BODY CONTROL SYSTEM\) \(WITHOUT INTELLIGENT KEY SYSTEM\) : Diagnosis Procedure"](#) (without Intelligent Key system).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH POWER SUPPLY AND GROUND CIRCUIT

Check main power window and door lock/unlock switch power supply and ground circuit. Refer to [PWC-26. "POWER WINDOW MAIN SWITCH : Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-42. "Intermittent Incident"](#).

NO >> GO TO 1.

DRIVER SIDE POWER WINDOW DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

DRIVER SIDE POWER WINDOW DOES NOT OPERATE

Diagnosis Procedure

INFOID:000000012431836

1.CHECK FRONT POWER WINDOW MOTOR LH

Check front power window motor LH.

Refer to [PWC-34, "DRIVER SIDE : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).

NO >> GO TO 1.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC

FRONT PASSENGER SIDE POWER WINDOW DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

FRONT PASSENGER SIDE POWER WINDOW DOES NOT OPERATE WHEN BOTH POWER WINDOW MAIN SWITCH AND FRONT POWER WINDOW SWITCH ARE OPERATED

WHEN BOTH POWER WINDOW MAIN SWITCH AND FRONT POWER WINDOW
SWITCH ARE OPERATED : Diagnosis Procedure

INFOID:0000000012431837

1. CHECK POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH

Check power window and door lock/unlock switch RH.

Refer to [PWC-30, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2. CHECK FRONT POWER WINDOW MOTOR RH

Check front power window motor RH.

Refer to [PWC-35, "PASSENGER SIDE : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3. CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).

NO >> GO TO 1.

WHEN FRONT POWER WINDOW SWITCH (PASSENGER SIDE) IS OPERATED

WHEN FRONT POWER WINDOW SWITCH (PASSENGER SIDE) IS OPERATED :
Diagnosis Procedure

INFOID:0000000012431838

1. CHECK POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH POWER SUPPLY AND GROUND CIRCUIT

Check power window and door lock/unlock switch RH power supply and ground circuit.

Refer to [PWC-27, "FRONT POWER WINDOW SWITCH \(PASSENGER SIDE\) : Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2. CHECK POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH

Check power window and door lock/unlock switch RH.

Refer to [PWC-30, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3. CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).

NO >> GO TO 1.

WHEN POWER WINDOW MAIN SWITCH IS OPERATED

FRONT PASSENGER SIDE POWER WINDOW DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

WHEN POWER WINDOW MAIN SWITCH IS OPERATED : Diagnosis Procedure

INFOID:0000000012431839

1.CHECK POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH

Check power window and door lock/unlock switch RH.

Refer to [PWC-30, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).

NO >> GO TO 1.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC

REAR LH SIDE POWER WINDOW DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

REAR LH SIDE POWER WINDOW DOES NOT OPERATE

WHEN BOTH POWER WINDOW MAIN SWITCH AND REAR POWER WINDOW SWITCH LH ARE OPERATED

WHEN BOTH POWER WINDOW MAIN SWITCH AND REAR POWER WINDOW SWITCH LH ARE OPERATED : Diagnosis Procedure

INFOID:0000000012431840

1.CHECK REAR POWER WINDOW SWITCH LH

Check rear power window switch LH.

Refer to [PWC-32, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CHECK REAR POWER WINDOW MOTOR LH

Check rear power window motor LH.

Refer to [PWC-36, "REAR LH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).

NO >> GO TO 1.

WHEN REAR POWER WINDOW SWITCH LH IS OPERATED

WHEN REAR POWER WINDOW SWITCH LH IS OPERATED : Diagnosis Procedure

INFOID:0000000012431841

1.CHECK REAR POWER WINDOW SWITCH LH POWER SUPPLY AND GROUND CIRCUIT

Check rear power window switch LH power supply and ground circuit.

Refer to [PWC-28, "REAR POWER WINDOW SWITCH : Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CHECK REAR POWER WINDOW SWITCH LH

Check rear power window switch LH.

Refer to [PWC-32, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).

NO >> GO TO 1.

WHEN POWER WINDOW MAIN SWITCH IS OPERATED

REAR LH SIDE POWER WINDOW DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

WHEN POWER WINDOW MAIN SWITCH IS OPERATED : Diagnosis Procedure

INFOID:0000000012431842

1.CHECK REAR POWER WINDOW SWITCH LH

Check rear power window switch LH.

Refer to [PWC-32, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).

NO >> GO TO 1.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC

REAR RH SIDE POWER WINDOW DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

REAR RH SIDE POWER WINDOW DOES NOT OPERATE

WHEN BOTH POWER WINDOW MAIN SWITCH AND REAR POWER WINDOW SWITCH RH ARE OPERATED

WHEN BOTH POWER WINDOW MAIN SWITCH AND REAR POWER WINDOW SWITCH RH ARE OPERATED : Diagnosis Procedure

INFOID:0000000012431843

1.CHECK REAR POWER WINDOW SWITCH RH

Check rear power window switch RH.

Refer to [PWC-32, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CHECK REAR POWER WINDOW MOTOR RH

Check rear power window motor RH.

Refer to [PWC-37, "REAR RH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).

NO >> GO TO 1.

WHEN REAR POWER WINDOW SWITCH RH IS OPERATED

WHEN REAR POWER WINDOW SWITCH RH IS OPERATED : Diagnosis Procedure

INFOID:0000000012431844

1.CHECK REAR POWER WINDOW SWITCH RH POWER SUPPLY AND GROUND CIRCUIT

Check rear power window switch RH power supply and ground circuit.

Refer to [PWC-28, "REAR POWER WINDOW SWITCH : Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CHECK REAR POWER WINDOW SWITCH RH

Check rear power window switch RH.

Refer to [PWC-32, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).

NO >> GO TO 1.

WHEN POWER WINDOW MAIN SWITCH IS OPERATED

REAR RH SIDE POWER WINDOW DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

WHEN POWER WINDOW MAIN SWITCH IS OPERATED : Diagnosis Procedure

INFOID:0000000012431845

1.CHECK REAR POWER WINDOW SWITCH RH

Check rear power window switch RH.

Refer to [PWC-32, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).

NO >> GO TO 1.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC

AUTO OPERATION DOES NOT OPERATE BUT MANUAL OPERATE NORMALLY (DRIVER SIDE)

< SYMPTOM DIAGNOSIS >

AUTO OPERATION DOES NOT OPERATE BUT MANUAL OPERATE NORMALLY (DRIVER SIDE)

Diagnosis Procedure

INFOID:0000000012431846

1. REPLACE MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH

Replace main power window and door lock/unlock switch.

>> Refer to [PWC-55. "Removal and Installation"](#).

cardiagn.com

POWER WINDOW RETAINED POWER OPERATION DOES NOT OPERATE PROPERLY

< SYMPTOM DIAGNOSIS >

POWER WINDOW RETAINED POWER OPERATION DOES NOT OPERATE PROPERLY

Diagnosis Procedure

INFOID:0000000012431847

1. CHECK FRONT DOOR SWITCH

Check front door switch.

Refer to [PWC-40, "WITH INTELLIGENT KEY SYSTEM : Component Inspection"](#) (with Intelligent Key system) or [PWC-42, "WITHOUT INTELLIGENT KEY SYSTEM : Component Inspection"](#) (without Intelligent Key system).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).
- NO >> Repair or replace the malfunctioning parts.

POWER WINDOW LOCK SWITCH DOES NOT FUNCTION

< SYMPTOM DIAGNOSIS >

POWER WINDOW LOCK SWITCH DOES NOT FUNCTION

Diagnosis Procedure

INFOID:0000000012431848

1. REPLACE MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH

Replace main power window and door lock/unlock switch.

>> Refer to [PWC-55. "Removal and Installation"](#).

MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH

< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION

MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH


Removal and Installation

INFOID:0000000012829245

REMOVAL

1. Remove main power window and door lock/unlock switch finisher door handle pull escutcheon.
2. Remove screw (A) from main power window and door lock/unlock switch finisher.
3. Remove main power window and door lock/unlock switch finisher (1) using a suitable tool (B).

(○): Pawl

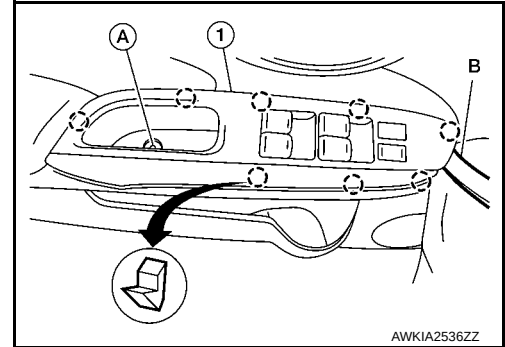


4. Disconnect the harness connectors from the main power window and door lock/unlock switch.
5. Release pawls and remove main power window and door lock/unlock switch (1) from main power window and door lock/unlock switch finisher assembly (2) using a suitable tool.

(○): Pawl

CAUTION:

Do not bend back the pawls on the switch finisher too far or damage may occur.

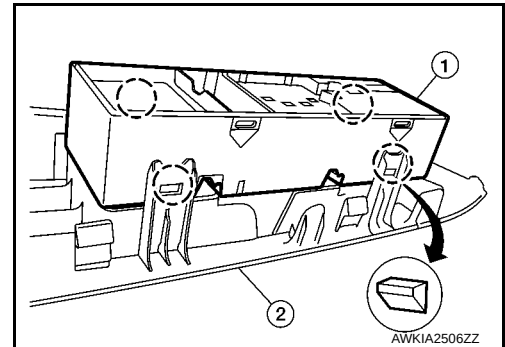

INSTALLATION

Installation is in the reverse order of removal.

NOTE:

When the main power window and door lock/unlock switch is removed or replaced, it is necessary to perform the initialization procedure. Refer to [PWC-23, "Work Flow"](#).

POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH

< REMOVAL AND INSTALLATION >

POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH


Removal and Installation

INFOID:0000000012829246

REMOVAL

1. Remove power window and door lock/unlock switch (RH) finisher door handle pull escutcheon.
2. Remove screw (B) from power window and door lock/unlock switch (RH) finisher.
3. Remove power window and door lock/unlock switch (RH) finisher (1) using a suitable tool (A).

○: Pawl

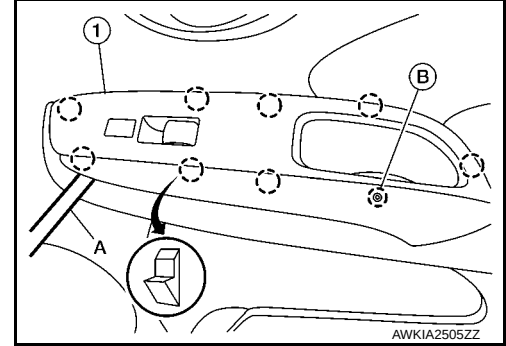


4. Disconnect the harness connector from the power window and door lock/unlock switch (RH).
5. Release pawls and remove power window and door lock/unlock switch (1) from power window and door lock/unlock switch (RH) finisher (2) using a suitable tool.

○: Pawl

CAUTION:

Do not bend back the pawls on the switch finisher too far or damage may occur.

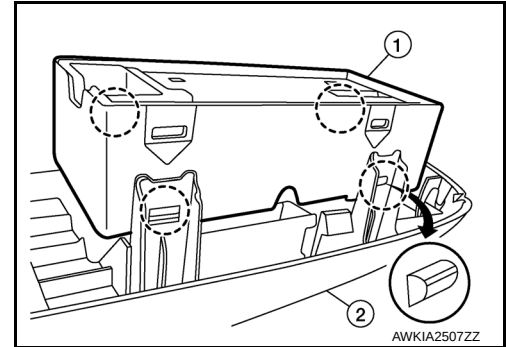

INSTALLATION

Installation is in the reverse order of removal.

REAR POWER WINDOW SWITCH

< REMOVAL AND INSTALLATION >

REAR POWER WINDOW SWITCH


Removal and Installation

INFOID:000000012829247

REMOVAL

1. Remove rear power window switch door handle pull escutcheon.
2. Remove screw (A) from rear power window switch finisher.
3. Remove rear power window switch finisher (1) using a suitable tool (B).


(○): Pawl

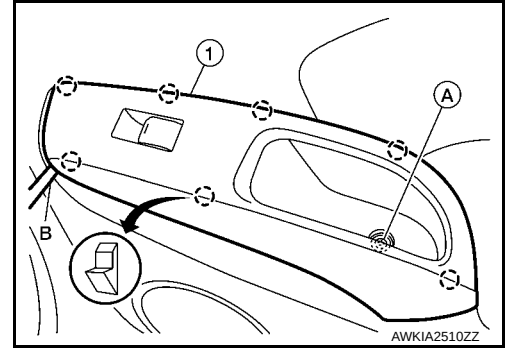

4. Disconnect the harness connector from the rear power window switch.
5. Release pawls and remove rear power window switch (1) from rear power window switch finisher (2) using a suitable tool.

CAUTION:

Do not bend back the pawls on the switch finisher too far or damage may occur.

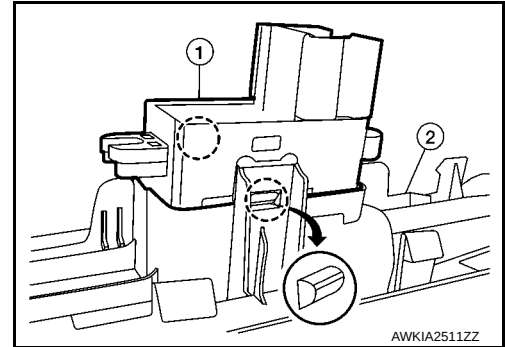

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC